# dJONt

Manual for v0.7: setup, Wham, Sustain, Hush, footswitch control, and every module explained




dJONt in the Chrome look. Settings (the gear) switches to Red Foil.

## Where it sits in your signal

new in 0.7

Guitar → Input → **HUSH** → **WHAM** → **SUSTAIN** → TIGHT → GRIT → SUB → LO-FI → Output → amp

each module has its own power light; off = untouched signal


1 Install and set up

2 The panel at a glance

3 Wham: the virtual whammy

4 Sustain: Hold and Sustainer

5 Footswitches, pedals and MIDI learn


6 Troubleshooting

7 Module reference (same as the ? manual in the plugin)

# 1 Install and set up

1. Run **dJONt-v...-windows-x64.exe**. It installs the VST3 plugin and the standalone app. Windows SmartScreen may warn the first time: *More info → Run anyway*.
2. **In Reaper:** open *Options → Preferences → Plug-ins → VST* and click *Re-scan*, then add dJONt to your guitar track **before** T3KJ (or any amp sim). dJONt goes in front of the amp, like a pedal.
3. **Standalone instead:** open **dJONt** from the Start menu and click the gear. Set up your interface there (below).

## Standalone audio settings

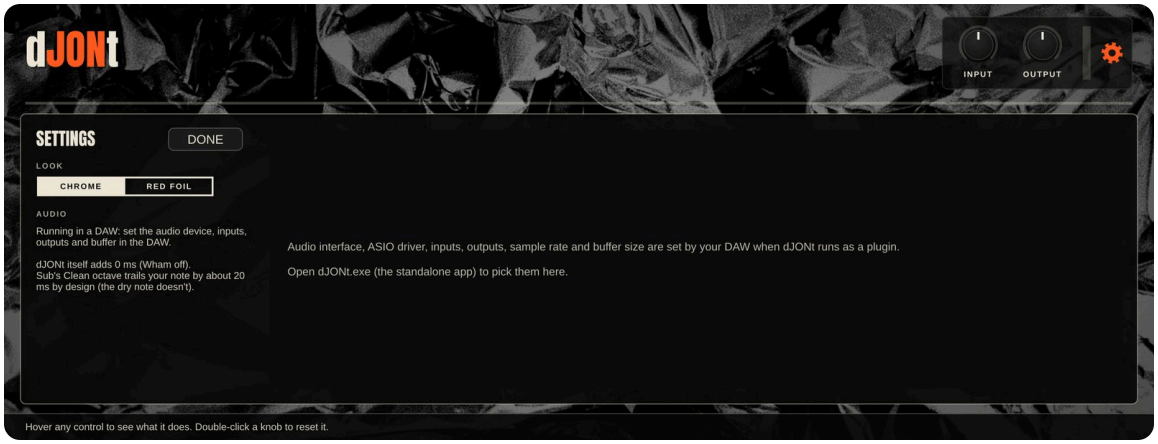


Settings as it looks inside a DAW. In the standalone app, the right side shows your audio device instead.

1. **Audio device type:** pick **ASIO** for the lowest latency, then your interface (the Quad Cortex shows up here).
2. **Active input channels:** tick the input your guitar is on. dJONt is mono: it plays the first input you enable.
3. **Output channels:** pick the pair that goes to your amp or speakers.
4. **Sample rate / buffer:** 48 kHz, and the smallest buffer that doesn't crackle (64 or 128 is typical).
5. **Hear yourself:** turn it **on**. The app mutes the input by default to avoid feedback with mics, so this is the usual reason for silence.
6. **MIDI inputs:** tick your Quad Cortex if you want its footswitches to control dJONt (section 5).

> **Latency:** the readout on the left adds up input + output + buffer for a round trip. dJONt itself adds **0 ms**, except **Wham adds about 16 ms while it's on** (pitch shifting needs a short buffer). It reports that to Reaper, so Reaper lines your tracks back up.

# 2 The panel at a glance




1 **Wordmark.** The accent color tells you the look (orange = Chrome, red = Red Foil).

2 **Input / Output** level, ±24 dB, and the output meter (red = clipping).

3 **Manual** (?) and **Settings** (gear): every module explained right in the plugin; look, audio device, MIDI inputs, latency.

4 **Wham:** a virtual whammy pedal with presets (section 3). **ADV** flips a module to its voicing controls.

5 **Sustain:** Hold (freeze) or Sustainer (section 4).

6 **Tight, Grit, Sub, Lo-Fi:** palm-mute punch, low fuzz, octave down, radio filter.

7 **Hint bar:** hover anything to see what it does, its value, and its MIDI CC if it has one.

8 **Power lights:** lit = on. Off modules dim and pass the signal untouched.

9 **HUSH:** the de-noiser for your DI, before Wham, zero latency. Off until you turn it on; it reads HUSH ON when it's working (section 7, Hush).

## Moves that work everywhere

| DO THIS | TO |
|---|---|
| Drag a knob up / down | Turn it. While dragging, its label shows the value. |
| Double-click a knob | Reset it to its default. |
| Hover anything | Read what it does in the hint bar at the bottom. |
| Right-click any control | MIDI Learn / Forget MIDI (section 5). |

## The other four modules, quickly

| MODULE | CONTROLS | WHAT IT'S FOR |
|---|---|---|
| **Tight** | Amount, Freq | Pushes each pick attack and trims the ring-out, so chugs hit harder and stop sooner. Set Freq near your low string. |
| **Grit** | Drive, Blend, Freq | Fuzz on the lows only (below Freq), blended under your dry tone. |
| **Sub** | Clean / Synth, Blend, Tone | An octave below. Clean handles chords (~20 ms behind); Synth is instant and buzzy, single notes. |
| **Lo-Fi** | Tone, Blend | Radio / telephone band-pass for intros and breakdowns. |

# 3 Wham: the virtual whammy

Wham bends your pitch between the **heel** (pedal up) and the **toe** (pedal down). **INTERVAL** picks those: a classic Whammy setting, a Harmony, Detune, or **Custom** with your own Heel / Toe knobs (±24 st). Something has to move the pedal: you (**PEDAL**) or an LFO (**AUTO**). The next page covers the Whammy sounds.




AUTO: Rate, Shape and Retrig show.

## Quick start (no pedal needed)


1. Click Wham's **power light**. It starts in **AUTO**, Custom, Heel 0 and Toe +12: an octave sweep, once a second.
2. Turn **Toe** to taste (+12 octave, +7 fifth, −12 octave down), or pick an **INTERVAL** instead.
3. Pick a **Shape**: *Sine* (smooth), *Triangle*, *Rise* (up, then snaps back), *Square* (jumps).
4. Turn on **RETRIG** to restart the sweep on every pick. **Rise + Retrig** = one scoop per note.




PEDAL with Whammy: Oct Up. Mix shows instead of Heel / Toe; Glide replaces the LFO controls.

## Playing the pedal yourself

1. Click **PEDAL**.
2. **Mouse:** drag the rocker up toward TOE. Scroll works too; double-click sends it back to HEEL; Shift-drag is fine control.
3. **Expression pedal (later):** map it to *Wham Pedal* (section 5) and it moves the rocker smoothly.
4. **A footswitch:** map it to *Wham Pedal* and turn up **Glide**. Press = sweep up to Toe, release = sweep back (graph below).

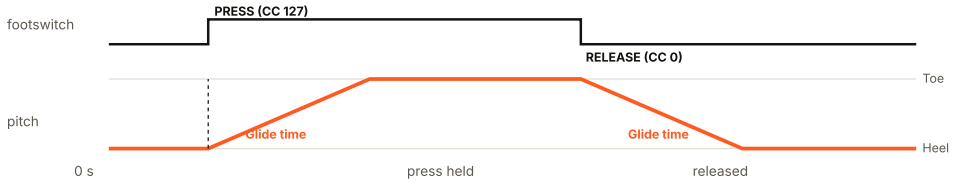


## Presets: save the settings you like

1. **Load:** click *Presets*. Factory: Octave Scoop, Dive Bomb, Siren, Octave Stabs, Whole-Step Trill, Seasick, Pedal: Classic Octave Up, Pedal: 2 Octaves Up, Pedal: Drop Tune, Footswitch: Octave Sweep, Harmony: Blues 3rds, Detune: Thick.
2. **Save:** set it up (engine, Interval, Heel / Toe, Rate, Shape, Retrig, Glide, mode, ADV), click **SAVE**, type a name, **Enter** (Esc cancels). Same name = replace it. Saved in `%APPDATA%\dJONt\wham-presets.json`.
3. **Delete:** pick one of yours, click **DEL** twice. Factory presets can't be deleted.

# 3 Wham: the Whammy sounds

## Two engines: CLASSIC | CHORDS

| | CLASSIC | CHORDS |
|---|---|---|
| **How it works** | The old-school two-tap shifter. It tracks the note you play and sizes its sweep to it, like the original pedals. | A smarter splicing shifter (the one T3KJ's Pitch uses). |
| **Single notes** | Clean | Clean |
| **Chords** | Warbles and glitches: the classic sound | Stays clean and in tune |
| **Use it for** | Leads, dive bombs, the Morello-style squeals | Drop-tune chugs, chord bends |

## INTERVAL: the mode knob

| GROUP | SETTINGS | WHAT THE PEDAL DOES |
|---|---|---|
| **Custom** | your Heel / Toe knobs | Sweeps from Heel to Toe. The shifted signal replaces your dry note. |
| **Whammy** | 2 Oct Up, Oct Up, 5th Up, 4th Up, 2nd Down, 4th Down, 5th Down, Oct Down, 2 Oct Down, Dive Bomb (3 octaves down) | Heel = no shift, toe = the interval. Replaces the dry; **Mix** blends dry back in. |
| **Harmony** | 2nd > 3rd Up, b3 > 3rd Up, 3rd > 4th Up, 4th > 5th Up, 5th > 6th Up, 5th > 7th Up, 4th > 3rd Down, 5th > 4th Down, Oct Down > Oct Up | Your note stays; a second voice moves from the first interval (heel) to the second (toe). **Mix** = the voice's level. No added latency. |
| **Detune** | Shallow, Deep | Your note plus a slightly detuned copy: thickness, like a doubler. The pedal does nothing. |

Harmony intervals are fixed in semitones (no key setting), so "3rd" is a major third. b3 > 3rd is the bluesy one.



ADV (the back of the module).

## ADV: voicing


| | |
|---|---|
| **Grain** | **Classic only.** The size of the shifter's sweep. Short = tighter, more metallic on chords; long = smoother, wobblier. Longer adds a little latency. |
| **Buffer** | **Chords only.** 20 ms tightest, 60 ms smoothest on low notes and bass. |
| **Tone** | Darkens the shifted signal. Up-shifts get fizzy; roll this back. Fully up = off. |
| **Mix** | The same Mix as the front. |

Click **ADV** (next to the power light) to flip over, **BACK** to return. ADV settings save with presets.

# 4 Sustain: Hold and Sustainer

Two different ways to keep notes ringing. The **HOLD | SUSTAINER** switch at the top of the module picks one.


## Hold: the piano pedal for guitar

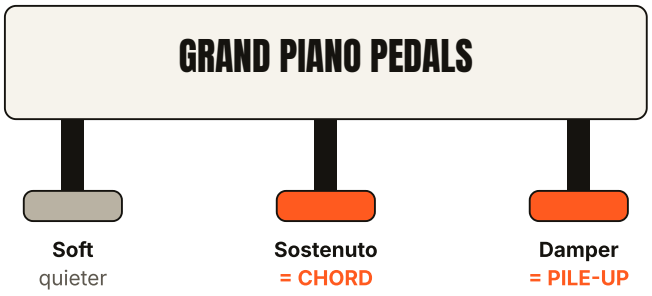



**CHORD** (the middle pedal): press HOLD and the chord ringing at that moment keeps sounding. Everything you play after that is normal, on top of it.

**PILE-UP** (the right pedal): while HOLD is down, every note you play joins the held sound and keeps ringing.

The held sound is a **freeze**: it keeps the pitches smooth and steady, like a pad, until you let go. Your live guitar passes through untouched.

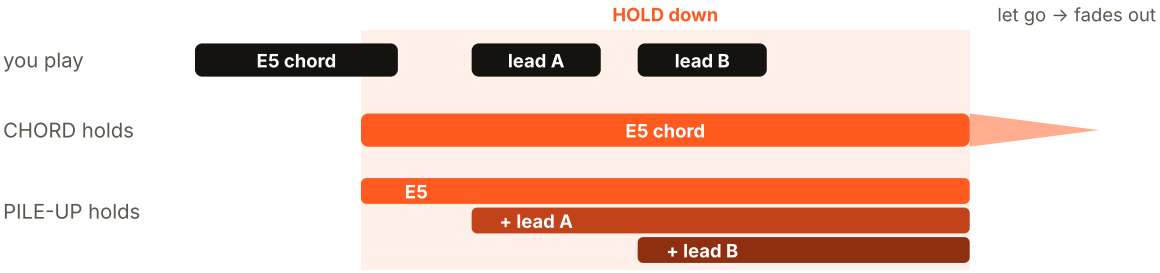

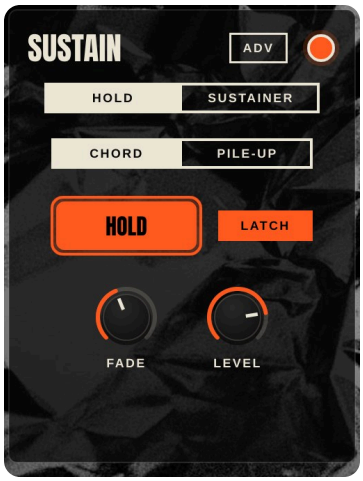

1. Turn Sustain on (power light) and pick **HOLD**.
2. Pick **CHORD** or **PILE-UP**.
3. Play a chord and click **HOLD** while it rings. It lights up.
4. Play over it. Click HOLD again to let go.


| | |
|---|---|
| **LATCH** | **On:** one click holds, the next lets go. **Off:** holds only while the mouse (or footswitch) is down. |
| **Fade** | How fast the held sound swells in and dies away. Short = a stab; long = a pad. |
| **Level** | Held sound vs your live playing. 100% = as loud as it was. |

## Sustainer: the Sustainiac idea

A real sustainer pickup (Sustainiac, Fernandes) uses a magnet to push your strings, so a note can ring forever, and its *harmonic* mode makes the note bloom into the octave above.

Software can't push a string, so dJONt does the next best thing: as your note dies away it brings the level back up to where you picked it (up to +40 dB), and **HARM** blends in the octave above over the **Bloom** time. When you mute the strings it lets go, so silence stays silent.

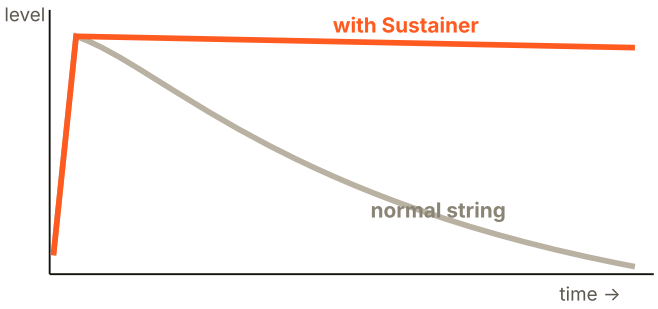


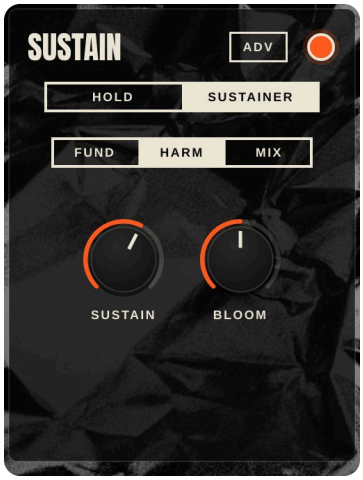

1. Turn Sustain on and pick **SUSTAINER**.
2. Pick a type: **FUND** holds the note you played, **HARM** blooms into the octave, **MIX** blooms halfway.
3. **Sustain** sets how much it holds the note up. Start around 60%.
4. **Bloom** sets how long HARM / MIX take to bloom after each pick (0.2 to 6 s).

> **Best on single notes and two-note shapes,** like the real thing. Turn Sustain up and it also brings up string and amp noise; Tight helps, and so does a gate after dJONt.

## ADV: voicing for Hold and the Sustainer

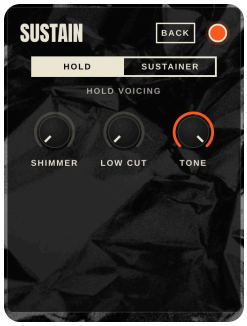


**Hold: Shimmer** adds movement so it's less of a static pad. **Low Cut** thins the held lows so they don't muddy what you play over them. **Tone** darkens it.

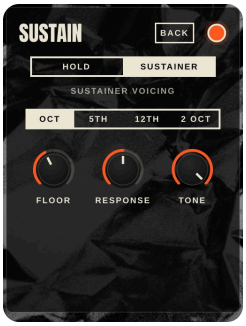


**Sustainer: Interval** is what HARM / MIX bloom into (Oct, 5th, 12th, 2 Oct). **Floor**: how quiet a note gets before it lets go. **Response**: fast = tight, slow = swells. **Tone** tames the noise it brings up.

## Hold or Sustainer?

| | HOLD | SUSTAINER |
|---|---|---|
| **What rings** | A frozen copy of what you played | The note you're playing now |
| **Bends / vibrato** | Not on the held part (it's a copy) | Yes, while the string still rings |
| **Chords** | Great: hold a chord, solo over it | OK on simple shapes; best on single notes |
| **Needs a switch?** | Yes: HOLD (mouse or footswitch) | No, it works on every note |

# 5 Footswitches, pedals and MIDI learn


The Quad Cortex footswitches are **on / off** switches (they sense touch, but not how far down you press). That's perfect for **HOLD**, and with **Glide** it drives Wham too. An expression pedal plugged into the QC's EXP jack gives you a real, smooth Wham pedal.

## Step 1: make the QC send MIDI

1. Connect the QC to the computer over **USB** (MIDI travels on the same cable).
2. In your QC preset, set a footswitch to send a **MIDI CC** message, e.g. **CC 20** for HOLD and **CC 21** for Wham. Use numbers nothing else in that preset uses. MIDI setup is per preset on the QC.
3. For an expression pedal: set the EXP pedal to send a CC (e.g. **CC 11**) the same way.

Neural's menu names change between CorOS versions; if a step doesn't match your screen, search their manual for "MIDI" / "footswitch MIDI". Your T3KJ scene footswitches already use the same idea.

## Step 2: connect it to dJONt

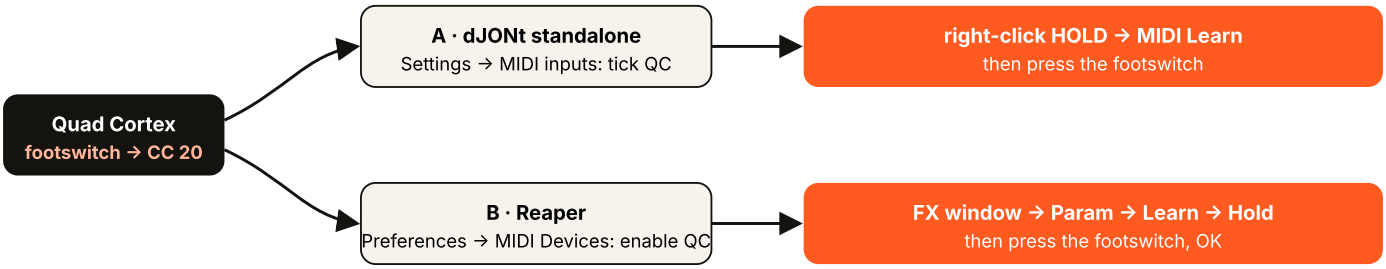


## A · In the standalone app (dJONt's own MIDI learn)

1. Gear → **MIDI inputs**: tick the Quad Cortex. Close Settings.
2. **Right-click** the control (e.g. **HOLD**, the Wham rocker, any knob or power light) → **MIDI Learn**. It gets an orange outline and the hint bar says it's waiting.
3. Press the footswitch (or move the pedal). The hint bar confirms: *"Hold is on MIDI CC 20."*
4. To undo: right-click it → **Forget MIDI CC 20**. Right-click while waiting → **Cancel MIDI learn**.

Mappings save with dJONt's state: in the standalone app between sessions, and inside your Reaper project.

## B · In Reaper (simplest there)

1. *Options → Preferences → Audio → MIDI Devices*: enable the Quad Cortex as an input (and for control).
2. In dJONt, click the control once so Reaper knows it was the last one touched.
3. In the FX window, click **Param** → **Learn** → pick the parameter (e.g. *Hold*).
4. Press the footswitch; Reaper fills in the CC. Click **OK**.

# 6 Troubleshooting

| PROBLEM | TRY THIS |
|---|---|
| No sound in the standalone app | Settings → turn on **Hear yourself**. Check that your guitar's input is ticked and the outputs go to your amp or speakers. |
| Wham does nothing | Power light on? Toe different from Heel? In PEDAL mode, move the rocker (or switch to AUTO). |
| Everything feels a bit late with Wham on | That's Wham's ~16 ms. Turn Wham off when you're not using it, and use a smaller buffer in Settings. |
| Footswitch does nothing in the standalone app | Settings → MIDI inputs: QC ticked? Hover the control: the hint bar shows *MIDI CC n* if it's mapped. Check the QC sends that CC in the current preset. |
| Footswitch does nothing in Reaper | Use Reaper's **Param → Learn** (section 5B), with the QC enabled under MIDI Devices. |
| HOLD turns off when I lift my foot | Turn **LATCH** on (or set the QC switch to latch and LATCH off). |
| Sustainer gets noisy | Lower Sustain, turn on Tight, and gate after dJONt. |
| Presets are missing | They're in `%APPDATA%\dJONt\wham-presets.json`. Back that file up to keep them. |


## LATCH: match it to how your switch behaves

| YOUR QC FOOTSWITCH SENDS... | SET LATCH | RESULT |
|---|---|---|
| 127 on press, 0 on release (momentary) | **ON** | Tap to hold, tap again to let go. |
| 127 on press, 0 on release (momentary) | **OFF** | Holds while your foot is down, like a piano pedal. |
| 127 on one press, 0 on the next (latching) | **OFF** | The switch does the latching. |

**Cheat sheet.** Right-click = MIDI. Double-click = reset. Hover = explain. HOLD + LATCH = tap on, tap off. Wham Glide = footswitch sweeps. Rise + Retrig = scoop per pick. dJONt goes **before** the amp.

# 7 Module reference

The same text as the manual inside the plugin: click **?** in dJONt's header, pick a topic on the left.

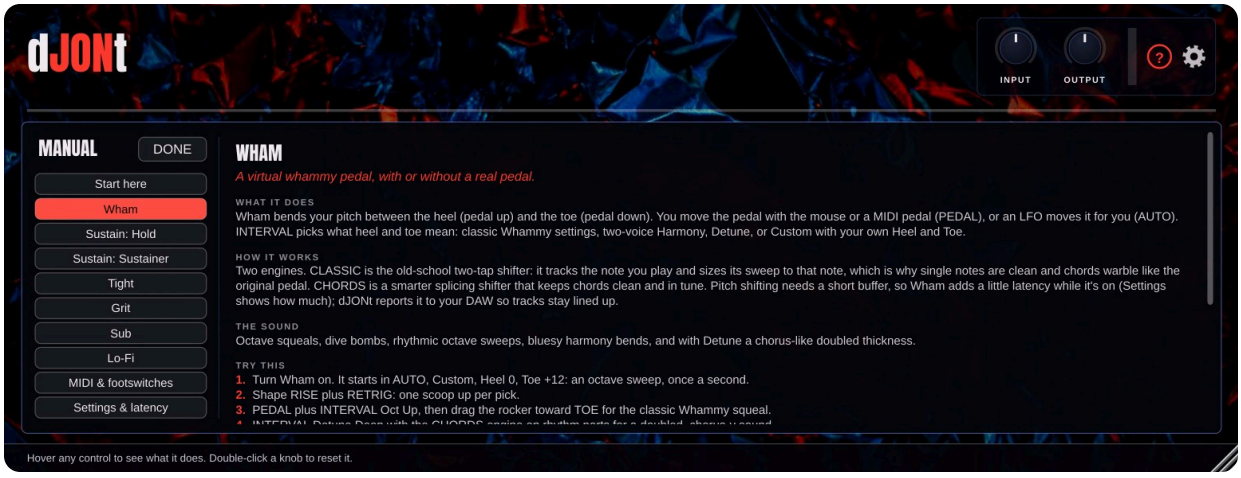

The ? manual in the Red Foil look.

## Start here *A pedalboard that goes in front of your amp sim.*

**What it does.** dJONt is a set of effects for guitar that run before the amp: Wham (a virtual whammy), Sustain (Hold and Sustainer), Tight, Grit, Sub and Lo-Fi. Each module has a power light; off modules pass your signal untouched.

**How it works.** The signal runs left to right in a fixed order: Wham, Sustain, Tight, Grit, Sub, Lo-Fi. dJONt works on your guitar's dry signal, so put it on the track before T3KJ (or any amp sim), like pedals in front of an amp.

**The sound.** Everything here is built for low tunings and heavy rhythm playing, plus the pitch and sustain tricks you'd normally need a pedalboard for.

**Try this.**

1. In Reaper: add dJONt to your guitar track, then T3KJ after it.
2. Turn on Tight and play palm mutes. That's the module most people leave on.
3. Hover over anything: the hint bar at the bottom explains it and shows its value.
4. Drag knobs up and down. Double-click a knob to reset it. Right-click any control for MIDI learn.

| CONTROL | WHAT IT DOES |
|---|---|
| **HUSH** | The de-noiser on your DI, before Wham (zero latency). Click HUSH in the header. |
| **Input / Output** | Level into and out of dJONt, ±24 dB. The meter turns red when the output clips. |
| **Gear** | Settings: the look (Chrome or Red Foil), and in the standalone app your audio interface, MIDI inputs and latency. |
| **?** | This manual. |
| **ADV** | Flips Wham or Sustain over to their voicing controls. BACK returns. |

# Wham *A virtual whammy pedal, with or without a real pedal.*

**What it does.** Wham bends your pitch between the heel (pedal up) and the toe (pedal down). You move the pedal with the mouse or a MIDI pedal (PEDAL), or an LFO moves it for you (AUTO). INTERVAL picks what heel and toe mean: classic Whammy settings, two-voice Harmony, Detune, or Custom with your own Heel and Toe.

**How it works.** Two engines. CLASSIC is the old-school two-tap shifter: it tracks the note you play and sizes its sweep to that note, which is why single notes are clean and chords warble like the original pedal. CHORDS is a smarter splicing shifter that keeps chords clean and in tune. Pitch shifting needs a short buffer, so Wham adds a little latency while it's on (Settings shows how much); dJONt reports it to your DAW so tracks stay lined up.

**The sound.** Octave squeals, dive bombs, rhythmic octave sweeps, bluesy harmony bends, and with Detune a chorus-like doubled thickness.

**Try this.**

1. Turn Wham on. It starts in AUTO, Custom, Heel 0, Toe +12: an octave sweep, once a second.
2. Shape RISE plus RETRIG: one scoop up per pick.
3. PEDAL plus INTERVAL Oct Up, then drag the rocker toward TOE for the classic Whammy squeal.
4. INTERVAL Detune Deep with the CHORDS engine on rhythm parts for a doubled, chorus-y sound.
5. Presets: load a factory one (Dive Bomb, Siren, Octave Stabs) and SAVE your own.

| CONTROL | WHAT IT DOES |
|---|---|
| **PEDAL / AUTO** | Who moves the pedal: you (mouse, scroll, MIDI) or an LFO. |
| **INTERVAL** | Custom (your Heel / Toe), Whammy (2 Oct Up … Dive Bomb), Harmony (your note plus a moving second voice), Detune (your note plus a slightly detuned copy). |
| **Heel / Toe** | Custom only: the pitch at each end of the pedal, ±24 semitones. |
| **Rate / Shape / Retrig** | AUTO only: LFO speed, its shape (Sine, Triangle, Rise, Square), and restarting the sweep on every pick. |
| **Glide** | PEDAL only: how long the pitch takes to follow the pedal. Up it for footswitch sweeps. |
| **Mix** | Dry vs shifted. In Harmony it's the second voice's level. |
| **ADV: Grain** | Classic only: short is tighter and more metallic on chords, long is smoother and wobblier. |
| **ADV: Buffer** | Chords only: 20 ms is tightest, 60 ms smoothest on low notes. |
| **ADV: Tone** | Darkens the shifted signal. Up-shifts get fizzy; roll this back. |

# Sustain: Hold *A piano sustain pedal for guitar.*

**What it does.** Press HOLD and what's ringing keeps sounding as a smooth pad, while you keep playing normally on top. CHORD freezes the chord ringing at that moment; PILE-UP keeps adding every note you play while HOLD is down.

**How it works.** Hold takes a snapshot of the sound's spectrum and keeps resynthesizing it (a spectral freeze), so the held part is steady instead of a stuttering loop. Your live guitar passes through untouched.

**The sound.** Ambient pads under a lead, held chords in breakdowns, swelling drones. Long Fade gives pads, short Fade gives stabs.

**Try this.**

1. Turn Sustain on and pick HOLD, then CHORD.
2. Strum a chord, click HOLD while it rings, then solo over it. Click HOLD again to let go.
3. Map HOLD to a footswitch (right-click it, MIDI Learn) and use LATCH: tap on, tap off.

| CONTROL | WHAT IT DOES |
|---|---|
| **HOLD** | Holds the sound. Works with the mouse or a MIDI footswitch. |
| **CHORD / PILE-UP** | Freeze one moment, or keep stacking notes while held. |
| **LATCH** | On: one press holds, the next lets go. Off: holds only while pressed. |
| **Fade** | How fast the held sound swells in and dies away. |
| **Level** | Held sound vs your live playing. 100% = as loud as it was. |
| **ADV: Shimmer** | Adds movement so the pad is less static. |
| **ADV: Low Cut / Tone** | Thin the held lows so they don't muddy what you play over them; darken the pad. |

## Sustain: Sustainer *The Sustainiac idea: notes that don't die.*

**What it does.** As your note fades, the Sustainer brings it back up to where you picked it, so single notes ring for as long as you hold them. In HARM it blooms into the octave (or the Interval you pick) the way a sustainer pickup's harmonic mode does.

**How it works.** A level-riding gain stage follows the note's level and makes up the loss, up to +40 dB, then lets go when the note drops under the Floor, so muting the strings still means silence. HARM and MIX fade in a pitch-shifted copy over the Bloom time.

**The sound.** Endless lead notes, feedback-style blooms into the octave without standing in front of an amp. Best on single notes and two-note shapes.

**Try this.**

1. Turn Sustain on, pick SUSTAINER, type FUND, Sustain around 60%.
2. Switch to HARM and hold a note: it blooms into the octave over the Bloom time.
3. If it gets noisy: lower Sustain, turn on Tight, or put a gate after dJONt.

| CONTROL | WHAT IT DOES |
|---|---|
| **FUND / HARM / MIX** | Hold the note you played, bloom into the Interval, or bloom halfway. |
| **Sustain** | How much it holds the note up. |
| **Bloom** | How long HARM / MIX take to bloom after each pick (0.2 to 6 s). |
| **ADV: Interval** | What it blooms into: Octave, 5th, 12th, 2 Octaves. |
| **ADV: Floor** | How quiet a note gets before it lets go. |
| **ADV: Response** | Fast is tight, slow swells. |
| **ADV: Tone** | Tames the hiss it brings up. |

## Tight *Palm mutes that hit harder and stop sooner.*

**What it does.** Tight pushes each pick attack and trims the ring-out after it, in the band where your low strings live.

**How it works.** A detector band-passes the signal at Freq and compares a fast envelope with a slow one. On an attack the band is lifted (up to about +12 dB); as the note decays it's trimmed a little. It's like a transient shaper aimed at the chug.

**The sound.** Tighter, punchier rhythm parts into a high-gain amp, without changing your tone between hits.

**Try this.**

1. Leave it on for any heavy rhythm part. Amount 50% is a good start.
2. Set Freq near your low string: around 80–120 Hz for drop tunings, higher for more pick click.

| CONTROL | WHAT IT DOES |
|---|---|
| **Amount** | How hard each attack is pushed and how much the ring-out is trimmed. |
| **Freq** | The band Tight listens to and punches up (60 Hz to 1 kHz). |

## Grit *Fuzz on the low end only.*

**What it does.** Grit adds a fuzzed copy of just your lows, under your dry signal.

**How it works.** The lows below Freq are split off, driven into an asymmetric clipper, low-passed again so the fizz stays out, and blended back in.

**The sound.** A thicker, growlier bottom end, especially into a clean or lightly driven amp, without making the top end harsher.

**Try this.**

1. Blend around 40%, Drive to taste.
2. Use a low Freq (around 100 Hz) so only the very bottom gets fuzzed.

| CONTROL | WHAT IT DOES |
|---|---|
| **Drive** | How hard the low-end fuzz is pushed. |
| **Blend** | How much fuzz sits under your dry signal. |
| **Freq** | Only the lows below this get fuzzed (60 to 400 Hz). |

## Sub *An octave below, under your dry signal.*

**What it does.** Sub adds the octave down, through a low-pass so it stays a round, heavy bottom.

**How it works.** CLEAN uses a pitch shifter that handles chords (the octave trails your note by about 20 ms; your dry note doesn't). SYNTH is a flip-flop divider like an analog octave pedal: instant, buzzy, single notes only.

**The sound.** Bass-guitar weight under riffs, or a synthy octave growl with SYNTH.

**Try this.**

1. CLEAN, Blend 40%, Tone low, for chugs that sound like there's a bass player.
2. SYNTH on single-note riffs for an analog-octaver buzz.

| CONTROL | WHAT IT DOES |
|---|---|
| **CLEAN / SYNTH** | Chord-friendly shifter, or an instant analog-style divider. |
| **Blend** | How loud the octave below is. |
| **Tone** | Low-pass on the octave; lower is rounder. |

## Lo-Fi *A radio / telephone filter.*

**What it does.** Lo-Fi squeezes your sound into a narrow band, like an old radio or a phone speaker.

**How it works.** A band-pass filter around Tone with a touch of drive.

**The sound.** Intros, breakdowns and 'before the drop' moments that open up when you switch it off.

**Try this.**

1. Map its power light to a footswitch and kick it off for the drop.
2. Tone around 1 kHz is classic telephone; lower is muffled AM radio.

| CONTROL | WHAT IT DOES |
|---|---|
| **Tone** | Center of the band (300 Hz to 3 kHz). |
| **Blend** | Dry to fully filtered. |

## Hush *A de-noiser for your DI, with zero latency.*

**What it does.** Hush turns down the hiss and electrical buzz (EMI) your pickups bring, before anything in the chain amplifies it. It works between notes and also under them, in the parts of the spectrum your note isn't using. It's off until you turn it on: click HUSH in the header.

**How it works.** Hush watches eight bands from 200 Hz up. Each band has a noise floor (set by LEARN) and opens the moment your note shows up in it, within about two milliseconds, so pick attacks get through. A band with only noise in it is turned down with an EQ cut, by up to Strength. Nothing is delayed, and with every band open your signal is untouched. Below 200 Hz nothing changes: hum is a job for the gates (and, on a Jazz Bass, both pickup volumes full up).

**The sound.** A quiet floor under high gain: no hiss between riffs and less fizz around held notes, without a gate's chop. Too much Strength or Sensitivity can make quiet notes a little duller.




HUSH, left of Input, opens it; DONE goes back.

**Try this.**

1. Click HUSH and turn it ON.
2. Volume up on your instrument, hands off the strings, click LEARN and wait two seconds.
3. Play, and raise Strength until the hiss is gone. If quiet notes lose sparkle, lower Sensitivity or Strength.
4. Use it with the gates, not instead of them: with Hush on you can set them lower, so notes fade out more naturally.

| CONTROL | WHAT IT DOES |
|---|---|
| **ON / OFF** | Off is a perfect bypass. |
| **LEARN** | Two seconds of listening, hands off the strings, to set each band's noise floor. Saved with your settings. |
| **Strength** | How far a noise-only band is turned down (100% = 30 dB). |
| **Sensitivity** | How far over its floor a band has to be to count as your note (0 to 24 dB). |
| **Release** | How fast a band turns down once your note leaves it (10 to 500 ms). |
| **Meters** | How far each band is being turned down right now. |

## MIDI & footswitches *Put any control on a footswitch or expression pedal.*

**What it does.** Every knob, power light, the HOLD button and the Wham rocker can be driven by MIDI CC from a controller, like a Quad Cortex footswitch or an expression pedal.

**How it works.** Right-click a control and choose MIDI Learn, then move or press the controller; dJONt maps that CC to it. Mappings save with the plugin's state (in the standalone app between sessions, and in your DAW project). In a DAW you can also use the DAW's own parameter learn.

**The sound.** Hands-free HOLD, footswitch Wham sweeps (map Wham Pedal and turn up Glide), or a real expression pedal on the rocker.

**Try this.**

1. Standalone: gear, then tick your controller under MIDI inputs.
2. Right-click HOLD, MIDI Learn, press the footswitch. The hint bar confirms the CC.
3. Right-click again to Forget it.

| CONTROL | WHAT IT DOES |
|---|---|
| **Right-click** | MIDI Learn / Forget MIDI / Cancel. |
| **Hint bar** | Shows a control's CC when it's mapped. |

## Settings & latency *Audio setup for the standalone app.*

**What it does.** The gear opens Settings: the look, and in the standalone app your audio interface, inputs, outputs, sample rate, buffer, MIDI inputs and a live latency readout.

**How it works.** In a DAW, the DAW owns the audio device, so those controls only appear in the standalone app. dJONt itself adds no latency, except Wham while it's on.

**The sound.** The lowest latency comes from ASIO and the smallest buffer that doesn't crackle (64 or 128 is typical).

**Try this.**

1. No sound in the standalone app? Turn on Hear yourself, and check your guitar's input is ticked.
2. Pick ASIO and your interface, 48 kHz, buffer 64 or 128.

| CONTROL | WHAT IT DOES |
|---|---|
| **Look** | Chrome or Red Foil. Saved with the plugin's state. |
| **Hear yourself** | Plays dJONt's output while your input is live. Off by default to prevent feedback. |
| **Window size** | Drag the bottom-right corner: 60% to 200%. dJONt remembers it. |