# **ECE385**DIGITAL SYSTEMS LABORATORY

# Introduction to USB and EZ-OTG on Nios II

#### **Embedded System with Nios II**

In Lab 7, we introduced the Nios II embedded processor. We said in class that the Nios II is ideal for low speed tasks which would require a huge number of states/logic to do in hardware. USB enumeration for a HID device is one of these tasks, since the speed (for a human-interface device such as a keyboard) is very low, but there are a prohibitive number of states/cases to efficiently handle in hardware.


In Lab 8, the USB protocol is handled in the software on the Nios II, and the extracted keycode from the USB keyboard is then sent to the hardware for further use. In this tutorial, you will build a Qsys interface to handle to I/O interface to communicate with the USB-OTG chip. Then you will learn how to import existing NIOS II software and make changes to it to get the keyboard to work correctly.

You should start with a working lab 7 Qsys setup. If you don't have one, you should follow the tutorial for lab 7 to complete the Qsys setup. Always keep a backup copy of old files that you are reusing especially if you know if they were working with the older version.

Starting from lab 7, remove the PIO modules in Qsys which correspond to the LEDs and switches you used in lab 7, as we will not be using them for lab 8.

You will then need to add the JTAG UART peripheral. This is found under Interface Protocols->Serial. This is so that you can use the terminal of the host computer (the one running eclipse) to communicate with the NIOS II (using print and scan statements in c).

You can simply leave the settings here as a default. What this block does is give you the ability to use console (printf) commands from the Nios II which go through the programming cable via USB. While this is typically not a good user interface for an embedded system (as it requires the programming cable to be connected and the user to have all the Altera software installed), this is an excellent way to debug your software while in development.

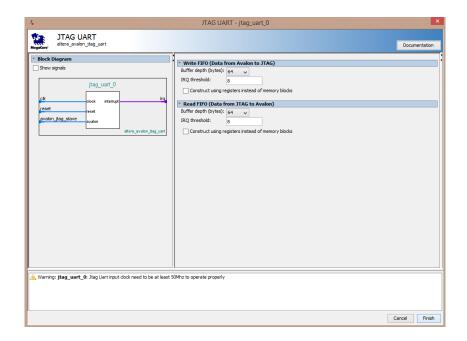

#### Make the connections as shown below:



Making the standard connections for clk/reset/data bus, that we've been doing for the other peripherals. One difference here is that we must assign an **interrupt** for this, which we will assign IRQ (interrupt request) 5. Connect the interrupt controller to IRQ and give it the number 5 (this is on the far right of the row. The reason for using interrupts here is that transmitting or receiving text over the console is in general very slow, and we don't want this procedure to block on the CPU. Therefore, the typical way in which printf is implemented is that control is returned program as soon as printf is called, but an interrupt is set up at the end of transmission for each buffer. This way, the CPU does not have to block while waiting for each of the characters to be transmitted, it is only interrupted whenever the peripheral (the JTAG UART) needs more data.

You need to add multiple PIO connections to the lab 8 setup, these are listed below with the direction of the ports and size of the ports.

| Name            | Direction | Width |  |  |
|-----------------|-----------|-------|--|--|
| Keycode         | out       | 16    |  |  |
| otg_hpi_cs      | out       | 1     |  |  |
| otg_hpi_address | Out       | 2     |  |  |
| otg_hpi_data    | Inout     | 16    |  |  |
| otg_hpi_r       | Out       | 1     |  |  |
| otg_hpi_w       | Out       | 1     |  |  |

You don't need the LED PIO's anymore for this lab, so you can uncheck it to disable it.

This is how all the PIO's and JTAG UART should look when connected up (this only include additions from lab 7). Also keep in mind, the names don't have to match exactly they just have to refer to type of signal and you can rename the variables in the software and hardware to match your versions of the names.

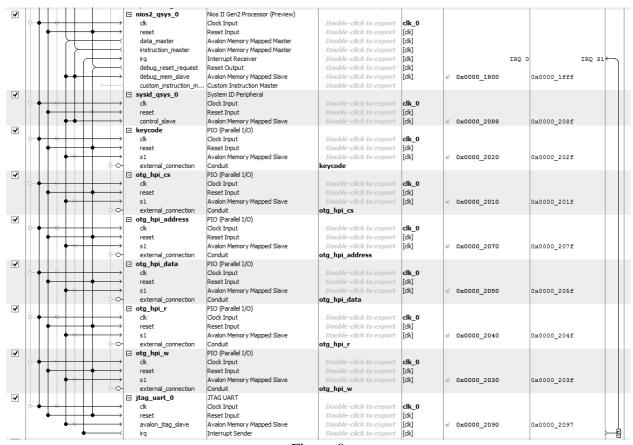


Figure 0

You should save the Qsys setup and generate HDL and make sure you don't have any errors.

For this next part you need to have a complete hardware top level entity. You need to make sure that all the pin connections mentioned in the lab 8 experiment section exist and are connected to the correct entities. Remember that your HDL will need to pass the PIO ports to the physical pins on the FPGA which are physically connected to the USB chip. The easiest way to do this is to map them in HDL to the names found in the standard pin assignment file. To complete this you also need to add in the HDL version of the Qsys system to the project by adding the .qip file like you did in lab 7. If all the connections to the qip are made correctly, you should be able to compile the project and program it onto the board.

Go to **Tools > Nios II Software Build Tools for Eclipse** to launch the software development environment. Specify the workspace path to be the same as your Quartus II project, as shown in Figure 1.

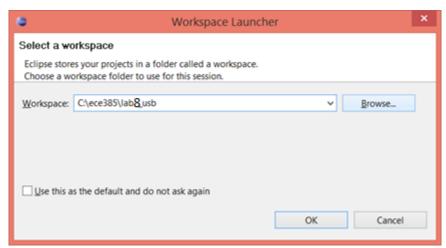


Figure 1

The Eclipse window will show up, as in Figure 2.

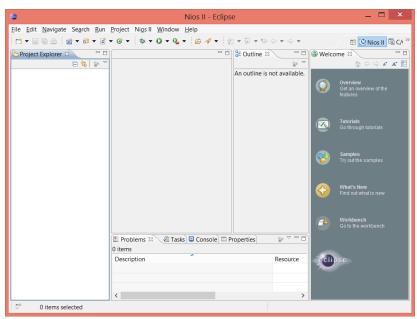


Figure 2

Set perspective to Nios II by going to Menu > Window > Open Perspective > Other > Nios II or by clicking on the Nios II icon on the upper right of the window.

Next, we will import the provided software source code into the workspace. Right click on the blank space in Project Explorer on the left and select *Import...* (or alternatively, **Files** > **Import...**). Select *Nios II Software Build Tools Project* > *Import Nios II Software Build Project* , as shown in Figure 3, and Click *Next*.

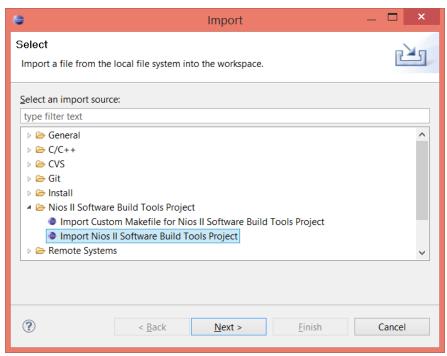


Figure 3

In the next screen Browse for the software\usb\_kb folder in the project folder. Type in Project name as usb\_kb, as shown in Figure 4. Make sure *Clean project when importing* is selected. Click *Finish*. This is the main software program we will be working on.

| 6  | Import Software Build Tools Project          | _ 🗆 ×  |  |  |  |  |  |
|--|--|--------|--|--|--|--|--|
| Import Software  |  |        |  |  |  |  |  |
| Project location: C:\ece385\lab7_usb\software\usb_kb  Project name: usb_kb  Clean project when importing  Managed project  Toolchain: MinGW Nios II GCC4 |  |        |  |  |  |  |  |
| ?  | < <u>B</u> ack <u>N</u> ext > <u>E</u> inish | Cancel |  |  |  |  |  |

Figure 4

Import another project called *usb\_kb\_bsp* stored in *software\usb\_kb\_bsp*. The BSP project defines hardware information so the software can be compiled and run correctly.

Now we have two projects,  $usb\_kb$ , and  $usb\_kb\_bsp$  in the Project Explorer. Right click on  $usb\_kb\_bsp$  and select  $Nios\ II > Generate\ BSP$ . This configures the compilation environment to be compatible with the hardware design. Click on the main project,  $usb\_kb$ , and then go to  $Project > Build\ All$  to compile the program.

## **IMPORTANT**:

Whenever the hardware part is changed, it needs to be compiled in Quartus II and programmed on the FPGA. If the programmer fails to load the .sof file on the FPGA, it's likely because the software is occupying the USB Blaster port. Simply stop the program or restart the FPGA board if this is the case.

On the software side, make sure to right click on cproject\_name\_bsp> and select Nios II>
Generate BSP
so the latest hardware information is included in the Makefile. Then, compile the program again (Build All). Compatibility errors occur if you fail to do so!

To run the program on Nios II, click on *Run* > *Run Configurations*... to open up a dialog window, as shown in Figure 5.

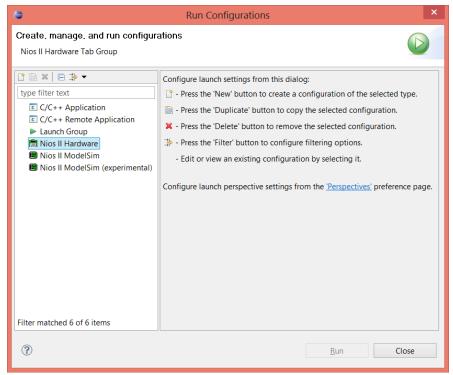


Figure 5

Right click on *Nios II Hardware* and select *New*. Type in the name of the configuration as *DE2-115*. In the *Project* tab, select Project name to be the project you are working with. The corresponding ELF file should automatically be set up. See Figure 6. The ELF file is the compiled software file that is downloaded into the system memory and run on Nios II.

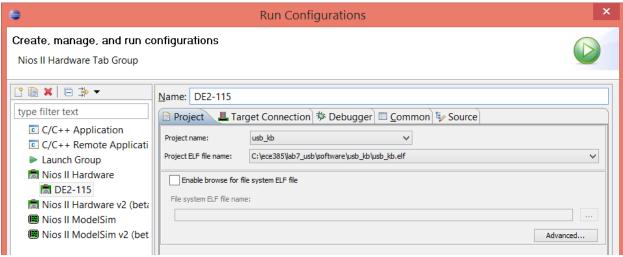


Figure 6

Go to the *Target Connection* tab. Click on Refresh Connections on the right. Make sure the *Processors* and the *Byte Stream Devices* are both *USB-Blaster on localhost*. If an error message "Connected system ID hash not found on target at expected base address" appears, check the options of *Ignore mismatched system ID* and *Ignore mismatched system timestamp*. See Figure 7.

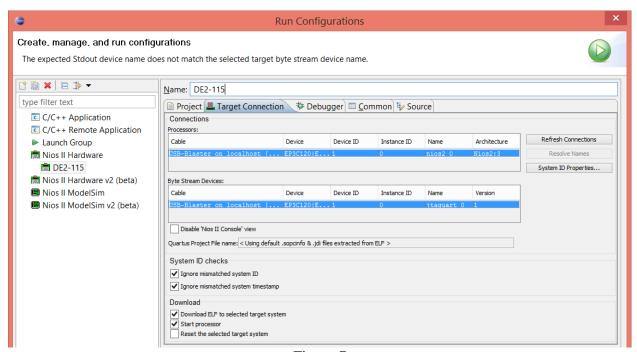


Figure 7

Go to the *Common* tab. Check both *Allocate console* and *File* under *Standard Input and Output*. Type in a path for your log file, such as *C:\ece385\lab8\_usb\mylog.txt*, as shown in Figure 8. This will log some of the error/warning messages in case you encounter them, which helps a lot in troubleshooting.

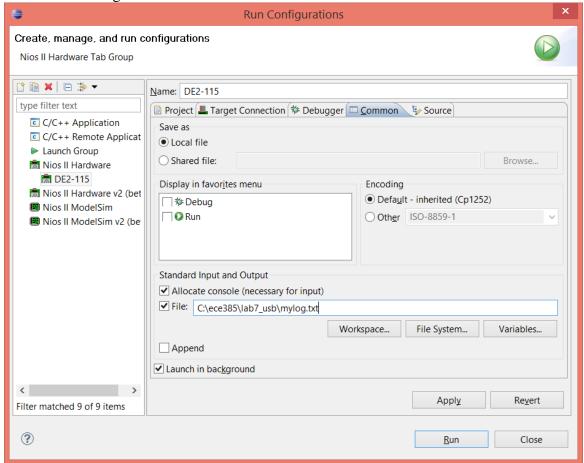


Figure 8

Click *Run* to run the program. A Nios II console should appear on the bottom of the Eclipse environment. Standard I/O is made on the Nios II console on your PC, transmitted via the USB Blaster cable to the DE2-115 board and to the program running on the Nios II processor.

# USB Host Programming with the EZ-OTG (CY7C67200) Chip

The Cypress EZ-OTG (CY7C67200) chip handles the USB protocol. OTG stands for On-The-Go, which is an add-on specification on top of the standard USB 2.0 standard that allows not only PCs but also other mobile devices to act as a USB Host. The EZ-OTG chip itself contains a RISC microprocessor (CY16), RAM, and ROM (BIOS), as shown on the left in Figure 9. The RAM can be accessed through direct memory access (DMA) at addresses 0x0000 – 0x3FFF. The Serial Interface Engines (SIEs) are the front end of the USB controller and are where the USB ports are attached. The connections between EZ-OTG and the DE2-115 FPGA board are made through the Host Port Interface (HPI), which are shown as the connections in the center of Figure

9. The noteworthy pins are HPI\_D[15:0], which is the 16-bit parallel data bus; HPI\_INT, which indicates the event of interrupt; HPI\_A[1:0], which indicates the addresses to four port registers on the chip. Each of the port registers control some important functionalities on EZ-OTG, some of which will be used later. The port registers and the addresses are listed in Table 1.

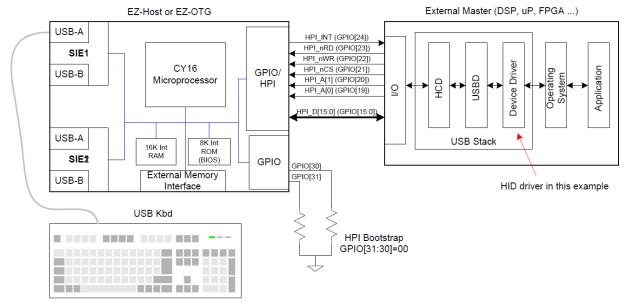


Figure 9

| Port Registers | HPI A [1] | HPI A [0] | Access |
|----------------|-----------|-----------|--------|
| HPI DATA       | 0         | 0         | RW     |
| HPI MAILBOX    | 0         | 1         | RW     |
| HPI ADDRESS    | 1         | 0         | W      |
| HPI STATUS     | 1         | 1         | R      |

Table 1

We need to program and configure EZ-OTG in order to make it act as a Host Controller and establishes a connection with the USB keyboard. In the program, we will do the following:

- Set up the EZ-OTG chip.
- Detect connection and assign an address to the connected device.
- Identify device type from descriptors.
- Set configuration.
- Poll keyboard data.

In the Nios II system, most of the peripheral IPs are memory-mapped, that is, we are able to read and write from these IPs via memory access functions. Two important functions (provided by Altera, defined in *HAL/inc/io.h*) that read and write from the peripherals are introduced here:

IORD(base, offset):

Read and return data from the memory location specified by (base address + offset). Offset is word-wise, that is, an offset of 1 is equivalent to a 32-bit or 4-byte offset in the address. IOWR (base, offset, data):

Write data to the memory location specified by (base address + offset).

Hint: In Eclipse, right click on a function/variable name and choose Open Declaration will lead you to the function/variable. This is very helpful when you need to trace your source code in multiple files.

However in this lab we will not using these functions (IORD and IOWR), since the EZ-OTG's memory space is **not** memory mapped to the NIOS II address space. Instead you will write the following helper functions which the provided C code will call to talk to the EZ-OTG.

#### IO read(address):

Read and return data from the memory location specified by the address. The address should be 2 bits wide as described in the CY7C67200 datasheet.

# IO write(address, data):

Write data to the memory location specified by the address. The address should be 2 bits wide while the data should be 16 bits wide as described in the CY7C67200 datasheet.

By using these functions, we can communicate with the EZ-OTG. The standard procedure of reading is:

- 1. Write the address to access to HPI ADDR.
- 2. EZ-OTG will fetch the data from the specified address (e.g. an address in the RAM) and make it ready to be transferred via HPI\_DATA.
- 3. Read from HPI\_DATA.
- 4. (Optional: continuous read) EZ-OTG will load the data at the next available address to HPI\_DATA, that is, if more data are to be read from the next address, we can simply read again from HPI\_DATA without giving the next address.

Similarly, the procedure of writing is:

- 1. Write the address to access to HPI\_ADDR.
- 2. Write data to HPI DATA in 16-bit little endian words.
- 3. EZ-OTG will store the data to the specified address (e.g. an address in the RAM).
- 4. (Optional: continuous write) If more data are to be written into the next address, we can simply write again to HPI\_DATA. EZ-OTG will store the data into the next available address.

To further simplify the procedure, you will need to complete the definition of two helper functions in USB.c as follows:

```
alt_u16 UsbRead(alt_u16 Address)
void UsbWrite(alt_u16 Address, alt_u16 Data)
```

These functions perform a single read/write without utilizing the continuous read/write feature. Here, alt\_u16 is Altera's built-in data type of a 16-bit unsigned integer. Therefore here the address is 16 bits wide and so is the data.

### **USB Keyboard Enumeration**

The keyboard enumeration procedure is done in *main.c*, following the **Example Data Transfer** to Enumerate a USB section in the Cypress Using HPI in Coprocessor Mode with OTG-Host (AN6010) document. The steps are summarized as follows:

Step 1a: Initialize EZ-Host/EZ-OTG registers.

Step 1b: Configure SIE1 as a host.

Step 2: USB RESET.

Step 3: Set address.

Step 4: Get device descriptor.

Step 5: Get configuration descriptor (1).

Step 6: Get configuration descriptor (2).

(Get device info.)

Step 7: Set configuration.

(Make class requests.)

Step 8: Get HID descriptor (Class 0x21).

Step 9: Get report descriptor (Class 0x22).

And finally poll keyboard data.

Each step requires a series of reads and writes on the EZ-OTG registers and RAM. In the end of Steps 1-2, COMM\_EXEC\_INT (0xCE01) is written to HPI\_MAILBOX to issue an execution, as shown in Figure 6 of the AN6010 document. In the rest of the steps, a list of Transaction Descriptors (TDs) is written into the RAM, and then UsbWrite(HUSB\_SIE1\_pCurrentTDPtr, Address) is called to specify the start address of the TDs in the RAM so EZ-OTG can process the TDs. After the TDs are read and processed, EZ-OTG will set the SIE1msg bit of the HPI\_STATUS register to 1 to indicate successful execution. The bit fields in HPI\_STATUS are explained in Table 4 of the AN6010 document. If the SIE1msg bit is not set to 1, the program should make another attempt to transfer the TDs and have EZ-OTG process them again.

The Keyboard Enumeration has been completed for you in this lab and you don't need to worry about it. One thing to keep in mind is that the keycode (which is the output from the keyboard) is only 16 bits wide. That means with this setup you can only get information about two keys on the keyboard simultaneously, to add the ability to get more information about more keys you need to add another IO\_read call in main.c.

Below is a table with a description of how keycode correspond to the key pressed.

Code that performs this is given as part of the C code for this lab you, this description is for your reference and to assist any debugging.

| 0                         | 1              | 2             | 3             | 4        | 5        | 6                | 7                | 8            | 9              | 10                      | 11                     |
|---------------------------|----------------|---------------|---------------|----------|----------|------------------|------------------|--------------|----------------|-------------------------|------------------------|
| -                         | err            | err           | err           | A        | В        | C                | D                | E            | F              | G                       | Н                      |
| 12                        | 13             | 14            | 15            | 16       | 17       | 18               | 19               | 20           | 21             | 22                      | 23                     |
| Ī                         | J              | K             | L             | M        | N        | 0                | P                | Q            | R              | S                       | T                      |
| 24                        | 25             | 26            | 27            | 28       | 29       | 30               | 31               | 32           | 33             | 34                      | 35                     |
| U                         | V              | W             | X             | Y        | Z        | 1                | 2                | 3            | 4              | 5                       | 6                      |
| 36                        | 37             | 38            | 39            | 40       | 41       | 42               | 43               | 44           | 45             | 46                      | 47                     |
| 7                         | 8              | 9             | 0             | Enter    | Esc      | BSp              | Tab              | Space        | - /            | =/+                     | [/{                    |
| 48                        | 49             | 50            | 51            | 52       | 53       | 54               | 55               | 56           | 57             | 58                      | 59                     |
| ]/}                       | \/             |               | ;/:           | '/"      | `/~      | ,/<              | ./>              | //?          | Caps<br>Lock   | F1                      | F2                     |
| 60                        | 61             | 62            | 63            | 64       | 65       | 66               | 67               | 68           | 69             | 70                      | 71                     |
| F3                        | F4             | F5            | F6            | F7       | F8       | F9               | F10              | F11          | F12            | PrtScr                  | Scroll<br>Lock         |
| 72                        | 73             | 74            | 75            | 76       | 77       | 78               | 79               | 80           | 81             | 82                      | 83                     |
| Pause                     | Insert         | Home          | PgUp          | Delete   | End      | PgDn             | Right            | Left         | Down           | Up                      | Num<br>Lock            |
| 84                        | 85             | 86            | 87            | 88       | 89       | 90               | 91               | 91           | 91             | 94                      | 95                     |
| KP /                      | KP *           | KP -          | KP +          | KP       | KP 1 /   | KP 2 /           | KP 3 /           | KP 4 /       | KP 5           | KP 6 /                  | KP 7 /                 |
|                           |                |               |               | Enter    | End      | Down             | PgDn             | Left         |                | Right                   | Home                   |
| 96                        | 97             | 98            | 99            | 100      | 101      | 102              | 103              | 104          | 105            | 106                     | 107                    |
| KP 8 /<br>Up              | KP 9 /<br>PgUp | KP 0 /<br>Ins | KP . /<br>Del |          | Applic   | Power            | KP =             | F13          | F14            | F15                     | F16                    |
| 108                       | 109            | 110           | 111           | 112      | 113      | 114              | 115              | 116          | 117            | 118                     | 119                    |
| F17                       | F18            | F19           | F20           | F21      | F22      | F23              | F24              | Execute      | Help           | Menu                    | Select                 |
| 120                       | 121            | 122           | 123           | 124      | 125      | 126              | 127              | 128          | 129            | 130                     | 131                    |
| Stop                      | Again          | Undo          | Cut           | Сору     | Paste    | Find             | Mute             | Volume<br>Up | Volume<br>Down | Locking<br>Caps<br>Lock | Locking<br>Num<br>Lock |
| 132                       | 133            | 134           | 135           | 136      | 137      | 138              | 139              | 140          | 141            | 142                     | 143                    |
| Locking<br>Scroll<br>Lock | KP,            | KP =          | Internat      | Internat | Internat | Internat         | Internat         | Internat     | Internat       | Internat                | Internat               |
| 144                       | 145            | 146           | 147           | 148      | 149      | 150              | 151              | 152          | 153            | 154                     | 155                    |
| LANG                      | LANG           | LANG          | LANG          | LANG     | LANG     | LANG             | LANG             | LANG         | Alt<br>Erase   | SysRq                   | Cancel                 |
| 156                       | 157            | 158           | 159           | 160      | 161      | 162              | 163              | 164          | 165            | 166                     | 167                    |
| Clear                     | Prior          | Return        | Separ         | Out      | Oper     | Clear /<br>Again | CrSel /<br>Props | ExSel        |                |                         |                        |
| 224                       | 225            | 226           | 227           | 228      | 229      | 230              | 231              |              |                |                         |                        |
| LCtrl                     | LShift         | LAlt          | LGUI          | RCtrl    | RShift   | RAlt             | RGUI             |              |                |                         |                        |

Table 3