

Bass Melody

SOURCE: github.com/jorisesch/moduleur

A weighty sequenced saw-and-sub bass with a short filter bite and a restrained melodic range.

BRAIN: Le Controlleur | VERSION: unknown | MODE: Sequencer

LAYOUT: three-knobs-two-buttons

X/Y/Z are the upper knobs, left to right: X 35% tempo, Y 10% octave range, Z 20% randomness. Press A to run.

Use internal clock. Scale, sequence length, swing and transpose were not recorded; the exact melody may differ.

SOUND

A low saw carries the melody while its sub adds weight. Each short gate opens the amplitude envelope and pushes the filter into a compact, rounded bite.

SETUP

Connect the seven instrument cables and headphones. Leave ENV/VCA 1 CONTROL empty: the internal envelope connection opens the VCA.

Start with output volume low. Select Sequencer mode, set Brain X/Y/Z, and press A. Tune VCO 1 into the bass range while it plays.

Brain X 35%, Y 10%, Z 20%, Mixer IN3 35% and Filter CUTOFF 65% are confirmed settings. Other percentages are starting points; adjust by ear.

PLAY

Use Brain X for tempo. Keep Y near 10% for a compact bass register; a large range can throw the line into high notes.

Balance Mixer IN3 against IN1 for sub weight. Sweep Filter CV1 LEVEL around 55-65% to move from a tight thump to a short "ow".

VARIATIONS

Shorten ENV1 RELEASE for clipped notes, or raise it toward 25% for longer tails. Short Brain gates make release especially useful.

Start cutoff at 65% and make small adjustments for brightness; lowering it too far can silence the bass. Add resonance gradually for more squelch; reduce it if a high whistle dominates.

NORMALLED WIRING

VCO 1 OUT -> Mixer IN1 and ENV/VCA 1 ENV OUT -> CONTROL remain internally connected. Mixer IN2 and IN4 are at zero; Filter CV2 is centered. Explicit audio cables connect mixer, filter, VCA and output.

COMPLETE CONNECTION LIST

- 1 Brain OUT1 > VCO 1 PITCH
 - 2 Brain PULSE > ENV/VCA 1 GATE
 - 3 ENV/VCA 1 ENV > Filter CV1
 - 4 VCO 1 SUB > Mixer IN3
 - 5 Mixer OUT > Filter LP
 - 6 Filter OUT > ENV/VCA 1 IN
 - 7 ENV/VCA 1 OUT > OUTPUT IN
 - 8 OUTPUT OUT > Stereo headphones
- N1 VCO 1 OUT > Mixer IN1 [internal normal]
N2 ENV/VCA 1 ENV > ENV/VCA 1 CONTROL [internal normal]

CRITICAL STARTING POSITIONS

VCO1 / wave: SAW; octave: 18%; low; fine: 50%

MIXER / level1: 70%; level2: 0%; level3: 35%; level4: 0%; unused; main: 50%; raise gradually

FILTER / resonance: 40%; cutoff: 65%; cv1: 60%; cv2: center / zero

ENV1 / attack: 0%; decay: 25%; sustain: 0%; release: 10%

OUTPUT / volume: 8%; low; drive: 25%

BRAIN / x: 35%; y: 10%; z: 20%

CONTROLS NOT AFFECTING THIS PATCH

VCO1 / width: Saw selected; pulse width does not affect this waveform.

MIXER / gain4: Input 4 is unused and its level is zero.; threshold: No signal enters sidechain input 4, so compression is inactive.

Sources / attribution

Patch: Joris Esch; github.com/jorisesch/moduleurFirmware behavior: [upstream/le-controlleur/SEQUENCER.md](#); installed version unknownInstrument: shmoergh.com/guides/moduleur-user-guide/

Official background: Shmoergh. Patch notes and overlay are community-authored.




SHMØERGH


Bass Melody

Solid = cable Dashed = active internal normal


OSCILLATOR

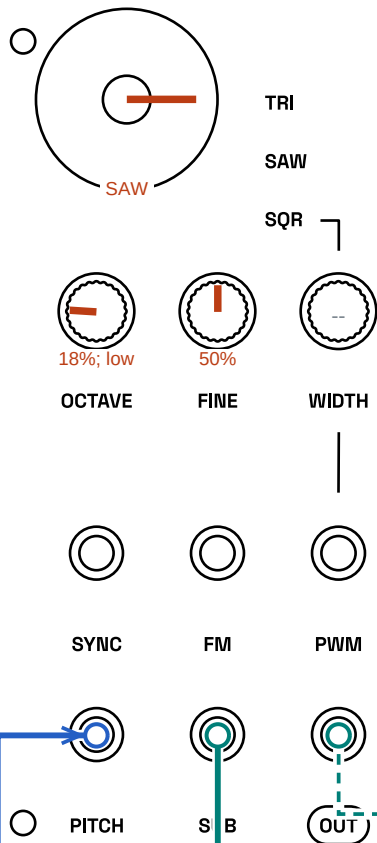


OSCILLATOR

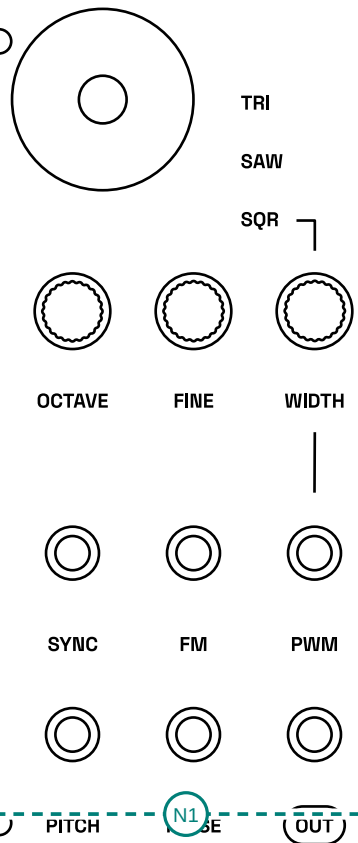


MIXER & SIDECHAIN

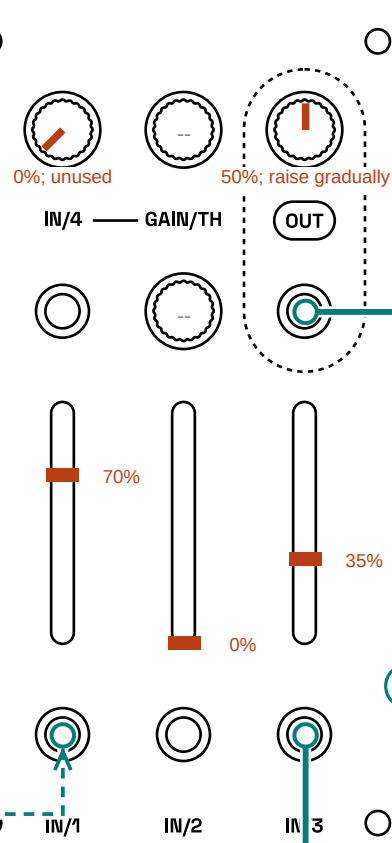


FILTER

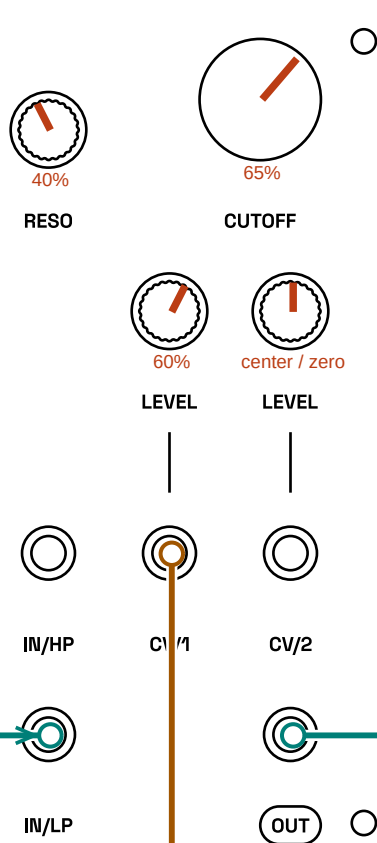

ENVELOPE & VCA

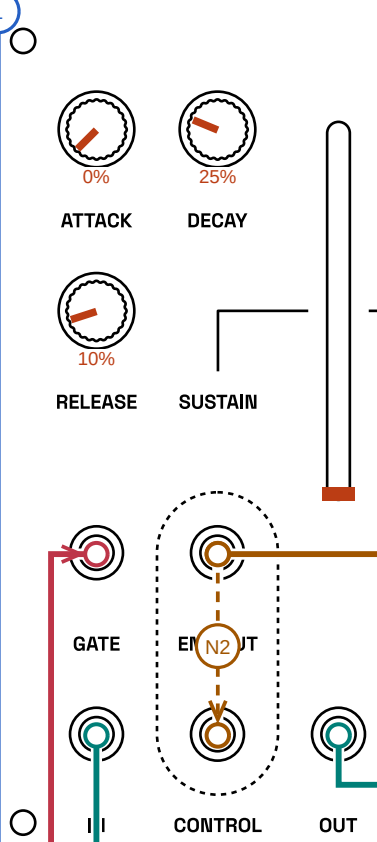


ENVELOPE & VCA

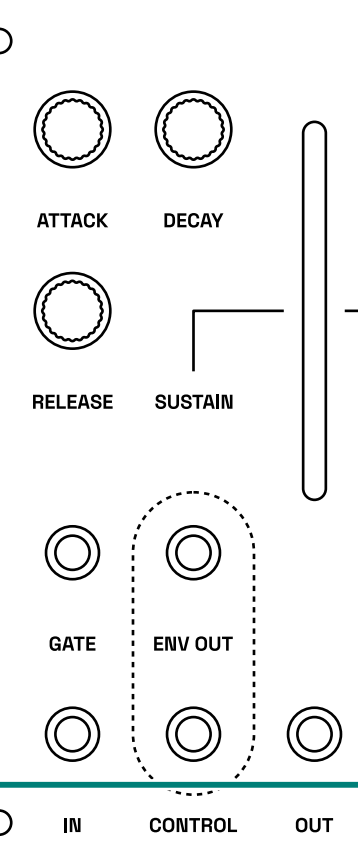


CRUSH

LFO

OUTPUT

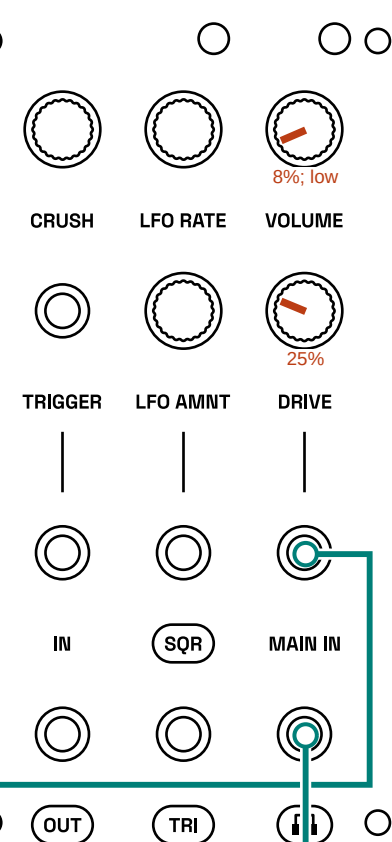

BRAIN

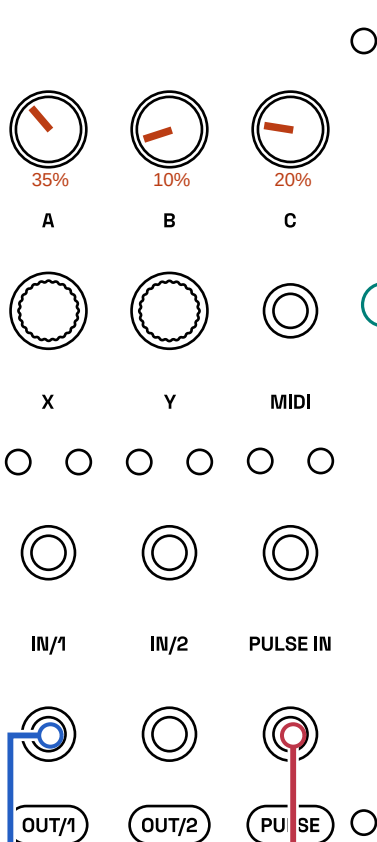

Stereo headphones

PATCH KEY

AUDIO

PITCH CV

MOD CV

GATE/TRIG

MIDI

MODULEUR ANALOG SYNTHESIZER

Orange control marks = critical. -- = irrelevant (reasons on page 1).

Positions are physical starting points. Cable IDs and firmware settings: page 1.