


Wireless MCU RF

Wireless MCU IO block placed on page 2.

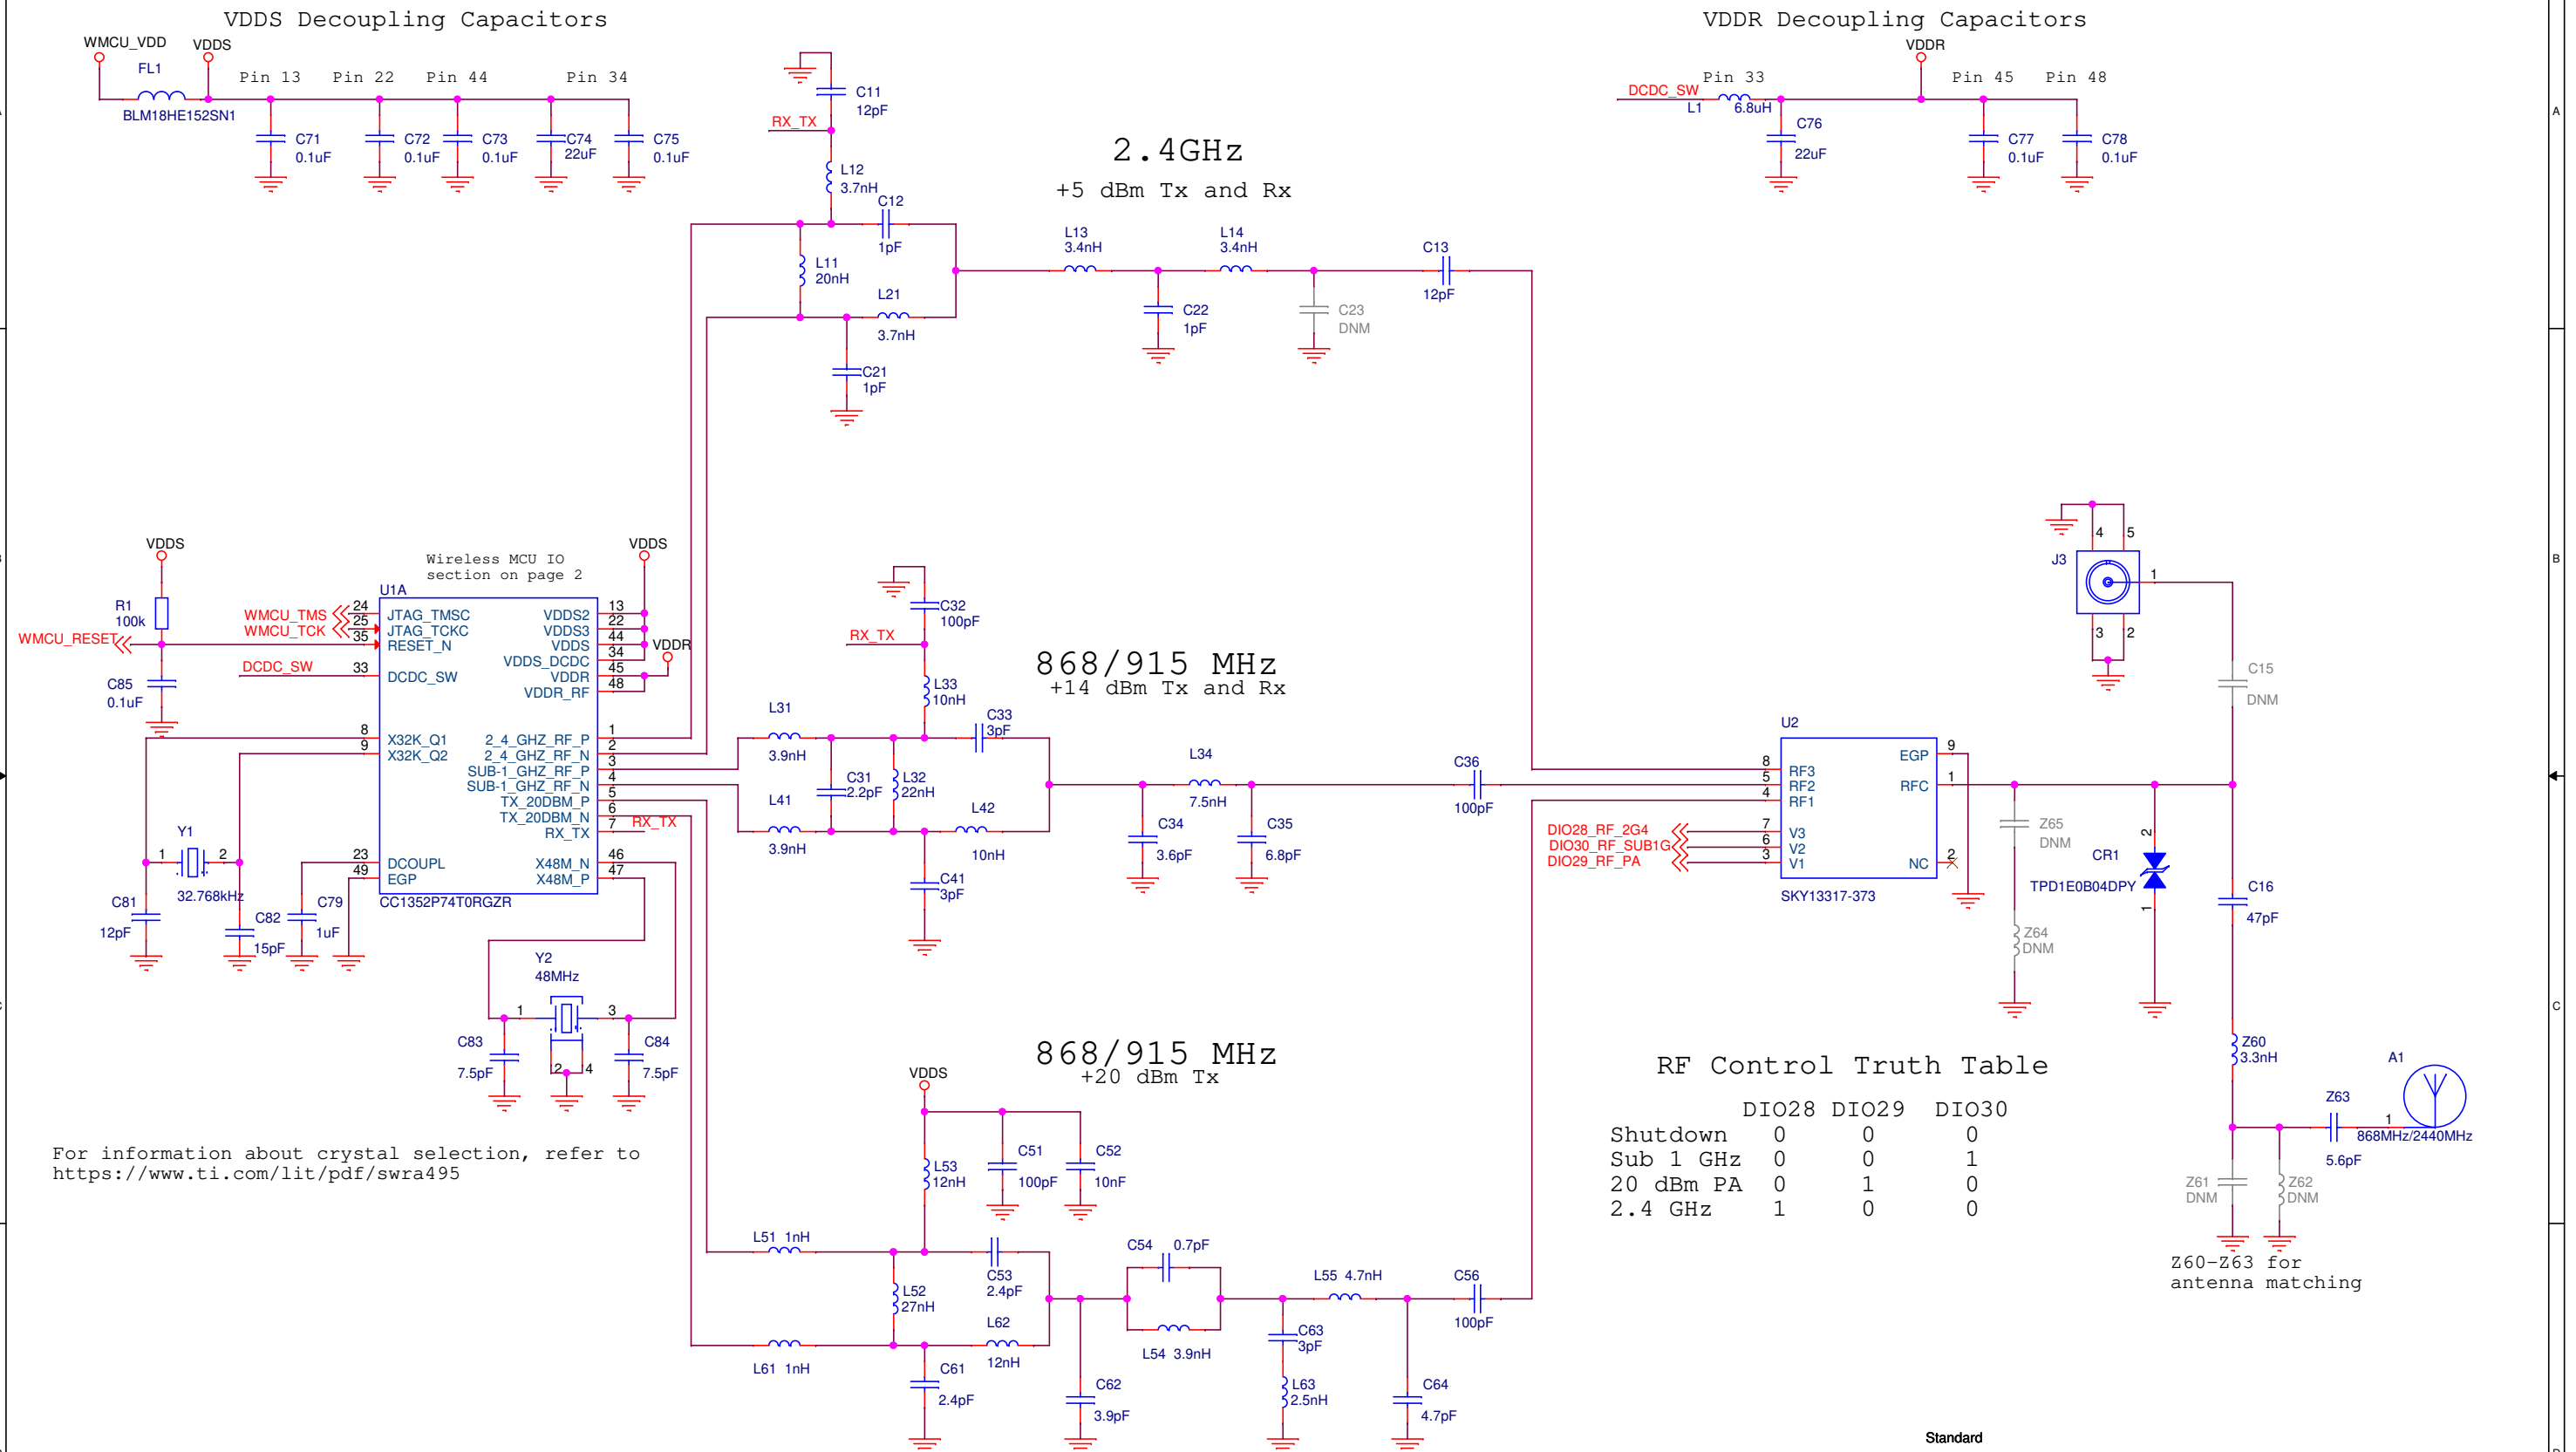

For information about crystal selection, refer to <https://www.ti.com/lit/pdf/swra495>


20 dBm BOM:
FCC: 890-930 MHz, L52 = 27nH
ETSI: 863-889 MHz, L52 = 18nH

20 dBm FCC non-duty cycled operation requires additional filter.




Standard

Title:	LP-CC1352P7-1	TEXAS INSTRUMENTS
Drawn:	VSH	PN: MCU076
Checked:		
Size:	A3	Rev: A
Sheet:	1	of 7
Date:	Tuesday, August 17, 2021	

BoosterPack Headers and Peripherals

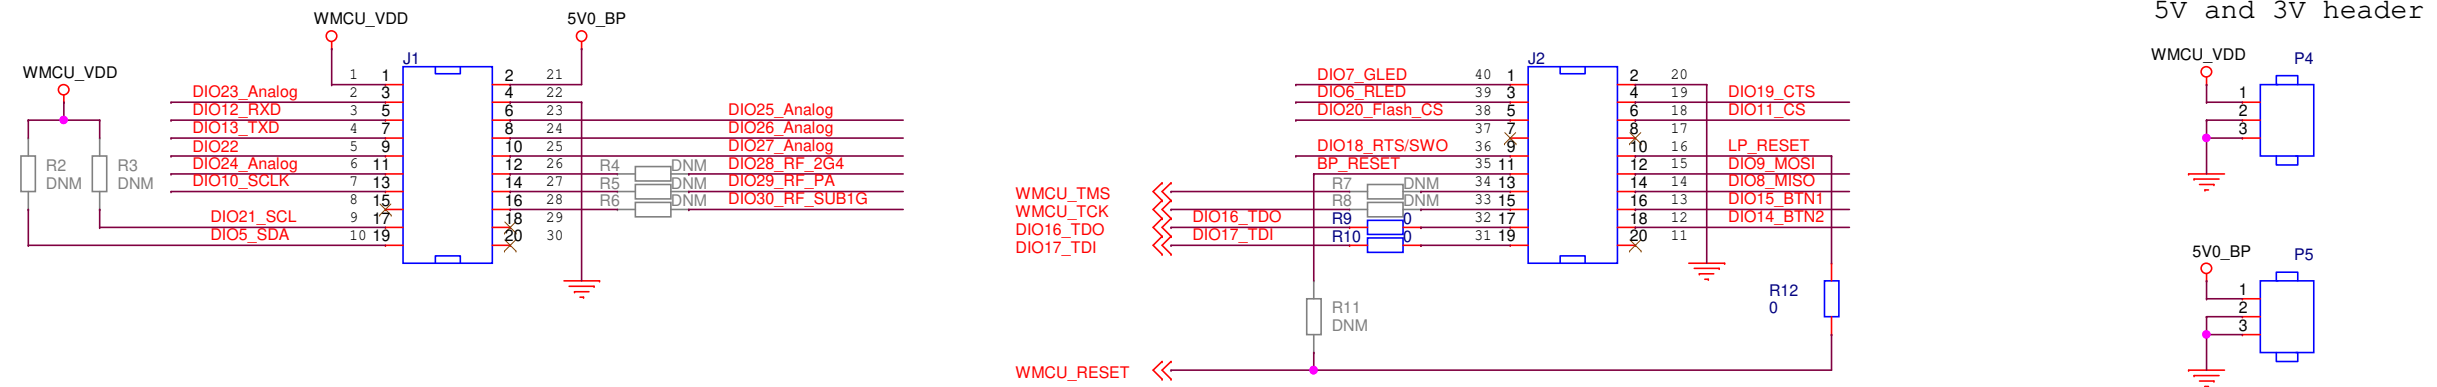

Wireless MCU IO block

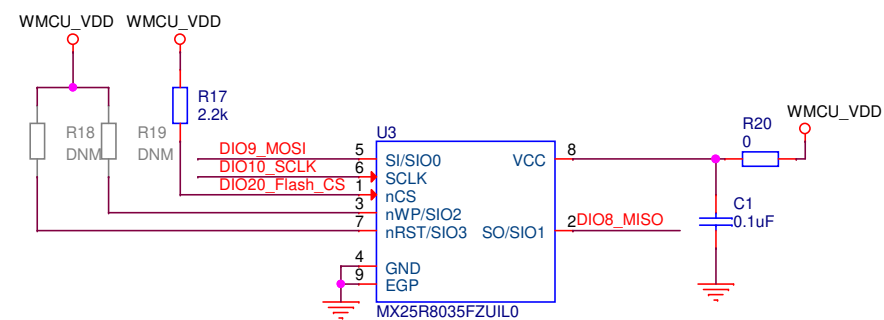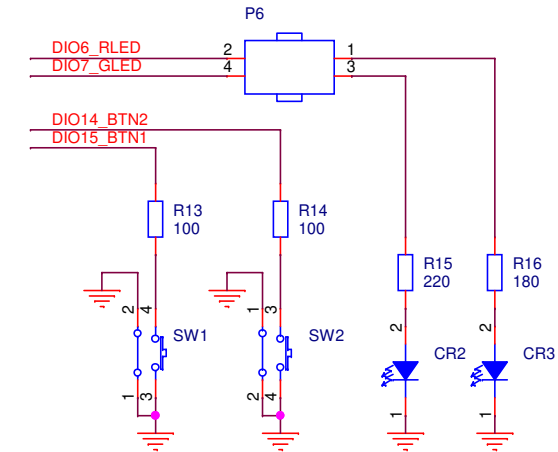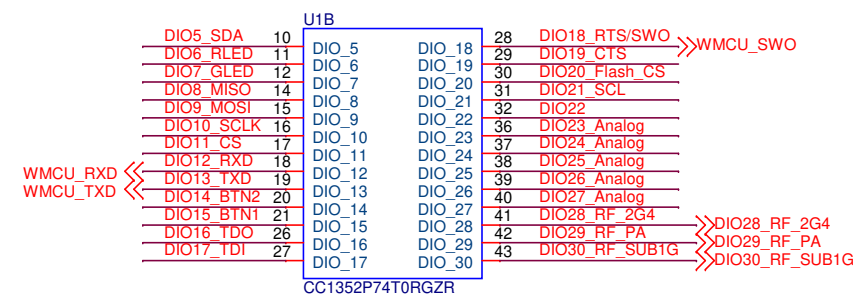


External flash


Standard		D
Title:	 TEXAS INSTRUMENTS	
LP-CC1352P7-1		
Drawn:	PN:	
VSH	MCU076	
Checked:		
Size:	Rev:	Sheet:
A3	A	2 of 7
Date:		
Tuesday, August 17, 2021		

XDS110 Debugger Interface

P10 selects the voltage source for the level shifters
When powering the wireless MCU from the XDS supply, connect jumper between pins 1 and 2.
When powering the wireless MCU from an external supply, connect jumper between pins 2 and 3.

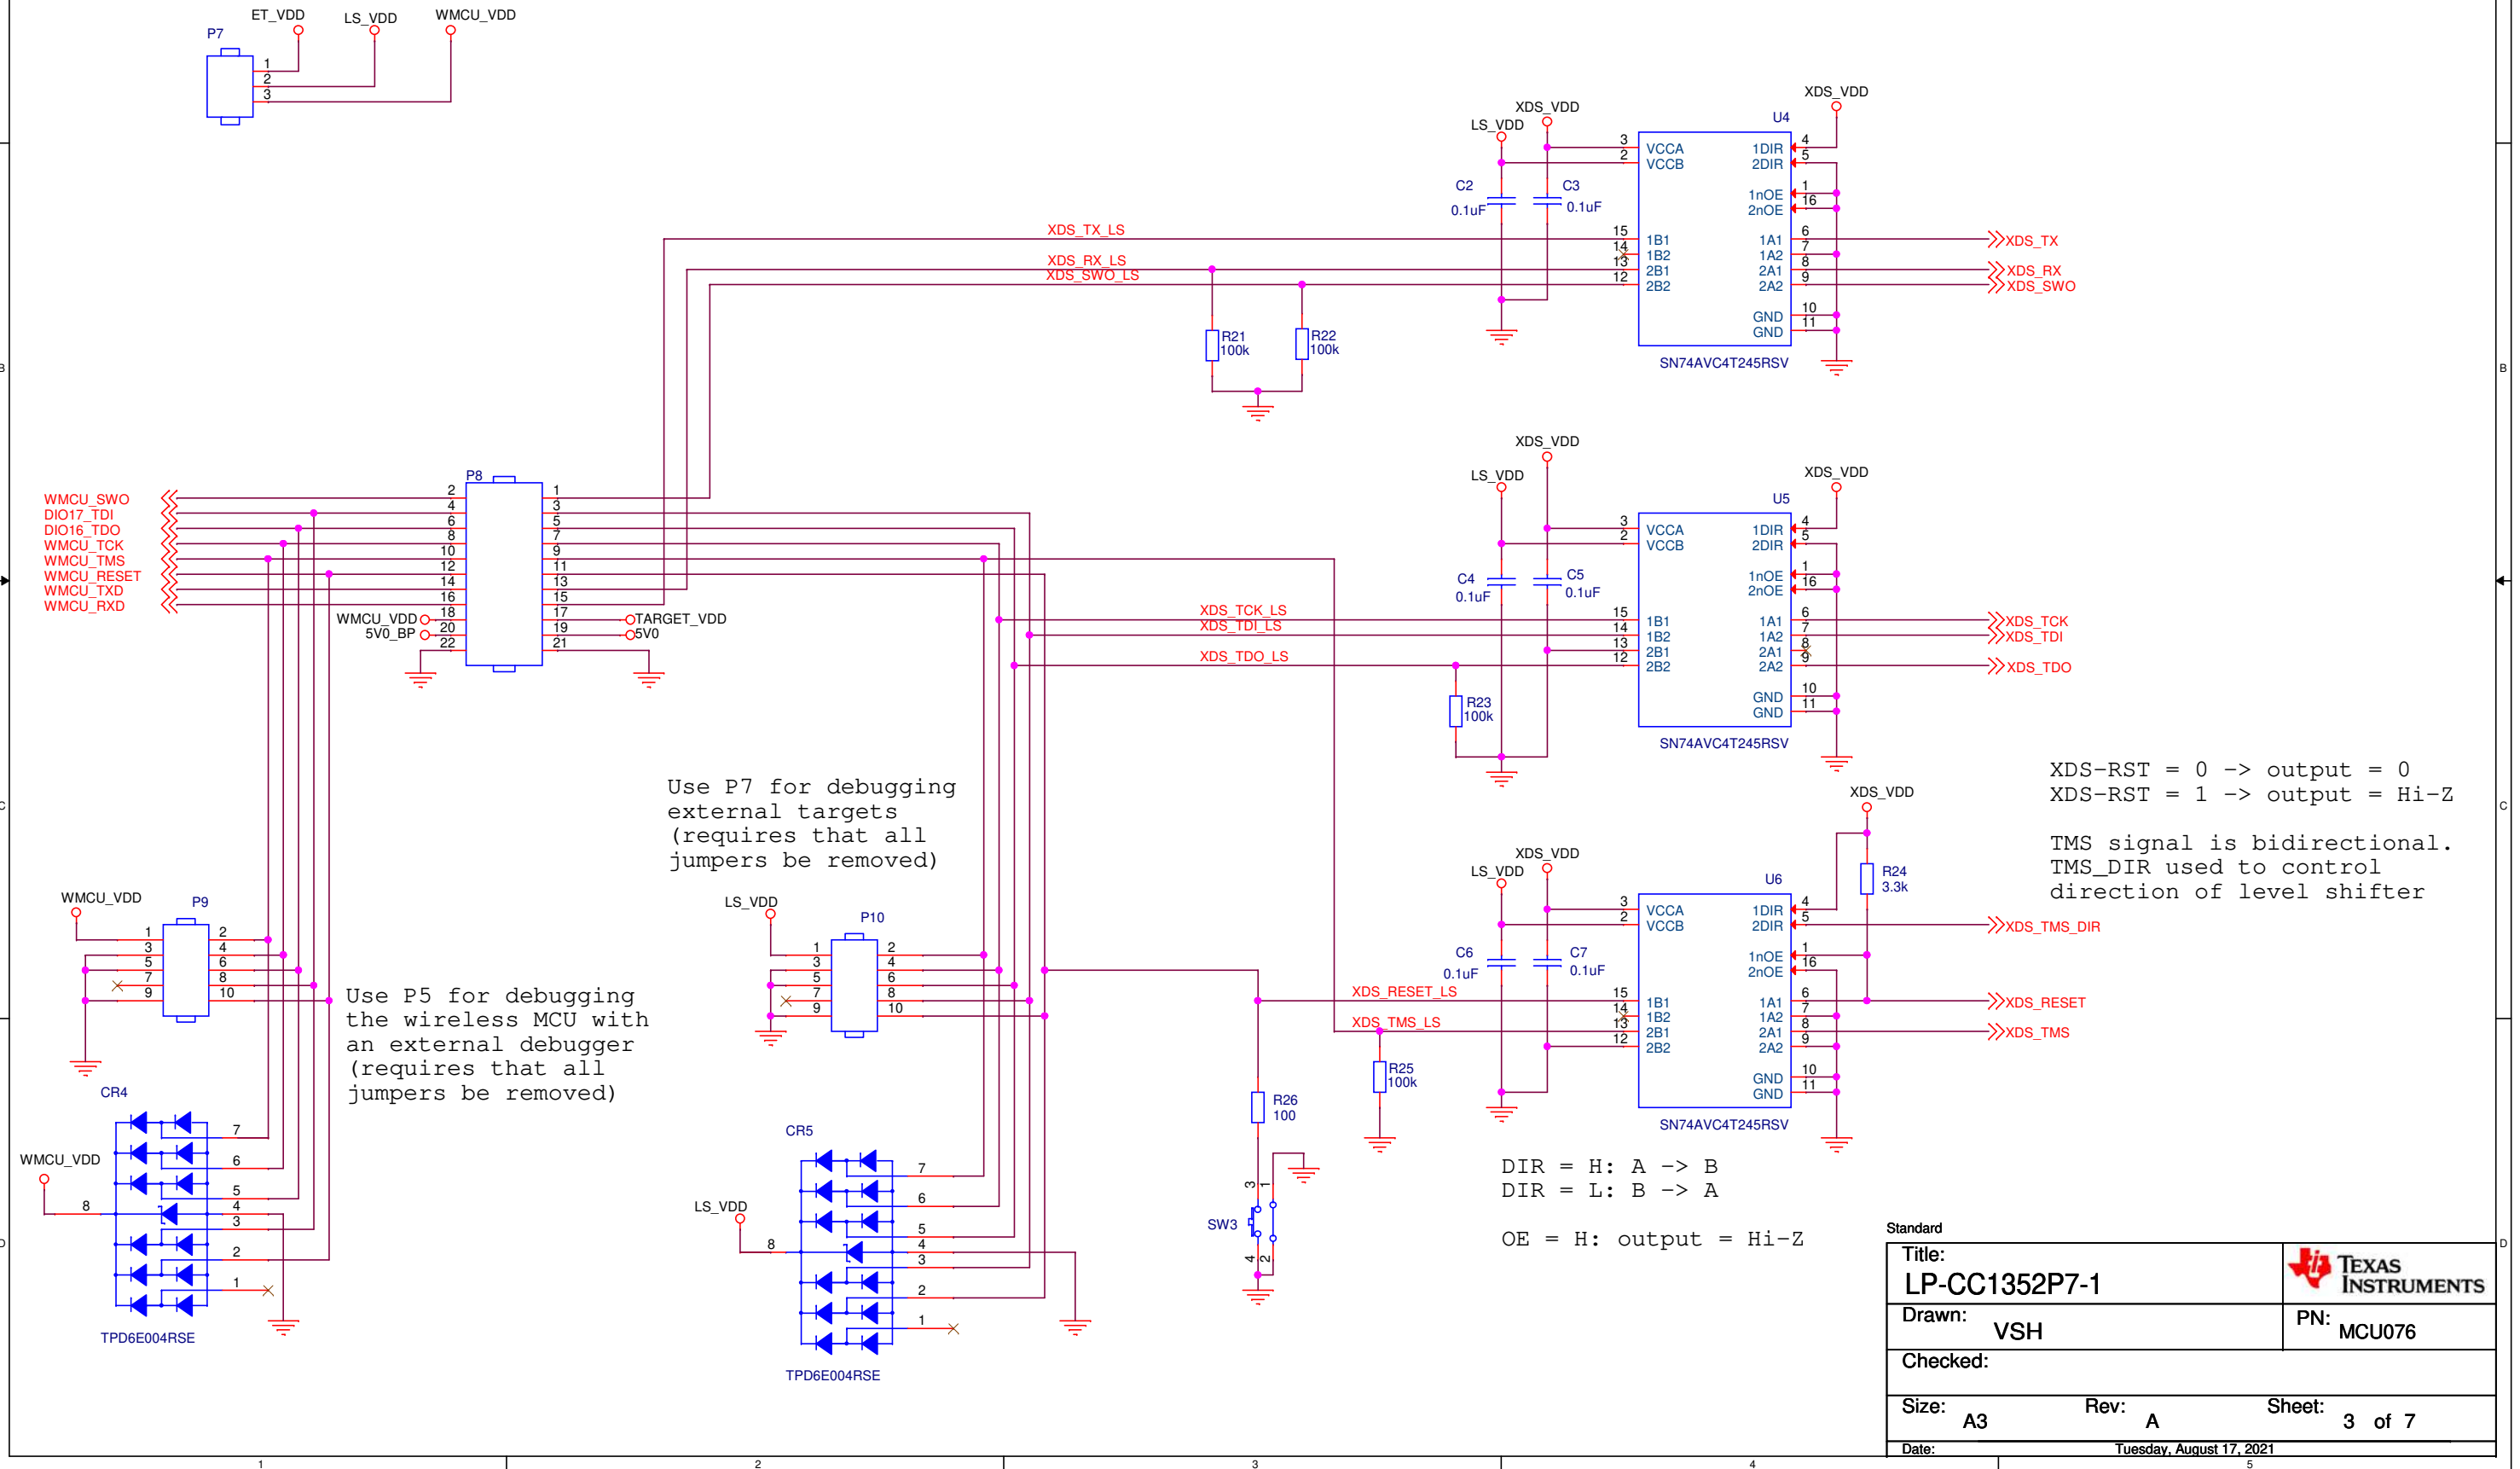


XDS110 Debugger

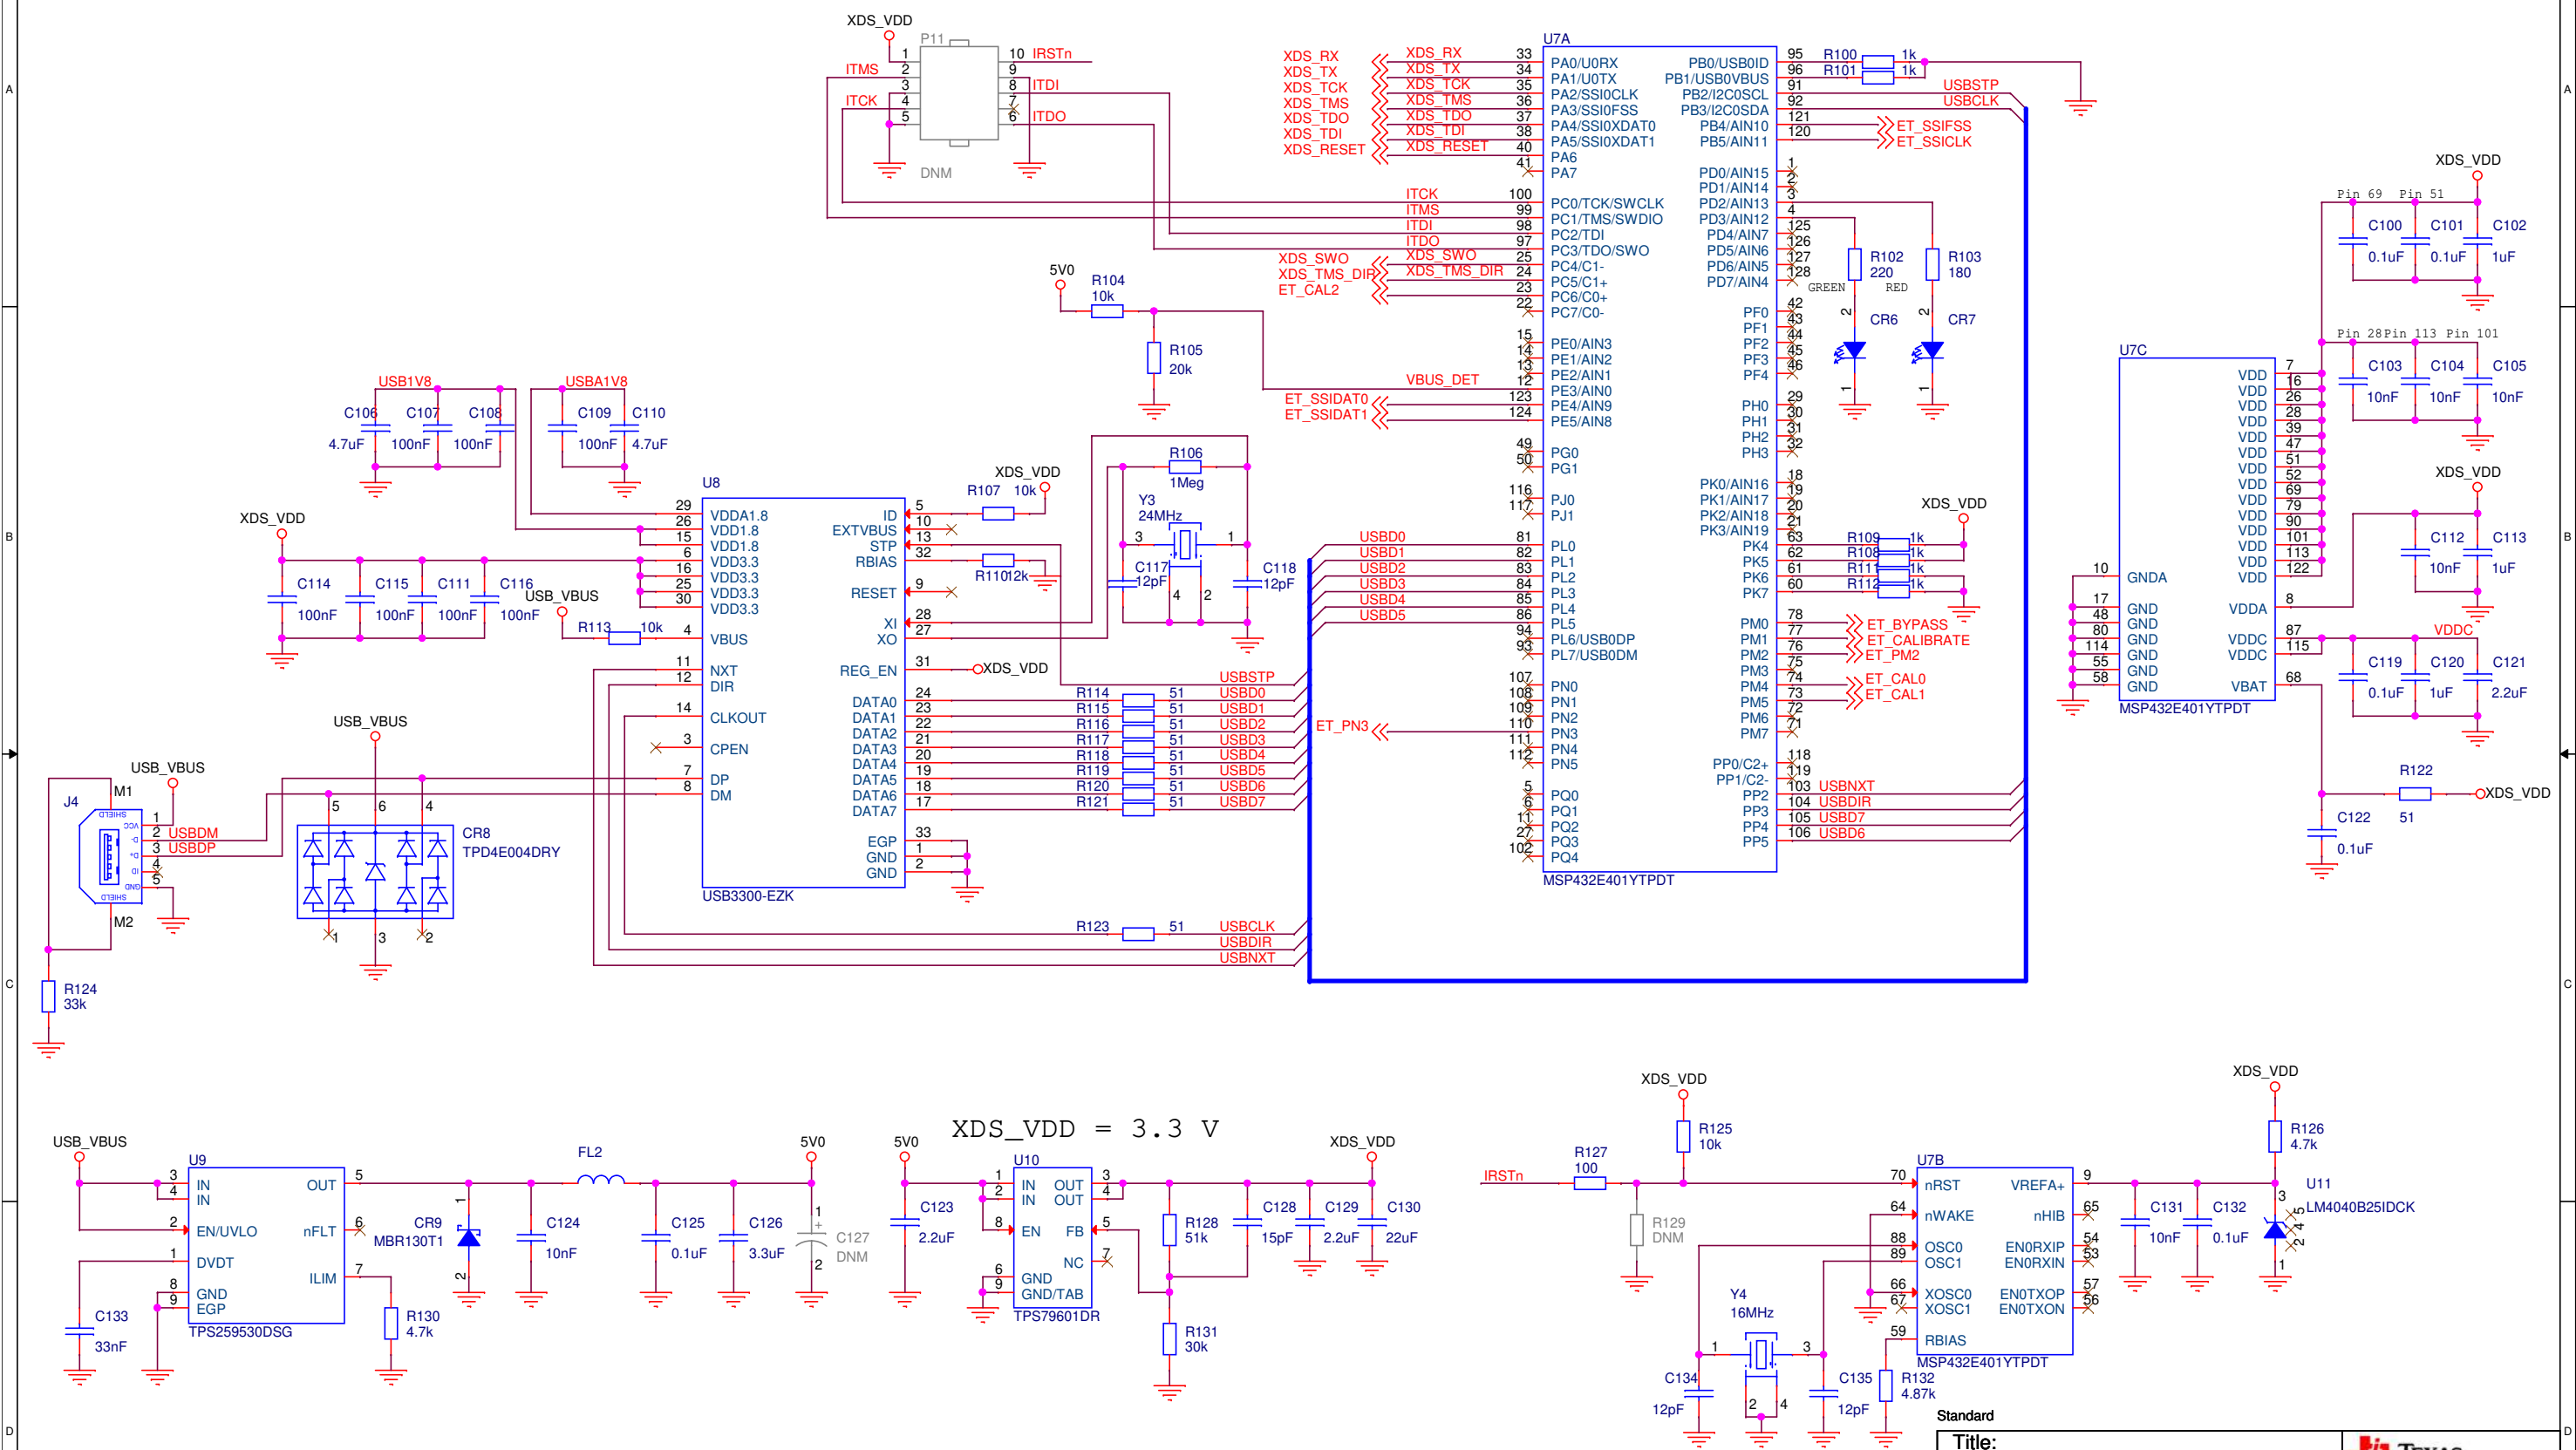


Standard		D
Title: LP-CC1352P7-1		
Drawn: VSH		TEXAS INSTRUMENTS
Checked:		
Size: A3	Rev: A	Sheet: 4 of 7
Date: Tuesday, August 17, 2021		
	5	

EnergyTrace





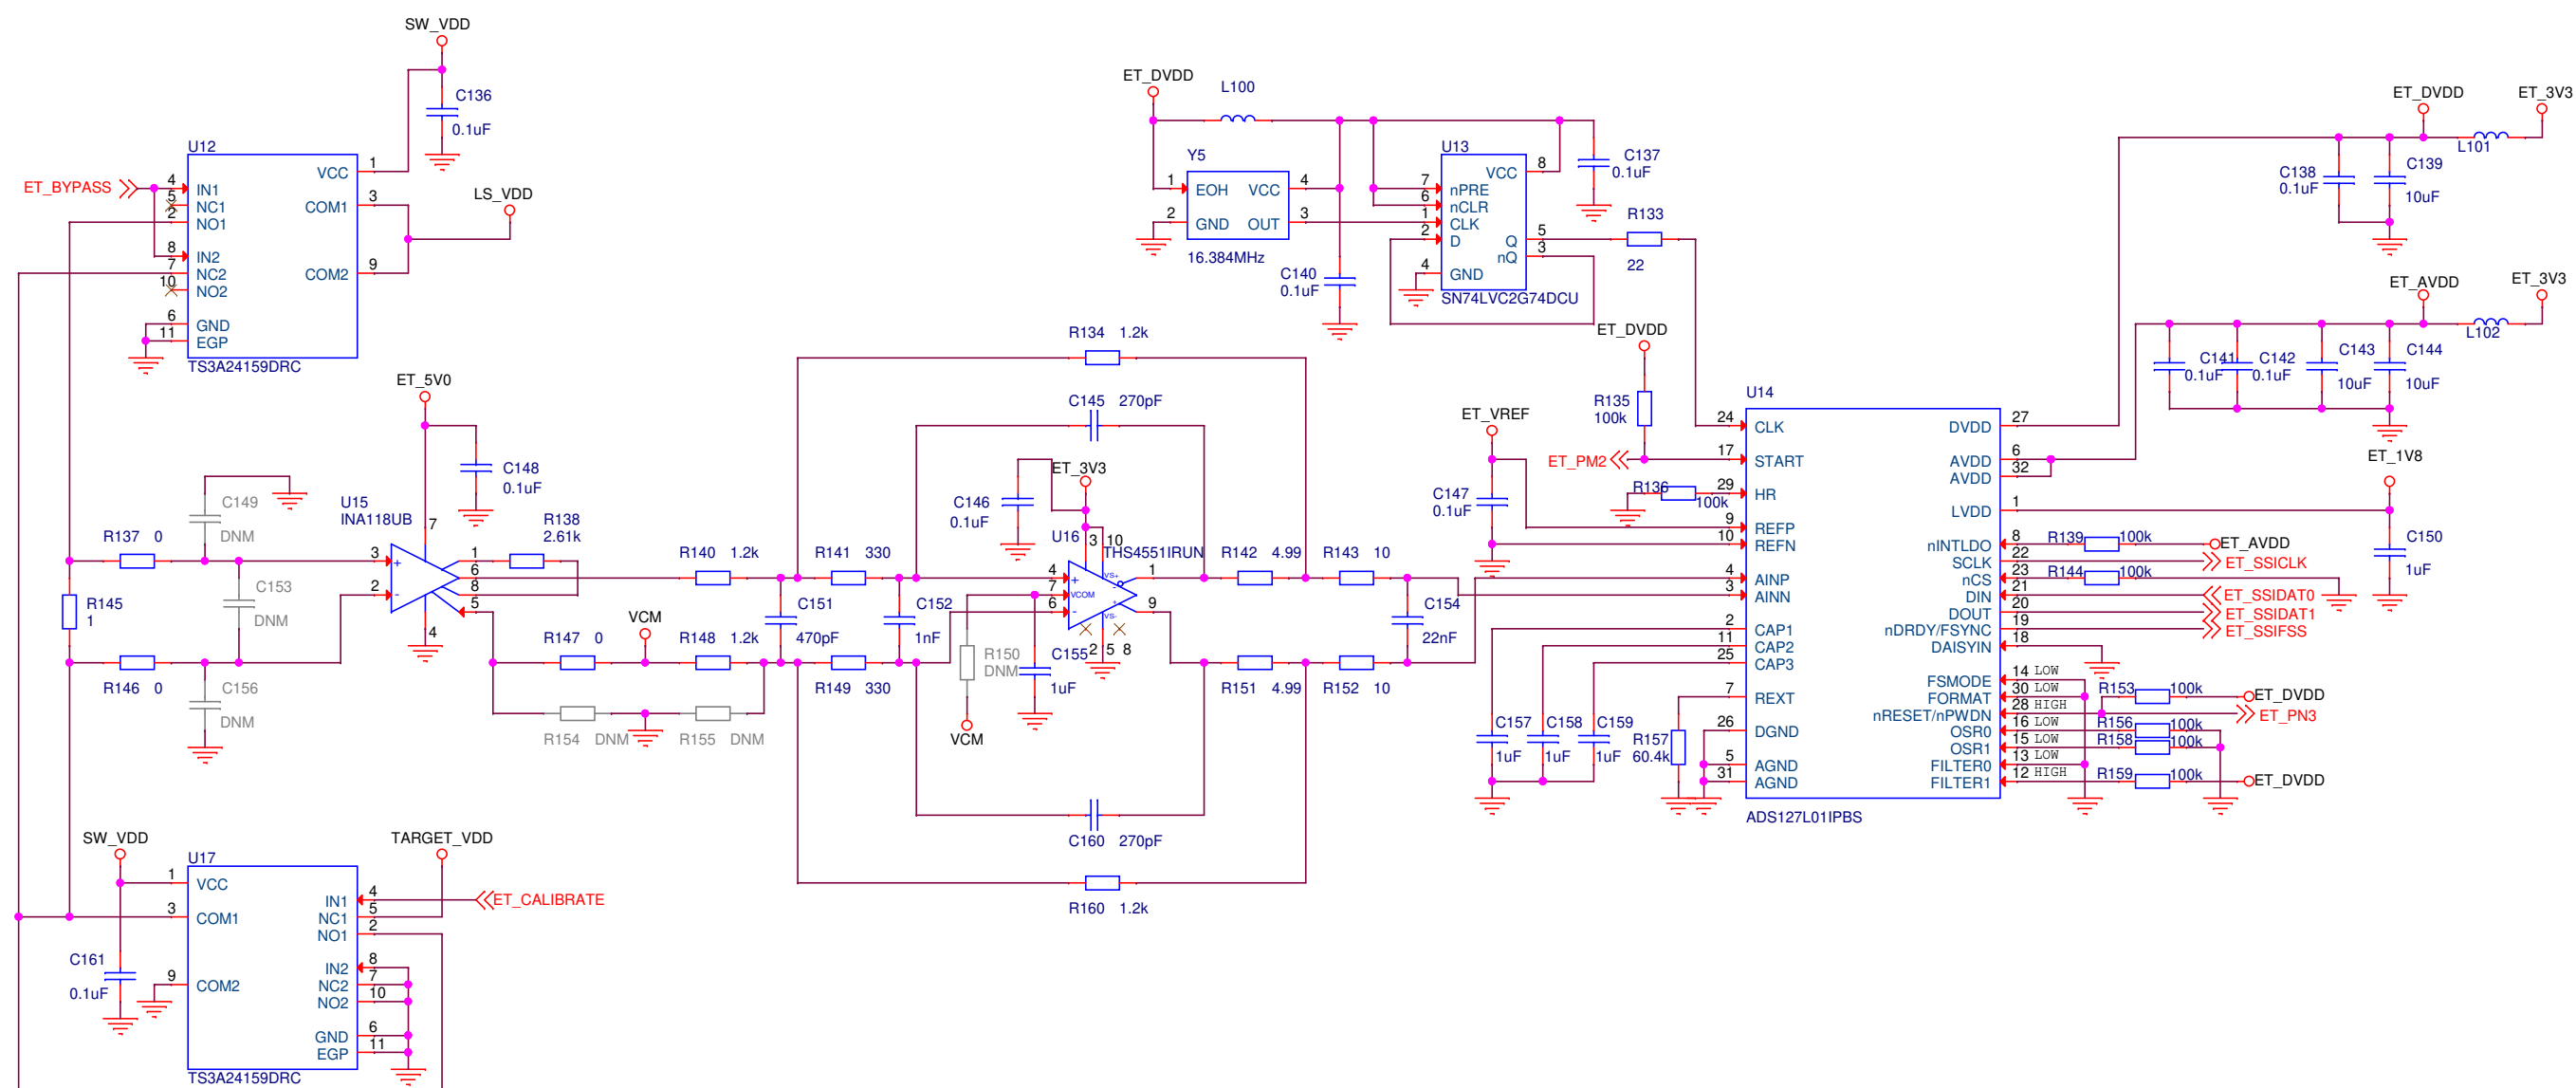


Calibration

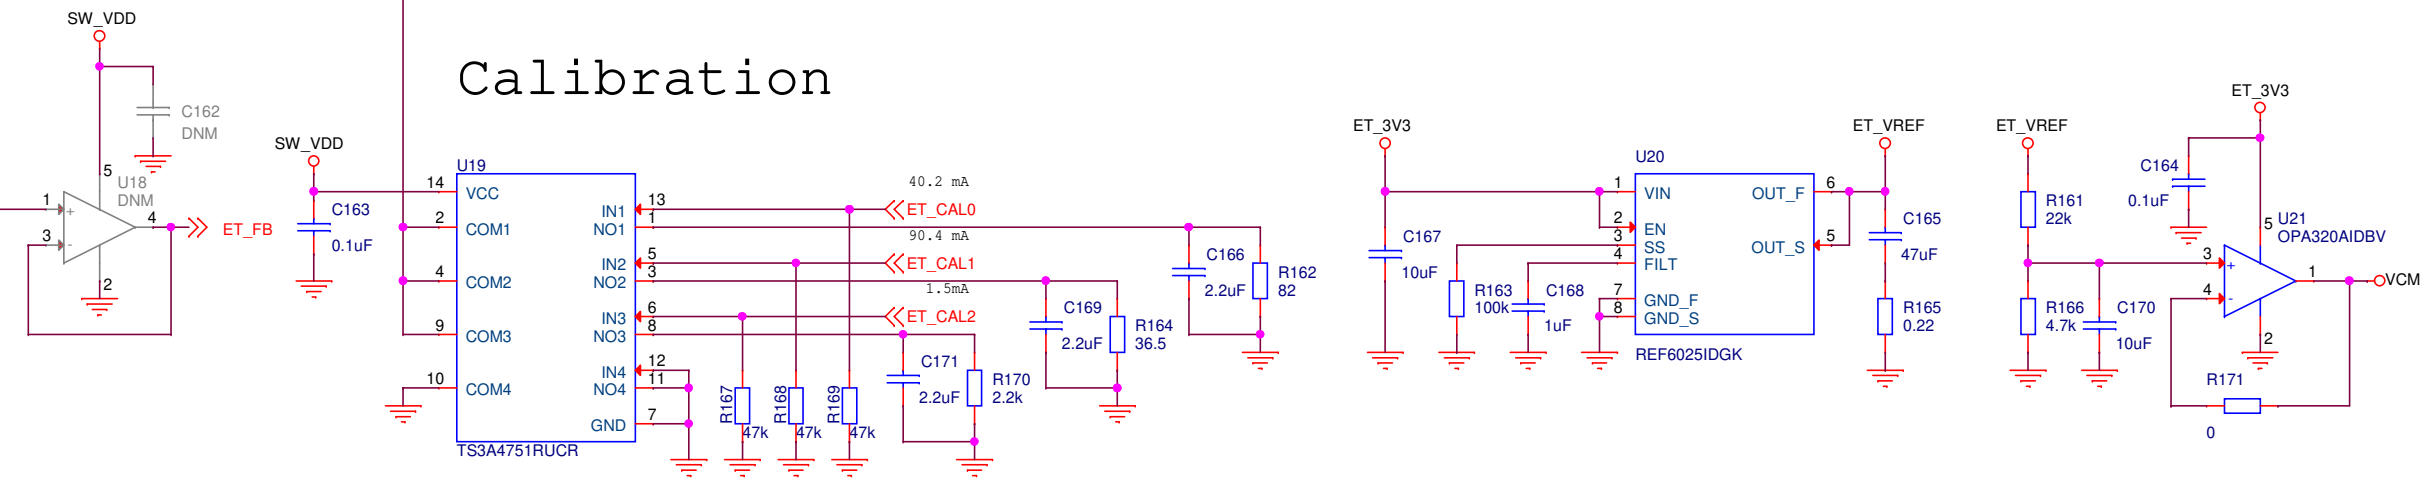

Standard	
Title: LP-CC1352P7-1	TEXAS INSTRUMENTS
Drawn: VSH	PN: MCU076
Checked:	
Size: A3	Rev: A
Sheet: 5 of 7	
Date:	Tuesday, August 17, 2021

EnergyTrace Power Supply

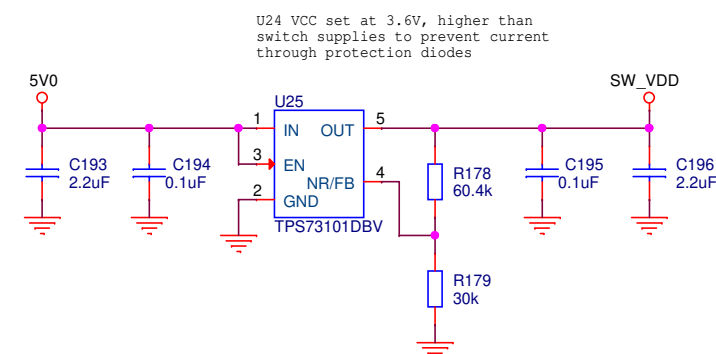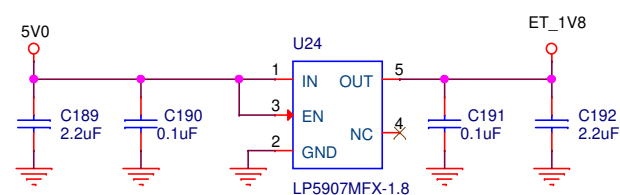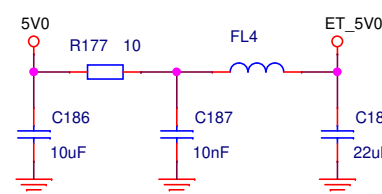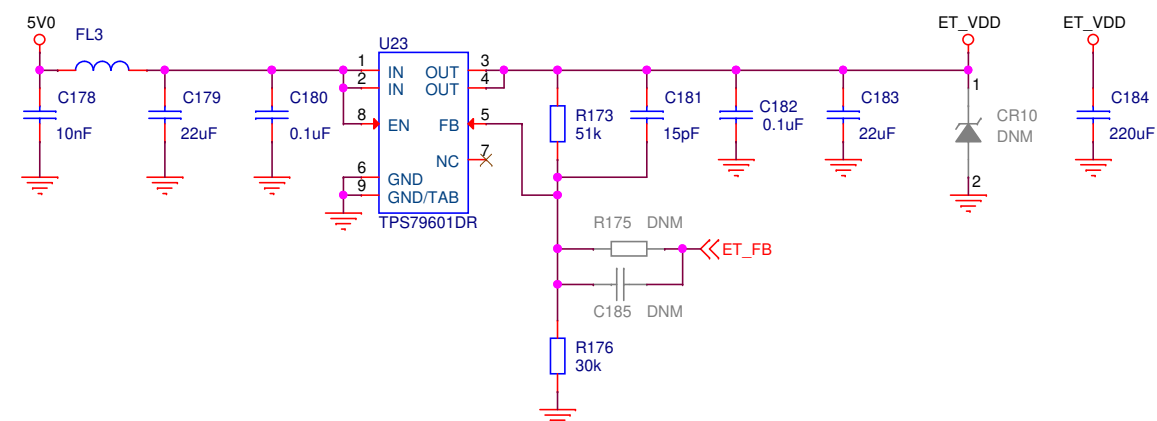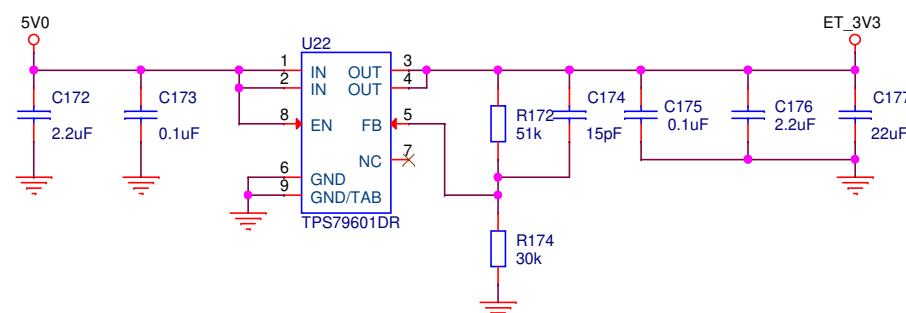


Standard

Title:	LP-CC1352P7-1	TEXAS INSTRUMENTS
Drawn:	VSH	PN: MCU076
Checked:		
Size:	A3	Rev: A Sheet: 6 of 7
Date:	Tuesday, August 17, 2021	


Mechanical

Jumpers


- P6:  
- P4:           
- P10: 

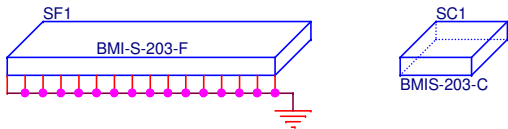


PCB

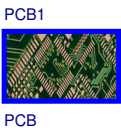


Mounting Holes

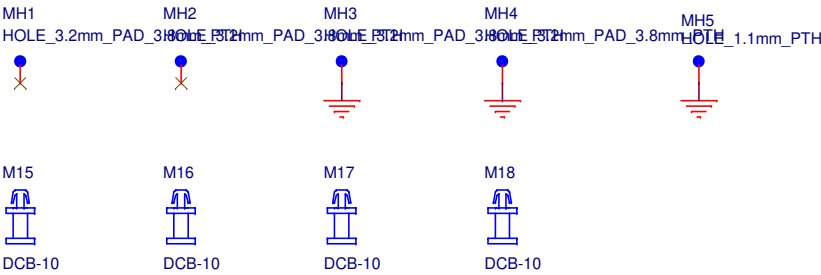


Fiducials

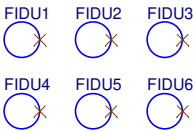

Labels

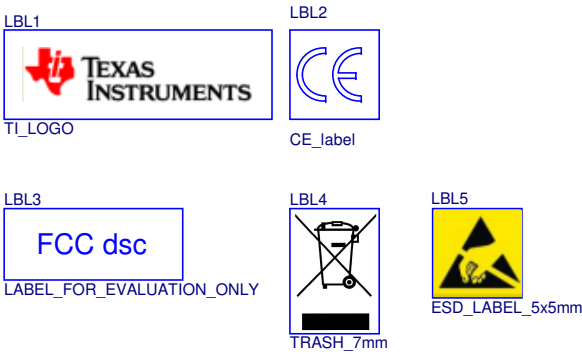

Stickers

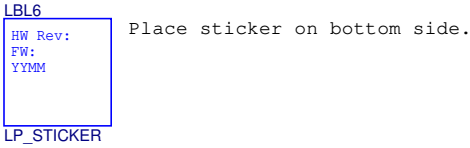

Standard	
Title: LP-CC1352P7-1	
Drawn: VSH	PN: MCU076
Checked:	
Size: A3	Rev: A
Sheet: 7 of 7	
Date: Tuesday, August 17, 2021	