

Preset Logic

Basic **if else** logic can be applied within a preset to allow you to build some smarts into your system. All get commands can be used as an expression.

The following syntax applies:

```
if (something) {
    do_something
    ...
} else {
    do_this_instead
    ...
}
```

The following get commands will return a string value that can be used with:

- == (equal to)
- != (not equal to)

```
o get audio_source
o get devices
o get edid
o get scaler <encoder_device_name> all
o get status
o get var
o get ver
o get video <encoder_device_name> all
o get encoder
```

Example 1:

```
if (get encoder Decoder1 == Encoder1) {
    join all Encoder2 Decoder1
} else {
    join all Encoder1 Decoder2
}
```

Example 2:

```
if (get audio_source Decoder1 != hdmi) {
    set audio_source Decoder1 hdmi
}
```

The following **get** commands will return an integer value that can be used with:

- `==` (equal to)
- `!=` (not equal to)
- `<` (less than)
- `>` (greater than)

```
o get frame_converter
o get preferred
o get rotation
o get scaler <encoder_device_name> width
o get scaler <encoder_device_name> height
o get scaler <encoder_device_name> fps
o get video <encoder_device_name> width
o get video <encoder_device_name> height
o get video <encoder_device_name> fps
o get video <encoder_device_name> sm
o get video quality
o get volume
```

Example:

```
if (get rotation Encoder1 != 0) {
    set rotation Encoder1 0
} else {
    join all Encoder1 Decoder1
}
```

The following **get** commands will return a boolean value that can be used with:

- `!` (not)

```
o get display_status
o get var
o get video_mute
o get video_status
o get ui_button
```

Example 1:

```
if (get video_status Encoder1) {
    join all Encoder1 Decoder1
} else {
    if (get video_status Encoder2) {
        join all Encoder2 Decoder1
    }
}
```

Example 2:

```
if !(get video_status Encoder1) {
    join all Encoder2 Decoder1
}
```

Using Google Assistant

The Arranger controller can be controlled with voice commands via Google Assistant. In this example we will run through the requirements to do so. An IFTTT account will also be required. Visit www.ifttt.com for more information.

To find out how to link your Google account with IFTTT visit this Google help page.


<https://support.google.com/googlenest/answer/7194656>

First step is to set up the Arranger controller so it is accessible from the Internet. Port 80 of the Arranger controller will need to be port-forwarded to an external IP port. For this example we are going to use an external IP address of 123.456.789.100 and a controller IP address of 169.254.1.1. From your router, port forward from internal 169.254.1.1 port 80 to external, say port 9999 (you can use any unused port number here). Every router is configured differently, so consult your router's owner's manual if required.


Now externally you should be able to access the Arranger controller's webpage by entering '123.456.789.100:9999' into a browser.

Now we can set up IFTTT to activate any command on the Arranger controller but we strongly advise that Arranger *Presets* only are specified for this activity.

Open your IFTTT account
and *Create* a new applet

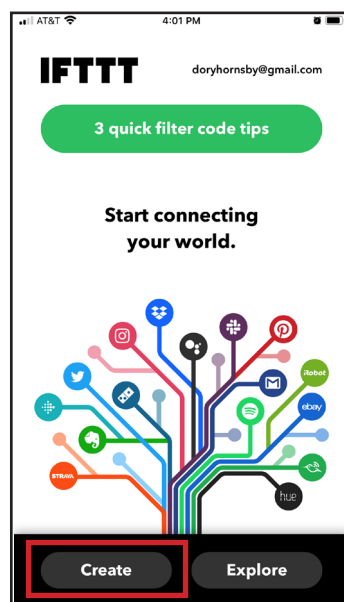


Click *if This Add*

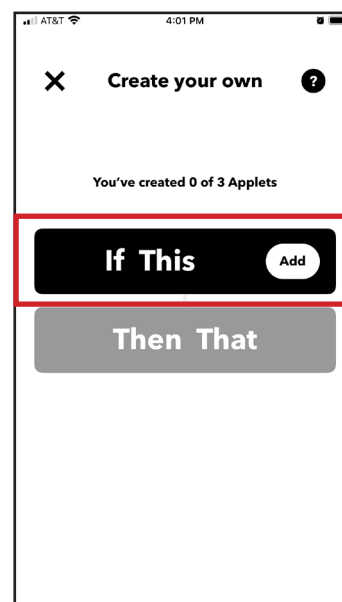


Using Google Assistant continued....


Search and select *Google Assistant* when asked to choose a service in the IFTTT applet wizard

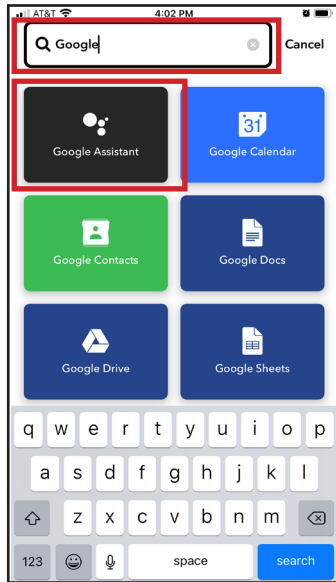


You will be prompted for your Google account login, click *Connect* to proceed

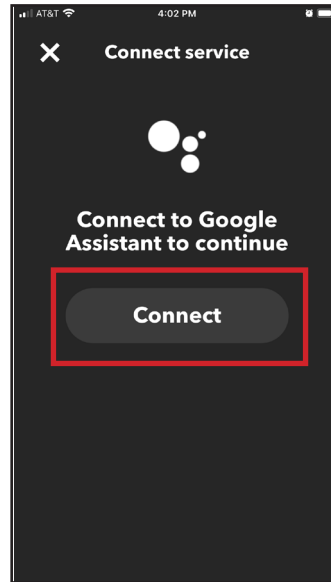

Choose the *Say a Simple Phrase* when asked for a trigger

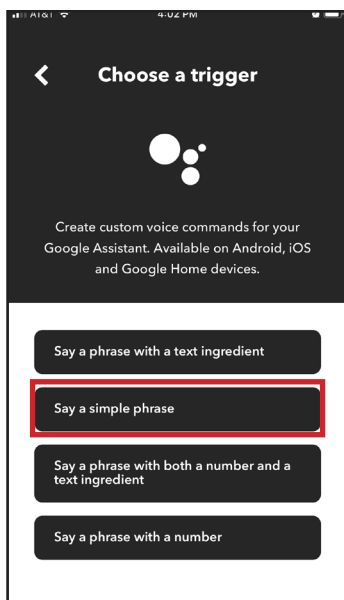


Choose what you will say, the Google response and click *Create Trigger*

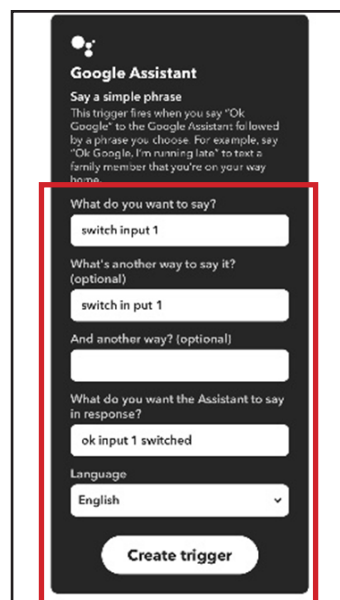


Using Google Assistant continued....


Click *Then That* Add

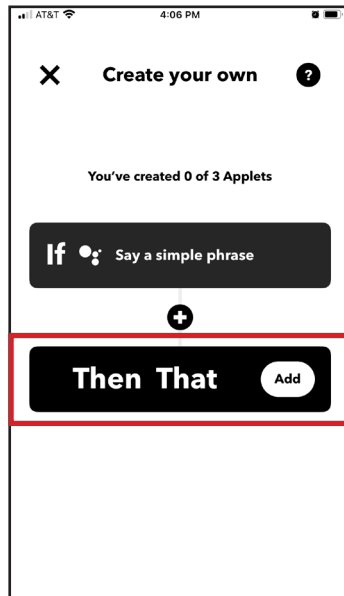


You will be prompted to connect to *Webhooks* click *Connect* to proceed

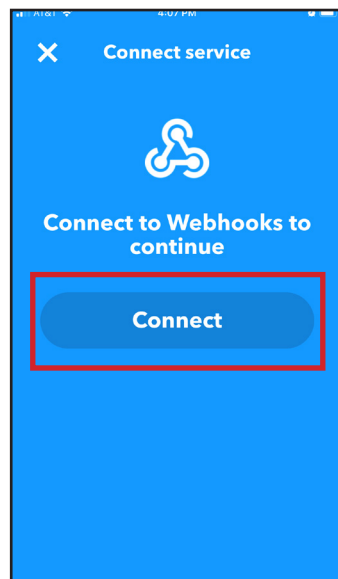

Search and choose *Webhooks* when asked for a service

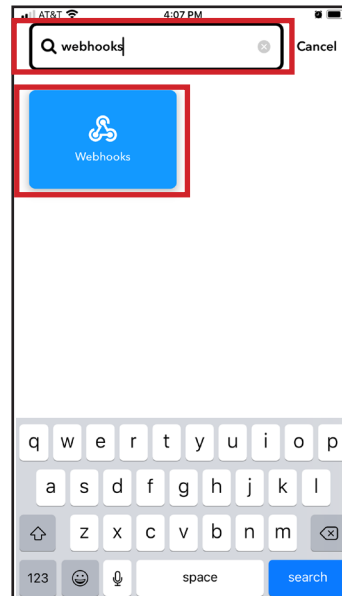

Click *Make a web request*

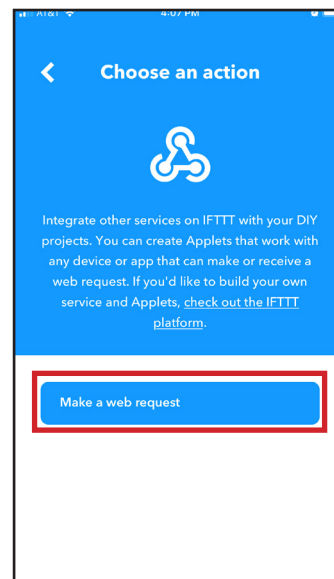

Using Google Assistant continued....

- Now enter the URL which is the external IP address and port established in the router. In our previous example; '123.456.789.100:9999'
- Select Method: 'POST'
- Select Content Type: 'application/json'
- Enter Body with desired command (see below)
- Click 'Create action'

```
{"cmd":"<command>","key":"<security_key>"}
```

```
=
```

```
{"cmd":"preset load <preset>","key":"<security_key>"}
```

where:

*<preset> = Name given to the preset to be applied

^<security_key> = HTTP Security key

Example:

```
{"cmd":"preset load MyPreset","key":"ts2Xe1sn1Nk1rm1>l1$P1Tk18q14e"}
```

*For more information on building and using Presets, see
Global Settings > Presets

^For more information on generating and using HTTP Security keys, see
Global Settings > Security Keys > HTTP Security Key

Using Command Assistant

When dealing with direct API control commands or creating presets, the *Command Assistant* wizard is available for all commands to help make the construction of command strings as simple as possible.

Most commands have a *Normal* and *Wizard* mode of creation. In *Normal* mode most parameters are set by entering the details into the various text boxes manually, while in *Wizard* mode parameters are mostly set with drop-down selections to ensure the syntax of the command is correct.

Below are explanations for all commands using *Normal* and *Wizard* mode.

Command: join all - Normal Mode

Parameters

1. Enter optional Security Key
 2. Enter Encoder Device Name
 3. Enter Decoder or Group name
 4. Select Exclusive (optional)
 5. Select Video Mode (optional)
 6. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder / Group 3

Exclusive (optional) 4 ☐

Video Mode 5

6

Command: join all - Wizard Mode

Parameters

1. Select Encoder Device Name
 2.a Select Device(s)
 2.b Select Decoder or Group name
 3. Select Exclusive (optional)
 4. Select Video Mode (optional)
 5. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional)

Encoder Device Name 1

Select
 2a ☒ Decoder Device Name
☐ Group Name
☐ All
 2b

Exclusive (optional) 3 ☐

Video Mode 4

5

Command: join av - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Decoder or Group name
4. Select Exclusive (optional)
5. Select Video Mode (optional)
6. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder / Group 3

Exclusive (optional) 4
☐

Video Mode 5 No Change

6

Command: join av - Wizard Mode

Parameters

1. Select Encoder Device Name
2.a Select Device(s)
2.b Select Decoder or Group name
3. Select Exclusive (optional)
4. Select Video Mode (optional)
5. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Select 2a
☒ Decoder Device Name
☐ Group Name
☐ All

2b

Exclusive (optional) 3
☐

Video Mode 4 No Change

5

Command: join video - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Encoder Device Name

3. Enter Decoder or Group name

4. Select Exclusive (optional)

5. Select Video Mode (optional)

6. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional)

1

Encoder Device Name

2

Decoder / Group

3

Exclusive (optional)

4

☐

Video Mode

5

No Change

▼

6

✓ Finish

Command: join video - Wizard Mode

Parameters ×

1. Select Encoder Device Name

2.a Select Device(s)

2.b Select Decoder or Group name

3. Select Exclusive (optional)

4. Select Video Mode (optional)

5. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

31333331306339326330373066613065

Encoder Device Name

1

▼

Select

☒ Decoder Device Name

☐ Group Name

☐ All

2a

2b

▼

Exclusive (optional)

3

☐

Video Mode

4

No Change

▼

5

✓ Finish

Command: join audio - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Decoder or Group name
4. Select Exclusive (optional)
5. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder / Group 3

Exclusive (optional) 4
☐

5

Command: join audio - Wizard Mode

Parameters

1. Select Encoder Device Name
2.a Select Device(s)
2.b Select Decoder or Group name
3. Select Exclusive (optional)
4. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Select
2a
☒ Decoder Device Name
☐ Group Name
☐ All

2b

Exclusive (optional) 3
☐

4

Command: join serial - Normal Mode

Parameters ✕

1. Enter optional Security Key

2. Enter Encoder Device Name

3. Enter Decoder or Group name

4. Select Exclusive (optional)

5. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) **1**

Encoder Device Name **2**

Decoder / Group **3**

Exclusive (optional) **4** ☐

5

Command: join serial - Wizard Mode

Parameters ✕

1. Select Encoder Device Name

2.a Select Device(s)

2.a Select Decoder or Group name

3. Select Exclusive (optional)

4. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Encoder Device Name **1**

Select **2a** ☒ Decoder Device Name ☐ Group Name ☐ All

2b

Exclusive (optional) **3** ☐

4

Note: Only devices in serial *Matrix* mode will be seen in the device lists. To change serial modes see *Devices Settings > RS232 Serial*.

Command: join ir - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Decoder or Group name
4. Select Exclusive (optional)
5. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder / Group 3

Exclusive (optional) 4
☐

5

Command: join ir - Wizard Mode

Parameters

1. Select Encoder Device Name
2.a Select Device(s)
2.b Select Decoder or Group name
3. Select Exclusive (optional)
4. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Select
2a
☒ Decoder Device Name
☐ Group Name
☐ All

2b

Exclusive (optional) 3
☐

4

Command: join usb - Normal Mode

Parameters ×

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Decoder or Group name
4. Select Exclusive (optional)
5. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder / Group 3

Exclusive (optional) 4 ☐

5

Command: join usb - Wizard Mode

Parameters ×

1. Select Encoder Device Name
2.a Select Device(s)
2.a Select Decoder or Group name
3. Select Exclusive (optional)
4. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Encoder Device Name 1

Select 2a ☒ Decoder Device Name ☐ Group Name ☐ All

2b

Exclusive (optional) 3 ☐

4

Command: join kvm - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Decoder or Group name
4. Select Exclusive (optional)
5. Select Video Mode (optional)
6. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder / Group 3

Exclusive (optional) 4
☐

Video Mode 5 No Change

6

Command: join kvm - Wizard Mode

Parameters

1. Select Encoder Device Name
2.a Select Device(s)
2.b Select Decoder or Group name
3. Select Exclusive (optional)
4. Select Video Mode (optional)
5. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 1

Encoder Device Name

Select
2a ☒ Decoder Device Name
☐ Group Name
☐ All

2b

Exclusive (optional) 3
☐

Video Mode 4 No Change

5

Command: join wall - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Decoder Device Name
4. Select Wall Type
eg 2x2
5. Select Display Position
6. Optionally change display
resolution and framerate
6.a Enter Resolution Width
6.b Enter Resolution Height
6.c Enter Framerate
7. Optionally apply bezel
compensation
7.a Enter Display Width
7.b Enter Viewable Height
7.c Enter Display Height
7.d Enter Viewable Height
8. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Decoder Device Name 3

Wall Type 4

Display Position 5

Width (optional) 6a

Height (optional) 6b

Frame Rate (optional) 6c

Display Width (mm) (optional) 7a

Viewable Width (mm) (optional) 7b

Display Height (mm) (optional) 7c

Viewable Height (mm) (optional) 7d

8

Finish

Command: join wall - Wizard Mode

Parameters

1. Select Encoder Device Name
2. Select Decoder Device Name
3. Select Wall Type
eg 2x2
4. Select Display Position
5. Select Video Mode
6. Optionally apply bezel
compensation
6.a Enter Display Width
6.b Enter Viewable Height
6.c Enter Display Height
6.d Enter Viewable Height
7. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Decoder Device Name 2

Wall Type 3

Display Position 4

Video Mode (optional) 5

Display Width (mm) (optional) 6a

Viewable Width (mm) (optional) 6b

Display Height (mm) (optional) 6c

Viewable Height (mm) (optional) 6d

7

Finish

Command: leave all - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Decoder or Group name
3. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional)

1

Decoder / Group

2

3

✓ Finish

Command: leave all - Wizard Mode

Parameters

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select

☒ Decoder Device Name
☐ Group Name
☐ All

1a

1b

2

✓ Finish

Command: leave av - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Decoder or Group name
3. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional)

1

Decoder / Group

2

3

✓ Finish

Command: leave av - Wizard Mode

Parameters

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select

☒ Decoder Device Name
☐ Group Name
☐ All

1a

1b

2

✓ Finish

Command: leave video - Normal Mode

Parameters ✕

1. Enter optional Security Key
2. Enter Decoder or Group name
3. Click Finish button

Select Mode ☐ Wizard
☒ Normal

Security Key (optional) **1**

Decoder / Group **2**

3

Command: leave video - Wizard Mode

Parameters ✕

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional)

Select **1a** ☒ Decoder Device Name
☐ Group Name
☐ All

1b

2

Command: leave audio - Normal Mode

Parameters ✕

1. Enter optional Security Key
2. Enter Decoder or Group name
3. Click Finish button

Select Mode ☐ Wizard
☒ Normal

Security Key (optional) **1**

Decoder / Group **2**

3

Command: leave audio - Wizard Mode

Parameters ✕

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional)

Select **1a** ☒ Decoder Device Name
☐ Group Name
☐ All

1b

2

Command: leave serial - Normal Mode

Parameters

1. Enter optional Security Key

2. Enter Decoder or Group name

3. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Decoder / Group 2

3

✓ Finish

Command: leave serial - Wizard Mode

Parameters

1.a Select Device(s)

1.b Select Decoder or Group name

2. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select

☒ Decoder Device Name

☐ Group Name

☐ All

1a

1b

2

✓ Finish

Command: leave ir - Normal Mode

Parameters

1. Enter optional Security Key

2. Enter Decoder or Group name

3. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Decoder / Group 2

3

✓ Finish

Command: leave ir - Wizard Mode

Parameters

1.a Select Device(s)

1.b Select Decoder or Group name

2. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select

☒ Decoder Device Name

☐ Group Name

☐ All

1a

1b

2

✓ Finish

ARRANGER
BUILD | CONTROL | MANAGE

186

Command: leave usb - Normal Mode

Parameters ×

1. Enter optional Security Key
2. Enter Decoder or Group name
3. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) **1**

Decoder / Group **2**

3

Command: leave usb - Wizard Mode

Parameters ×

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Select **1a** ☒ Decoder Device Name
1b ☐ Group Name
☐ All

2

Command: leave kvm - Normal Mode

Parameters ×

1. Enter optional Security Key
2. Enter Decoder or Group name
3. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) **1**

Decoder / Group **2**

3

Command: leave kvm - Wizard Mode

Parameters ×

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Select **1a** ☒ Decoder Device Name
1b ☐ Group Name
☐ All

2

Command: stop - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder
3. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

3

Command: stop - Wizard Mode

Parameters

1. Select Encoder
2. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

Encoder Device Name 1

▼

2

Command: start - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder
3. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

3

Command: start - Wizard Mode

Parameters

1. Select Encoder
2. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

Encoder Device Name 1

▼

2

Command: reboot - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Device or Group name
3. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Device / Group 2

3

Command: reboot - Wizard Mode

Parameters

1.a Select Device(s)
1.b Select Decoder or Group name
2. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Select 1a
☒ Device Name
☐ Group Name
☐ All
☐ All Decoders
☐ All Encoders

1b

2

Command: set audio_source - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Select Audio Source:
HDMI / ANALOG
4. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Audio Source 3

4

Command: set audio_source - Wizard Mode

Parameters

1. Select Encoder Device Name
2. Select Audio Source:
HDMI / ANALOG
3. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Audio Source 2

3

Command: set edid - Normal Mode

The screenshot shows the 'Parameters' dialog box for the 'set edid - Normal Mode' command. The dialog has a title bar with a close button (X). Inside, there are instructions on the left: '1. Enter optional Security Key', '2. Enter Encoder or Group name', '3. Enter EDID string', and '4. Click Finish button'. On the right, there are three input fields: 'Security Key (optional)' (labeled 1), 'Encoder / Group' (labeled 2), and 'EDID' (labeled 3). Above the first two fields is a 'Select Mode' section with radio buttons for 'Wizard' and 'Normal' (selected). At the bottom right is a 'Finish' button (labeled 4) with a checkmark icon.

Command: set edid - Wizard Mode

The screenshot shows the 'Parameters' dialog box for the 'set edid - Wizard Mode' command. The dialog has a title bar with a close button (X). Inside, there are instructions on the left: '1. Select Encoder or Group name', '2. Select EDID type', '2.a Select one: Default EDID, Decoder EDID, User Defined', '2.b Select External EDID', '2.c Enter User Defined EDID', and '3. Click Finish button'. On the right, there are several input fields: 'Security Key (optional)' (containing '31333331306339326330373066613065'), 'Select' (radio buttons for 'Encoder Device Name' (selected), 'Group Name', and 'All Encoders'), 'EDID' (labeled 2a, with a dropdown menu showing 'User Defined'), 'EDID' (labeled 2b, with a button 'External File'), and 'EDID' (labeled 2c, with a large text area). At the bottom right is a 'Finish' button (labeled 3) with a checkmark icon.

Command: set frame_converter - Normal Mode

Parameters ×

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Enter Frame rate
4. Click Finish button

Select Mode ☐ Wizard
☒ Normal

Security Key (optional) **1**

Encoder Device Name **2**

Frame Rate **3**

4

Command: set frame_converter - Wizard Mode

Parameters ×

1. Enter Encoder Device Name
3. Select Frame Rate
3. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional)

Encoder Device Name **1**

Frame Rate **2**

3

Parameters ×

1. Select Encoder Device Name
2. Select Frame Rate User Defined
3. Select Frame Rate
4. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional)

Encoder Device Name **1**

Frame Rate **2**

3

4

Command: set listener - Normal Mode

Listener is OFF (disabled)

Parameters

1. Enter optional Security Key

2. Enter Multicast or Device IP

3. Enter Notify IP Port

4. Select Protocol UDP or TCP

5. Select Condition ON, OFF or ALL

6. Select State of listener

7. Select the device physically connected port

8. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional)

1

IP Address

2

0.0.0.0

Notify Port

3

Protocol

4

Condition

5

State

6

DISABLED

Device Port

7

8

✓ Finish

Listener is ON (enabled)

Parameters

1. Enter optional Security Key

2. Enter Multicast or Device IP

3. Enter Notify IP Port

4. Select Protocol UDP or TCP

5. Select Condition ON, OFF or ALL

6. Select State of listener

7. Select the device physically connected port

8. Select Preset

9. Set delay time (optional)

10. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional)

1

IP Address

2

0.0.0.0

Notify Port

3

Protocol

4

Condition

5

State

6

ENABLED

Device Port

7

Preset Name

8

Delay [minutes](optional)

9

0

60

10

✓ Finish

Command: set listener - Wizard Mode

Parameters ×

1. Select Device Discovery

Select Mode ☒ Wizard ☐ Normal

Security Key (optional) 31333331306339326330373066613065

🔍 Device Discovery

1

IP Address 0.0.0.0

Notify Port

Protocol

Condition

State DISABLED

Device Port

✓ Finish

Parameters ↺ ×

2. Select Device

Select Mode ☒ Wizard ☐ Normal

Security Key (optional) 31333331306339326330373066613065

🔍 Device Discovery

2

Discovered Devices

000C1E054917@10.8.11.100 (iTachIP2IR)

Refresh

IP Address 0.0.0.0

Notify Port

Protocol

Condition

State DISABLED

Device Port

✓ Finish

Command: set listener - Wizard Mode continued...

Listener is ON (enabled)

Parameters

Select Mode

☒ Wizard
 ☐ Normal

Security Key (optional)

31333331306339326330373066613065

Device Discovery

000C1E054917@10.8.11.100 (iTachIP2IR)



3

☒
☐
☐
☐

Sensor

3. Select the device port being used

4. Select Sensor Notify

5. Enter an unused port number

6. Set Notify Timer to 0

7. Click Set button

8. Select Condition ON, OFF or ALL

9. Select State of listener

10. Select the preset to be executed

11. Select an optional delay

12. Click Finish button

Select I/O

4

Select Mode

Sensor Notify

5

Notify Port

9133

6

Notify Timer

11

7

Set

IP Address

239.255.250.250

Notify Port

Protocol

UDP

8

Condition

ON

9

State

ENABLED

Device Port

1

10

Preset Name

preset1

Delay [minutes](optional)

11

0

60

12

Finish

Command: set listener - Wizard Mode continued...

Listener is OFF (disabled)

Parameters

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

31333331306339326330373066613065

Device Discovery

000C1E054917@10.8.11.100 (iTachIP2IR)

3. Select the device port being used

4. Select Condition ON, OFF or ALL

5. Select State of listener

5. Select the device physically connected port

6. Click Finish button



Select I/O

☒ Sensor
☐ ☐ ☐

Select Mode

Sensor Notify

Notify Port

9133

Notify Timer

11

7

Set

IP Address

239.255.250.250

Notify Port

9133

Protocol

UDP

Condition

4 ON

State

5 DISABLED

Device Port

1

6

Finish

Command: set rotation - Normal Mode

1. Enter optional Security Key
2. Enter Decoder Device Name
3. Enter Rotation Method
4. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional) 1

Decoder Device Name 2

Rotation 3
None

4
Finish

Command: set rotation - Wizard Mode

1. Select Decoder Device Name
2. Select Rotation Method
3. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)
31333331306339326330373066613065

Decoder Device Name 1

Rotation 2

3
Finish

Command: set scaler - Normal Mode

1. Enter optional Security Key
2. Enter Decoder Device Name
3. Enter Video Mode
4. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional) 1

Decoder Device Name 2

Mode 3

4
Finish

Command: set scaler - Wizard Mode

1. Select Decoder Device Name
2. Select Video Mode
3. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)
31333331306339326330373066613065

Decoder Device Name 1

Mode 2

3
Finish

Command: set var - Normal Mode

Parameters [X]

1. Enter optional Security Key
2. Enter Variable Name
* MAX 256 characters
3. Enter value
* MAX 256 characters
4. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Variable Name 2

Value 3

4

Command: set var - Wizard Mode

Parameters [X]

1. Select / Enter Variable Name
* MAX 256 characters
2. Select Value or select Delete
* MAX 256 characters
3. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Variable Name 1

Delete ☐

Value 2

3

Command: set video_mute - Normal Mode

Parameters [X]

1. Enter optional Security Key
2. Enter Decoder Device Name
3. Select Option:
Enabled / Disabled
4. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Decoder Device Name 2

Option 3

4

Command: set video_mute - Wizard Mode

Parameters [X]

1. Select Decoder Device Name
2. Select Option:
Enabled / Disabled
3. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Decoder Device Name 1

Option 2

3

Command: set video_quality - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Select Option: AUTO / 0..5
4. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Option 3

4 ✓ Finish

Command: set video_quality - Wizard Mode

Parameters

1. Select Encoder Device Name
2. Select Option AUTO / 0..5
3. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Option 2

3 ✓ Finish

Command: set volume - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Device Name
3. Select Volume level
4. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Device Name 2

Analog Audio Output Volume 3 0 100

4 ✓ Finish

Command: set volume - Wizard Mode

Parameters

1. Select Device Name
2. Select Volume level
3. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Select 1

Analog Audio Output Volume 2 0 100

3 ✓ Finish

Command: get audio_source - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

31333331306339326330373066613065

Encoder Device Name

3

✓ Finish

Command: get audio_source - Wizard Mode

Parameters

1. Select Encoder Device Name
2. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

31333331306339326330373066613065

Encoder Device Name

2

✓ Finish

Command: get devices - Normal Mode

Parameters

1. Enter optional Security Key
2. Select Device:
ALL
ALL DECODERS
ALL ENCODERS
3. Click Finish button

Select Mode

☐ Wizard
☒ Normal

Security Key (optional)

Select Device

3

✓ Finish

Command: get devices- Wizard Mode

Parameters

1. Select Device:
ALL
ALL DECODERS
ALL ENCODERS
2. Click Finish button

Select Mode

☒ Wizard
☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select Device

2

✓ Finish

Command: get display_status - Normal Mode

Parameters

1. Enter optional Security Key
2. Select Decoder
3. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Decoder Device Name 2

3

Command: get display_status - Wizard Mode

Parameters

1. Select Decoder
2. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Decoder Device Name 1

2

Command: get edid - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Decoder Device Name
3. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Decoder Device Name 2

3

Command: get edid- Wizard Mode

Parameters

1. Select Decoder Device Name
2. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Decoder Device Name 1

2

Command: get encoder - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Decoder Device Name
3. Select Subscription:
VIDEO / AUDIO
4. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1
Decoder Device Name 2
Subscription 3
4

Command: get encoder - Wizard Mode

Parameters

1. Select Decoder Device Name
2. Select Subscription:
VIDEO / AUDIO
3. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional)
Decoder Device Name 1
Subscription 2
3

Command: get frame_converter - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Encoder Device Name
3. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1
Encoder Device Name 2
3

Command: get frame_converter- Wizard Mode

Parameters

1. Select Encoder Device Name
2. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional)
Encoder Device Name 1
2

Command: get preferred - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Decoder Device Name

3. Select Resolution:
WIDTH / HEIGHT / FRAME RATE

4. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Decoder Device Name 2

Resolution 3

4

Command: get preferred - Wizard Mode

Parameters ×

1. Select Decoder Device Name

2. Select Resolution:
WIDTH / HEIGHT / FRAME RATE

3. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Decoder Device Name 1

Resolution 2

3

Command: get rotation - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Decoder Device Name

3. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Decoder Device Name 2

3

Command: get rotation- Wizard Mode

Parameters ×

1. Select Decoder Device Name

2. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Decoder Device Name 1

2

Command: get scaler - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Decoder Device Name

3. Select Option:
ALL / WIDTH /
HEIGHT / FRAME RATE

4. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Decoder Device Name 2

Option 3

4

Command: get scaler - Wizard Mode

Parameters ×

1. Select Decoder Device Name

2. Select Option:
ALL / WIDTH /
HEIGHT / FRAME RATE

3. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional) 31333331306339326330373066613065

Decoder Device Name 1

Option 2

3

Command: get status - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Device Name

3. Select Streams:
VIDEO / AUDIO /
IR / SERIAL / USB

4. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Device Name 2

Streams (optional) 3

4

Command: get status- Wizard Mode

Parameters ×

1. Select Device Name

2. Select Streams:
VIDEO / AUDIO /
IR / SERIAL / USB

3. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional) 31333331306339326330373066613065

Device Name 1

Streams (optional) 2

3

Command: get var - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter Variable Name
3. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Variable Name 2

3

Command: get var - Wizard Mode

Parameters

1. Enter / Select Variable Name
2. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Variable Name 1

2

Command: get ver - Normal Mode

Parameters

1. Enter optional Security Key
2. Select Device:
ALL
ALL DECODERS
ALL ENCODERS
3. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Device Name 2

3

Command: get ver- Wizard Mode

Parameters

1. Select Device:
ALL
ALL DECODERS
ALL ENCODERS
2. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Device Name 1

2

Command: get video - Normal Mode

Parameters

1. Enter optional Security Key

2. Enter Encoder Device Name

3. Select Option:
ALL / WIDTH / HEIGHT
FRAME RATE / SCAN MODE

4. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Encoder Device Name 2

Option 3

4

Command: get video - Wizard Mode

Parameters

1. Select Encoder Device Name

2. Select Option:
ALL / WIDTH / HEIGHT
FRAME RATE / SCAN MODE

3. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional) 31333331306339326330373066613065

Encoder Device Name 1

Option 2

3

Command: get video_mute - Normal Mode

Parameters

1. Enter optional Security Key

2. Select Device:
ALL
ALL DECODERS
ALL ENCODERS

3. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Decoder Device Name 2

3

Command: get video_mute- Wizard Mode

Parameters

1. Select Device:
ALL
ALL DECODERS
ALL ENCODERS

2. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional) 31333331306339326330373066613065

Decoder Device Name 1

2

Command: get video_quality - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Encoder Device Name

3. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Encoder Device Name 2

3

Command: get video_quality - Wizard Mode

Parameters ×

1. Select Encoder Device Name

2. Click Finish button

Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Encoder Device Name 1

2

Command: get video_status - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter Encoder Device Name

3. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Encoder Device Name 2

3

Command: get video_status- Wizard Mode

Parameters ×

1. Select Encoder Device Name

2. Click Finish button


Select Mode ☒ Wizard ☐ Normal

Security Key (optional)

Encoder Device Name 1

2


Command: get volume - Normal Mode

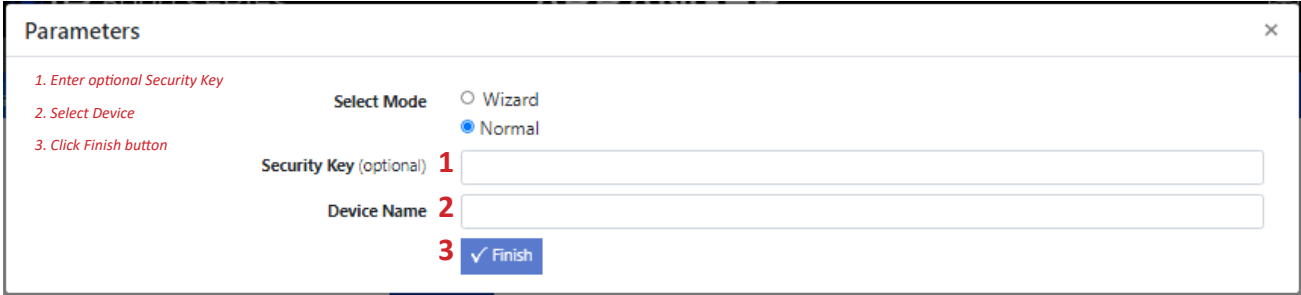

The 'Parameters' dialog box for Normal Mode contains the following elements:

- Instructions:**
 - 1. Enter optional Security Key
 - 2. Select Device
 - 3. Click Finish button
- Select Mode:** Radio buttons for Wizard (unselected) and Normal (selected).
- Security Key (optional):** A text input field with a red '1' next to it.
- Device Name:** A text input field with a red '2' next to it.
- Finish Button:** A blue button with a checkmark and the text 'Finish', with a red '3' next to it.

Command: get volume - Wizard Mode

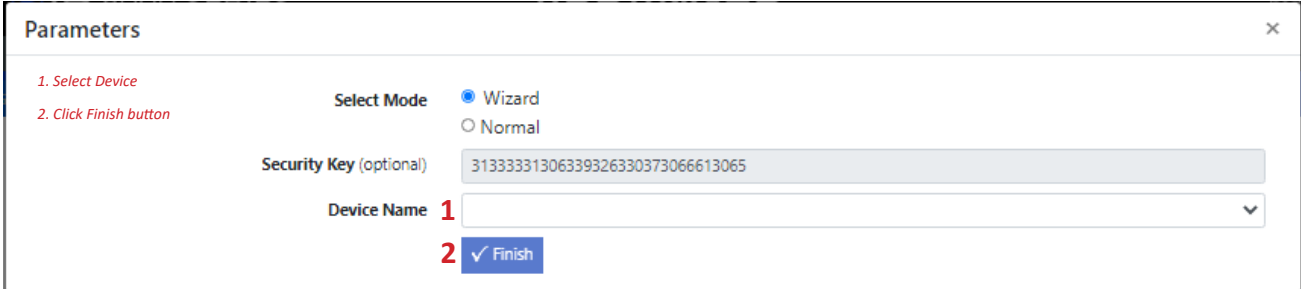

The 'Parameters' dialog box for Wizard Mode contains the following elements:

- Instructions:**
 - 1. Select Device
 - 2. Click Finish button
- Select Mode:** Radio buttons for Wizard (selected) and Normal (unselected).
- Security Key (optional):** A text input field containing the value '31333331306339326330373066613065'.
- Device Name:** A dropdown menu with a red '1' next to it.
- Finish Button:** A blue button with a checkmark and the text 'Finish', with a red '2' next to it.

Command: send cec - Normal Mode

1. Enter optional Security Key
2. Select Device
3. Enter CEC code
4. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

Device / Group 2

CEC Code 3

4

Command: send cec - Wizard Mode

1. Select Device
2. Select / Enter CEC code
3. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional)

Select 1
☒ Device Name
☐ All
☐ All Decoders
☐ All Encoders

CEC Code 2

3

Command: send gc - Normal Mode

1. Enter optional Security Key

2. Enter device IP address

3. Select device port

4. Enter command string

5. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional)

1

IP Address

2

0.0.0.0

Port

3

4998

Global Caché Command

4

5

✓ Finish

Command: send gc - Wizard Mode

1. Select Device, Click Device Discovery or enter device IP address

2. Select device port

3. Disconnect (optional)

4. Enter command string or select Delete

5. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select Device

▼

Device Discovery

1

IP Address

0.0.0.0

Port

2

4998

Disconnect (optional)

3

☐

Global Caché Command

4

5

✓ Finish

Command: send ir - Normal Mode

Parameters

1. Enter optional Security Key

2. Select Device

3. Enter IR code

4. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

Device / Group 2

IR Code 3

4

Command: send ir - Wizard Mode

Parameters

1. Select Device

2. Enter IR code

3. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

31333331306339326330373066613065

Select

1

☒ Device Name

☐ All

☐ All Decoders

☐ All Encoders

IR Code 2

3

Command: send serial - Normal Mode

Parameters ×

1. Enter optional Security Key
2. Enter Device
3. Enter Data String
4. Leave NONE selected (when no feedback required)
5. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Device / Group 2

Data String 3

Feedback (optional) 4 NONE ▼

5

Parameters ×

1. Enter optional Security Key
2. Enter Device
3. Enter Data String
4. Select Reply (when feedback required)
5. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Device / Group 2

Data String 3

Feedback (optional) 4 Reply ▼

5

Parameters ×

1. Enter optional Security Key
2. Enter Device
3. Enter Data String
4. Select Contains (when part feedback compared)
5. Enter compare string
6. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Device / Group 2

Data String 3

Feedback (optional) 4 Equals ▼

Feedback String 5

6

Parameters ×

1. Enter optional Security Key
2. Enter Device
3. Enter Data String
4. Select Equals (when full feedback compared)
5. Enter compare string
6. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

Device / Group 2

Data String 3

Feedback (optional) 4 Contains ▼

Feedback String 5

6

Command: send serial - Wizard Mode

Parameters [X]

1. Select Device
2. Select string format:
ASCII / HEX
3. Enter Data String
4. Leave None selected
(when no feedback required)
5. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Select ☒ Device Name
☐ All
☐ All Decoders
☐ All Encoders

1 <<Decoder>>

Format 2 ASCII

Data String 3

Append CR (optional) ☐

Append LF (optional) ☐

Feedback (optional) 4 NONE

5 ✓ Finish

Parameters [X]

1. Select Device
2. Select string format:
ASCII / HEX
3. Enter Data String
4. Select Reply
(when feedback required)
5. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

Select ☒ Device Name
☐ All
☐ All Decoders
☐ All Encoders

1 <<Decoder>>

Format 2 ASCII

Data String 3

Append CR (optional) ☐

Append LF (optional) ☐

Feedback (optional) 4 Reply

5 ✓ Finish

Command: send serial - Wizard Mode continued...

Parameters

1. Select Device

Select Mode ☒ Wizard
☐ Normal

2. Select string format:
 ASCII / HEX

Security Key (optional) 31333331306339326330373066613065

3. Enter Data String

Select ☒ Device Name
☐ All
☐ All Decoders
☐ All Encoders

4. Select Contains
 (when part feedback compared) 1

5. Enter compare string

Format 2 ASCII

Data String 3

Append CR (optional) ☐

Append LF (optional) ☐

Feedback (optional) 4 Equals

Feedback String 5

Append CR (optional) ☐

Append LF (optional) ☐

6

Parameters

1. Select Device

Select Mode ☒ Wizard
☐ Normal

2. Select string format:
 ASCII / HEX

Security Key (optional) 31333331306339326330373066613065

3. Enter Data String

Select ☒ Device Name
☐ All
☐ All Decoders
☐ All Encoders

4. Select Equals
 (when all feedback compared) 1

5. Enter compare string

Format 2 ASCII

Data String 3

Append CR (optional) ☐

Append LF (optional) ☐

Feedback (optional) 4 Contains

Feedback String 5

Append CR (optional) ☐

Append LF (optional) ☐

6

Command: send tcp - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter device IP Address
3. Enter device Port
4. Enter command string
5. Leave NONE selected (when no feedback required)
6. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1
IP Address 2
Port 3
Command 4
Feedback (optional) 5 NONE
6 ✓ Finish

Parameters

1. Enter optional Security Key
2. Enter device IP Address
3. Enter device Port
4. Enter command string
5. Select Reply (when feedback required)
6. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1
IP Address 2
Port 3
Command 4
Feedback (optional) 5 Reply
6 ✓ Finish

Parameters

1. Enter optional Security Key
2. Enter device IP Address
3. Enter device Port
4. Enter command string
5. Select Contains (when part feedback compared)
6. Enter compare string
7. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1
IP Address 2
Port 3
Command 4
Feedback (optional) 5 Contains
Feedback String (optional) 6
7 ✓ Finish

Parameters

1. Enter optional Security Key
2. Enter device IP Address
3. Enter device Port
4. Enter command string
5. Select Equals (when all feedback compared)
6. Enter compare string
7. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1
IP Address 2
Port 3
Command 4
Feedback (optional) 5 Equals
Feedback String (optional) 6
7 ✓ Finish

Command: send tcp - Wizard Mode

Parameters ✕

1. Enter device IP Address
2. Enter device Port
*3. Select Format:
ASCII / HEX*
4. Enter command string
*5. Leave NONE selected
(when no feedback required)*
6. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

IP Address **1**

Port **2**

Disconnect (optional) ☐

Format **3** ASCII ▼

Command **4**

Append CR (optional) ☐

Append LF (optional) ☐

Feedback (optional) **5** NONE ▼

6

Parameters ✕

1. Enter device IP Address
2. Enter device Port
*3. Select Format
ASCII / HEX*
4. Enter command string
*5. Select Reply
(when feedback required)*
6. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

IP Address **1**

Port **2**

Disconnect (optional) ☐

Format **3** ASCII ▼

Command **4**

Append CR (optional) ☐

Append LF (optional) ☐

Feedback (optional) **5** Reply ▼

6

Command: send tcp - Wizard Mode continued...

Parameters ×

1. Enter device IP Address

2. Enter device Port

3. Select Format
ASCII / HEX

4. Enter command string

5. Select Contains
(when part feedback compared)

6. Enter compare string

7. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional)
31333331306339326330373066613065

IP Address **1**

Port **2**

Disconnect (optional)
☐

Format **3** ASCII

Command **4**

Append CR (optional)
☐

Append LF (optional)
☐

Feedback (optional) **5** Contains

Feedback String **6**

Append CR (optional)
☐

Append LF (optional)
☐

7

Parameters ×

1. Enter device IP Address

2. Enter device Port

3. Select Format
ASCII / HEX

4. Enter command string

5. Select Equals
(when all feedback compared)

6. Enter compare string

7. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional)
31333331306339326330373066613065

IP Address **1**

Port **2**

Disconnect (optional)
☐

Format **3** ASCII

Command **4**

Append CR (optional)
☐

Append LF (optional)
☐

Feedback (optional) **5** Equals

Feedback String **6**

Append CR (optional)
☐

Append LF (optional)
☐

7

Command: preset add

Parameters

1. Enter Preset Name

2. Enter Preset Command

3. Click Finish button

Security Key (optional)

31333331306339326330373066613065

Preset Name

1

Preset Data

2

3

✓ Finish

Command: preset delete

Parameters

1. Select Preset Name

2. Click Finish button

Select Mode

• Wizard

○ Normal

Security Key (optional)

31333331306339326330373066613065

Preset Name

1

2

✓ Finish

Command: preset load

Parameters

1. Select Preset Name

2. Select optional delay time or select Cancel

3. Click Finish button

Select Mode

• Wizard

○ Normal

Security Key (optional)

31333331306339326330373066613065

Preset Name

1

Cancel

☐

Delay [minutes] (optional)

2

0

60

3

✓ Finish

Command: set ui_button - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter UI Name
3. Enter Button Name
4. Select Function:
Position / State / Text / Press
5. Enter Value
6. Click Finish button

Select Mode
☐ Wizard
☒ Normal

Security Key (optional) 1

UI Name 2

Button Name 3

Function 4

Value 5

6

Command: set ui_button - Wizard Mode

Parameters

1. Select UI Name
2. Select Button Name
3. Select Function:
State / Text / Press
4. Click Finish button

Select Mode
☒ Wizard
☐ Normal

Security Key (optional) 31333331306339326330373066613065

UI Name 1

Button Name 2

Function 3

4

Command: set ui_label - Normal Mode

1. Enter optional Security Key

2. Enter UI Name

3. Enter Label Name

4. Select Function
Color / Visibility / Text

5. Enter Value

6. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

UI Name 2

Label Name 3

Function 4

Value 5

6

Command: set ui_label - Wizard Mode

1. Select UI Name

2. Select Label Name

3. Select Function
Color / Visibility / Text

4. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

UI Name 1

Label Name 2

Function 3

4

Command: set ui_image - Normal Mode

Parameters

1. Enter optional Security Key

2. Enter UI Name

3. Enter Image Name

4. Select Function
Visibility

5. Enter Value

6. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional) 1

UI Name 2

Image Name 3

Function 4

Value 5

6 ✓ Finish

Command: set ui_image - Wizard Mode

Parameters

1. Select UI Name

2. Select Image Name

3. Select Function
Visibility

4. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional) 31333331306339326330373066613065

UI Name 1

Image Name 2

Function 3

4 ✓ Finish

Command: set ui_page- Normal Mode

Parameters

1. Enter optional Security Key

2. Enter UI Name

3. Enter Page Name

4. Click Finish button

Select Mode

☐ Wizard

☒ Normal

Security Key (optional)

1

UI Name

2

Page Name

3

4

✓Finish

Command: set ui_page - Wizard Mode

Parameters

1. Select UI Name

2. Select Page Name

3. Click Finish button

Select Mode

☒ Wizard

☐ Normal

Security Key (optional)

31333331306339326330373066613065

UI Name

1

Page Name

2

3

✓Finish

Command: set ui - Normal Mode

Parameters ×

1. Enter optional Security Key

2. Enter UI Name

3. Select Service > Enabled

4. Enter optional UI Timeout (seconds)

5. Enter optional Client Limit (1 – 100)

6. Enter optional 4 digit code (0000 – 9999)

7. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

UI Name 2

Service 3

Session Timeout (optional) 4

Client Limit (optional) 5

Login (optional) 6

7

Parameters ×

1. Enter optional Security Key

2. Enter UI Name

3. Select Service > Disabled

4. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

UI Name 2

Service 3

4

Parameters ×

1. Enter optional Security Key

2. Enter UI Name

3. Select Service > Logout

4. Click Finish button

Select Mode ☐ Wizard ☒ Normal

Security Key (optional) 1

UI Name 2

Service 3

4

Command: set ui - Wizard Mode

Parameters

1. Select UI Name

2. Select Service > Enabled

3. Select optional UI Timeout (seconds)

4. Enter optional Client Limit (1 – 100)

5. Select optional Login: Random / Fixed

6. Click Finish button

Select Mode

Security Key (optional)

UI Name

Service

Session Timeout (optional)

Client Limit (optional)

Login (optional)

☒ Wizard
☐ Normal

31333331306339326330373066613065

Enabled

☐

NONE

6

✓Finish

Parameters

1. Select UI Name

2. Select Service > Disabled

3. Click Finish button

Select Mode

Security Key (optional)

UI Name

Service

☒ Wizard
☐ Normal

31333331306339326330373066613065

Disabled

3

✓Finish

Parameters

1. Select UI Name

2. Select Service > Logout

3. Click Finish button

Select Mode

Security Key (optional)

UI Name

Service

☒ Wizard
☐ Normal

31333331306339326330373066613065

Logout

3

✓Finish

Command: get ui - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter UI Name
3. Click Finish button

Select Mode ☐ Wizard
☒ Normal

Security Key (optional) 1
UI Name 2
3

Command: get ui - Wizard Mode

Parameters

1. Select UI Name
2. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional)
UI Name 1
2

Command: get ui_button - Normal Mode

Parameters

1. Enter optional Security Key
2. Enter UI Name
3. Enter Button Name
4. Enter Function > down
5. Click Finish button

Select Mode ☐ Wizard
☒ Normal

Security Key (optional) 1
UI Name 2
Button Name 3
Function 4
5

Command: get ui_button - Wizard Mode

Parameters

1. Select UI Name
2. Select Button Name
3. Select Function > Down
4. Click Finish button

Select Mode ☒ Wizard
☐ Normal

Security Key (optional)
UI Name 1
Button Name 2
Function 3
4



LIBERTY[®]
AV SOLUTIONS

A SUBSIDIARY OF WESCO DISTRIBUTION, INC.

Phone: 719-260-0061

Fax: 719-260-0075

Toll-Free: 800-530-8998

Email: supportlibav@libav.com