Attaching the Fingers

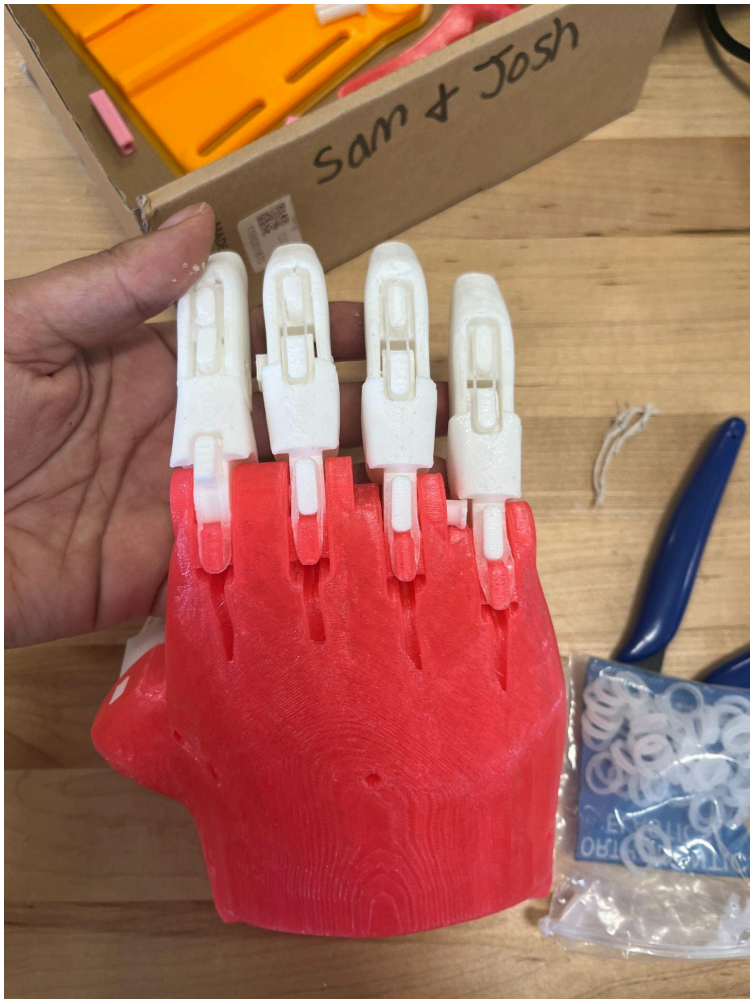

- When attaching the fingers to the palm, be sure to align the correct side of the proximal (finger component attaching to the palm) with the knuckle and distal joints.
    - This picture shows the leftmost finger attached correctly to the palm. The others are in the opposite direction
    - This issue will be clear because the range of motion of the fingers joined incorrectly will be greatly affected.
    - Methods for fixing this issue will almost always include taking apart one or more fingers. If more than two fingers are attached incorrectly, like in this picture, it may be easier to simply disassemble the entire hand and start over, as some of the pins require a specific assembly order. This order may be mixed up when fixing the fingers
    - It is also important to note that one side of the joint pins has a rectangular head that corresponds to an indent in the palm of the finger joint. This will serve as a check that the pins are inserted correctly.

Preparing to string the fingers

- Before stringing the fingers, it is important to make sure the palm is ready. To ensure this, check these steps have been completed.
    - Removed the supports in the center of the palm pictured here. They should pop off easily. If not, use a slim rigid tool to wedge the supports off.
    - If accessible, use a thin abrasive tool or rigid wire to make sure the holes where string should be threaded are cleared of possible plastic that might impede the strings. Smoothing these channels will also increase the life of the strings as they rub against the plastic.
    - It may also be beneficial to make a mental game plan. While the instructions say to cut a specific length of spring, I opted not to cut it until every finger was strung. Whatever strategy you may think of, do your thinking before your stringing!

Stringing the Fingers

- Stringing the fingers can be a complicated process. To make it as easy as possible, be sure to have a length of wire quite a bit longer than the palm and fingers and a small, thin tool to coax the string around bends and loops.
    - Begin by folding one end of the wire around your length of string. This string doesn’t need to be cut quite yet. After ensuring your string is fastened to the wire, pass the wire through the appropriate channel. This makes threading the wires much quicker and easier.
    - Once the string is through the channel and at the finger's loops, use the small thin tool to push the string around the loop and tie it.
    - After a finger has been strung, cut the string extra long to have some safety cushioning. Take careful note of which fingers are attached to the same string. These will have to be cut even longer.
    - Tensioning the palm can also be difficult. Be sure to only barely tighten the screws fastening the tensioner pins before adjusting the grip. Find the position you want your fingers to be relative to the wrist flexion while the tensioner pins are fully compressed. Once you've identified your ideal position, continue tightening the screws until the tensioner pins lock into this optimal position.