

# CHF



## 737-300/400/500 TASK CARDS

| AIRLINE CARD NO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                              | TITLE<br>LANDING GEAR TIRE PRESSURE |                                                                |                 | BOEING CARD NO.<br>12-015-51-01  |           |             |          |                                                                              |          |                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|-------------------------------------|----------------------------------------------------------------|-----------------|----------------------------------|-----------|-------------|----------|------------------------------------------------------------------------------|----------|---------------------------------------------------------------------|
| DATE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | TASK<br>SERVICE                                                              |                                     |                                                                |                 | RELATED CARD                     |           |             |          |                                                                              |          |                                                                     |
| TAIL NUMBER                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | WORK AREA<br>LANDNG GEAR                                                     | VERSION<br>1.1                      | THRESHOLD<br>24 HR                                             | REPEAT<br>24 HR | APPLICABILITY<br>AIRPLANE<br>ALL |           |             |          |                                                                              |          |                                                                     |
| STATION                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | SKILL<br>AIRPL                                                               | NOTE                                |                                                                |                 | ENGINE<br>ALL                    |           |             |          |                                                                              |          |                                                                     |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                              | ACCESS                              |                                                                |                 | ZONE<br>204 310 410              |           |             |          |                                                                              |          |                                                                     |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                              |                                     |                                                                |                 |                                  |           |             |          |                                                                              |          |                                                                     |
| <p>Check nose and main landing gear tires for proper inflation.</p> <p><b>INTERVAL NOTE:</b> 24 elapsed clock hours.</p> <p><b>A. Tools/Equipment</b></p> <p><u>NOTE:</u> When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.</p> <table border="1"><thead><tr><th>Reference</th><th>Description</th></tr></thead><tbody><tr><td>SPL-1527</td><td>Inflator - Tire<br/><b>737-300, -500</b><br/>Part #: F70199-52 Supplier: 81205</td></tr><tr><td>STD-1132</td><td>Gauge - Tire Pressure, 0-300 PSIG (0-2069 KPa), +/- 3 psig accuracy</td></tr></tbody></table> |                                                                              |                                     |                                                                |                 |                                  | Reference | Description | SPL-1527 | Inflator - Tire<br><b>737-300, -500</b><br>Part #: F70199-52 Supplier: 81205 | STD-1132 | Gauge - Tire Pressure, 0-300 PSIG (0-2069 KPa), +/- 3 psig accuracy |
| Reference                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Description                                                                  |                                     |                                                                |                 |                                  |           |             |          |                                                                              |          |                                                                     |
| SPL-1527                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Inflator - Tire<br><b>737-300, -500</b><br>Part #: F70199-52 Supplier: 81205 |                                     |                                                                |                 |                                  |           |             |          |                                                                              |          |                                                                     |
| STD-1132                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Gauge - Tire Pressure, 0-300 PSIG (0-2069 KPa), +/- 3 psig accuracy          |                                     |                                                                |                 |                                  |           |             |          |                                                                              |          |                                                                     |
| EFFECTIVITY<br>CHF ALL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                              | SOURCE<br>MPD                       | LANDING GEAR TIRE PRESSURE<br><br>D6-38278-3C1<br>12-015-51-01 |                 |                                  |           |             |          |                                                                              |          |                                                                     |

# CHF



## 737-300/400/500 TASK CARDS

| DATE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | TAIL NUMBER   | STATION                                                        | AIRLINE CARD NO. | BOEING CARD NO.<br>12-015-51-01 |      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----------------------------------------------------------------|------------------|---------------------------------|------|
| <b>TASK 12-15-51-603-001</b><br><b>1. Service of the Main and the Nose Gear Tires</b><br><br><b>A. Consumable Materials</b><br><br>(1) Dry Nitrogen - Commercial grade (99.5 percent pure nitrogen), from a regulated pressure source<br><br>(2) Air Source - clean dry with a maximum moisture content that corresponds to an atmospheric dewpoint of -20 degrees F (-29 degrees C), from a regulated pressure source<br><br><b>B. Check on the Tire Pressure</b><br><br>SUBTASK 12-15-51-613-012<br><br>(1) Do not do a check of the tire pressure for a minimum of 2 hours after a flight or until tires have reached ambient temperature.<br><br><u>NOTE:</u> It is necessary to wait two hours after a flight or until tires reach ambient temperature to become sufficiently cool to do maintenance on them.<br><br>EXCEPTION: If it is necessary to check tire pressures when there has been less than 2 hours cooling time, do a warm tire comparison check per step (2). If it has been a minimum of two hours after a flight, proceed to step (3).<br><br>SUBTASK 12-15-51-613-013<br><br>(2) If it is necessary to check tire pressures when there has been less than 2 hours cooling time, a warm tire comparison check should be accomplished on the main gear. If there are no system anomalies, i.e. anti-skid, etc., and all tires are at similar temperatures, check and record the tire pressures of all main gear tires. If one is substantially lower than the other three, calculate the average pressure of the other three. Verify that all three pressures are equal to or above the minimum "cold" pressure required for the airplane gross weight as determined by Figure 1. If the "low" tire is more than 15% lower than the average, it will be necessary to replace that tire/wheel assembly. A tire that is within this tolerance should be inflated to the average. For example: 3 MLG tires indicate an average of 200 PSI after 1 hour on the ground, the 4th reads 175 PSI. Inflate the low tire to the 200 PSI average. If a tire is found to be more than 30% lower than the average, both it and its paired axle tire must be replaced. Check nose gear tire pressure per steps (3) and (4). Do not bleed gas from tire (main or nose gear) to adjust the tire pressure to the correct value specified in Figure 1 (Ref step (3)).<br><br>SUBTASK 12-15-51-223-002<br><br><b>CAUTION:</b> USE A CALIBRATED GAGE WITH AN APPROVED SIZE DIAL TO DO A CHECK ON THE TIRE PRESSURE. INCORRECT INFLATION FROM INCORRECT PRESSURE VALUES CAN CAUSE DAMAGE TO THE TIRE.<br><br>(3) Do a check on the tire pressure with an accurate 0-300 psig (0-2069 kpa) tire pressure gauge, STD-1132.<br><br>(a) Let the tires cool for a minimum of two hours after a flight before doing the tire pressure check.<br><br>SUBTASK 12-15-51-613-043<br><br>(4) Compare the measured pressure to the pressure found in the main and nose gear tire pressure limit charts (Figure 1). |               |                                                                |                  | MECH                            | INSP |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |               |                                                                |                  |                                 |      |
| EFFECTIVITY<br>CHF ALL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | SOURCE<br>MPD | LANDING GEAR TIRE PRESSURE<br><br>D6-38278-3C1<br>12-015-51-01 |                  |                                 |      |

# CHF



## 737-300/400/500 TASK CARDS

| DATE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | TAIL NUMBER   | STATION                                                                             | AIRLINE CARD NO. | BOEING CARD NO.<br>12-015-51-01 |      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------|------------------|---------------------------------|------|
| <p><b>SUBTASK 12-15-51-613-044</b></p> <p>(5) Do these steps for tires which have tire pressures below the necessary pressure:</p> <ul style="list-style-type: none"> <li>(a) If the measured tire pressure is below the necessary pressure by no more than 5%, inflate the tire to the necessary pressure.</li> <li>(b) If the measured tire pressure is between 5% - 10% below the necessary tire pressure, do these steps: <ul style="list-style-type: none"> <li>1) Inflate the tire to the necessary pressure.</li> <li>2) Do a check of the tire pressure again after 24 hours.</li> </ul> </li> </ul> <p><b>CAUTION:</b> TIRES THAT REQUIRE FREQUENT REFILLS TO MAINTAIN THE NOMINAL SERVICE PRESSURE ARE LIKELY TO HAVE A TREAD LOSS OR CARCASS RUPTURE IF THEY ARE LEFT IN SERVICE TOO LONG. THESE TIRES SHOULD BE REMOVED FROM SERVICE AS SOON AS POSSIBLE.</p> <ul style="list-style-type: none"> <li>3) If the tire pressure is more than 5% below the necessary pressure again, replace the tire. <ul style="list-style-type: none"> <li>a) Send the wheel and tire assembly for an inspection to find the cause for the low pressure.</li> <li>b) Mark the reason for the tire removal on the tire to aid the inspectors when they examine the tire.</li> </ul> </li> <li>(c) If the measured pressure is between 10% - 20% below the necessary tire pressure, do these steps: <ul style="list-style-type: none"> <li>1) Replace the tire and wheel assembly.</li> <li>2) Send the wheel and tire assembly for an inspection to find the cause for the low tire pressure.</li> <li>3) Mark the reason for the tire removal on the tire to aid the inspectors when they examine the tire.</li> </ul> </li> <li>(d) If the measured tire pressure is more than 20% below the necessary tire pressure, do these steps: <ul style="list-style-type: none"> <li>1) Replace the tire and wheel assembly.</li> <li>2) Send the wheel and tire assembly for an inspection to find the cause for the low tire pressure.</li> <li>3) Mark the reason for the tire removal on the tire to aid the inspectors when they examine the tire.</li> <li>4) If the wheel and tire assembly has turned with the airplane weight on it after the pressure had decreased, replace the wheel and tire assembly installed on the opposite side of that axle.</li> <li>5) Mark on the tire that it was on the same axle with a wheel and tire assembly that was replaced because of low tire pressure.</li> <li>6) Send the tire for inspection for damage.</li> </ul> </li> </ul> |               |                                                                                     |                  | MECH                            | INSP |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |               |                                                                                     |                  |                                 |      |
| EFFECTIVITY<br>CHF ALL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | SOURCE<br>MPD | <b>LANDING GEAR TIRE PRESSURE</b><br><br><b>D6-38278-3C1</b><br><b>12-015-51-01</b> |                  |                                 |      |


| DATE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | TAIL NUMBER          | STATION                                                                             | AIRLINE CARD NO. | BOEING CARD NO.<br><b>12-015-51-01</b> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------------|------------------|----------------------------------------|
| <b>C. Inflate the Tire (Initial Fill)</b><br>SUBTASK 12-15-51-493-005<br><p><b><u>WARNING:</u></b> YOU MUST INITIALLY INFLATE THE TIRE WITH NITROGEN. IF THE TIRE WAS INITIALLY INFLATED WITH AIR, THE GASES (IN A TIRE THAT HAS BECOME TOO HOT) COULD HAVE AN EXPLOSIVE MIXTURE WITH THE OXYGEN (IN THE AIR THAT WAS PUT IN THE TIRE). A TIRE EXPLOSION CAN CAUSE DAMAGE TO THE AIRPLANE AND/OR INJURY TO PERSONS.</p> <p>(1) Install the tire inflator, SPL-1527 (refer to the instructions on the tool).</p> SUBTASK 12-15-51-843-016<br><p><b><u>WARNING:</u></b> USE A REGULATED PRESSURE SOURCE TO SERVICE THE TIRES. AN UNREGULATED PRESSURE SOURCE CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO THE EQUIPMENT.</p> <p>(2) Inflate the tire with nitrogen to the pressure shown in Figure 1.</p> SUBTASK 12-15-51-093-007<br><p>(3) Remove the tire inflation tool.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                      |                                                                                     |                  | MECH                                   |
| <b>D. Fill the Tire Again</b><br>SUBTASK 12-15-51-493-008<br><p>(1) Install the tire inflation tool (refer to the instructions on the tool).</p> <p><b><u>NOTE:</u></b> If you find that the oxygen content will be more than 5% by volume (in the steps that follow where you fill the tire with air), deflate the tire to one atmosphere and do the initial fill procedure.</p> SUBTASK 12-15-51-843-015<br><p><b><u>WARNING:</u></b> USE A REGULATED PRESSURE SOURCE TO SERVICE THE TIRES. AN UNREGULATED PRESSURE SOURCE CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO THE EQUIPMENT.</p> <p>(2) Fill (top-off) the tire with nitrogen.</p> <p><b><u>NOTE:</u></b> Air can be used when nitrogen is not available if the oxygen content in the tire will not be more than 5% by volume. To make sure the oxygen content will not be more than 5%, use one of the procedures that follow.</p> <p>(a) Procedure 1:<br/>           Make a record of each time you fill the tire with air.<br/> <b><u>NOTE:</u></b> If the tire has lowest loaded tire pressure of the lowest weight airplane, the sum of all the air pressures that were added to the tire must not be more than 16 psi.<br/>           EXAMPLE: You can add one 6 psi and one time 10 psi of air before the tire must be deflated and inflated with nitrogen.</p> <p>(b) Procedure 2:</p> |                      |                                                                                     |                  | INSP                                   |
| EFFECTIVITY<br><b>CHF ALL</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | SOURCE<br><b>MPD</b> | <b>LANDING GEAR TIRE PRESSURE</b><br><br><b>D6-38278-3C1</b><br><b>12-015-51-01</b> |                  |                                        |

# CHF




## 737-300/400/500 TASK CARDS


| DATE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | TAIL NUMBER | STATION              | AIRLINE CARD NO.                                                                    | BOEING CARD NO.<br><b>12-015-51-01</b> |      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----------------------|-------------------------------------------------------------------------------------|----------------------------------------|------|
| <p>Make a record of each time you fill the tire with air.</p> <p><u>NOTE:</u> If you know the loaded inflation pressure of the tire, the sum of all the air pressures added to the tire must not be more than the maximum given in Figure 2.</p> <p>EXAMPLE: Assume the tire is initially inflated to 165 psi with nitrogen. The sum of all the air pressures that can be added to the tire is 30 psi. The tire can be filled with one 6 psi, one 14 psi, and two 5 psi of air (before the tire must be deflated and inflated with nitrogen).</p> <p>SUBTASK 12-15-51-093-010</p> <p>(3) Remove the tire inflation tool.</p> <p style="text-align: center;">————— <b>END OF TASK</b> —————</p> |             |                      |                                                                                     | MECH                                   | INSP |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |             |                      |                                                                                     |                                        |      |
| EFFECTIVITY<br><b>CHF ALL</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |             | SOURCE<br><b>MPD</b> | <b>LANDING GEAR TIRE PRESSURE</b><br><br><b>D6-38278-3C1</b><br><b>12-015-51-01</b> |                                        |      |
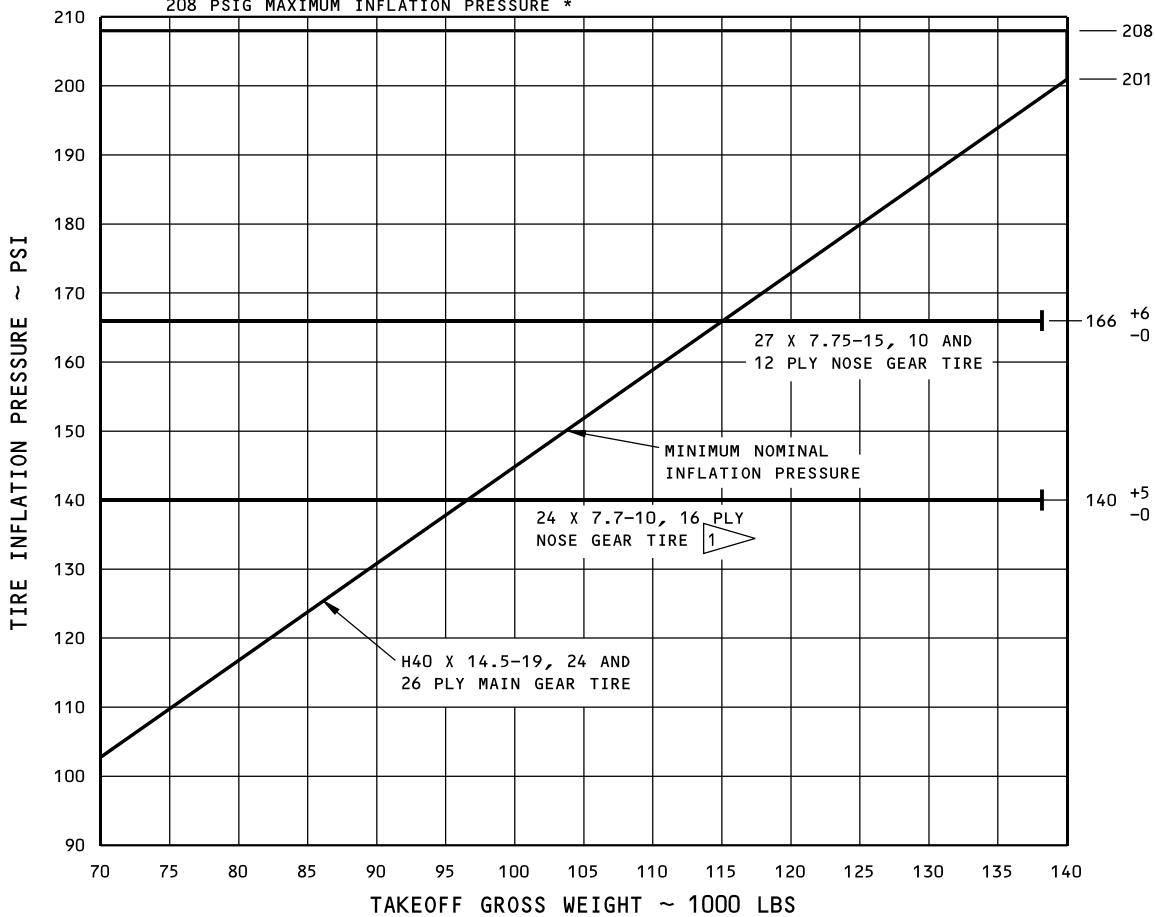
| DATE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | TAIL NUMBER | STATION | AIRLINE CARD NO. | BOEING CARD NO.<br><b>12-015-51-01</b> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|---------|------------------|----------------------------------------|
| <div><div><div>TIRE INFLATION PRESSURE ~ PSI</div><div><div>208 PSIG MAXIMUM INFLATION PRESSURE *</div><div>TAKEOFF GROSS WEIGHT ~ 1000 LBS</div></div><div><div>VARIABLE TIRE PRESSURE<br/>(TIRE PRESSURE CAN CHANGE IN THE ABOVE LIMITS)</div><div><p><b>NOTE:</b></p><ol style="list-style-type: none"><li>FOR THE DESIRED MAXIMUM TAXI WEIGHT, DETERMINE THE MINIMUM SERVICE PRESSURE (SLOPED LINE) FROM THE CHART.</li><li>DETERMINE THE MAXIMUM SERVICE PRESSURE (HORIZONTAL LINE) FROM THE CHART.</li><li>SELECT A NOMINAL SERVICE PRESSURE BETWEEN THE MINIMUM AND MAXIMUM.</li><li>INFLATE ALL TIRES ON THE SAME GEAR TO THE SELECTED NOMINAL PRESSURE ±5 PSIG.</li><li>INFLATION PRESSURES ARE FOR COLD LOADED TIRES (WITH AIRPLANE RESTING ON TIRES). FOR UNLOADED TIRES, REDUCE PRESSURE BY 4%.</li><li>SEE AIRPLANE WEIGHT - CG CURVE FOR STRUCTURAL LIMITS.</li></ol><p>* MAXIMUM PRESSURE, INCLUDING TOLERANCE.</p></div></div></div><div><div>1 THIS IS A 737-200 WHEEL AND TIRE ASSEMBLY. TEMPORARY USE OF 737-200 WHEEL AND TIRE ASSEMBLIES ON 737-300 OR 737-400 AIRPLANES IS PERMITTED BY SERVICE BULLETIN 737-32-1160. YOU MUST REFER TO THIS SERVICE BULLETIN BEFORE YOU INSTALL 737-200 WHEEL AND TIRE ASSEMBLIES ON 737-300 OR 737-400 AIRPLANES. YOU CAN NOT USE A 737-200 WHEEL AND TIRE ASSEMBLY ON A 737-500 AIRPLANE.</div><div><div><b>Landing Gear Tire Inflation<br/>Figure 1 (Sheet 1 of 3)</b></div><div><div>EFFECTIVITY<br/><b>CHF 002-999</b></div><div>SOURCE<br/><b>MPD</b></div><div><b>LANDING GEAR TIRE PRESSURE</b><br/><br/><b>D6-38278-3C1<br/>12-015-51-01</b></div></div><div><div>Page 6 of 9<br/>Mar 25/2017</div></div></div></div></div> <div data-bbox="555 2065 1090 2080" data-label="Page-Footer"><p>BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details</p></div> |             |         |                  |                                        |

CHF

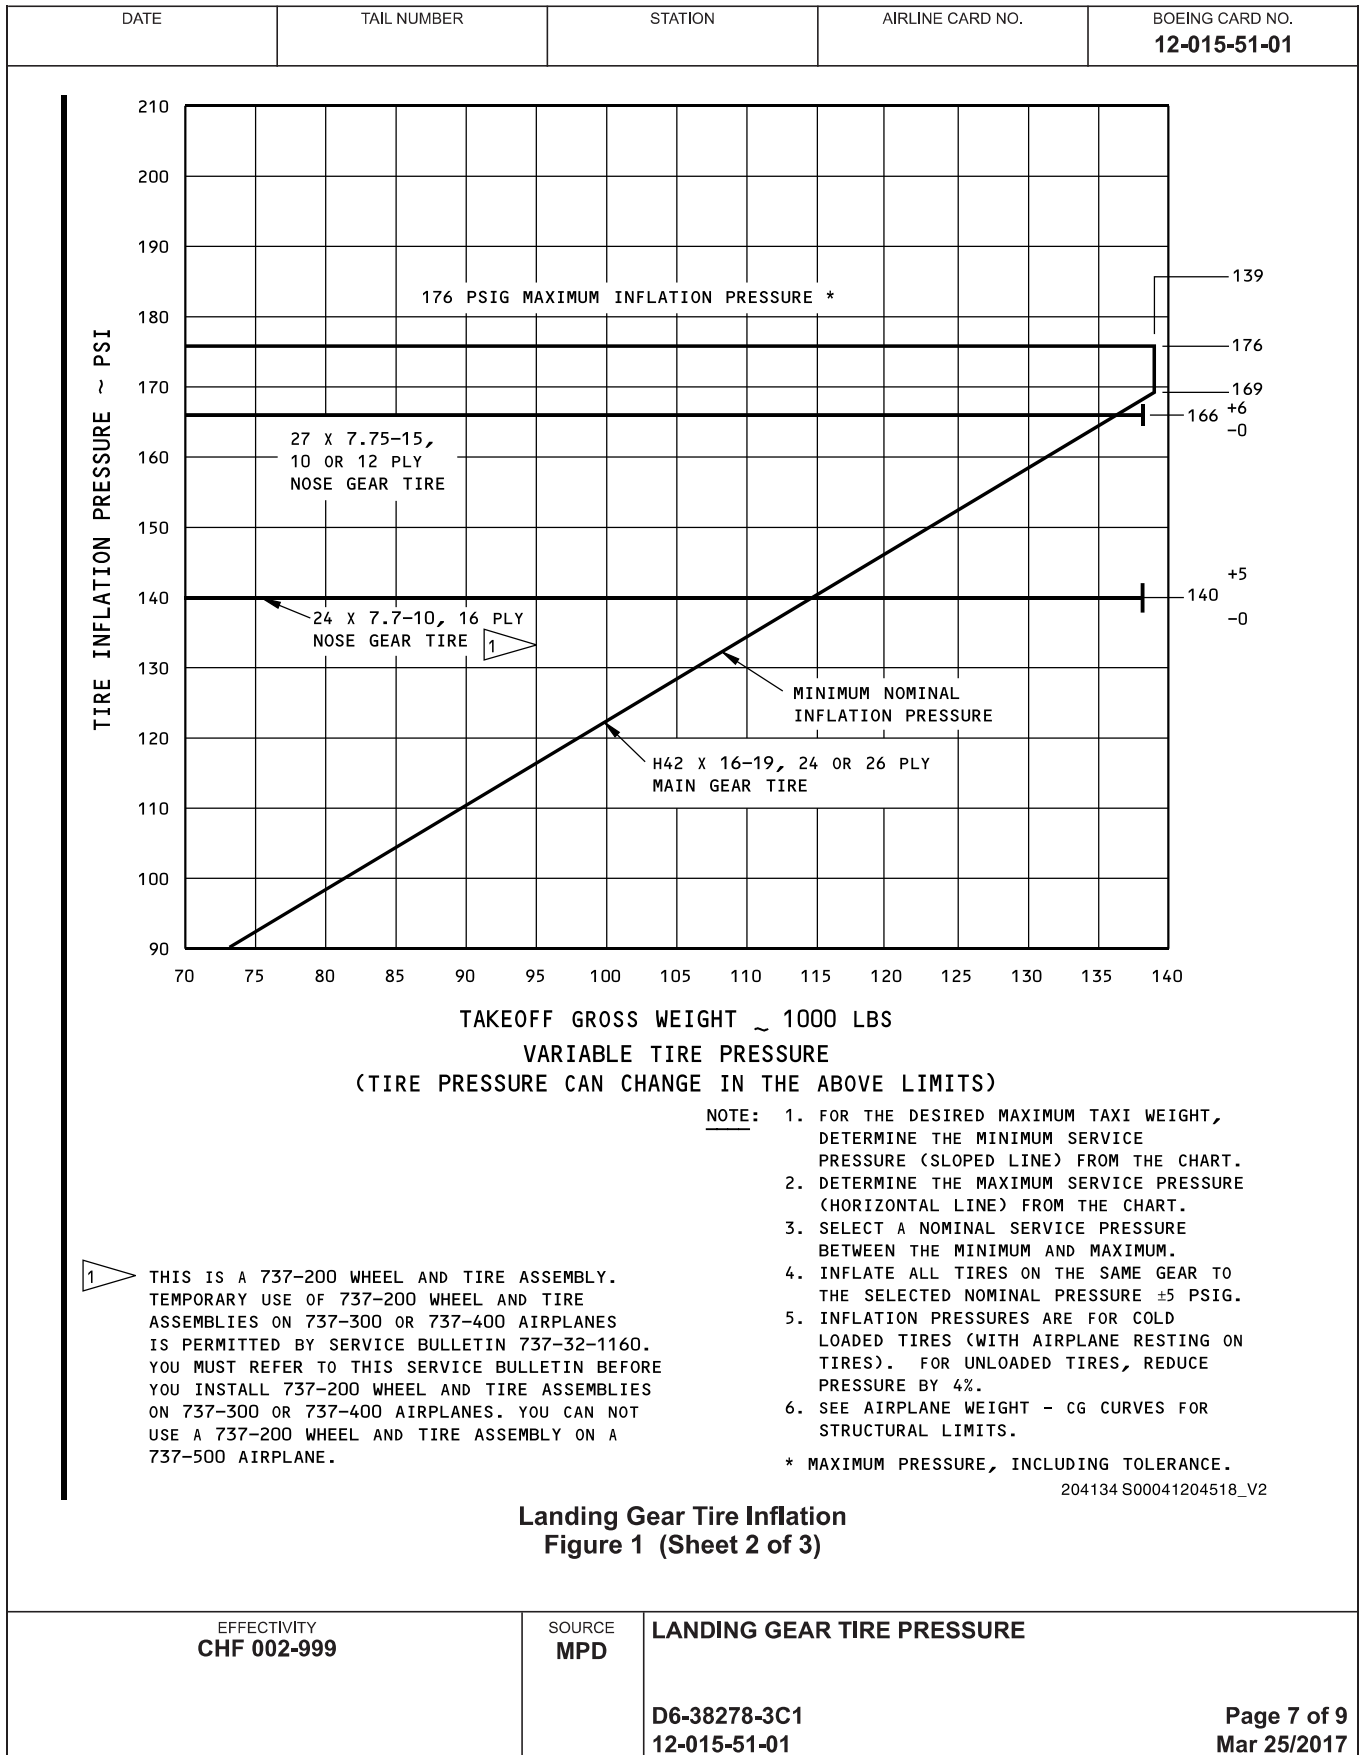737-300/400/500  
TASK CARDS

**737-300/400/500  
TASK CARDS**

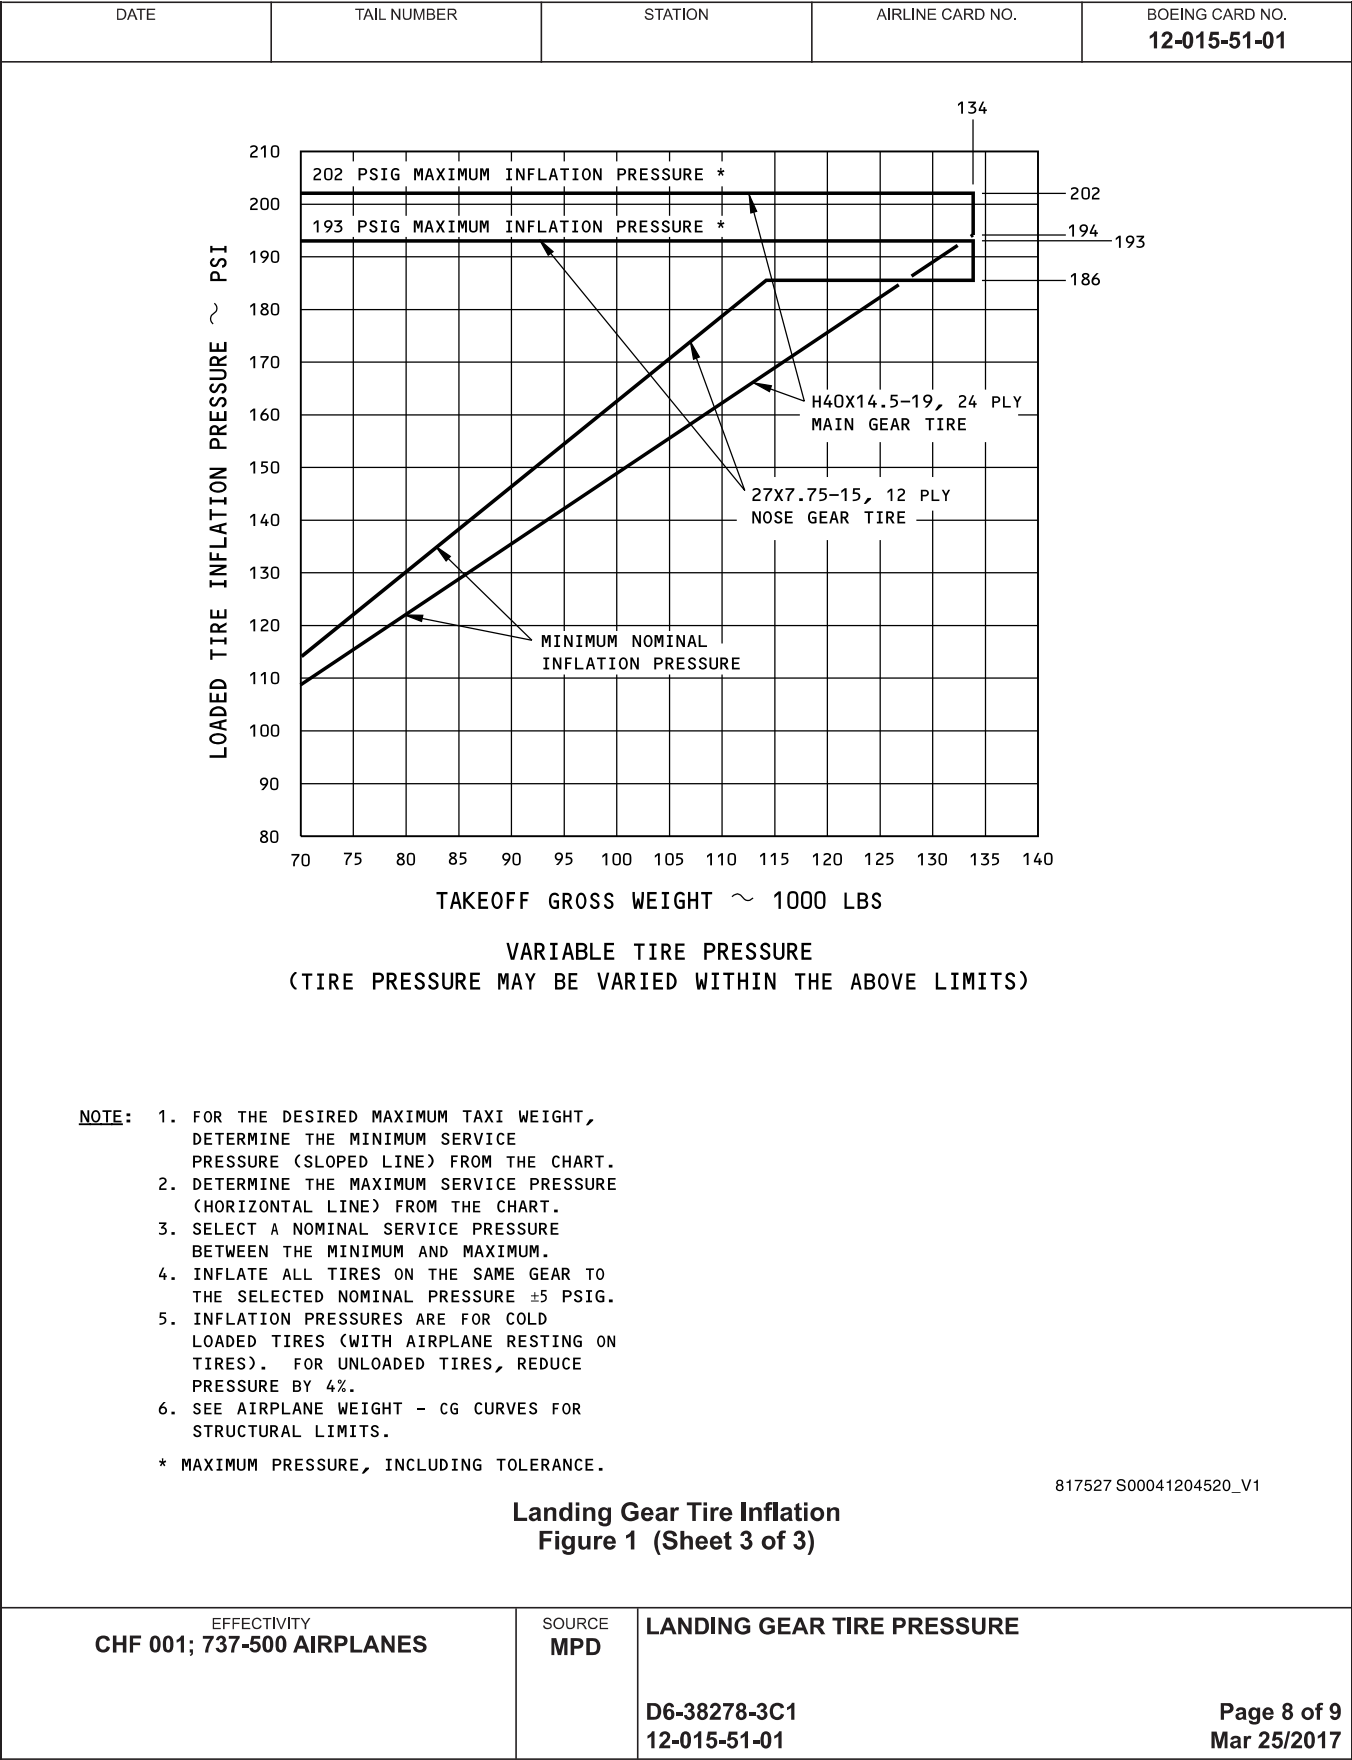




# CHF



## 737-300/400/500 TASK CARDS

| DATE | TAIL NUMBER | STATION | AIRLINE CARD NO. | BOEING CARD NO.<br><b>12-015-51-01</b> |
|------|-------------|---------|------------------|----------------------------------------|
|------|-------------|---------|------------------|----------------------------------------|

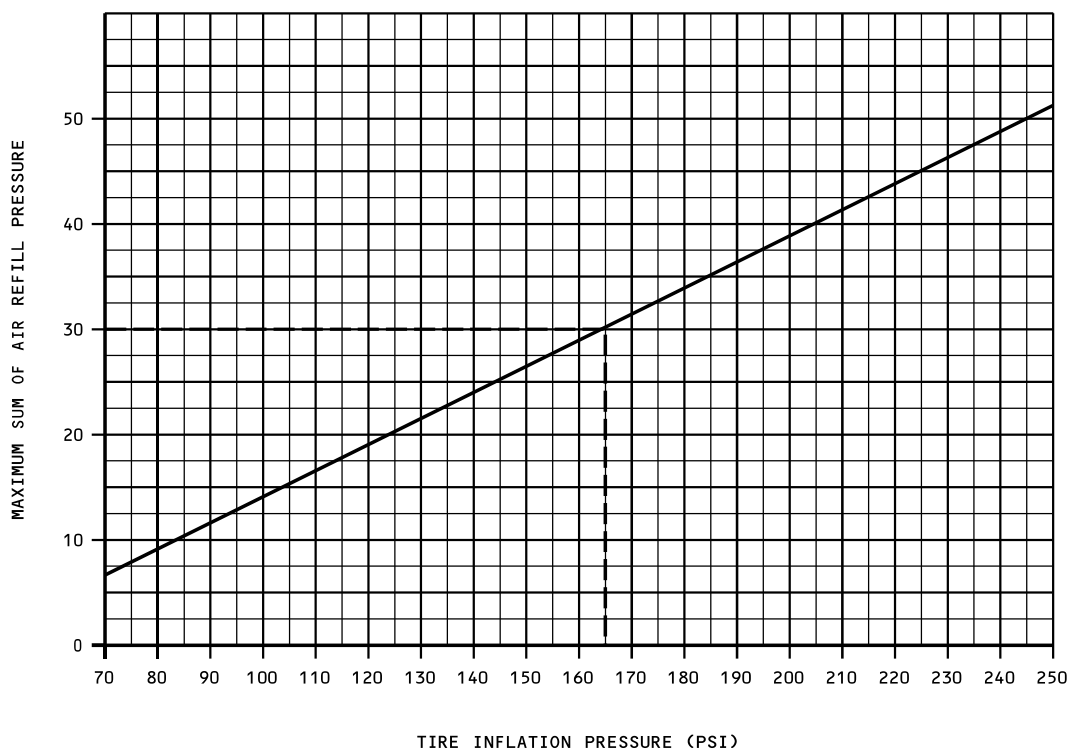

**Air Refill Pressure  
Figure 2**

T94728 S00041204545\_V1

|                               |                      |                                                                                     |                                          |
|-------------------------------|----------------------|-------------------------------------------------------------------------------------|------------------------------------------|
| EFFECTIVITY<br><b>CHF ALL</b> | SOURCE<br><b>MPD</b> | <b>LANDING GEAR TIRE PRESSURE</b><br><br><b>D6-38278-3C1</b><br><b>12-015-51-01</b> | <b>Page 9 of 9</b><br><b>Mar 25/2017</b> |
|-------------------------------|----------------------|-------------------------------------------------------------------------------------|------------------------------------------|