
CAMPAIGNS A AND B · SHEETS

Which sheet is used by which campaign. A = 4 sheets, B = 3 sheets; the shear specimens of each campaign are on one sheet only.

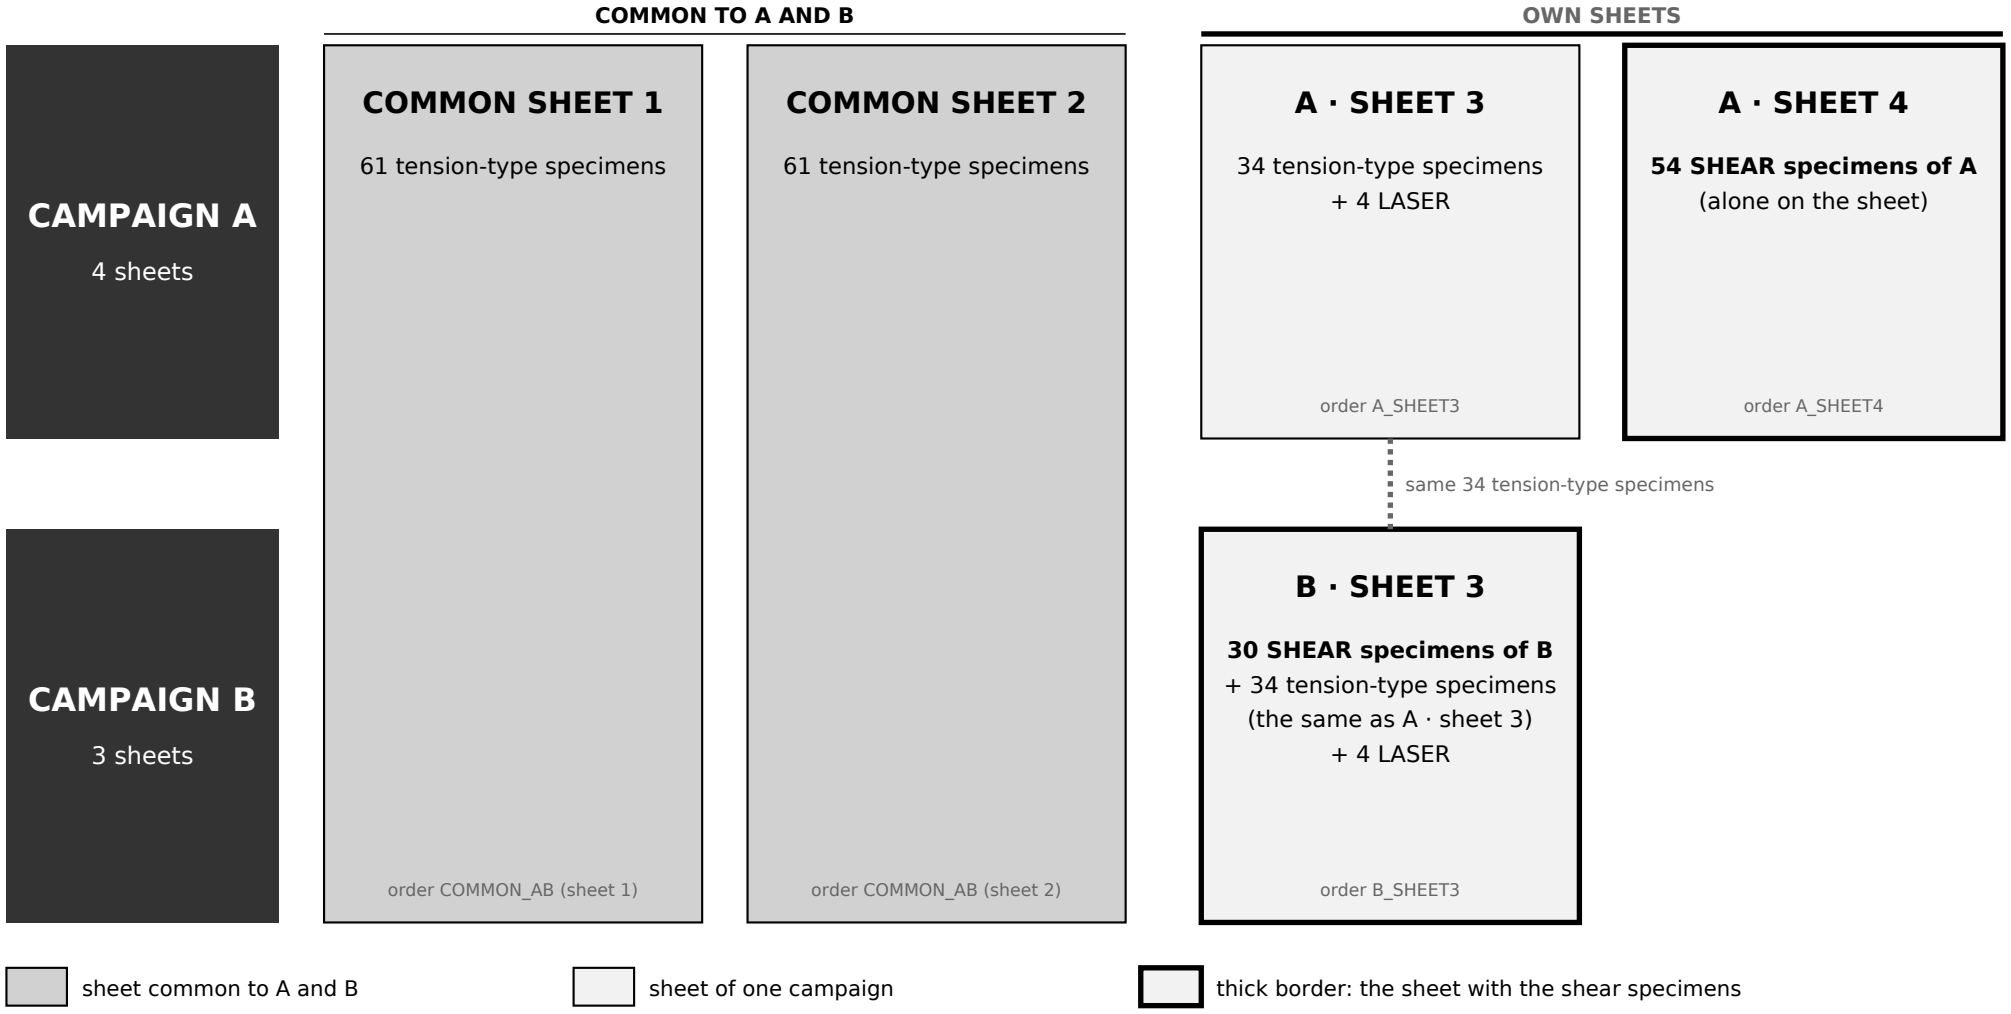

Codes: the same specimen has the same notch code in A and B. Index of the code = strain rate: slow 1-3, medium 4-6, high 7-9 (shear: 1-2, 4-5, 7-8).


To cut campaign A: common sheets 1, 2 + A · sheet 3 + A · sheet 4. To cut campaign B: common sheets 1, 2 + B · sheet 3.

Orders (cutting-sheets/orders/): COMMON_AB, A_SHEET3, A_SHEET4, B_SHEET3, each followed by _600x500mm_WATERJET.yaml.

COMMON SHEETS 1 AND 2 · campaigns A and B

122 tension-type specimens (61 + 61) · order COMMON_AB_600x500mm_WATERJET


COMMON_AB_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

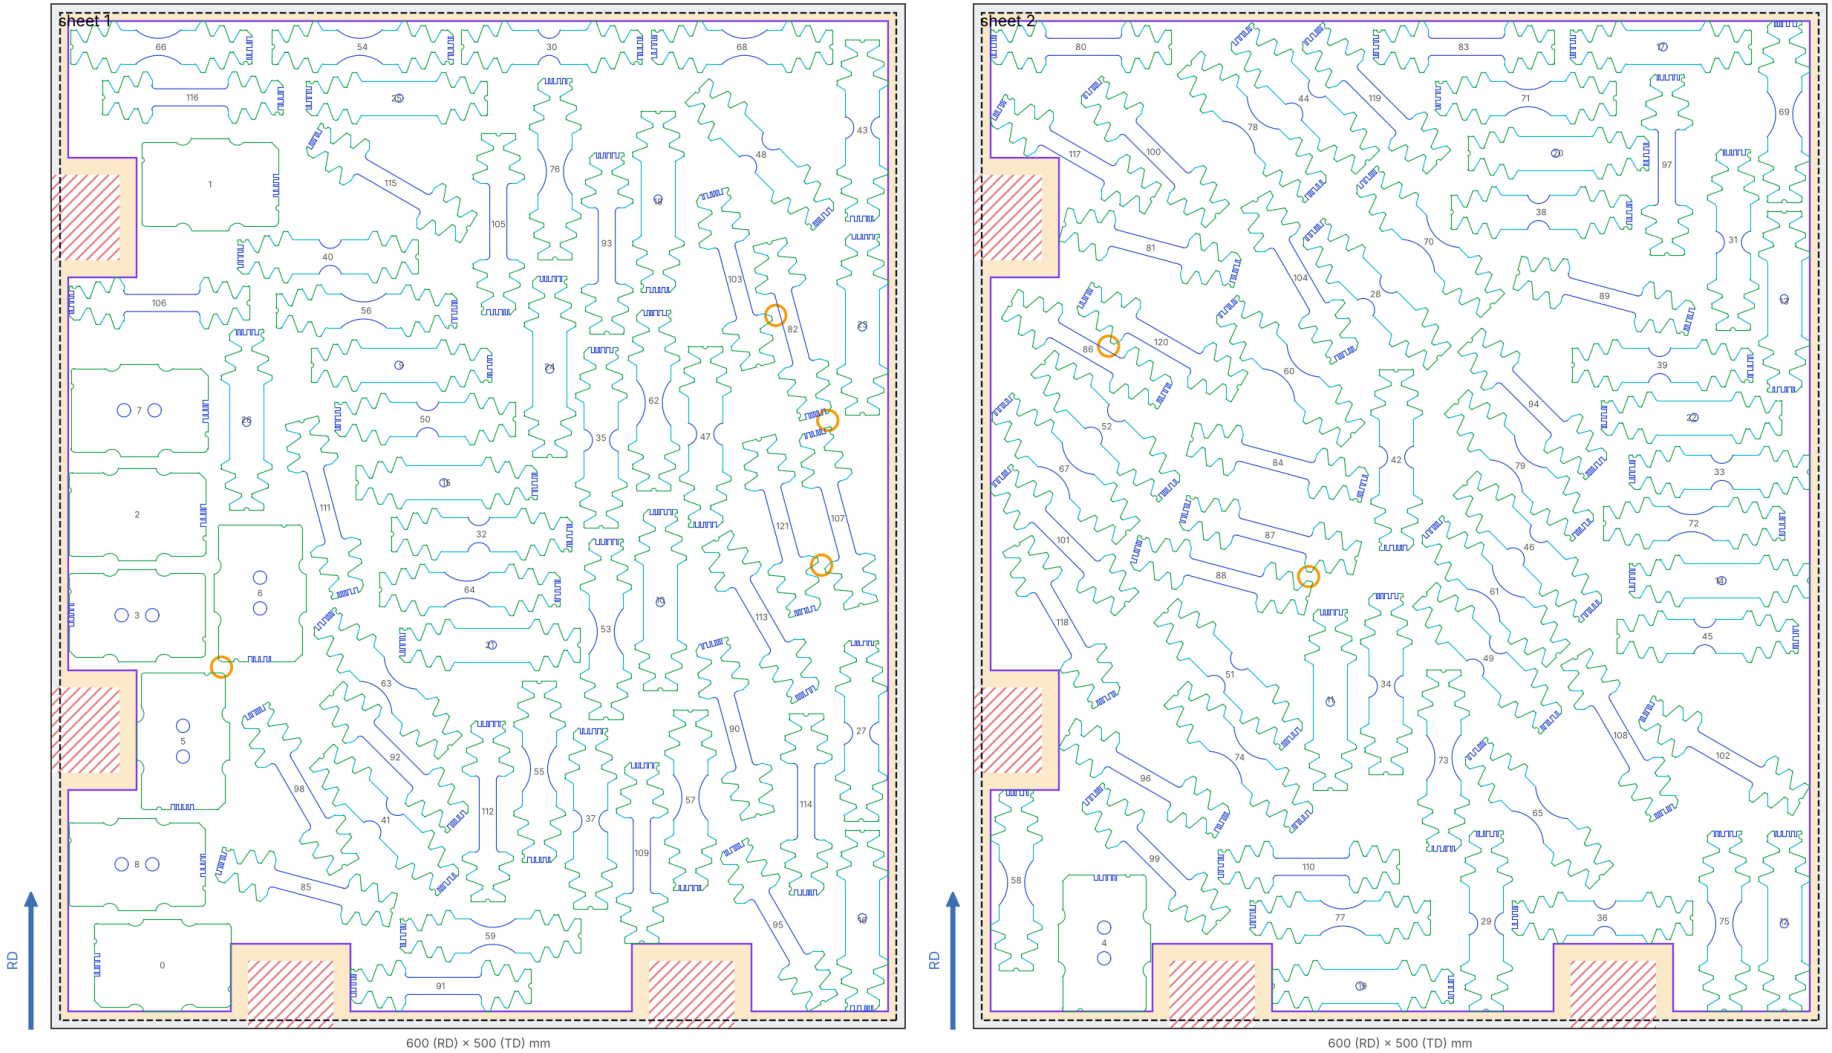

B · SHEET 3 · campaign B only

30 shear specimens of B + 34 tension-type specimens + 4 LASER (68 pieces) · order B_SHEET3_600x500mm_WATERJET


B_SHEET3_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

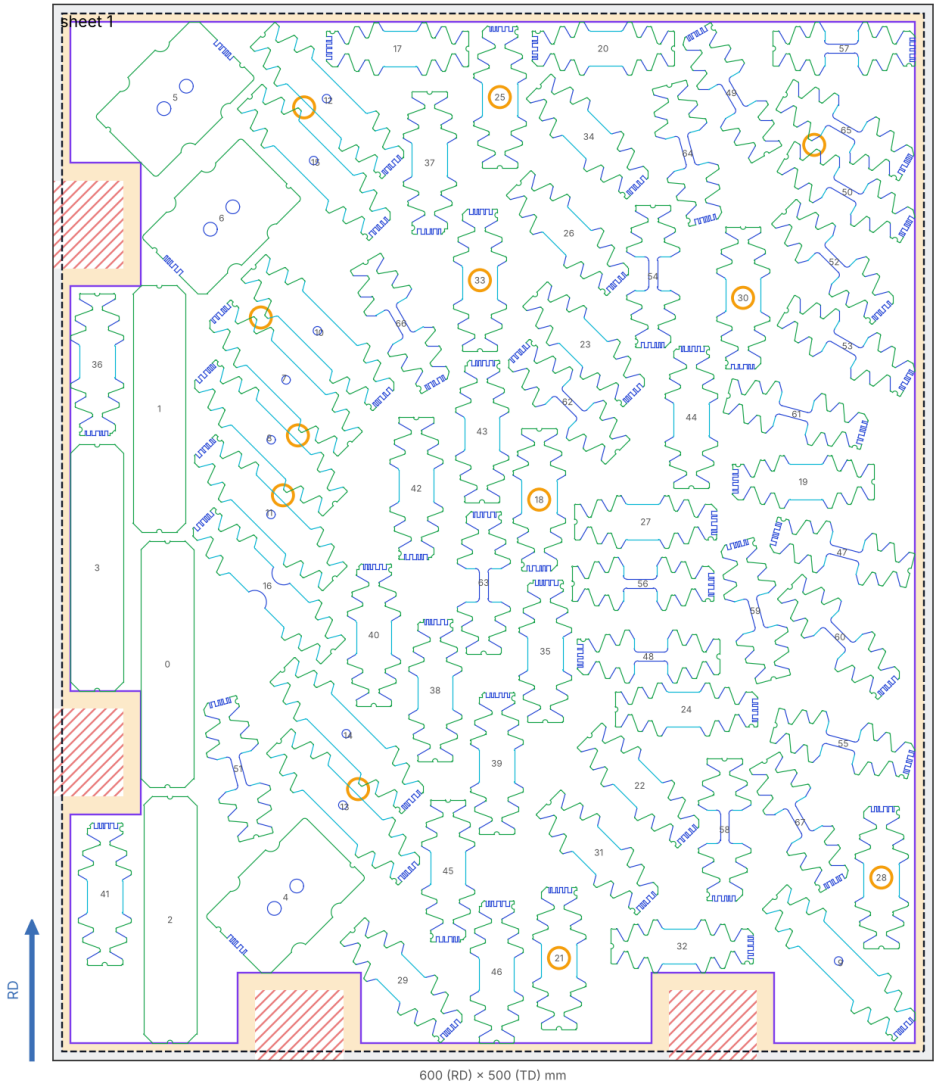

A · SHEET 3 · campaign A only

34 tension-type specimens (the same as on B · sheet 3) + 4 LASER · order A_SHEET3_600x500mm_WATERJET

A_SHEET3_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

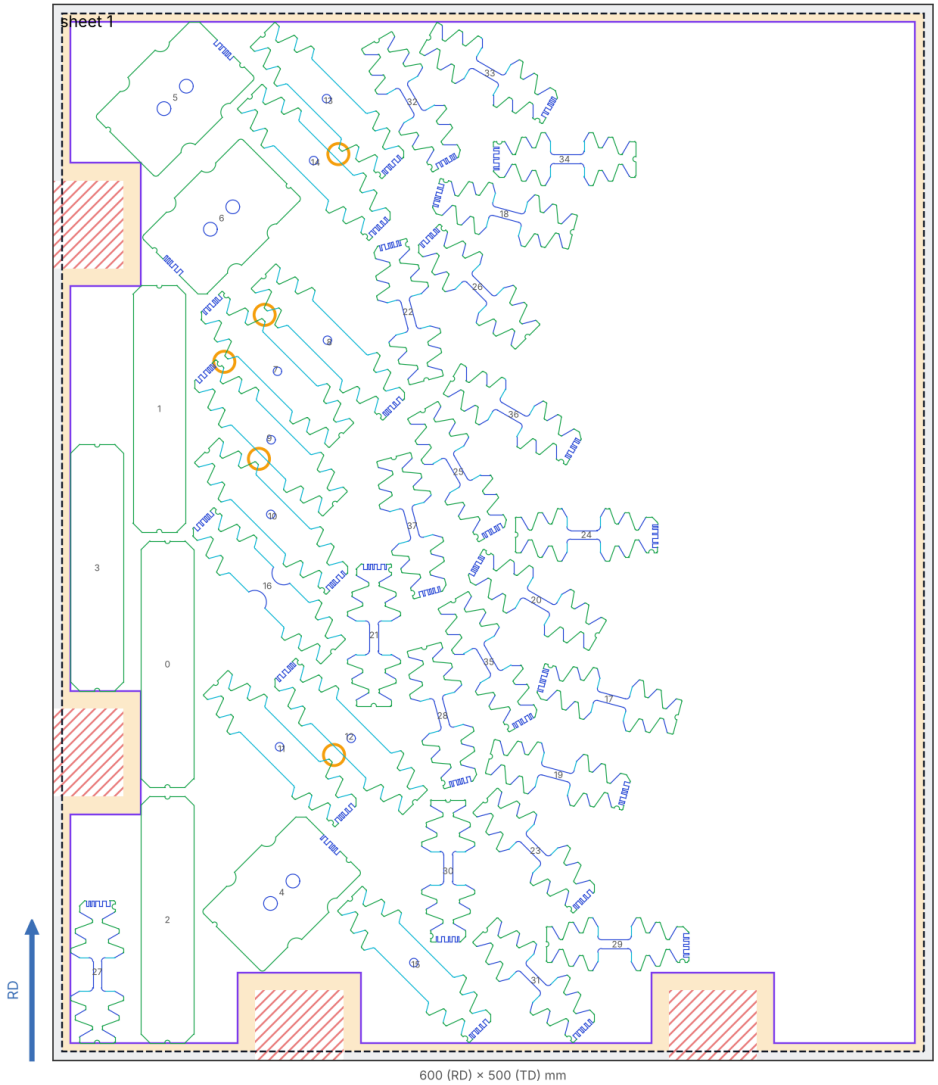


clamping (4 clamps 50 along the edge x 40 deep mm)
placement margin 5 mm (+ clamp margin 5 mm)
edge margin 5 mm
usable area 590 (RD) x 490 (TD) mm
effective area 580 (RD) x 480 (TD) mm (specimens)

A · SHEET 4 · campaign A only

54 shear specimens of A, alone · order A_SHEET4_600x500mm_WATERJET

A_SHEET4_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

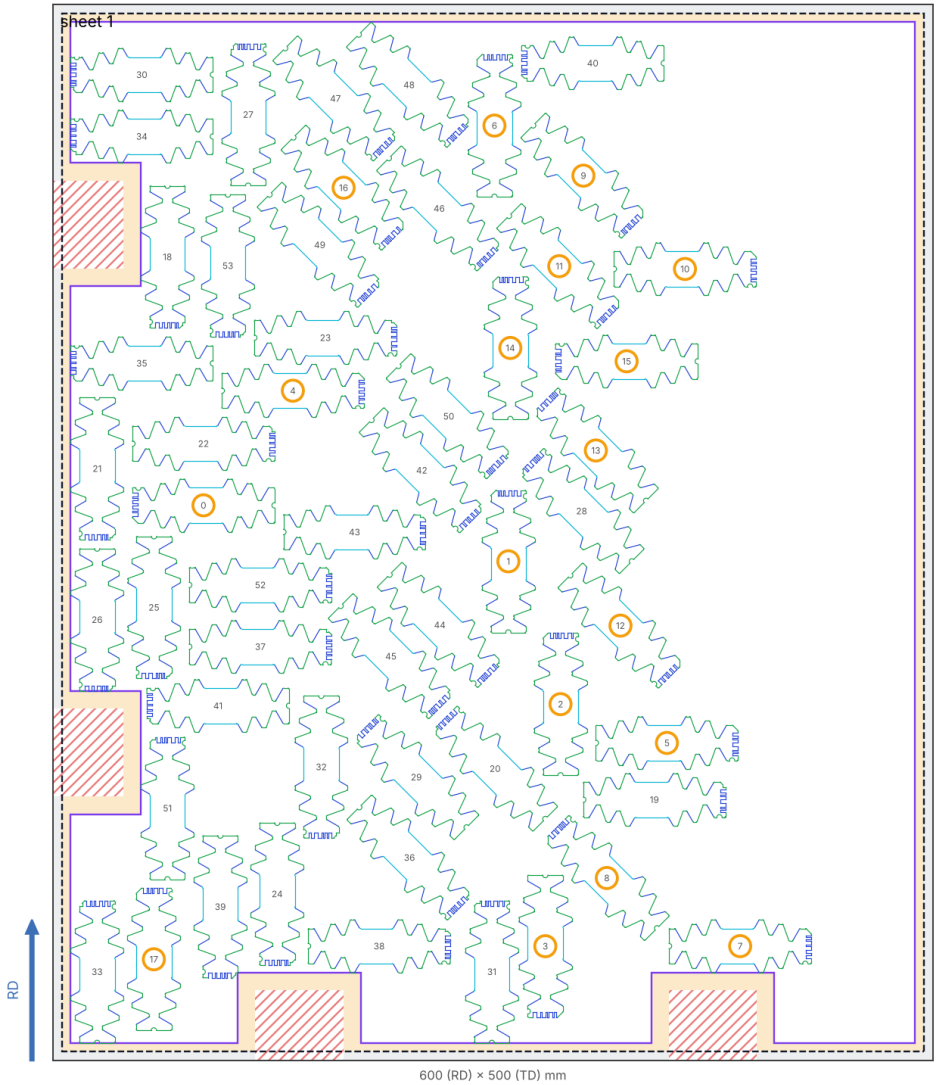

clamping (4 clamps 50 along the edge x 40 deep mm)
placement margin 5 mm (+ clamp margin 5 mm)
edge margin 5 mm
usable area 590 (RD) x 490 (TD) mm
effective area 580 (RD) x 480 (TD) mm (specimens)