TEMPLATES

A module = the specimens of one campaign at one strain rate; a template = one sheet of a module, always cut the same way (one DXF sheet).
Index of the notch code = strain rate: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8). Medium: UT40; high: UT19. MH18 = medium 18 + high 18 of campaign C on one sheet.

TEMPLATE	MODULE CONTENT	SIZE	PIECES	USED FOR (material, sheet)
SLOW78-1	campaign A, slow rate (sheet 1 of 2)	600 × 500	**51**	DP980 2020_06_03A-3
SLOW78-2	campaign A, slow rate (sheet 2 of 2)	600 × 500	**31**	DP980 2020_06_03A-5
MEDIUM66	campaign A, medium rate	600 × 500	**66**	DP980 2020_06_03A-1, S235JR 2023_02_28_D-1 AW5754-H22 2023_02_28_A-1, S355MC 2023_02_28_C-1
HIGH66	campaign A, high rate	600 × 500	**66**	DP980 2020_06_03A-6, S235JR 2023_02_28_D-2 AW5754-H22 2023_02_28_A-2, S355MC 2023_02_28_C-2
SLOW70-1	campaigns B and C, slow rate (sheet 1 of 2)	600 × 500	**51**	not used yet
SLOW70-2	campaigns B and C, slow rate (sheet 2 of 2)	600 × 500	**23**	not used yet
MEDIUM54	campaign B, medium rate (no SHLD, SHHD)	600 × 500	**54**	not used yet
HIGH54	campaign B, high rate (no SHLD, SHHD)	600 × 500	**54**	not used yet
MH18	campaign C, medium + high on one sheet	600 × 500	**36**	DC01 2025_11_25_B-1
A_LARGE	campaign A on one large sheet	900 × 1140	**214**	RA980 2022_05_04_D-1, RA1200 2022_05_04_E-1 CR1200Y1500T 2022_05_04_G-1

10 templates in all (8 modules); 6 of them used by the materials today.

SLOW78


campaign A, slow rate · 2 sheets of 600 (RD) × 500 (TD) mm: SLOW78-1 (51 pieces) + SLOW78-2 (31 pieces) · 82 pieces

used for: SLOW78-1: DP980 2020_06_03A-3; SLOW78-2: DP980 2020_06_03A-5 · order MOD_SLOW78_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
slow	**UT40**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	MNAK_RECT_FULL	0	× 3	**3**
	MNAK_RECT_HOLE	0 45 90	× 3	**9**
	SHLD	0 45 90	× 2	**6**
	SHMD	0 45 90	× 2	**6**
	SHHD	0 45 90	× 2	**6**
no code	**LASER**	0	× 4	**4**
Total				**82**

Notch code index: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8); LASER: no code.
Whole module (both sheets); plan: sheet 1 on the left, sheet 2 on the right.

MOD_SLOW78_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

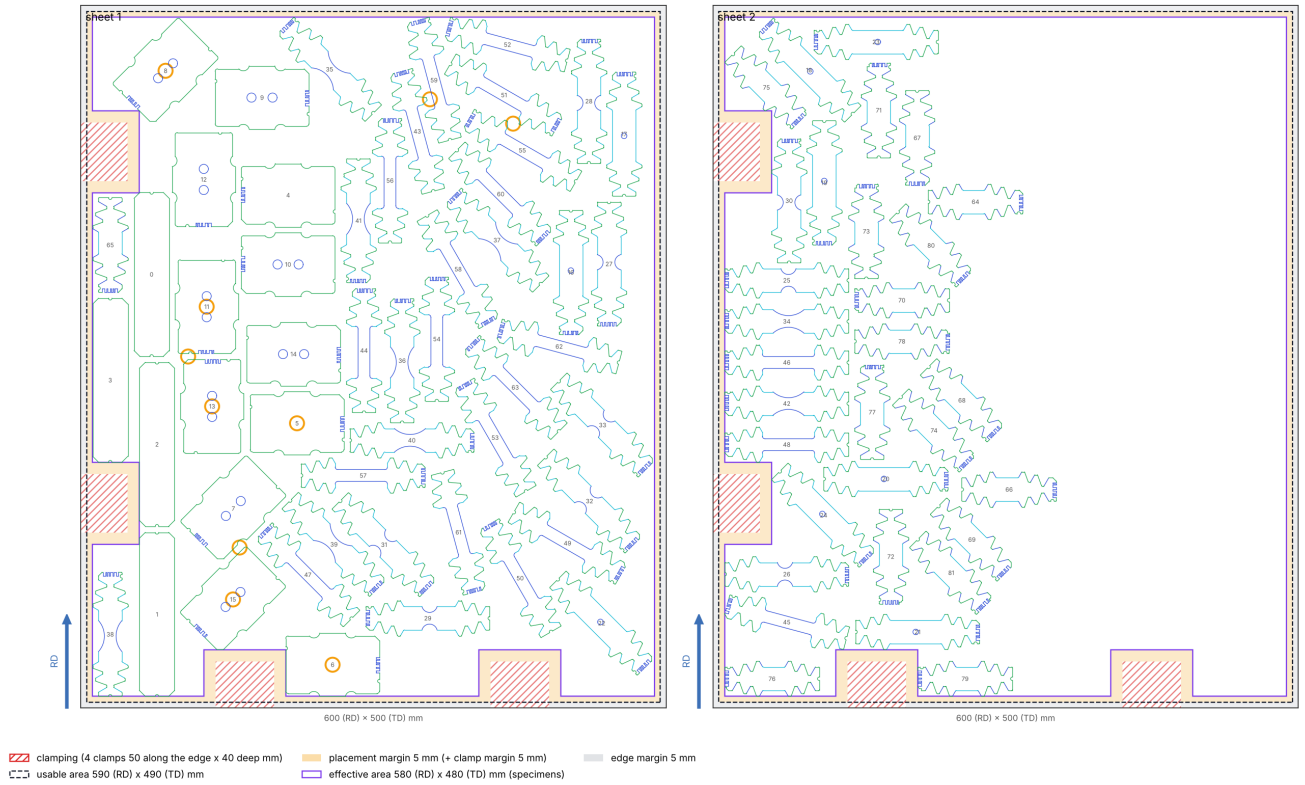

MEDIUM66


campaign A, medium rate · 600 (RD) × 500 (TD) mm · 66 pieces

used for: DP980 2020_06_03A-1, S235JR 2023_02_28_D-1, AW5754-H22 2023_02_28_A-1, S355MC 2023_02_28_C-1 · order MOD_MEDIUM66_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
medium	**UT40**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	SHLD	0 45 90	× 2	**6**
	SHMD	0 45 90	× 2	**6**
	SHHD	0 45 90	× 2	**6**
Total				**66**

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

MOD_MEDIUM66_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

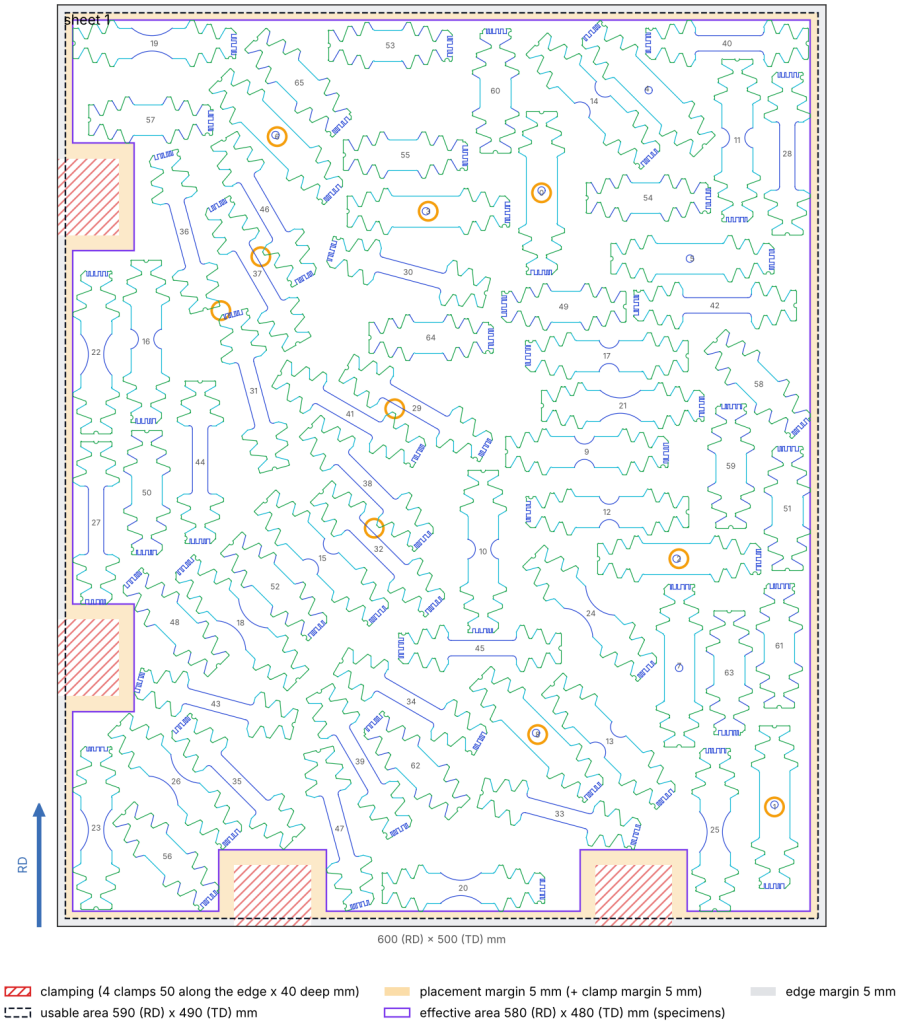

HIGH66


campaign A, high rate · 600 (RD) × 500 (TD) mm · 66 pieces

used for: DP980 2020_06_03A-6, S235JR 2023_02_28_D-2, AW5754-H22 2023_02_28_A-2, S355MC 2023_02_28_C-2 · order MOD_HIGH66_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
high	**UT19**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	SHLD	0 45 90	× 2	**6**
	SHMD	0 45 90	× 2	**6**
	SHHD	0 45 90	× 2	**6**
Total				**66**

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

MOD_HIGH66_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

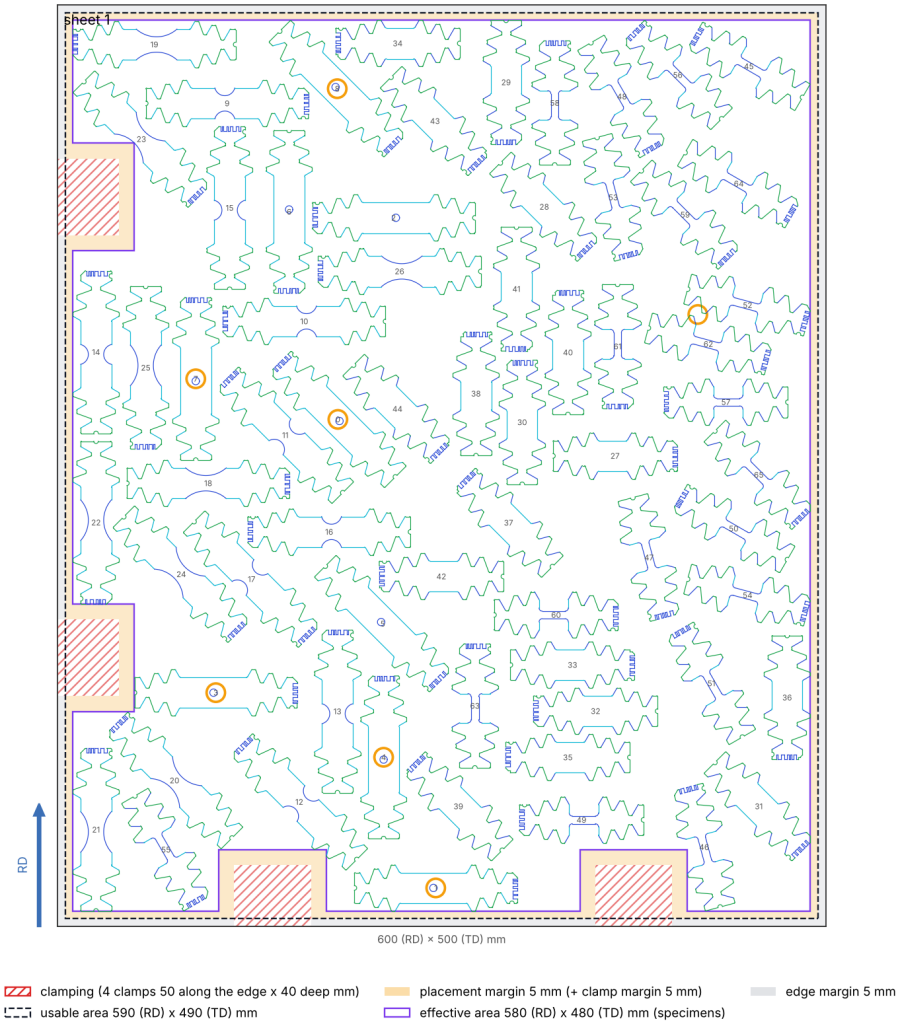

SLOW70


campaigns B and C, slow rate · 2 sheets of 600 (RD) × 500 (TD) mm: SLOW70-1 (51 pieces) + SLOW70-2 (23 pieces) · 74 pieces

used for: SLOW70-1: not used yet; SLOW70-2: not used yet · order MOD_SLOW70_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
slow	**UT40**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	MNAK_RECT_FULL	0	× 3	**3**
	MNAK_RECT_HOLE	0 45 90	× 3	**9**
	SHLD	0	× 2	**2**
	SHMD	0 45 90	× 2	**6**
	SHHD	0	× 2	**2**
no code	**LASER**	0	× 4	**4**
Total				**74**

Notch code index: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8); LASER: no code.
Whole module (both sheets); plan: sheet 1 on the left, sheet 2 on the right.

MOD_SLOW70_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

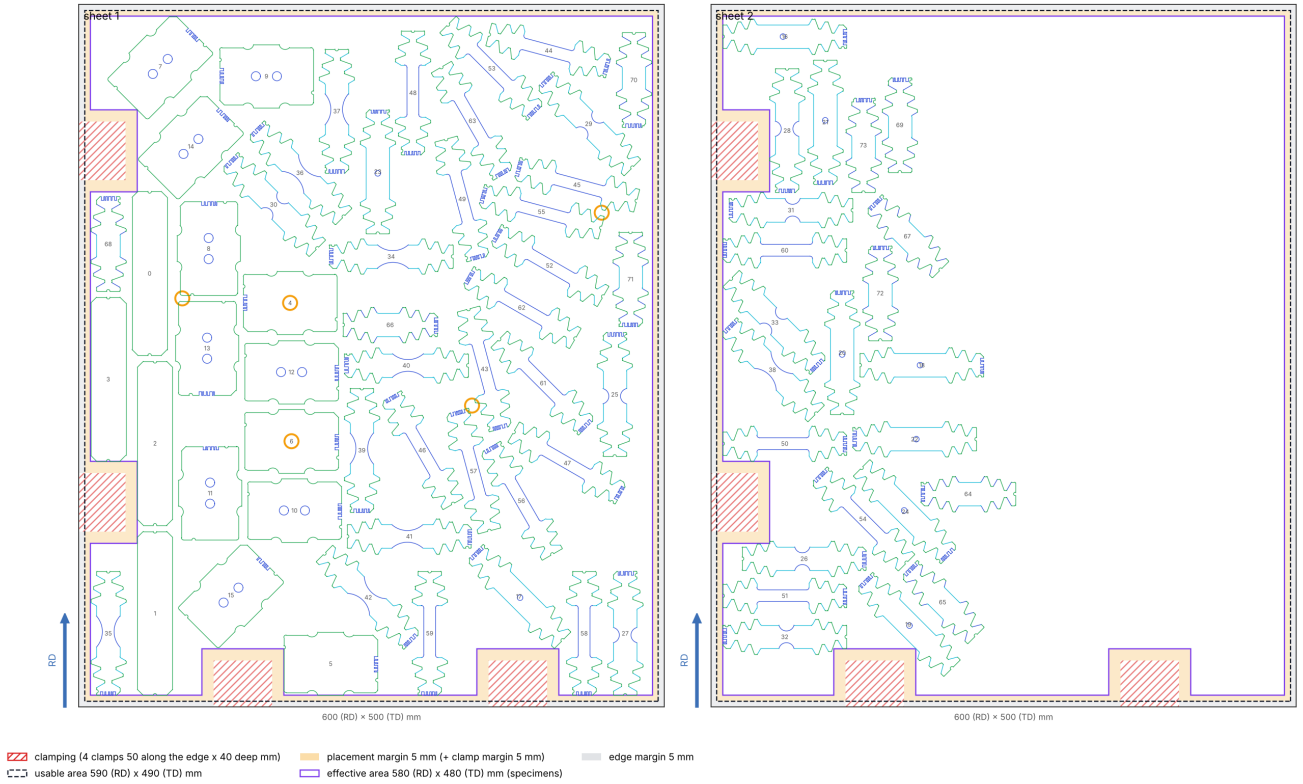

MEDIUM54


campaign B, medium rate (no SHLD, SHHD) · 600 (RD) × 500 (TD) mm · 54 pieces

used for: not used yet · order MOD_MEDIUM54_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
medium	**UT40**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	SHMD	0 45 90	× 2	**6**
Total				**54**

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

MOD_MEDIUM54_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

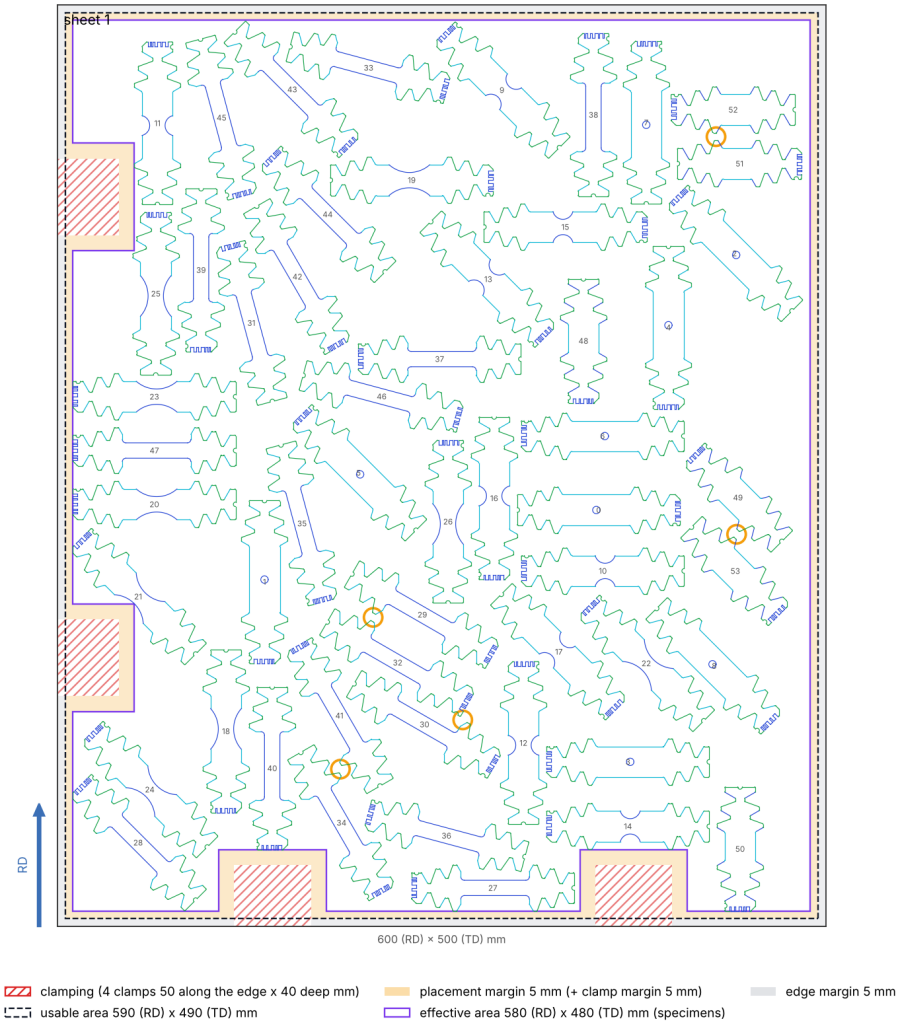

HIGH54


campaign B, high rate (no SHLD, SHHD) · 600 (RD) × 500 (TD) mm · 54 pieces

used for: not used yet · order MOD_HIGH54_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
high	**UT19**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	SHMD	0 45 90	× 2	**6**
Total				**54**

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

MOD_HIGH54_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

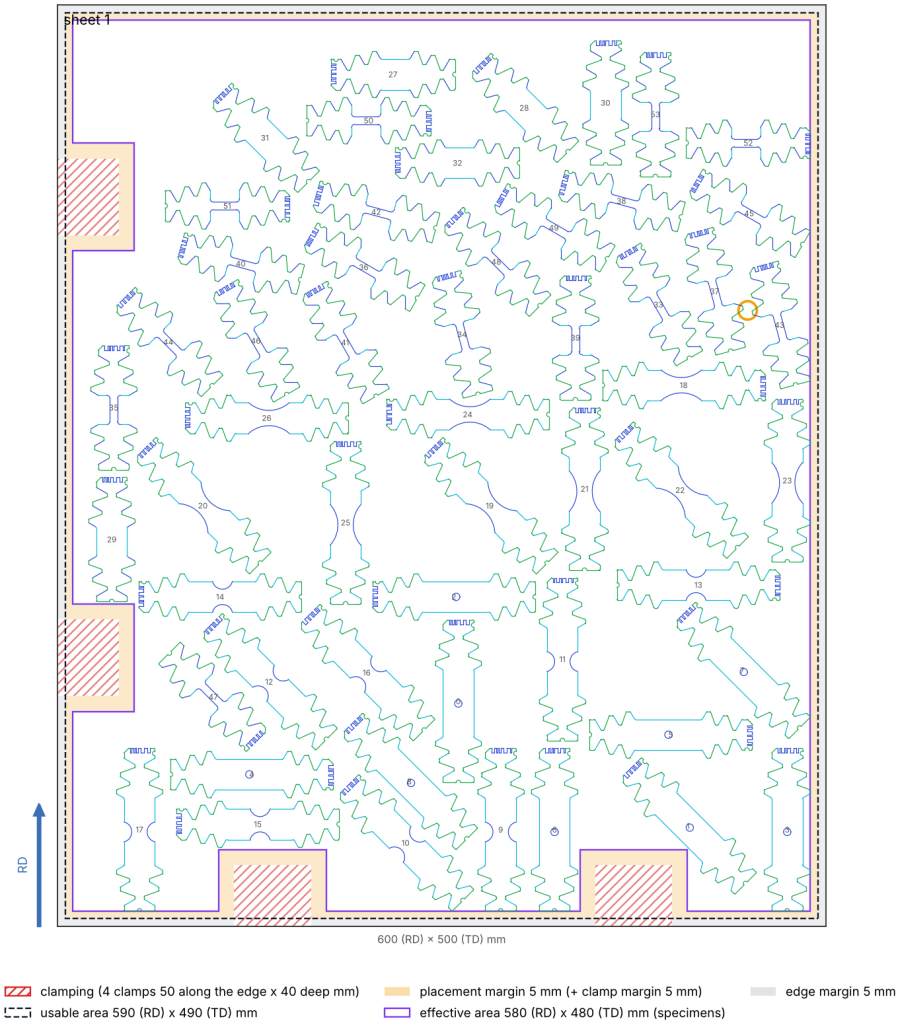

MH18


campaign C, medium + high on one sheet · 600 (RD) × 500 (TD) mm · 36 pieces

used for: DC01 2025_11_25_B-1 · order MOD_MH18_600x500mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
medium	**UT40**	0	× 3	**3**
	NT20	0	× 3	**3**
	NT06	0	× 3	**3**
	CHD48	0	× 3	**3**
	SHLD	0	× 2	**2**
	SHMD	0	× 2	**2**
	SHHD	0	× 2	**2**
high	**UT19**	0	× 3	**3**
	NT20	0	× 3	**3**
	NT06	0	× 3	**3**
	CHD48	0	× 3	**3**
	SHLD	0	× 2	**2**
	SHMD	0	× 2	**2**
	SHHD	0	× 2	**2**
Total				**36**

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

MOD_MH18_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

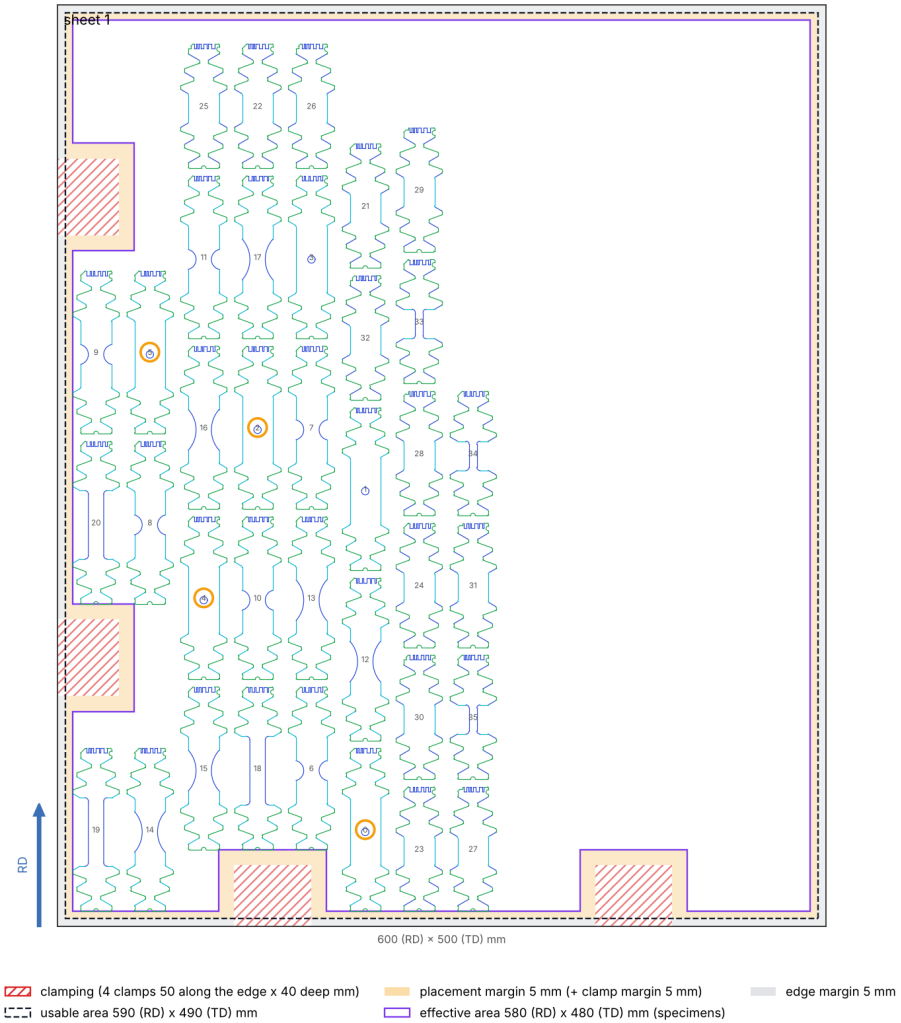

A_LARGE

campaign A on one large sheet (= SLOW78 + MEDIUM66 + HIGH66) · 900 (RD) × 1140 (TD) mm · 214 pieces

used for: RA980 2022_05_04_D-1, RA1200 2022_05_04_E-1, CR1200Y1500T 2022_05_04_G-1 · order MOD_A_LARGE_900x1140mm_WATERJET

RATE	TYPE	ANGLES (deg)	EACH	TOTAL
slow	**UT40**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	MNAK_RECT_FULL	0	× 3	**3**
	MNAK_RECT_HOLE	0 45 90	× 3	**9**
	SHLD	0 45 90	× 2	**6**
	SHMD	0 45 90	× 2	**6**
	SHHD	0 45 90	× 2	**6**
medium	**UT40**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	SHLD	0 45 90	× 2	**6**
	SHMD	0 45 90	× 2	**6**
	SHHD	0 45 90	× 2	**6**
high	**UT19**	0 15 30 45 60 75 90	× 3	**21**
	NT20	0 45 90	× 3	**9**
	NT06	0 45 90	× 3	**9**
	CHD48	0 45 90	× 3	**9**
	SHLD	0 45 90	× 2	**6**
	SHMD	0 45 90	× 2	**6**
	SHHD	0 45 90	× 2	**6**
no code	**LASER**	0	× 4	**4**
Total				**214**

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

MOD_A_LARGE_900×1140mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

