# TEMPLATES

A module = the specimens of one campaign at one strain rate; a template = one sheet of a module, always cut the same way (one DXF sheet).
Index of the notch code = strain rate: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8). UT40 at every rate since 12/11/2026.
MEDHIGH = one template for medium and high (cut twice, codes 4-6 on both); MH18 = medium + high of campaign C on one sheet (codes 4-6 and 7-9).

| TEMPLATE | MODULE CONTENT | SIZE | PIECES | USED FOR (material, sheet) |
|---|---|---|---|---|
| **SLOW78-1** | campaign A, slow rate (sheet 1 of 2) | 600 × 500 | **41** | DP980 2020_06_03A-3 |
| **SLOW78-2** | campaign A, slow rate (sheet 2 of 2) | 600 × 500 | **41** | DP980 2020_06_03A-5 |
| **MEDIUM66** | campaign A, medium rate | 600 × 500 | **66** | DP980 2020_06_03A-1, S235JR 2023_02_28_D-1<br>AW5754-H22 2023_02_28_A-1, S355MC 2023_02_28_C-1 |
| **HIGH66** | campaign A, high rate | 600 × 500 | **66** | DP980 2020_06_03A-6, S235JR 2023_02_28_D-2<br>AW5754-H22 2023_02_28_A-2, S355MC 2023_02_28_C-2 |
| **MH18** | campaign C, medium + high on one sheet | 600 × 500 | **36** | DC01 2025_11_25_B-1 |
| **A_LARGE** | campaign A on one large sheet | 900 × 1140 | **214** | RA980 2022_05_04_D-1, RA1200 2022_05_04_E-1<br>CR1200Y1500T 2022_05_04_G-1 |

6 templates in all (5 modules); 6 of them used by the materials today.

# SLOW78

campaign A, slow rate · 2 sheets of 600 (RD) × 500 (TD) mm: SLOW78-1 (41 pieces) + SLOW78-2 (41 pieces) · 82 pieces


used for: SLOW78-1: DP980 2020_06_03A-3; SLOW78-2: DP980 2020_06_03A-5 · DXF: SLOW78-1_600x500mm.dxf, SLOW78-2_600x500mm.dxf

| RATE | TYPE | ANGLES (deg) | EACH | TOTAL |
|---|---|---|---|---|
| **slow** | **UT40** | 0 15 30 45 60 75 90 | × 3 | **21** |
| | **NT20** | 0 45 90 | × 3 | **9** |
| | **NT06** | 0 45 90 | × 3 | **9** |
| | **CHD48** | 0 45 90 | × 3 | **9** |
| | **MNAK_RECT_FULL** | 0 | × 3 | **3** |
| | **MNAK_RECT_HOLE** | 0 45 90 | × 3 | **9** |
| | **SHLD** | 0 45 90 | × 2 | **6** |
| | **SHMD** | 0 45 90 | × 2 | **6** |
| | **SHHD** | 0 45 90 | × 2 | **6** |
| **no code** | **LASER** | 0 | × 4 | **4** |
| **Total** | | | | **82** |

Notch code index: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8); LASER: no code.
Whole module (both sheets); plan: sheet 1 on the left, sheet 2 on the right.

**Rolling direction (RD): vertical on the plan (arrow), along the 600 mm side; angles measured from RD.**

MOD_SLOW78_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

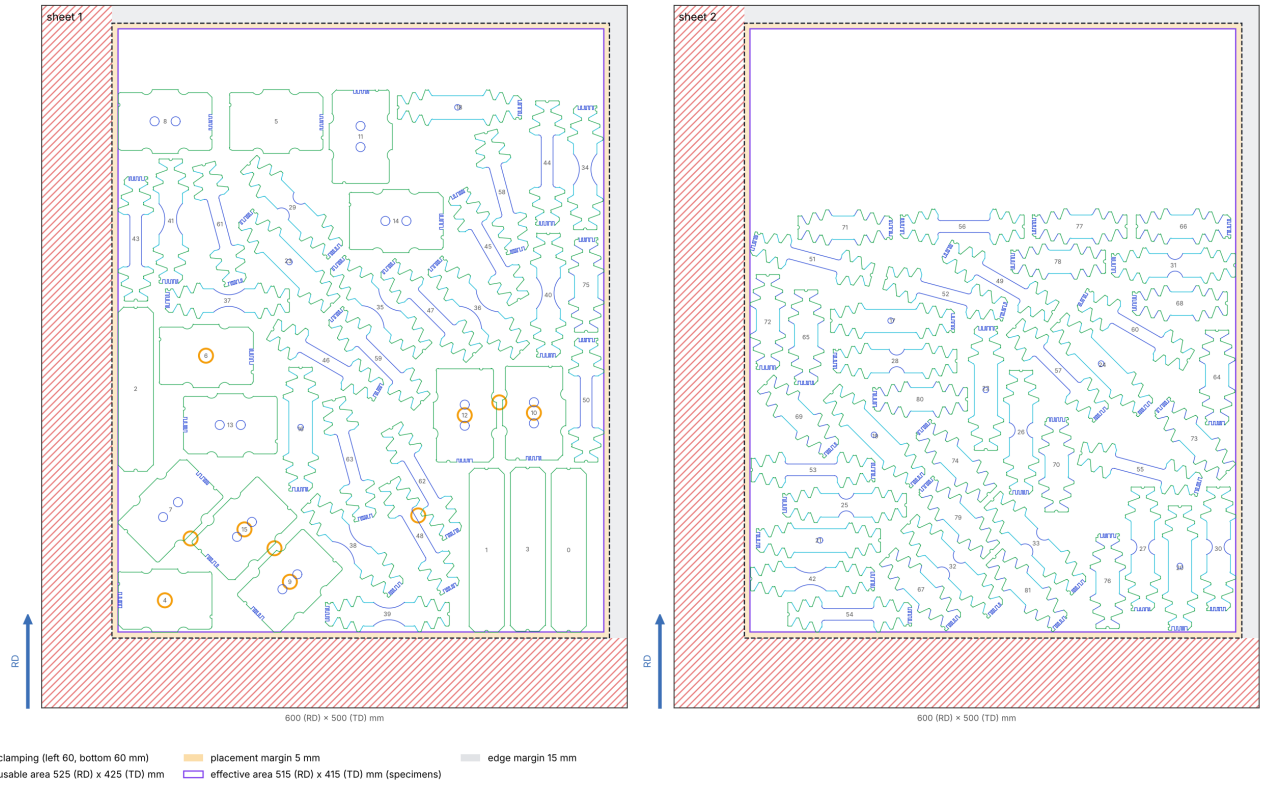

# MEDIUM66

campaign A, medium rate · 600 (RD) × 500 (TD) mm · 66 pieces


used for: DP980 2020_06_03A-1, S235JR 2023_02_28_D-1, AW5754-H22 2023_02_28_A-1, S355MC 2023_02_28_C-1 · DXF: MEDIUM66_600x500mm.dxf

| RATE | TYPE | ANGLES (deg) | EACH | TOTAL |
|---|---|---|---|---|
| **medium** | **UT40** | 0 15 30 45 60 75 90 | × 3 | **21** |
| | **NT20** | 0 45 90 | × 3 | **9** |
| | **NT06** | 0 45 90 | × 3 | **9** |
| | **CHD48** | 0 45 90 | × 3 | **9** |
| | **SHLD** | 0 45 90 | × 2 | **6** |
| | **SHMD** | 0 45 90 | × 2 | **6** |
| | **SHHD** | 0 45 90 | × 2 | **6** |
| **Total** | | | | **66** |

Notch code index: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8); LASER: no code.

**Rolling direction (RD): vertical on the plan (arrow), along the 600 mm side; angles measured from RD.**

MOD_MEDIUM66_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

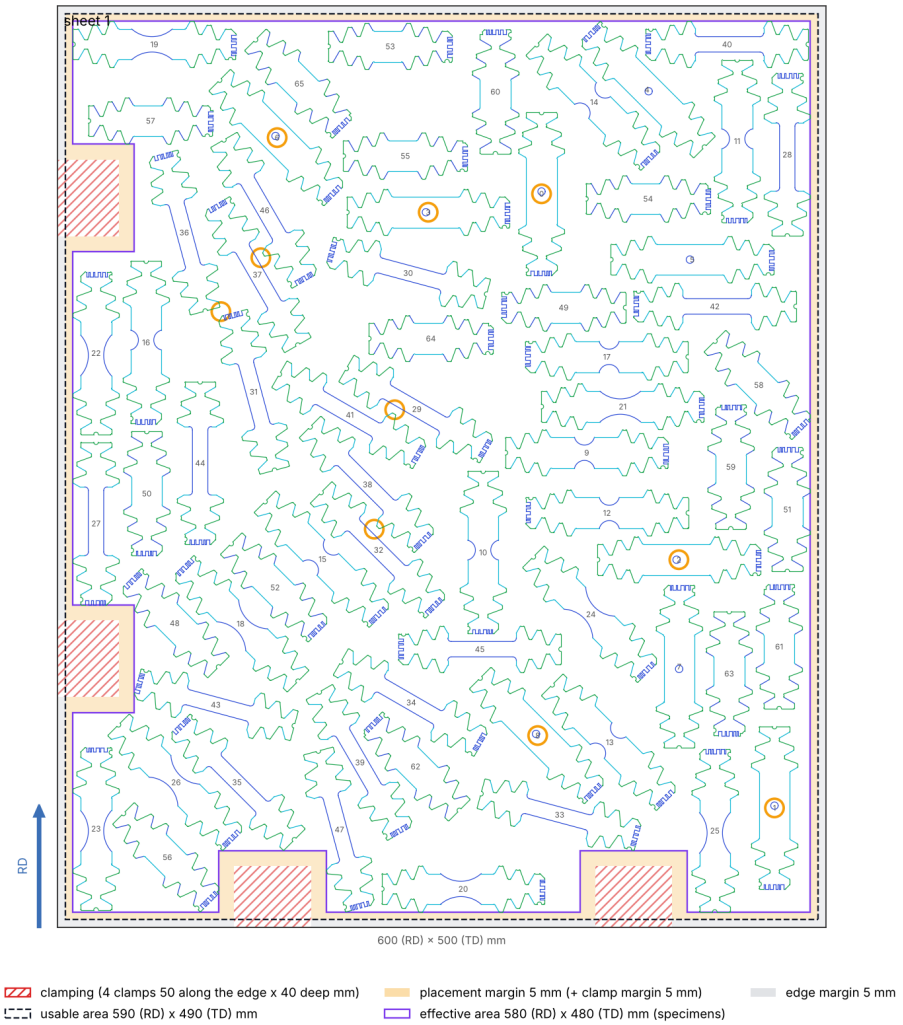

# HIGH66

campaign A, high rate · 600 (RD) × 500 (TD) mm · 66 pieces


used for: DP980 2020_06_03A-6, S235JR 2023_02_28_D-2, AW5754-H22 2023_02_28_A-2, S355MC 2023_02_28_C-2 · DXF: HIGH66_600x500mm.dxf

| RATE | TYPE | ANGLES (deg) | EACH | TOTAL |
|---|---|---|---|---|
| **high** | **UT40** | 0 15 30 45 60 75 90 | × 3 | **21** |
| | **NT20** | 0 45 90 | × 3 | **9** |
| | **NT06** | 0 45 90 | × 3 | **9** |
| | **CHD48** | 0 45 90 | × 3 | **9** |
| | **SHLD** | 0 45 90 | × 2 | **6** |
| | **SHMD** | 0 45 90 | × 2 | **6** |
| | **SHHD** | 0 45 90 | × 2 | **6** |
| **Total** | | | | **66** |

Notch code index: slow 1-3, medium 4-6, high 7-9 (shear 1-2, 4-5, 7-8); LASER: no code.

**Rolling direction (RD): vertical on the plan (arrow), along the 600 mm side; angles measured from RD.**

MOD_HIGH66_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

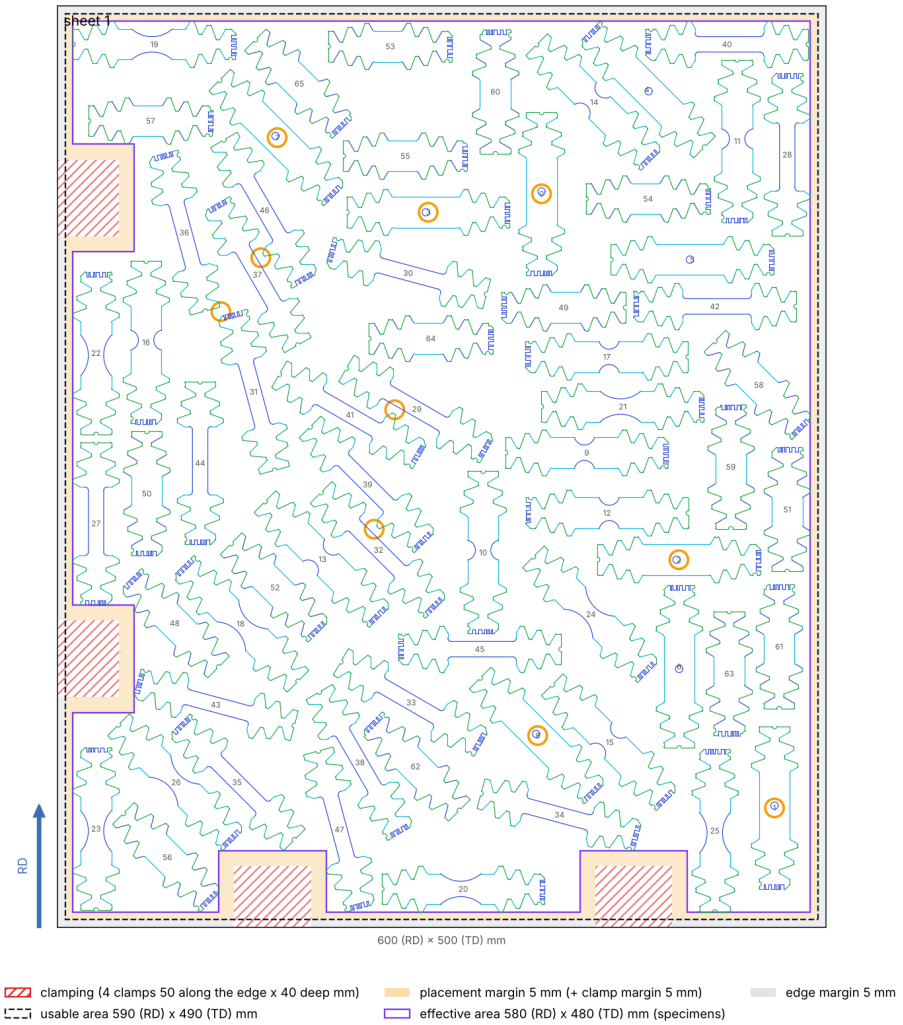

# MH18

campaign C, medium + high on one sheet · 600 (RD) × 500 (TD) mm · 36 pieces


used for: DC01 2025_11_25_B-1 · DXF: MH18_600x500mm.dxf

| RATE | TYPE | ANGLES (deg) | EACH | TOTAL |
|---|---|---|---|---|
| **medium** | **UT40** | 0 | × 3 | **3** |
| | **NT20** | 0 | × 3 | **3** |
| | **NT06** | 0 | × 3 | **3** |
| | **CHD48** | 0 | × 3 | **3** |
| | **SHLD** | 0 | × 2 | **2** |
| | **SHMD** | 0 | × 2 | **2** |
| | **SHHD** | 0 | × 2 | **2** |
| **high** | **UT40** | 0 | × 3 | **3** |
| | **NT20** | 0 | × 3 | **3** |
| | **NT06** | 0 | × 3 | **3** |
| | **CHD48** | 0 | × 3 | **3** |
| | **SHLD** | 0 | × 2 | **2** |
| | **SHMD** | 0 | × 2 | **2** |
| | **SHHD** | 0 | × 2 | **2** |
| **Total** | | | | **36** |

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

**Rolling direction (RD): vertical on the plan (arrow), along the 600 mm side; angles measured from RD.**

MOD_MH18_600×500mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

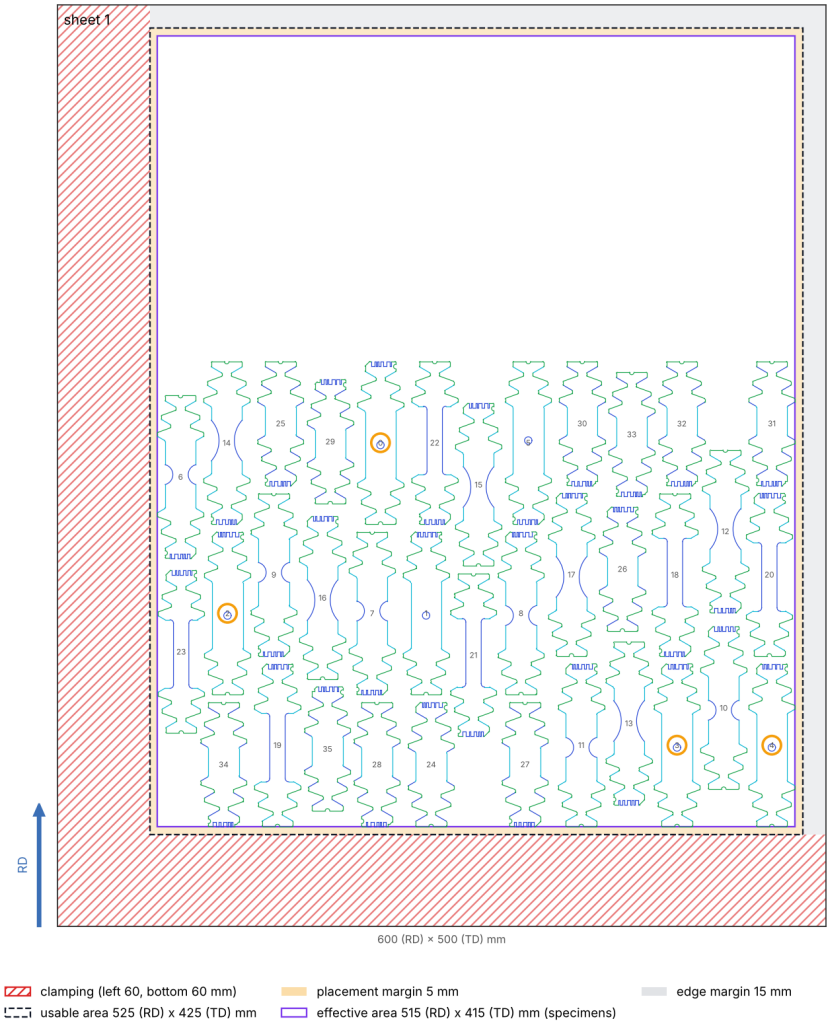

# A_LARGE

campaign A on one large sheet (= SLOW78 + MEDIUM66 + HIGH66) · 900 (RD) × 1140 (TD) mm · 214 pieces

used for: RA980 2022_05_04_D-1, RA1200 2022_05_04_E-1, CR1200Y1500T 2022_05_04_G-1 · DXF: A_LARGE_900x1140mm.dxf

| RATE | TYPE | ANGLES (deg) | EACH | TOTAL |
|---|---|---|---|---|
| **slow** | **UT40** | 0 15 30 45 60 75 90 | × 3 | **21** |
| | **NT20** | 0 45 90 | × 3 | **9** |
| | **NT06** | 0 45 90 | × 3 | **9** |
| | **CHD48** | 0 45 90 | × 3 | **9** |
| | **MNAK_RECT_FULL** | 0 | × 3 | **3** |
| | **MNAK_RECT_HOLE** | 0 45 90 | × 3 | **9** |
| | **SHLD** | 0 45 90 | × 2 | **6** |
| | **SHMD** | 0 45 90 | × 2 | **6** |
| | **SHHD** | 0 45 90 | × 2 | **6** |
| **medium** | **UT40** | 0 15 30 45 60 75 90 | × 3 | **21** |
| | **NT20** | 0 45 90 | × 3 | **9** |
| | **NT06** | 0 45 90 | × 3 | **9** |
| | **CHD48** | 0 45 90 | × 3 | **9** |
| | **SHLD** | 0 45 90 | × 2 | **6** |
| | **SHMD** | 0 45 90 | × 2 | **6** |
| | **SHHD** | 0 45 90 | × 2 | **6** |
| **high** | **UT40** | 0 15 30 45 60 75 90 | × 3 | **21** |
| | **NT20** | 0 45 90 | × 3 | **9** |
| | **NT06** | 0 45 90 | × 3 | **9** |
| | **CHD48** | 0 45 90 | × 3 | **9** |
| | **SHLD** | 0 45 90 | × 2 | **6** |
| | **SHMD** | 0 45 90 | × 2 | **6** |
| | **SHHD** | 0 45 90 | × 2 | **6** |
| **no code** | **LASER** | 0 | × 4 | **4** |
| **Total** | | | | **214** |

Notch code index: slow 1-3, medium 4-6, high 7-9
(shear 1-2, 4-5, 7-8); LASER: no code.

**Rolling direction (RD): vertical on the plan (arrow), along the 900 mm side; angles measured from RD.**

MOD_A_LARGE_900×1140mm_WATERJET.dxf – red circle: blocking problem, orange: to check; small numbers: piece index

