

Important: Retain these instructions

These instructions shall be used by trained service personnel only. If the equipment is used in a manner not specified by these instructions, the protection provided by the equipment may be impaired.


<https://partners.trendcontrols.com>



ARC SUPPRESSION CIRCUITS


There are two circuits recommended, one for source voltages ≥ 100 V, and the other for voltages < 100 V. They can be used for both AC and DC sources.

Circuit 1 - Source Voltage ≥ 100 V

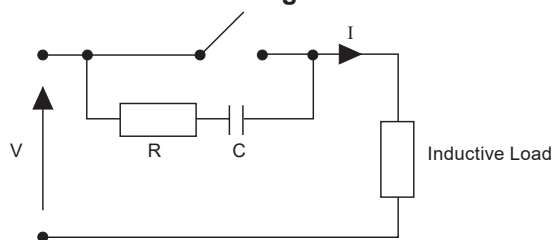

Note that the impedance of RC must be negligible compared to the load impedance if used for an AC source voltage


Circuit 2 - Source Voltage < 100 V

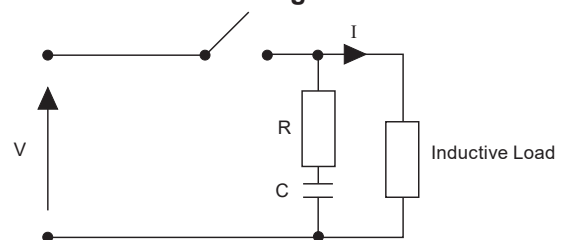

Calculation of Arc Suppression Components

The graph below enables the values of R and C to be selected for given Voltage and Current.

reproduced by permission of Carlo Gavazzi (Feme)

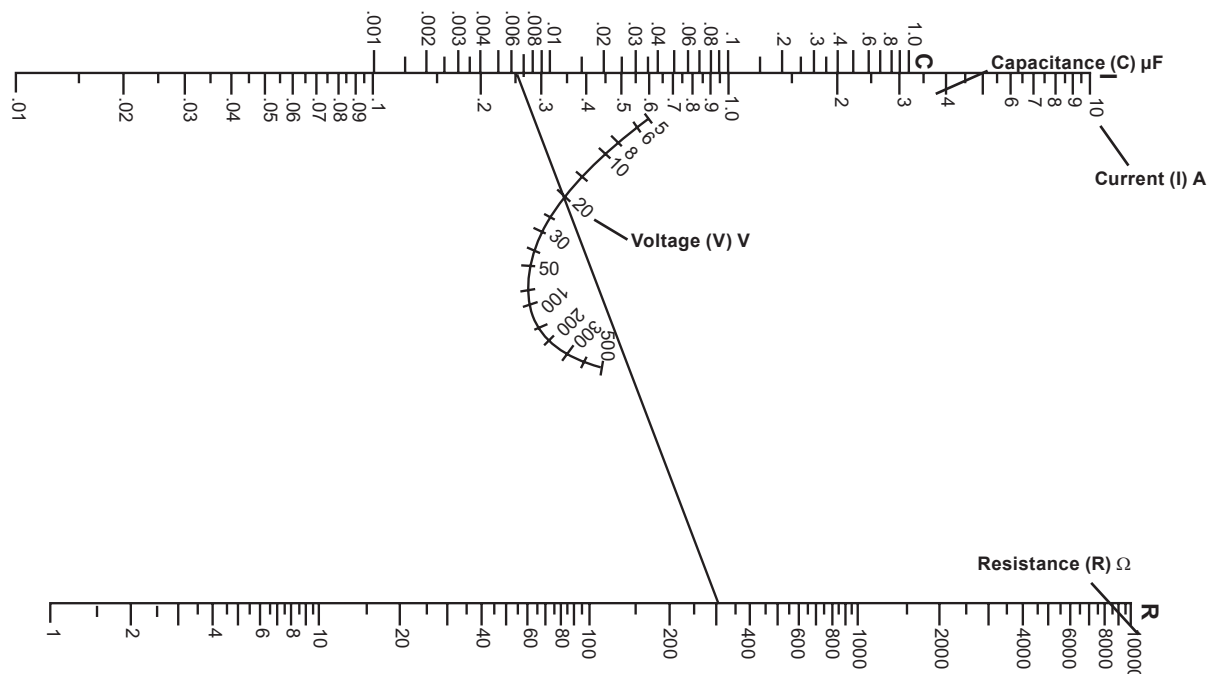

The value of C is a function of current only, so can be read directly from the top scale, whereas the value of R is a function of both current and voltage. R is found by drawing a line between the current on the top scale, and the voltage on the inner curved scale, and extending this until it cuts the R axis.

In the above example $I = 0.25$ A, and $V = 20$ V. The value of C corresponding to $I = 0.25$ A is $0.006 \mu\text{F}$, found by reading directly off the top scale. The value of R is 300Ω , found by drawing a straight line from 0.25 A through the voltage curve at 20 V to intersect the R axis.

Please send any comments about this or any other Trend technical publication to techpubs@trendcontrols.com

© 2018 Honeywell Technologies Sàrl, E&ES Division. All rights reserved. Manufactured for and on behalf of the Environmental & Energy Solutions Division of Honeywell Technologies Sàrl, Z.A. La Pièce, 16, 1180 Rolle, Switzerland by its Authorized Representative, Trend Control Systems Limited.

Trend Control Systems Limited reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

Trend Control Systems Limited

St. Marks Court, North Street, Horsham, West Sussex, RH12 1BW, UK. Tel: +44 (0)1403 211888, www.trendcontrols.com
