



Simple steps for folding – DT 900

Background: Transport restrictions in many parts of the world require transport dimensions of 3x4 m max.

⇒ Seedbar has to be lowered separately for folding for more space

Important: Don't use the lower two holes of the general seedbar adjustment in the middle segment

Set the pins right before folding! ⇒ risk of collision

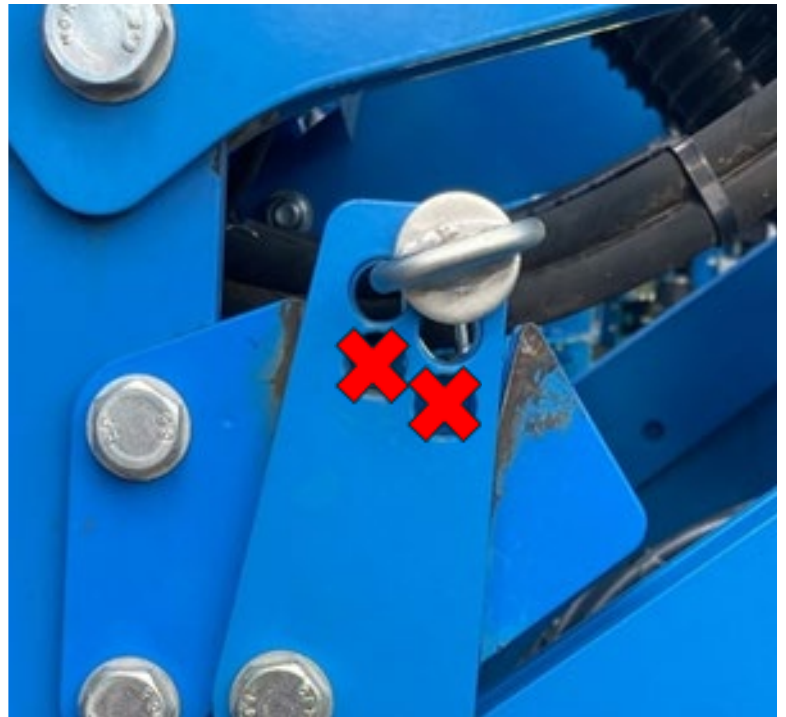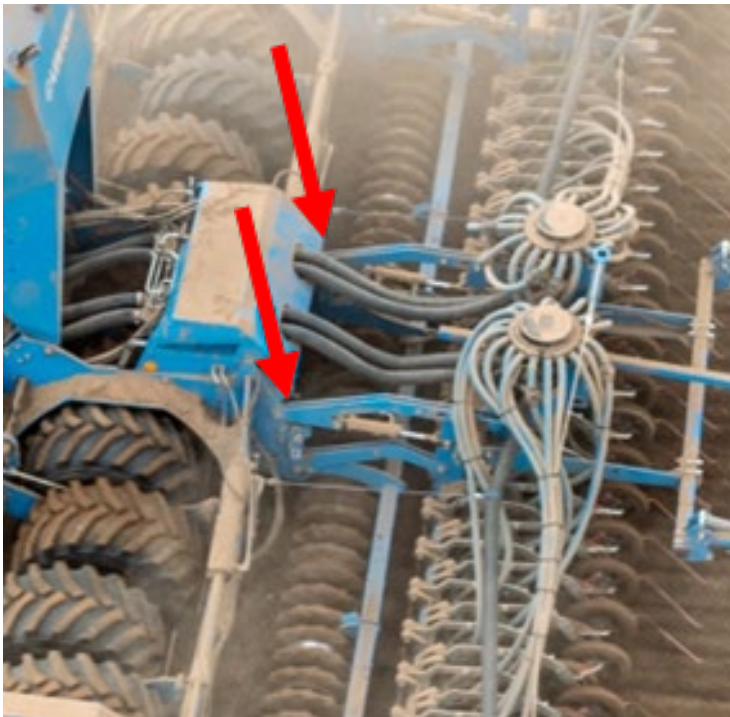

Simple steps for folding – DT 900

Unfolding

Push  in the terminal and **hold it** during the hole process

1. Operate your spool valve (green hoses) and hold it until the next step

The first 5 seconds the DT makes sure all segments are lifted in zero position



2. Reverse spool valve and hold it until the next step

Middle segment gets lowered






Wings start to unfold



3. Reverse spool valve and hold it until the next step



Seedbar gets lifted completely

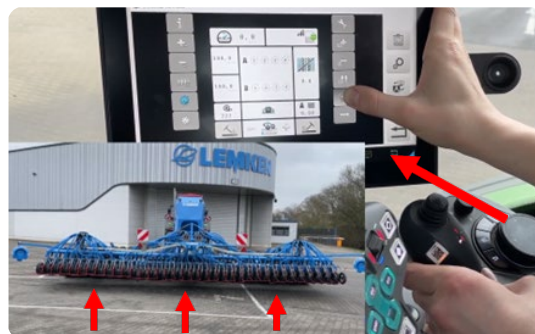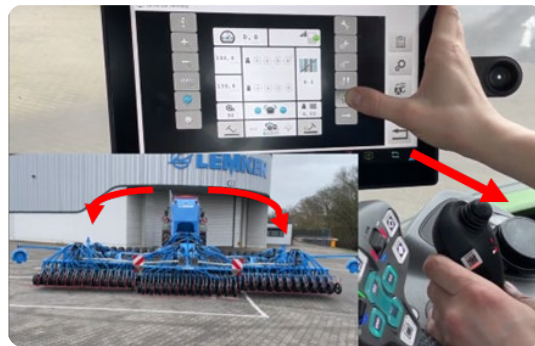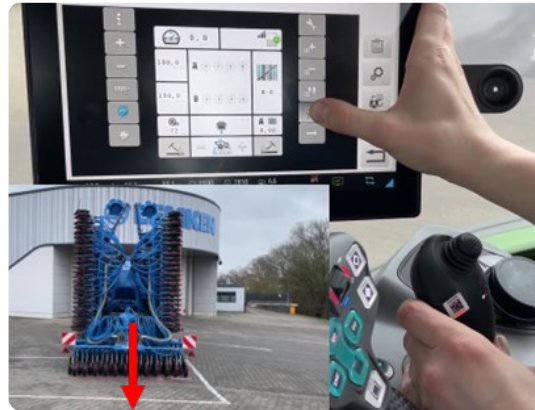

Unfolding completed!

Simple steps for folding – DT 900

Folding in

Push  in the terminal and **hold it** during the hole process

1. Operate your spool valve (green hoses) and hold it until the next step


The first 5 seconds the DT makes sure all segments are lifted in zero position




2. Reverse spool valve and hold it until the next step



Middle segment gets lowered

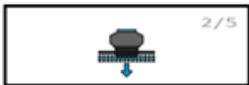



3. Reverse spool valve and hold it until the next step

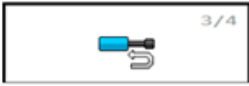

Wings start to fold in



Middle segment seedbar gets lifted

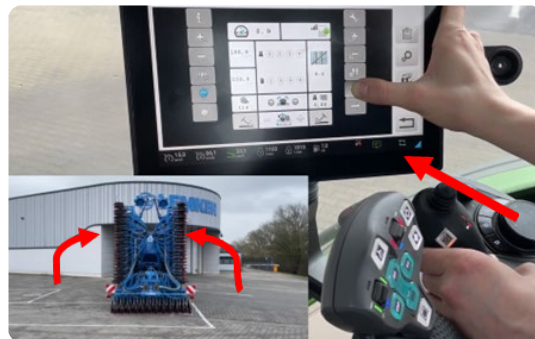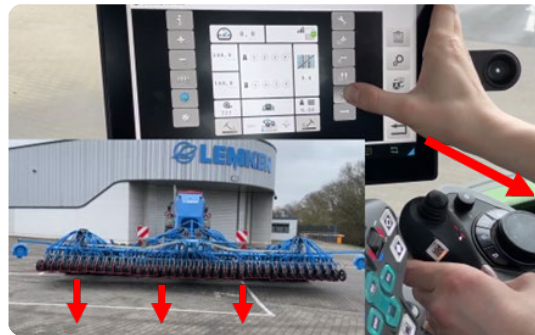

Folding in completed

Simple steps for folding – DT 900

Push  in the terminal and **hold it** during the hole process



1. Operate your spool valve (green hoses) and hold it until the next step

The first 5 seconds the DT makes sure all segments are lifted in zero position



2. Reverse spool valve and hold it until the next step

Middle segment gets lowered



Wings start to unfold



3. Reverse spool valve and hold it until the next step



Seedbar gets lifted completely

Unfolding completed!

Push  in the terminal and **hold it** during the hole process



1. Operate your spool valve (green hoses) and hold it until the next step

The first 5 seconds the DT makes sure all segments are lifted in zero position



2. Reverse spool valve and hold it until the next step



Middle segment gets lowered



3. Reverse spool valve and hold it until the next step



Wings start to fold in



Middle segment seedbar gets lifted



Folding in completed!