
TODO:


Different analog connector Too many vias in high current traces? Different ground plane, need something special for signal ground?

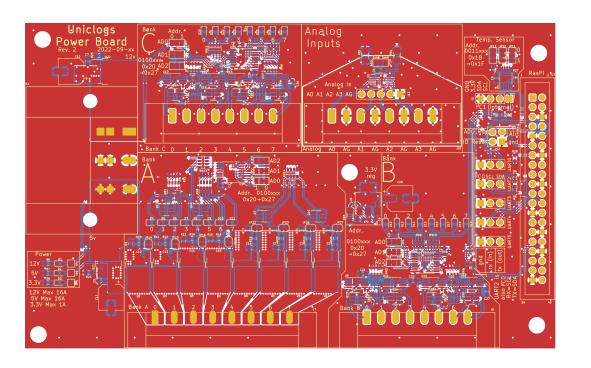

| Sheet: | F.Cu F.Silk | File: UPD-board.kicad_pcb | B.Cu B.Silk | D.Title: | Size: A4 | Date: | Rev: | KiCad E.D.A. | kicad 6.0.7-f9a2dced07-116-ubuntu20.04.1 | Id: 1/1 | Rev: | Rev:

TODO:

Different analog connector Too many vias in high current traces? Different ground plane, need something special for signal ground?

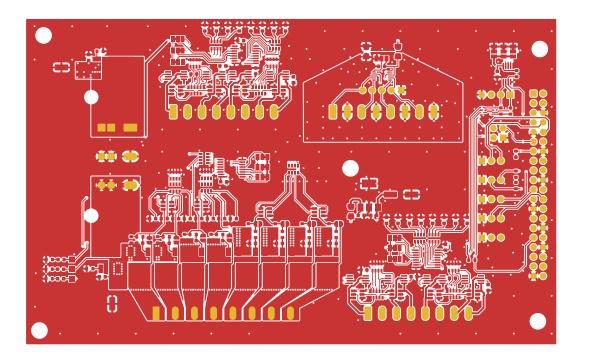

Sheet:	F.Cu		
File: UPD-board.kicad_pcb		[
Title:			
Size: A4	Date:	Rev:	
KiCad E.D.A.	kicad 6.0.7-f9a2dced07~116~ubuntu20.04.1	ld: 1/1	
/1	5		

