
TODO:

Different analog connector Too many vias in high current traces? Different ground plane, need something special for signal ground?

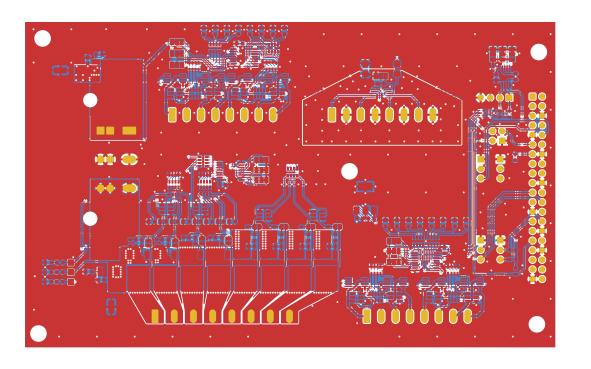


Sheet: File: UPD—board.kicad_pcb		F.Cu F.Silk B.Cu B.Silk		D
Title:				
Size: A4	Date:		Rev:	
KiCad E.D.A. kicad 6.0.7-f9a2dced07~116~ubuntu20.04.1				

2 3

TODO:

Different analog connector Too many vias in high current traces? Different ground plane, need something special for signal ground?

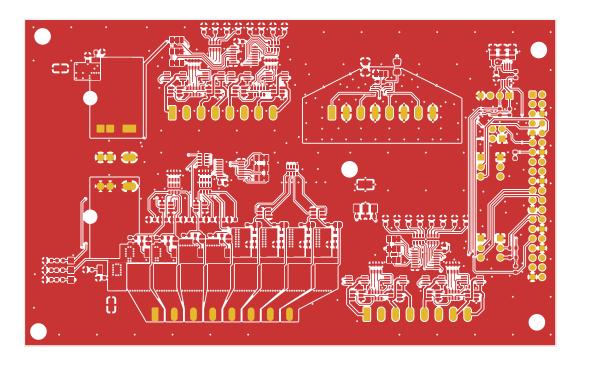

Sheet: F.Cu File: UPD-board.kicad_pcb					
Title:					
Size: A4	Date:		Rev:		
KiCad E.D.A.	kicad 6.0.7-f9	9a2dced07~116~ubuntu20.04.1	ld: 1/1		
4		5			

