WATER SOFTENER & MID-PLATE INSTALLATION GUIDE

V. 10/21/2026

BRITA | PRO

STEP 1

Site & System Preparation

1.) Confirm the system is correctly sized and the installation location provides access for service and salt addition.

2.) Verify incoming water pressure does not exceed 80 psi.

3.) Locate the softener after the main shutoff and before the water heater, following the designed treatment order for any additional equipment.

4.) Provide a nearby continuously powered electrical outlet.

5.) Provide an approved drain location for regeneration discharge and a separate suitable location for the brine tank overflow where required.

6.) Shut off the building's main water supply and relieve plumbing pressure before cutting into the line.

→ **IMPORTANT:** Follow applicable plumbing, electrical, drain, and cross-connection codes. Drain and overflow connections must not create a cross-connection.

STEP 2

Position the Equipment

1.) Place the mineral tank upright on a firm, level surface.

2.) Position the brine tank beside the mineral tank where it can be accessed for salt addition and service.

3.) Orient the control valve and bypass so the inlet, outlet, drain, and brine connections remain accessible.

4.) Protect the equipment from freezing, excessive heat, weather exposure, and physical damage.

5.) Do not allow the mineral tank or control valve to support the weight of the building plumbing.

STEP 3

Install the Bypass and Plumbing

1.) Install the bypass valve on the Clack WS1 control valve.

2.) Identify the valve inlet and outlet before connecting the building plumbing.

3.) Connect the incoming untreated-water line to the inlet.


4.) Connect the treated-water line to the outlet.

5.) Support the plumbing independently and tighten connections without placing stress on the valve body.

6.) Leave the bypass in Bypass until startup.

BYPASS OPERATION
keep the softener bypassed until startup

Figure 2
BYPASS OPERATION

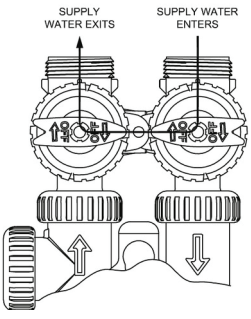

STEP 4

Install the Drain Line

1.) Connect the drain line to the control valve drain connection using properly sized tubing or pipe for the installation.
2.) Route the drain line to an approved drain with the required air gap.
3.) Keep the drain line as short and direct as practical and protect it from kinks, restrictions, freezing, or crushing.
4.) Secure the drain line so regeneration flow cannot dislodge it.
5.) Confirm the drain can accept the regeneration flow without overflowing.

STEP 5

Connect the Brine Tank

1.) Connect the brine line from the control valve to the brine tank connection.
2.) Confirm the brine line is fully seated, secure, and free of kinks.
3.) Verify the safety float assembly and brine well are correctly positioned and unobstructed.
4.) Connect the brine tank overflow fitting where required and route it to a suitable drain location.
5.) Do not connect the overflow line into the control valve drain line.

STEP 6

Electrical & Control Check

1.) Confirm all plumbing, drain, and brine connections are complete before applying power.
2.) Plug the control valve into the electrical outlet.
3.) Pull the battery tab located behind the faceplate only after the valve is plugged into the outlet.
4.) Verify the valve is properly programmed for the installed softener.
5.) Set the correct time of day.



CAUTION: Do not remove the battery tab before plugging the valve into an electrical outlet. Valve programming may be damaged if the battery tab is removed before the valve is plugged into an electrical outlet.

STEP 7

Pre-Startup Inspection

1.) Verify inlet and outlet connections are correct and secure.
2.) Verify the drain line is secure, unobstructed, and properly air-gapped.
3.) Verify the brine line and overflow connection are secure.
4.) Verify the bypass remains in Bypass.
5.) Do not add salt until directed by the Brita PRO startup procedure.
6.) Proceed to the Brita PRO Water Softener & Mid-Plate Startup Procedure.

TECHNICAL BASIS

Installation guidance is based on Clack WS1 valve specifications and Clack system-startup practices. BritaPRO startup requirements control commissioning, sanitization, and salt addition.