PROFESSIONAL INSTALLATION,
OPERATING AND SERVICE MANUAL

NRV ANTI-SCALE *


- ☐ BPNRVAS10J
- ☐ BPNRVAS15J
- ☐ BPNRVAS25
- ☐ BPNRVAS10JBF
- ☐ BPNRVAS15JBF
- ☐ BPNRVAS25BF

NEUTRALIZER

- ☐ BPNRVAN150
- ☐ BPNRVAN200
- ☐ BPNRVAN150BF
- ☐ BPNRVAN200BF

CAT CARBON

- ☐ BPNRVCAT100J
- ☐ BPNRVCAT150J
- ☐ BPNRVCAT100JBF
- ☐ BPNRVCAT150JBF

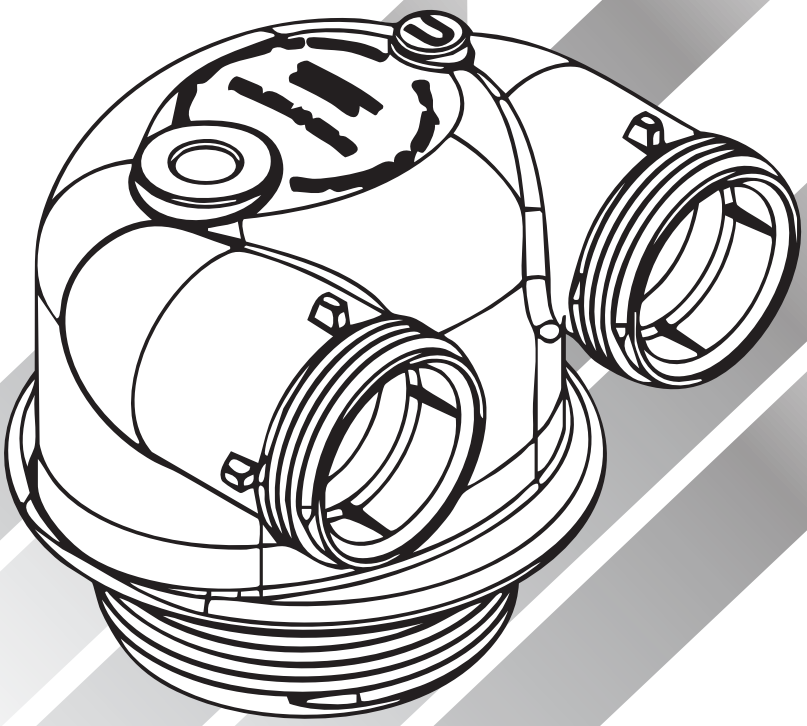

PLATINUM SERIES

IN / OUT WATER FILTER
ACID NEUTRALIZER
with the
NON-REGENERATING VALVE

Am
Antimicrobial Technology
* EXCLUDING ANTI-SCALE

BRITA | PRO®

JOB SPECIFICATIONS

MODEL NO. _____

INSTALLATION DATE _____

SERIAL NUMBER _____

INSTALLER NAME _____ PHONE _____

ADDRESS _____

WATER TEST AT TIME OF INSTALLATION

_____ Incoming P.S.I.

_____ Hardness $CaCo_3$ (gpg) Other: _____

_____ pH _____

_____ Chlorine (ppm) _____

SIZING INFORMATION

All Water is Treated Except:

_____ Rear Hose Bib _____ Front Hose Bib _____ Kitchen Cold _____ Toilets _____ All Cold
_____ Other _____

The average family uses 50 gallons per person daily for all water uses in the home.

_____ Daily Water Usage (Gallons/Person)

x _____ Family Size (Number of people in family)

= _____ Total Gallons Per Day

x _____ Grains Per Gallon of hardness

= _____ Total Grains per Day

PACKAGING: All systems are shipped from the factory in cartons.

COMPONENTS: Fiberglass mineral tank, in/out head, installation fitting package, distributor tube assembly, mineral and media.

MODEL	MEDIA TANK - PART NO., dia."x ht."	PART ID, MINERAL (BAG qty.)
BPNRVCT100J	BPFG1044, 10x44	BPA8009, CARBON (1); BPA80729, GRAVEL (9 lbs.)
BPNRVCT150J	BPFG1054, 10x54	BPA8009, CARBON (1.5); BPA807210, GRAVEL (10 lbs.)
BPNRVCTK100J	BPFG1044, 10x44	BPA8009, CARBON (1); BPA8010, KDF (1 lb.); BPA80729, GRAVEL (9 lbs.)
BPNRVCTK150J	BPFG1054, 10x54	BPA8009, CARBON (1.5), BPA8010, KDF (1 lb.); BPA807210, GRAVEL (10 lbs.)
BPNRVCAT100J	BPFG1044, 10x44	BPA8062, CAT-HAC CARBON (1); BPA80729, GRAVEL (9 lbs.)
BPNRVCAT150J	BPFG1054, 10x54	BPA8062, CAT-HAC CARBON (1.5); BPA807210, GRAVEL (10 lbs.)
BPNRVCATK100J	BPFG1044, 10x44	BPA8062, CAT-HAC (1); BPA8010, KDF (1 lb.); BPA80729, GRAVEL (9 lbs.)
BPNRVCATK150J	BPFG1054, 10x54	BPA8062, CAT-HAC (1.5); BPA8010, KDF (1 lb.); BPA807210, GRAVEL (10 lbs.)
BPNRVAN150	BPFG1054, 10x54	BPA8009, CALCITE (3); BPA807210, GRAVEL (10 lbs.)
BPNRVAN200	BPFG1354, 13x54	BPA8009, CALCITE (4); BPA807212, GRAVEL (12 lbs.)

INSTALLATION: Place system in desired location close to water supply inlet keeping far enough away from walls and other obstructions to allow enough room for servicing the unit.

INSTALL THE ANTI-SCALE SYSTEM AS AN UPFLOW FILTER ONLY.

Always install all carbon units down flow. DO NOT install in up flow. Doing so will cause carbon and carbon shards to clog pluming.

The words "UPFLOW INLET" and "DOWNFLOW INLET" are molded into the in/out head.

PRE-SOAK: Allow lighter weight mineral such as Carbon to soak in water prior to start-up; recommend minimum 24 hours up to 48 hours for best results. Remove the in/out head by turning counter-clockwise.

Once you remove the valve you can add water to tank to pre soak. Do not fill water to the brim of the carbon tank. Fill 1-3" above carbon media.


BYPASS VALVE: The use of a bypass valve is recommended for ease of maintenance. The bypass valve connects to the in/out head using nuts that only require hand tightening. Install with red knobs in the open/service position. Press end of bypass valve with o-rings into the in/out head. Before assembling bypass valve to tank make sure you add lubricant to all four (4) rubber o-rings. **HAND TIGHTEN NUTS ONLY**.


Avoid getting primer and solvent cement on any part of the o-rings, bypass valve or in/out head. **DO NOT** use pipe dope or any other sealant on threads. Teflon tape is not necessary on the caps because of o-ring seal. **DO NOT** use Vaseline or other unacceptable lubricants on o-rings. A silicone lubricant must be used on black o-rings.

FITTING ADAPTER: BPV3007 1" PVC Male NPT elbow assembly comes standard with each unit. Other options available (see page 5).


ONLY APPLIES WHEN SOLDERING:

When assembling the installation fitting package (inlet and outlet), connect the fitting to the plumbing system first and then attach the nut, split ring and o-ring. Heat from soldering or solvent cements may damage the nut, split ring and o-ring. Solder joints should be cool and solvent cements should be set before installing the nut, split ring and o-ring. **Avoid** getting primer and solvent cement on any part of the o-rings, split rings, bypass valve or in/out head.

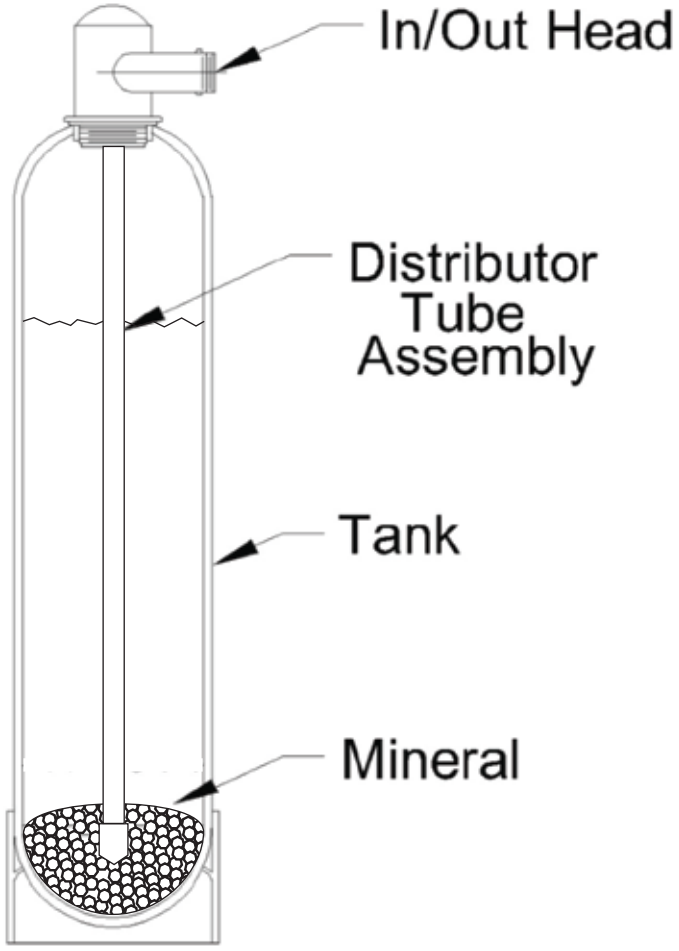

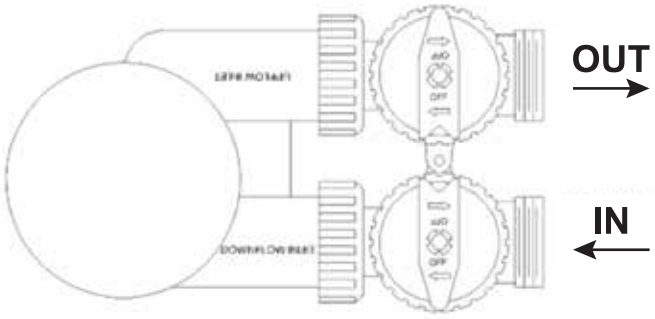

By-Pass Position

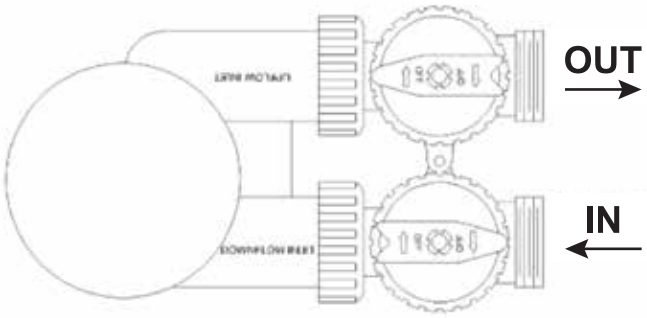

In Service Position

Turn red handles to By-Pass position and connect to water pipes.


PLACING THE SYSTEM INTO SERVICE:

SLOWLY turn the red handles to "In service" position and slowly open main water valve a 1/4 turn to allow water to slowly fill tank. Let water run from a single cold water faucet until water is clear. This may take several minutes.

CAUTION:


If media is dry, filling too quickly with water will result in the media plugging the valve assembly. Some media such as Carbon should be soaked in water for a 24 hour period before introducing full water flow.

BP2000 BYPASS VALVE

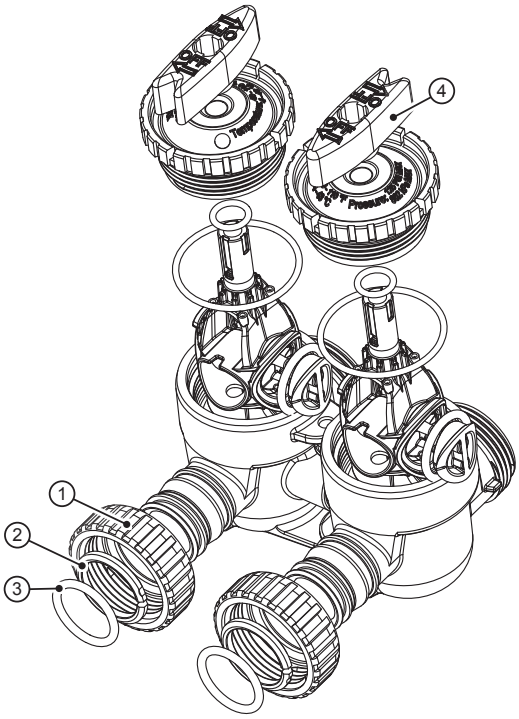

Drawing No.	Order No.	Description	Qty
1	BPV3151	Nut 1” Quick Connect	2
2	BPV3150	Split Ring	2
3	BPV3105	O-Ring 215	2
4	BPV3147	Bypass Handle	2


D1400 1” IN/OUT HEAD ASSEMBLY

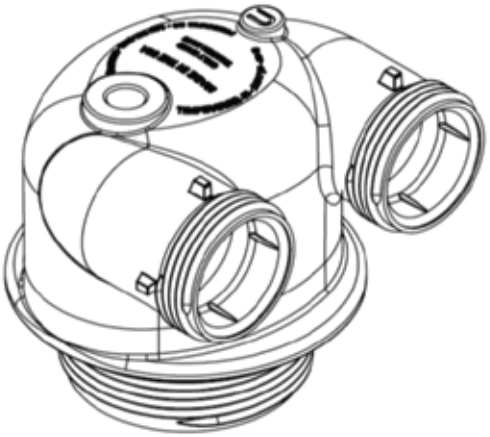


Drawing No.	Order No.	Description	Qty
1	BPD1400	Body Assembly	1
2	BPV3105	Distributor Tube O-Ring	1
3	BPV3150	Body O-Ring	1
4	BPD1203	Upper Basket (not shown	1

INSTALLATION FITTING ASSEMBLIES


Order No: **BPV3007** (Standard)
Description: **Fitting 1” PVC Male NPT Elbow Assembly**

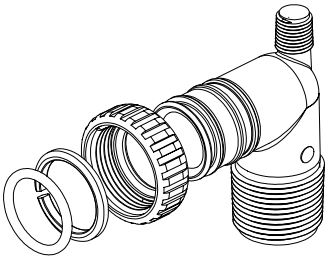


Order No: **BPV300702** (Optional)
Description: **Fitting 1” Brass Sweat Assembly**
Do not install in California.

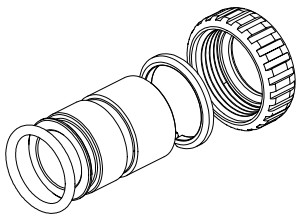

Order No: **BPV300703** (Optional)
Description: **Fitting ¾” Brass Sweat Assembly**
Do not install in California.

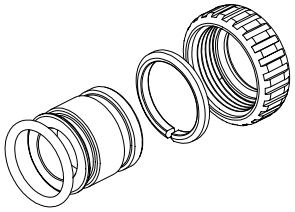

Order No. **BPV319101** (Optional)
Description: **Fitting Vertical Adapter Assembly**

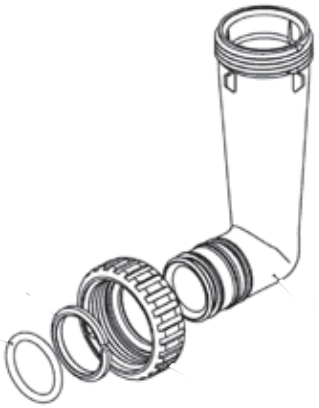

CARBON FILTRATION SOAKING PROCEDURE

Procedure for Soaking an Installation of Carbon Filtration System (N.R.V. Only)

STEP 1

Carbon Pre-Soak and Preparation Instructions

1.) Pre-Soak the Carbon

- Begin by pre-soaking the carbon **24 to 48 hours** before installation.

2.) Fill the Carbon Tank with Water

- Leave the bypass valves open to allow air to escape while filling.
- Do not fill the tank to the brim.

3.) Let the Tank Sit

- Allow the carbon tank to sit for **24 to 48 hours** to complete the pre-soak.

4.) Reducing Weight for Transport or Backwashing

- To make the tanks lighter or prepare for backwashing: **Blow excess water out of the tank**.
- **Do Not** lay system down during transport.

5.) How to Blow Out Excess Water

- Attach an air hose to the DOWNFLOW/INLET side of the carbon tank.
- This will push water:
    - Down through the media
    - Then up and out through the distributor tube.

6.) Preparing for Transport (NRV System Only)

- When transporting carbon system, put the system in bypass mode to allow safe transport.
- Make sure bypass valve stays fully closed during this process.

STEP 2

Flushing Carbon Tank Before Installation

1.) Flush the Carbon Tank at the Customer's Home

- Before installing the equipment, it’s important to flush out:
    - Any excess air trapped in the carbon tank
    - Any carbon shards that may still be in the distributor or system

2.) Connect a Water Hose to the Carbon Tank

- Use the downflow inlet port of the carbon tank.
- Recommended attachments:
    - A ¾” female adapter for your garden hose
    - A short section of pipe
    - A 1” female adapter with a reducing bushing

CARBON FILTRATION SOAKING PROCEDURE (continued)

Procedure for Soaking an Installation of Carbon Filtration System (N.R.V. Only)

Flushing Carbon Tank Before Installation (continued)

3.) Run Water Through the Tank

- Turn on the water and let it run for a few minutes.
- This helps to clear out:
    - Trapped air
    - Loose carbon particles

4.) Perform the Flush Inside (Recommended)

- Best practice: Flush the tank outside before bringing it indoors.
- Alternatively: Plumb the system first and run the outlet side of the carbon tank to a drain during flushing.

5.) Install the System

- Once flushing is complete and you've cleared out excess air and shards, proceed to install the system as usual.

STEP 3

Preparing the Home's Plumbing for Installation

1.) Turn Off the Main Water Supply

- Shut off the main water line to the house before beginning installation.

2.) Open One Cold Water Line Inside the Home

- Choose one faucet to open—this could be:
    - A kitchen faucet, or
    - A bathroom faucet

3.) Run Cold Water Only

- Make sure you turn on the cold water only.
- This helps to drain any excess water from the plumbing lines.

4.) Let the Line Run Until It Drains

- Allow water to run and drain completely from the selected faucet.

5.) Proceed with Installation

- Once the plumbing lines are drained, you're ready to install the equipment.

CARBON FILTRATION SOAKING PROCEDURE (continued)

Procedure for Soaking an Installation of Carbon Filtration System (N.R.V. Only)

STEP 4

Flushing the System After Installation

1.) Leave the Faucet On After Installation

- Keep the same faucet open that was used during the pre-installation flush.

2.) Turn the Water Supply Back On

- As you restore the home's water supply and go over the system with the homeowner, let water run through the open faucet.

3.) Direct Air and Sediment to One Location

- Keeping just one faucet open:
    - Forces excess air and any remaining sediment to exit through that single point
    - Prevents air from dispersing to multiple faucets throughout the home

4.) Ensure a Cleaner System Start-Up

- This method helps:
    - Minimize trapped air in the plumbing
    - Flush out any residual sedimentation
    - Provide a smoother startup for the homeowner

STEP 5

Final System Flush and Homeowner Walkthrough

1.) Let the Water Continue Running

- While reviewing the equipment with the homeowner (e.g., in the garage), leave the selected faucet running.
- It doesn’t matter if it runs for 5 or 10 minutes—the goal is:
    - To run it as long as possible
    - To push more air out of the system

2.) Flush All Fixtures in the Home

- After the initial faucet has run for several minutes, turn on all other water fixtures in the home:
    - Sinks
    - Showers
    - Bathtubs
    - Toilets (flush them)

CARBON FILTRATION SOAKING PROCEDURE (continued)

Procedure for Soaking an Installation of Carbon Filtration System (N.R.V. Only)

Final System Flush and Homeowner Walkthrough (continued)

3.) Inform the Homeowner About Temporary Air in Lines

- Educate the homeowner on what to expect:
    - Air may remain in the plumbing for a few days
    - Toilets may make loud noises
    - Showers or faucets may sputter, especially in rarely used areas

4.) Encourage Continued Water Use

- Let the homeowner know:
    - The only way to remove the air is to use the water
    - The more they run the water, the faster the air will clear from the lines

5.) Set Expectations Clearly

- Help the homeowner feel confident by explaining:
    - This is normal after installation
    - Continued water use will resolve any lingering issues

Important Reminder About Air in the Plumbing:

Following this procedure will help get air out faster, but it doesn't eliminate it completely. Air is part of waters chemistry. This is to help get any excess air that was introduced by the installation of the water treatment equipment.



Brita PRO by Protect Plus Pro LLC

420 3rd Avenue NW • Hickory, NC 28601 • (866) 985-2900
www.britapro.com

BRITA PRO® trademark and logo are registered trademarks of Brita LP and used under license by Protect Plus, LLC. All rights reserved.