BACKWASHING FILTER INSTALLATION GUIDE

V. 10/22/2026

BRITA | PRO

STEP 1

Site & System Preparation

1.) Confirm the system is appropriate for the application and the installation location provides access for service.
2.) Verify incoming water pressure does not exceed 80 psi.
3.) Locate the system after the main shutoff and before the water heater. Install other treatment equipment in the designed treatment order.
4.) Provide a nearby continuously powered electrical outlet for the control valve.
5.) Provide an approved drain location capable of accepting the filter backwash flow.
6.) Shut off the building's main water supply and relieve plumbing pressure before cutting into the line.

→ **IMPORTANT:** Follow applicable plumbing, electrical, and cross-connection codes. **Do Not** connect the drain line directly to a sanitary drain without an approved air gap.

STEP 2

Position the Equipment

1.) Place the mineral tank upright on a firm, level surface.
2.) Orient the control valve and bypass so the inlet, outlet, and drain connections remain accessible.
3.) Protect the equipment from freezing, excessive heat, weather exposure, and physical damage.
4.) Confirm the mineral tank remains vertical and is not supporting the weight of the building plumbing.


STEP 3

Install the ByPass and Plumbing

1.) Install the bypass valve on the Clack WS1 control valve.
2.) Identify the valve inlet and outlet before connecting the building plumbing.
3.) Connect the incoming untreated-water line to the inlet.
4.) Connect the treated-water line to the outlet.
5.) Support the plumbing independently and tighten connections without placing stress on the valve body.
6.) Leave the bypass in Bypass until startup.

BYPASS OPERATION
keep the filter
bypassed until startup

Figure 2
BYPASS OPERATION

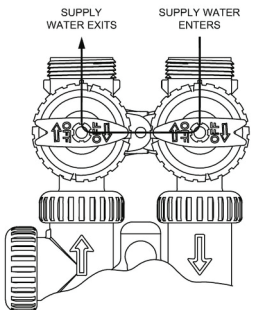

STEP 4

Install the Drain Line

1.) Connect the drain line to the control valve drain connection using properly sized tubing or pipe for the installation.
2.) Route the drain line to an approved drain with the required air gap.
3.) Keep the drain line as short and direct as practical and protect it from kinks, restrictions, freezing, or crushing.
4.) Secure the drain line so backwash flow cannot dislodge it.
5.) Confirm the drain can accept the programmed backwash flow without overflowing.

STEP 5

Electrical & Control Check

1.) Confirm all plumbing connections are complete before applying power.
2.) Plug the control valve into the electrical outlet.
3.) Pull the battery tab located behind the faceplate only after the valve is plugged into the outlet.
4.) Verify the valve is properly programmed for the installed filter.
5.) Verify the filter is programmed for Backwash followed by Rinse and an automatic regeneration every 7 days.
6.) Set the correct time of day.

CAUTION: Do not remove the battery tab before plugging the valve into an electrical outlet.

STEP 6

Pre-Startup Inspection

1.) Verify inlet and outlet connections are correct and secure.
2.) Verify the drain line is secure, unobstructed, and properly air-gapped.
3.) Verify the bypass remains in Bypass.
4.) Check the installation area for loose fittings, tools, or materials.
5.) Proceed to the Brita PRO Backwashing Filter Startup Procedure.

TECHNICAL BASIS

Installation guidance is based on Clack WS1 valve specifications and Clack system-startup practices; final treatment order and media-specific requirements remain BritaPRO/OEM specifications.