


## Simple Differential Probe Attachment

See photos for bandwidth examples  
Linear operating input voltage - +12.5 to -12.5 volts  
Absolute max input voltage - +15.5 to -15.5 volts  
Probe must be powered on or circuit becomes  
heavily loaded through op amp

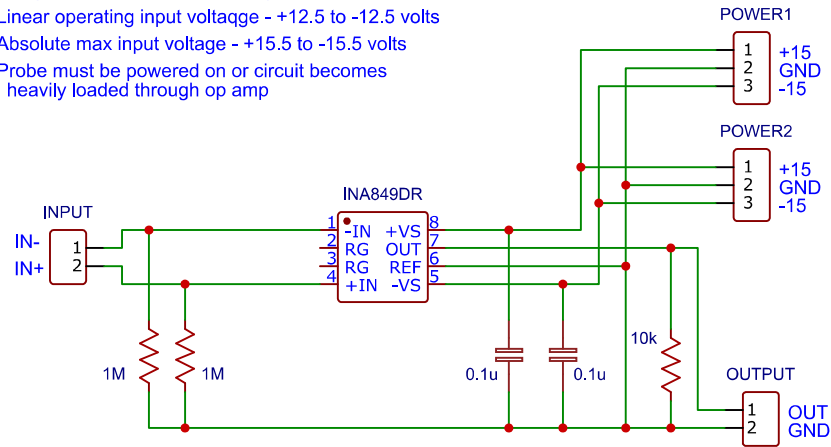

Power1 in from HP triple  
output supply


Power2 out can be used to  
supply other differential probes

Attach 1x scope probe

|                                             |                                      |            |
|---------------------------------------------|--------------------------------------|------------|
| TITLE: Simple Differential Probe Attachment |                                      | REV: 1.1   |
| EasyEDA                                     | Company:                             | Sheet: 1/1 |
|                                             | Date: 2025-12-19 Drawn By: jpwolfe31 |            |

## Simple Differential Probe Attachment

See photos for bandwidth examples  
 Linear operating input voltage - +12.5 to -12.5 volts  
 Absolute max input voltage - +15.5 to -15.5 volts  
 Probe must be powered on or circuit becomes heavily loaded through op amp  
 Amplifier circuit add-on not very useful

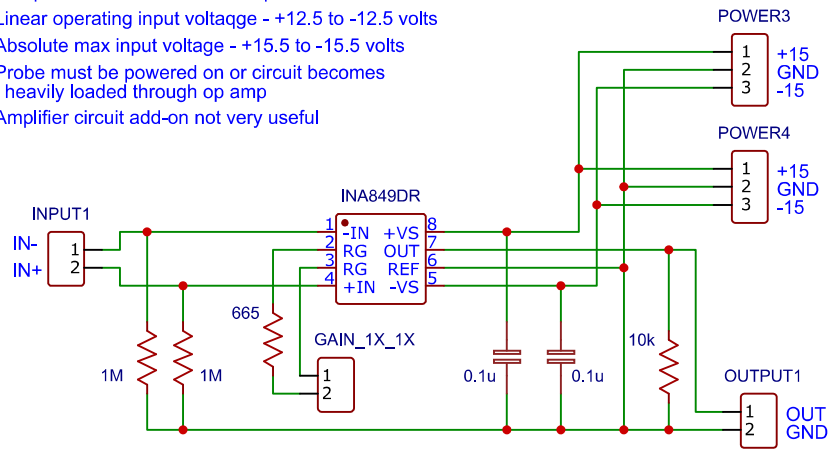

Power1 in from HP triple output supply

Power2 out can be used to supply other differential probes


Attach 1x scope probe

Optional add-on  
 Use jumper to set 1x or 10x gain  
 $G = 1 + (6k / R)$   
 NC is 1x gain  
 6k is 2x gain  
 665 is 10x gain  
 316 is 20x gain  
 60 is 100x gain

|                |                       |                     |
|----------------|-----------------------|---------------------|
| TITLE: Sheet_2 |                       | REV: 1.0            |
| EasyEDA        | Company: Your Company | Sheet: 1/1          |
|                | Date: 2026-06-04      | Drawn By: jpwolfe31 |

## Simple Differential Probe Attachment

Bandwidth - 5 MHz appears max, with 1 Mhz being best  
 Linear operating input voltage - +12.5 to -12.5 volts  
 Absolute max input voltage - +15.5 to -15.5 volts  
 Probe must be powered on or circuit becomes heavily loaded through op amp

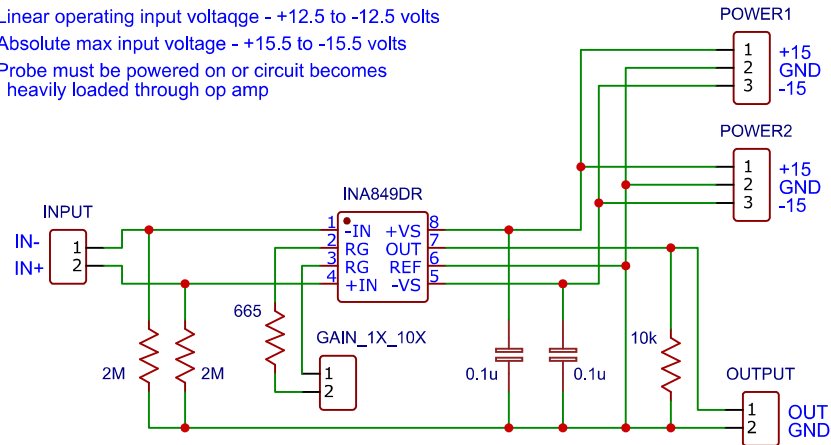

Power1 in from HP triple output supply

Power2 out can be used to supply other differential probes

Attach 10x scope probe

Use jumper to set 1x or 10x gain

$$G = 1 + (6k / R)$$

NC is 1x gain

6k is 2x gain

665 is 10x gain

316 is 20x gain

60 is 100x gain

|                                             |                                      |            |
|---------------------------------------------|--------------------------------------|------------|
| TITLE: Simple Differential Probe Attachment |                                      | REV: 1.0   |
| EasyEDA                                     | Company:                             | Sheet: 1/1 |
|                                             | Date: 2025-12-19 Drawn By: jpwolfe31 |            |