Hard Drive Caddy

HP EliteDesk 800 G6 Mini 65 W | Installation guide

BEFORE YOU BEGIN

Shut down the Mini PC and disconnect power and peripherals. Work on a clean, static-safe surface. The caddy must include a compatible hard drive ribbon cable.

TOOLS AND COMPONENTS

Properly fitting screwdriver bit for the two internal screws; fingers for the rear thumbscrew; compatible drive caddy with ribbon cable. An integrated cooling fan is optional.



Hard drive caddy - top



Caddy underside / fan

COMPATIBILITY NOTE

A caddy with a preinstalled fan is convenient for the 65 W Mini PC, but a fan is not required for every configuration. Confirm the caddy, ribbon cable, and optional fan connector are compatible with your system.

1 Loosen the rear thumbscrew



Turn the Mini PC so the rear ports face you. Loosen the access-panel thumbscrew counterclockwise by hand. It is typically finger-tight.

The captive thumbscrew may remain attached to the chassis.

2 Remove the access panel



Slide the loosened top cover forward, then lift it off the chassis. Place it aside on a clean surface.


3 Identify the two mounting screws



With the chassis open, locate the two circled mounting screws. Both must be removed before the caddy can slide into place.

Keep both screws; you will reuse them to secure the caddy.


4 Remove the mounting screws

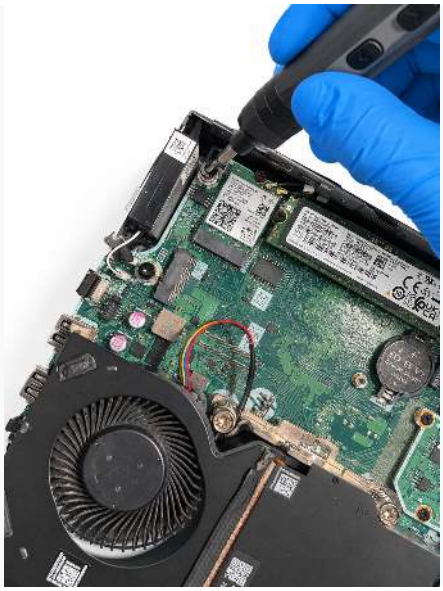

Use a properly fitting driver to remove the two mounting screws identified in the previous step. Keep the screws together.

Use the bit that fully engages the screw head; do not force a loose-fitting bit.

5 Locate the ribbon connector

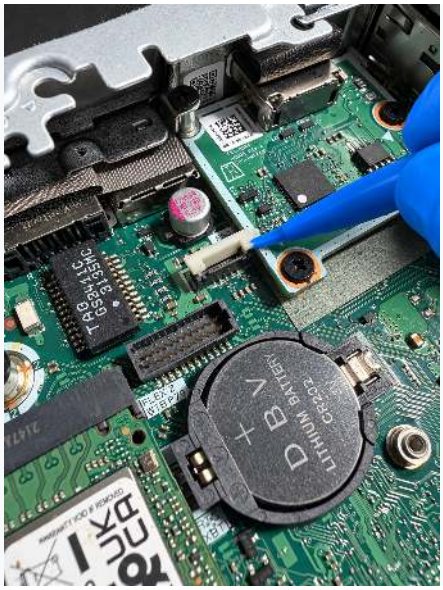

Find the hard drive ribbon-cable ZIF connector on the motherboard. Identify its small locking latch before proceeding.

6 Open the ZIF locking latch



Gently lift the ZIF connector latch to its open position. Apply only light pressure.

The latch is fragile and can detach if lifted too far.

7 Insert the caddy and ribbon cable



Slide the hard drive caddy into the chassis. Insert the caddy ribbon cable straight into the open ZIF connector, then press the latch down to lock it.

Fully align the ribbon before locking; do not twist or force it.


8 Align and secure the caddy



Position the caddy so its mounting holes align with the chassis. Reinstall the two screws removed earlier and tighten until snug.

Avoid overtightening the screws.

9 Connect the optional cooling fan

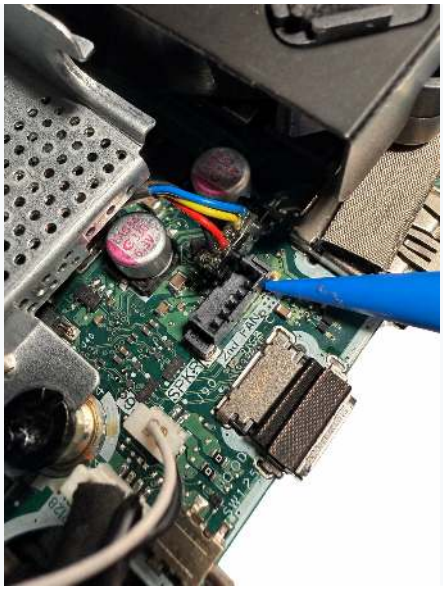

If the caddy includes a fan, connect its cable to the motherboard connector marked for the second fan. If your caddy has no fan, skip this step.

Check that the fan wire is clear of moving blades.

10 Reassemble and test



Replace the top cover, slide it into place, and tighten the rear thumbscrew. Reconnect power and start the PC. If a fan is installed, confirm that it spins.

For installing the hard drive itself, use the companion HDD installation guide.