winCasino Instructions

Raynald Gauvin et. al., adapted by J. R. Minter

Started: 2020-06-27, Last modified: 2020-08-13

Contents

Introduction	1
Quick explanation of the generated and emitted electrons and light element absorption	1
Spatial vs. Analytical View of Light Element Analysis	3
What is Casino?	4
What can CASINO do?	5
Why version 2	5
Who wrote CASINO?	5
Creating a Simulation	5
Step 1: Creating the Simulation	5
Step 2: Creating Layers	6
Step 3: Editing Layers	7
Step 4: Setting up the Microscope and Simulation	7
Step 5: Selecting Distributions	8
Step 6: Choosing Physical Models	9
Step 7: Options	9
Step 8: The End	10

Back to Index

Introduction

Quick explanation of the generated and emitted electrons and light element absorption.

The key equation is:

$$\frac{I}{I_0} = exp[-\frac{\mu}{\rho}\rho s]$$

Absorption depends on the mass absorption coefficient $\frac{\mu}{\rho}$, and the path length s. The take-off angle Ψ determines the path length.

The mac are large and we want to minimize the path length by reducing kV and avoiding rough surfaces.

$$f(\chi) = \frac{emitted}{generated}$$

$$A = \frac{f(\chi)^{standard}}{f(\chi)^{sample}}$$

We use $f(\chi)$ to evaluate the degree of absorption in a material. For the sample we want:

 $f(\chi) > 0.75$ (i.e., < 25% absorption)

The absorption correction is simply the ratio of $f(\chi)$ for standard (referenced to pure element) and sample. Nomenclature is important. This simulation, first suggested by Paul Carpenter (Lehigh 2017) is reproduced in color from a screenshot in the application... This was from the Thursday Notebook tab p. 4.


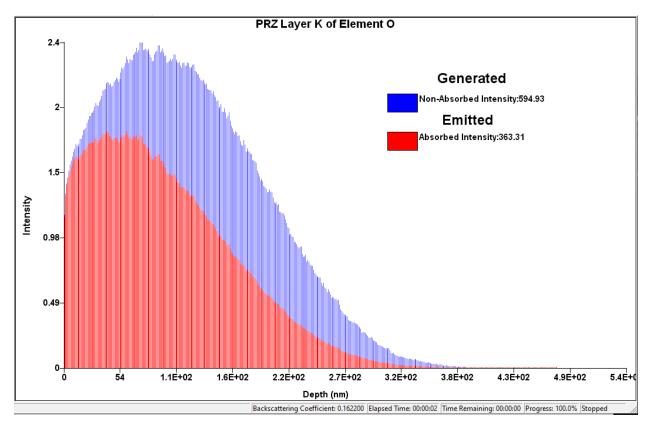


Figure 1: Note the "non-absorbed" electrons are the generated electrons and the "absorbed" electrons are emitted electrons


And here is a recreation of Paul Carpenter's accompanying diagram:

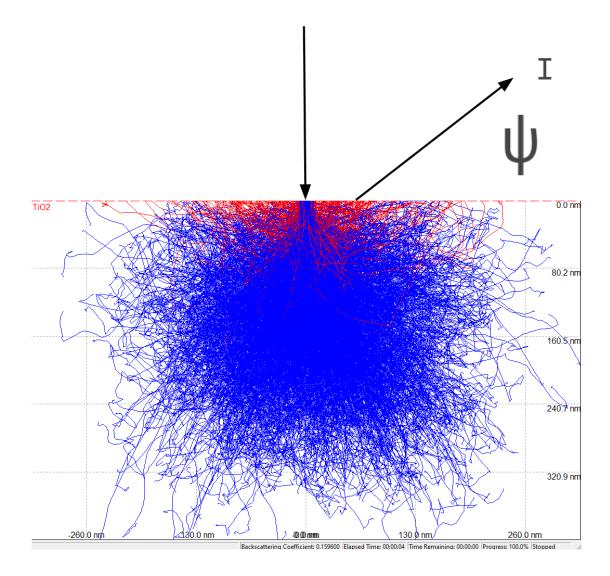

Spatial vs. Analytical View of Light Element Analysis

- 1. Light Element analysis requires low kv to minimize x-ray absorption. The emitted x-ray volume small compared to the generated volume.
- 2. There are spatial considerations at low kV:
- There is a small scattering volume.
- One needs to watch for polishing and cleanliness issues.
- High spatial resolution of analysis is often required.
- 3. There are several helpful analytical tools for light element analysis.
- Spatial analysis, X-ray volumes: Casino, DTSA-II and the Kanaya-Okayama and Anderson-Hasler equations.


- Data processing, ZAF factors, $f(\chi)$, macs: CalcZAF.
- Spectral generation (bulk, film, particle): DTSA-II.
- 4. Light Elements: Low generated Intensity

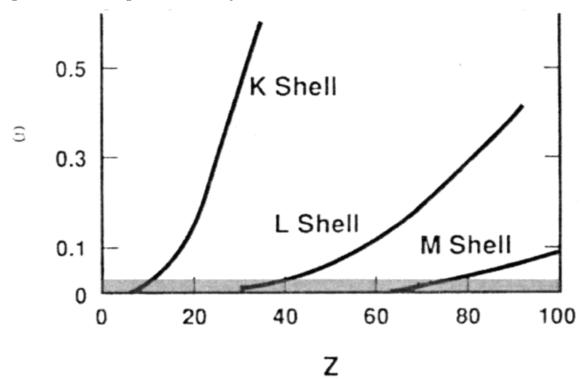

- We must be concerned with the Fluorescent yield, ω , vs. Z. ω is the fraction of ionizations resulting in characteristic x-ray emission **relative to** the total number of ionizations, and (1ω) is the fraction of auger electrons. Light elements produce **auger electrons** in **preference** to **x-rays**.
- Low ω region of light element and/or low energy analysis: There is a high overvoltage but the generation of x-rays is limited by Auger production.
- 5. Surface Characteristics and Light Element Analysis
- Sensitivity to surface roughness from assumed instrument take-off angke results in errors in the X-ray absorption correction.
- Contamination and variations in thickness of carbon coating or differences in carbon coat thickness on sample vs. standard produce errors.
- All microanalysis is really thin-film analysis and the surface layer becomes dimensionally significant for light element / low energy analysis.
- Light element analysis warrants use of thin-film correction such as the GMR, BadgerFilm open source thin film software, or the commercial products Strategem or XFilm. For example, corrections can be made for differential carbon thickness, contamination layer(s), etc.

What is Casino?

Adapted from here to be able to get html and pdf output. Minor reformatting from the original and adding PDF output.

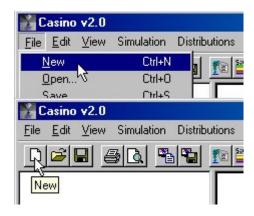

The CASINO acronym has been derived from the words "monte CArlo SImulation of electron trajectory in solids". This program is a Monte Carlo simulation of electron trajectory in solid specially designed for low beam interaction in a bulk and thin foil. This complex single scattering Monte Carlo program is specifically designed for low energy beam interaction and can be used to generate many of the recorded signals (X-rays and backscattered electrons) in a scanning electron microscope. This program can also be efficiently used for all of the accelerated voltage found on a field emission scanning electron microscope (0.1 to 30 KeV).

What can CASINO do?

This program is designed to simulate a large amount of electron trajectories in a solid of your choice. The main idea is to simulate enough electron trajectories to represent the condition used to image structures in a scanning electron microscope (SEM). Thus it is possible to predict theoretically the signals observed in the SEM. This Monte Carlo program use different models to simulate the interaction of electrons with a solid. For now, the versions 2 of CASINO produce the following signals: backscattered coefficient and X-ray. It also handles those geometry: muti-layers samples and grain boundary.

Why version 2

Version 1 of CASINO was starting to show some age with it's DOS based interface. A new WindowsTM based interface has made CASINO much easier to use.

Who wrote CASINO?

Version 1:

The Monte Carlo program CASINO has been programmed by the research team of Raynald Gauvin (Ph.D., Full professor at Université de Sherbrooke, Québec, Canada). The program has been initially programed by Pierre Hovongton, Ph.D. and Dominique Drouin, Ph.D. in 1996 and it has been updated by Paula Horny, M.Sc.A. student and by Hendrix Demers, undergraduate student in 1999. All this work have been performed under the suppervision of Professor Raynald Gauvin.

Creating a Simulation


Step 1: Creating the Simulation

To create a new simulation select File/New from the menu or click of the

The NEW SIMULATION WIZARD will appear on the screen.

Step 2: Creating Layers

The first dialog box will be the EDIT LAYERS DIALOG. In this dialog you will create the layers of your sample.

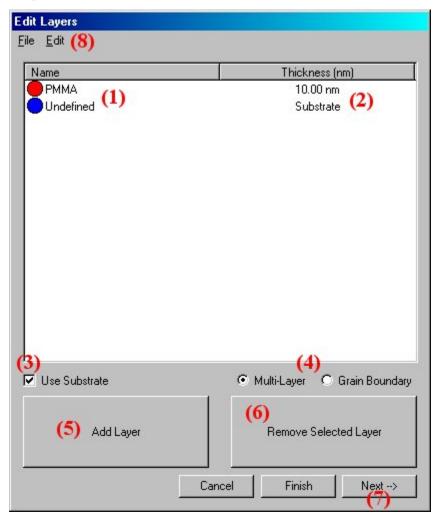

To add a layer, you simply press the ADD LAYER BUTTON (5).

If you add too many layers, you can remove them by selecting them and pressing the REMOVE SELECTED LAYER BUTTON (6) or by pressing DEL on the keyboard.

The NAME and CHEMICAL COMPOSITION of each layer can be defined by double-clicking the names of the layers (1). This will bring up the LAYER CHEMICAL COMPOSITION DIALOG which is described in Step 3.

If you wish to define the last layer as a substrate, make sure the USE SUBSTRATE CHECKBOX (3) is checked.

If your sample is multiple horizontal layers, select MULTI-LAYER (4), else if you sample is composed of vertical layers select GRAIN BOUNDARY (4).

To change the thickness of the layers simply click on the current thickness (2) and type in the new thickness.


You can copy and paste layers by selecting them and using the EDIT menu (8).

When your sample is completed you can press Next --> (7) to move on to the next dialog MICROSCOPE AND SIMULATION PROPERTIES which is explained in Step 4.

Step 3: Editing Layers

This dialog box will let you give a name and a chemical composition to a layer.

Start by entering the chemical composition in the COMPOSITION EDIT BOX (1).

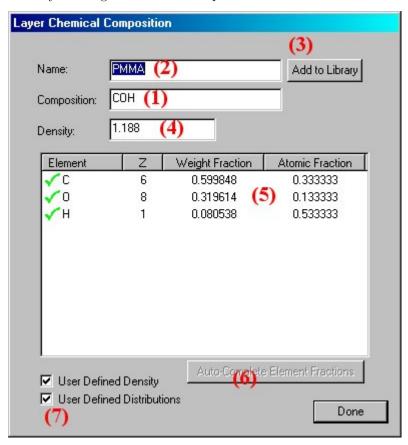

The elements must be written in Uppercase for the first letter and lowercase for the other, example (Fe2O3). Then give the layer a name (2), if no name is given, the composition will be chosen as the name.

The density (4) will automatically be calculated from the atomic weight and fractions, this calculation does not take into account the structure of the material and you may want to **change the density to it's actual value*.

If you wish to change the atomic fractions or weight fractions manually then simply click (5) on the value you wish to change. To auto-complete an element as the remainder of the composition simply press the AUTO-COMPLETE ELEMENT FRACTIONS BUTTON (6) after selecting the element.


To save a composition for future use, give it a name and press ADD TO LIBRARY BUTTON (3). This will store the information so that next time you enter a name for a layer and it exists in the library it will set the layer to the saved layer.

To reset values to their automatically calculated states, just un-check the boxes USER DEFINED DENSITY AND DISTRIBUTION (7).

Repeat Step 3 for each layer and then move on to Step 4.

Step 4: Setting up the Microscope and Simulation

This dialog lets you select the parameters of your simulation.

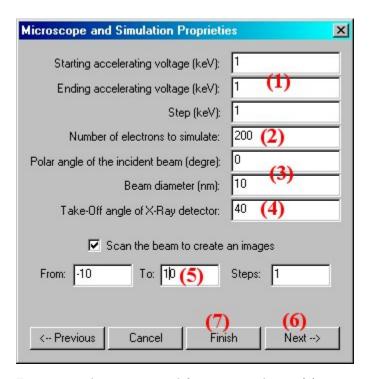

First, enter the energy used for your simulation (1).

The first box is where you set your starting energy, the second is the energy where you want to stop the simulation and the third box contains the step in KeV between each simulation.

If the ending energy is smaller or equal to the starting, then the step will be ignored and only one simulation at the starting energy will be done.

Second, enter the number of electrons you want to simulate (2). The bigger the number, the better the results but the longer the simulation.

Third is the beam parameters (3), the first box represents the angle the electrons will be fired into the sample and the second box contains the width of the beam.


Fourth, define the angle of your X-Ray detector (4) with the positive X-axis of the sample being 0 and moving counterclockwise towards the negative X-axis being 180.

Finally, set the limits of your scan (5). The sample is centered at 0 nm. The step is in nanometers. If you do not wish to scan your sample, uncheck the box SCAN BEAM TO CREATE AN IMAGE. The FROM box then contains the position of the beam on the sample.

At this point you can already press FINISH (7) and move on to Step 8, but you can continue through the rest of the options by pressing NEXT--> (6) and moving on to Step 5.

Step 5: Selecting Distributions


Here is where you set up your distribution.

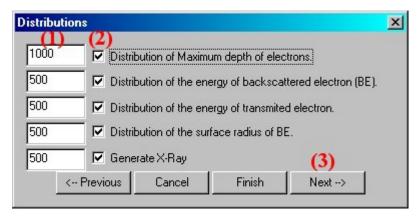

Check the box for each distribution you wish to see after calculations (2). Enter the number of points you want each distribution to have (1).

Move on to the next step (3).

Step 6: Choosing Physical Models

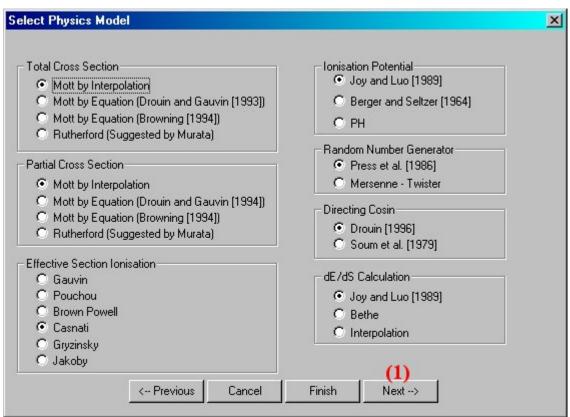

Unless you know which model does what, skip to the next step (1).

Step 7: Options

(1): Conserving the trajectories takes up a lot of memory. Conserving NONE will not save any trajectories to memory which means that there is no way to view the trajectories after they have been calculated.

DISPLAYED ONLY will only keep the trajectories that have been displayed on the screen, this option is good if you want to see the trajectories and change some of their viewing parameters and ALL is used if you want to

keep all the trajectories in memory, display a selected few during calculation but after calculations it will display all of them.

- (2): Number of electron trajectories to display on the screen during calculations.
- (3): Minimal time between backups which are used to continue simulation in case of accidental termination of the simulation.
- (4): The minimal energy, in KeV, at which a trajectory is terminated.
- (5): If checked the trajectories will be displayed at regular intervals during the simulation, otherwise the first trajectories are displayed.
- (6): Press FINISH when your simulation is ready to be calculated on go to Step 8.

Step 8: The End

After pressing FINISH you will be asked if you want to begin the simulation, press YES if you wish to otherwise press NO.

Back to Index