
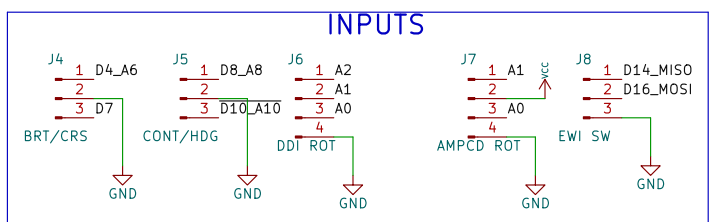
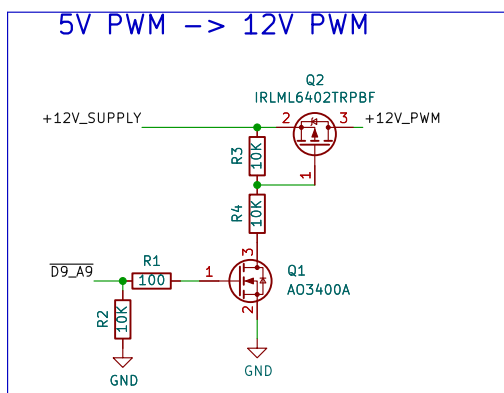
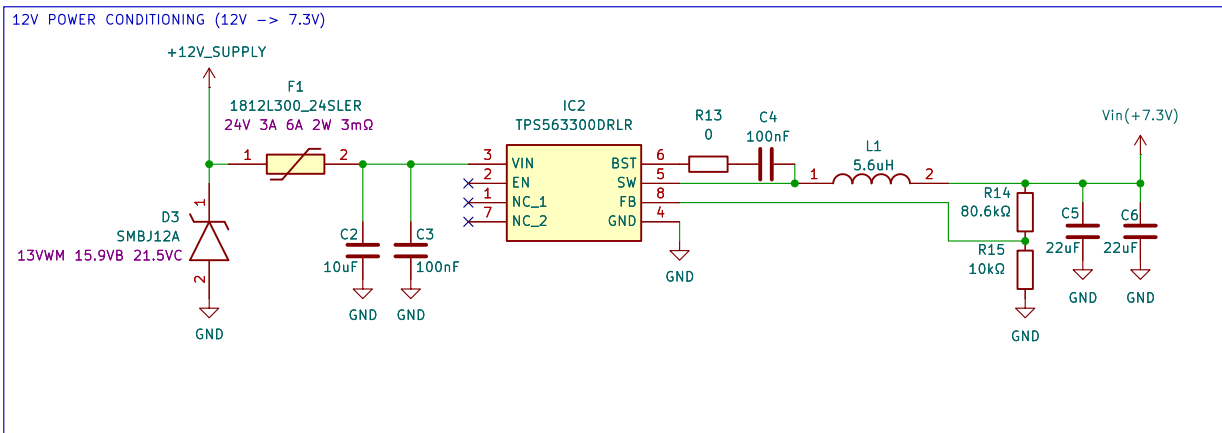
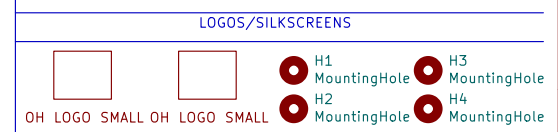
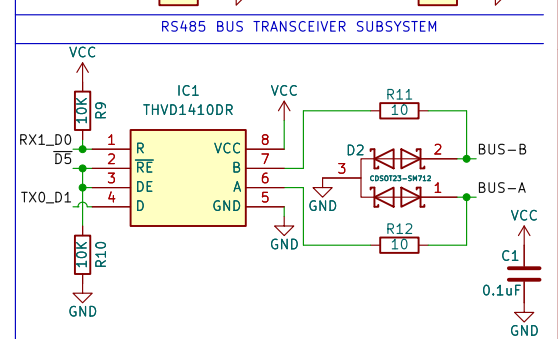
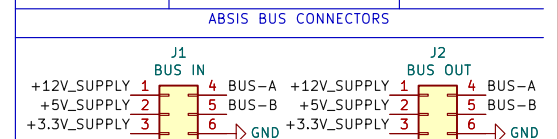
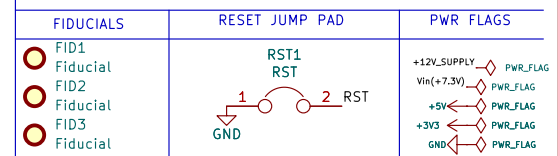
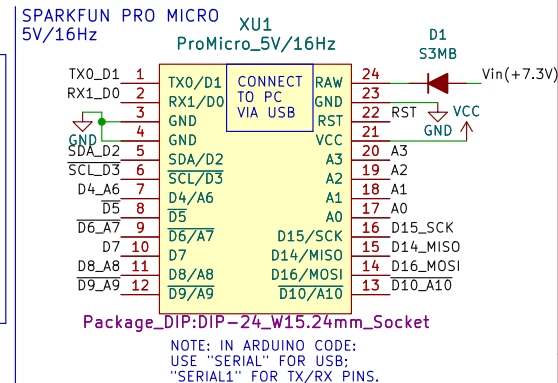
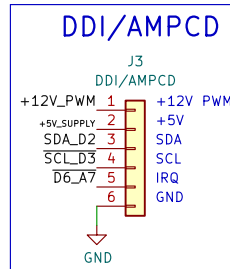


NOTES: (UNLESS OTHERWISE SPECIFIED)

- 1) RS485 BUS TERMINATION: DO NOT INSTALL J2 (BUS OUT) CONNECTOR AND ADD A 120Ω THRU-HOLE RESISTOR ACROSS PINS 4&5 OF J2(BUS OUT) ON LAST ABSIS ALE OF RS485 BUS.
 - 2) FOR ARDUINO PRO MICRO PROGRAMMING VIA USB: MAY BE PROGRAMMED IN-CIRCUIT.
 - 3) THE RAW POWER PIN ON THE PRO MICRO AND Vin(+7.3V) ARE TIED TOGETHER. IF THE PRO MICRO BOARD IS POWERED VIA USB, THE VOLTAGE AT THIS PIN IS ABOUT 4.8V (needs to be tested in circuit)
 - 4) THIS PCB IS DESIGNED TO CONTROL BOTH THE DDI AND AMPCD:
 - A) FOR CONNECTION TO DDI, CONNECT BRT SW TO J4, CONT TO J5, AND TOP ROTARY TO J6.
 - B) FOR CONNECTION TO AMPCD, CONNECT CRS TO J4, HDG TO J5, AND TOP ROTARY TO J7.
 - 5) WARNING: J6 OR J7 MAY ONLY BE USED ONE AT A TIME.
 - 6) IF PCB IS POWERED VIA ABSIS BUS (I.E. PRO-MICRO IS POWERED VIA RAW PIN INSTEAD OF USB) THEN DESOLDER/REMOVE F1 FUSE ON PRO-MICRO AND ENSURE JP1 JUMPER ON PRO-MICRO IS NOT BRIDGED/SOLDERED. FAILURE TO DO SO WILL RESULT IN POWER FROM ON BOARD VOLTAGE REGULATOR BACKFEEDING THE USB POWER LINE.
- CAUTION: AFTER THIS MODIFICATION, THE PRO-MICRO CAN ONLY BE POWERED VIA THE RAW PIN. USB POWER WILL NOT BE AVAILABLE TO THE PRO-MICRO.
- 7) WARNING: DO NOT POWER THIS CIRCUIT FROM Vin(+7.3V) OR VCC SEPARATELY. DAMAGE WILL OCCUR!

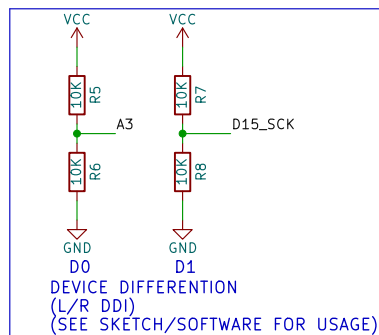

Sheet: CONTROLLER_AMP CD DDI
File: CONTROLLER_AMP CD DDI.kicad_sch

Title: DDI/AMPCD CONTROLLER

Size: A Date: 2026-09-26

License: CC BY-NC-SA

Rev: 5

Id: 1/1