

D



- C




A


DCB

A

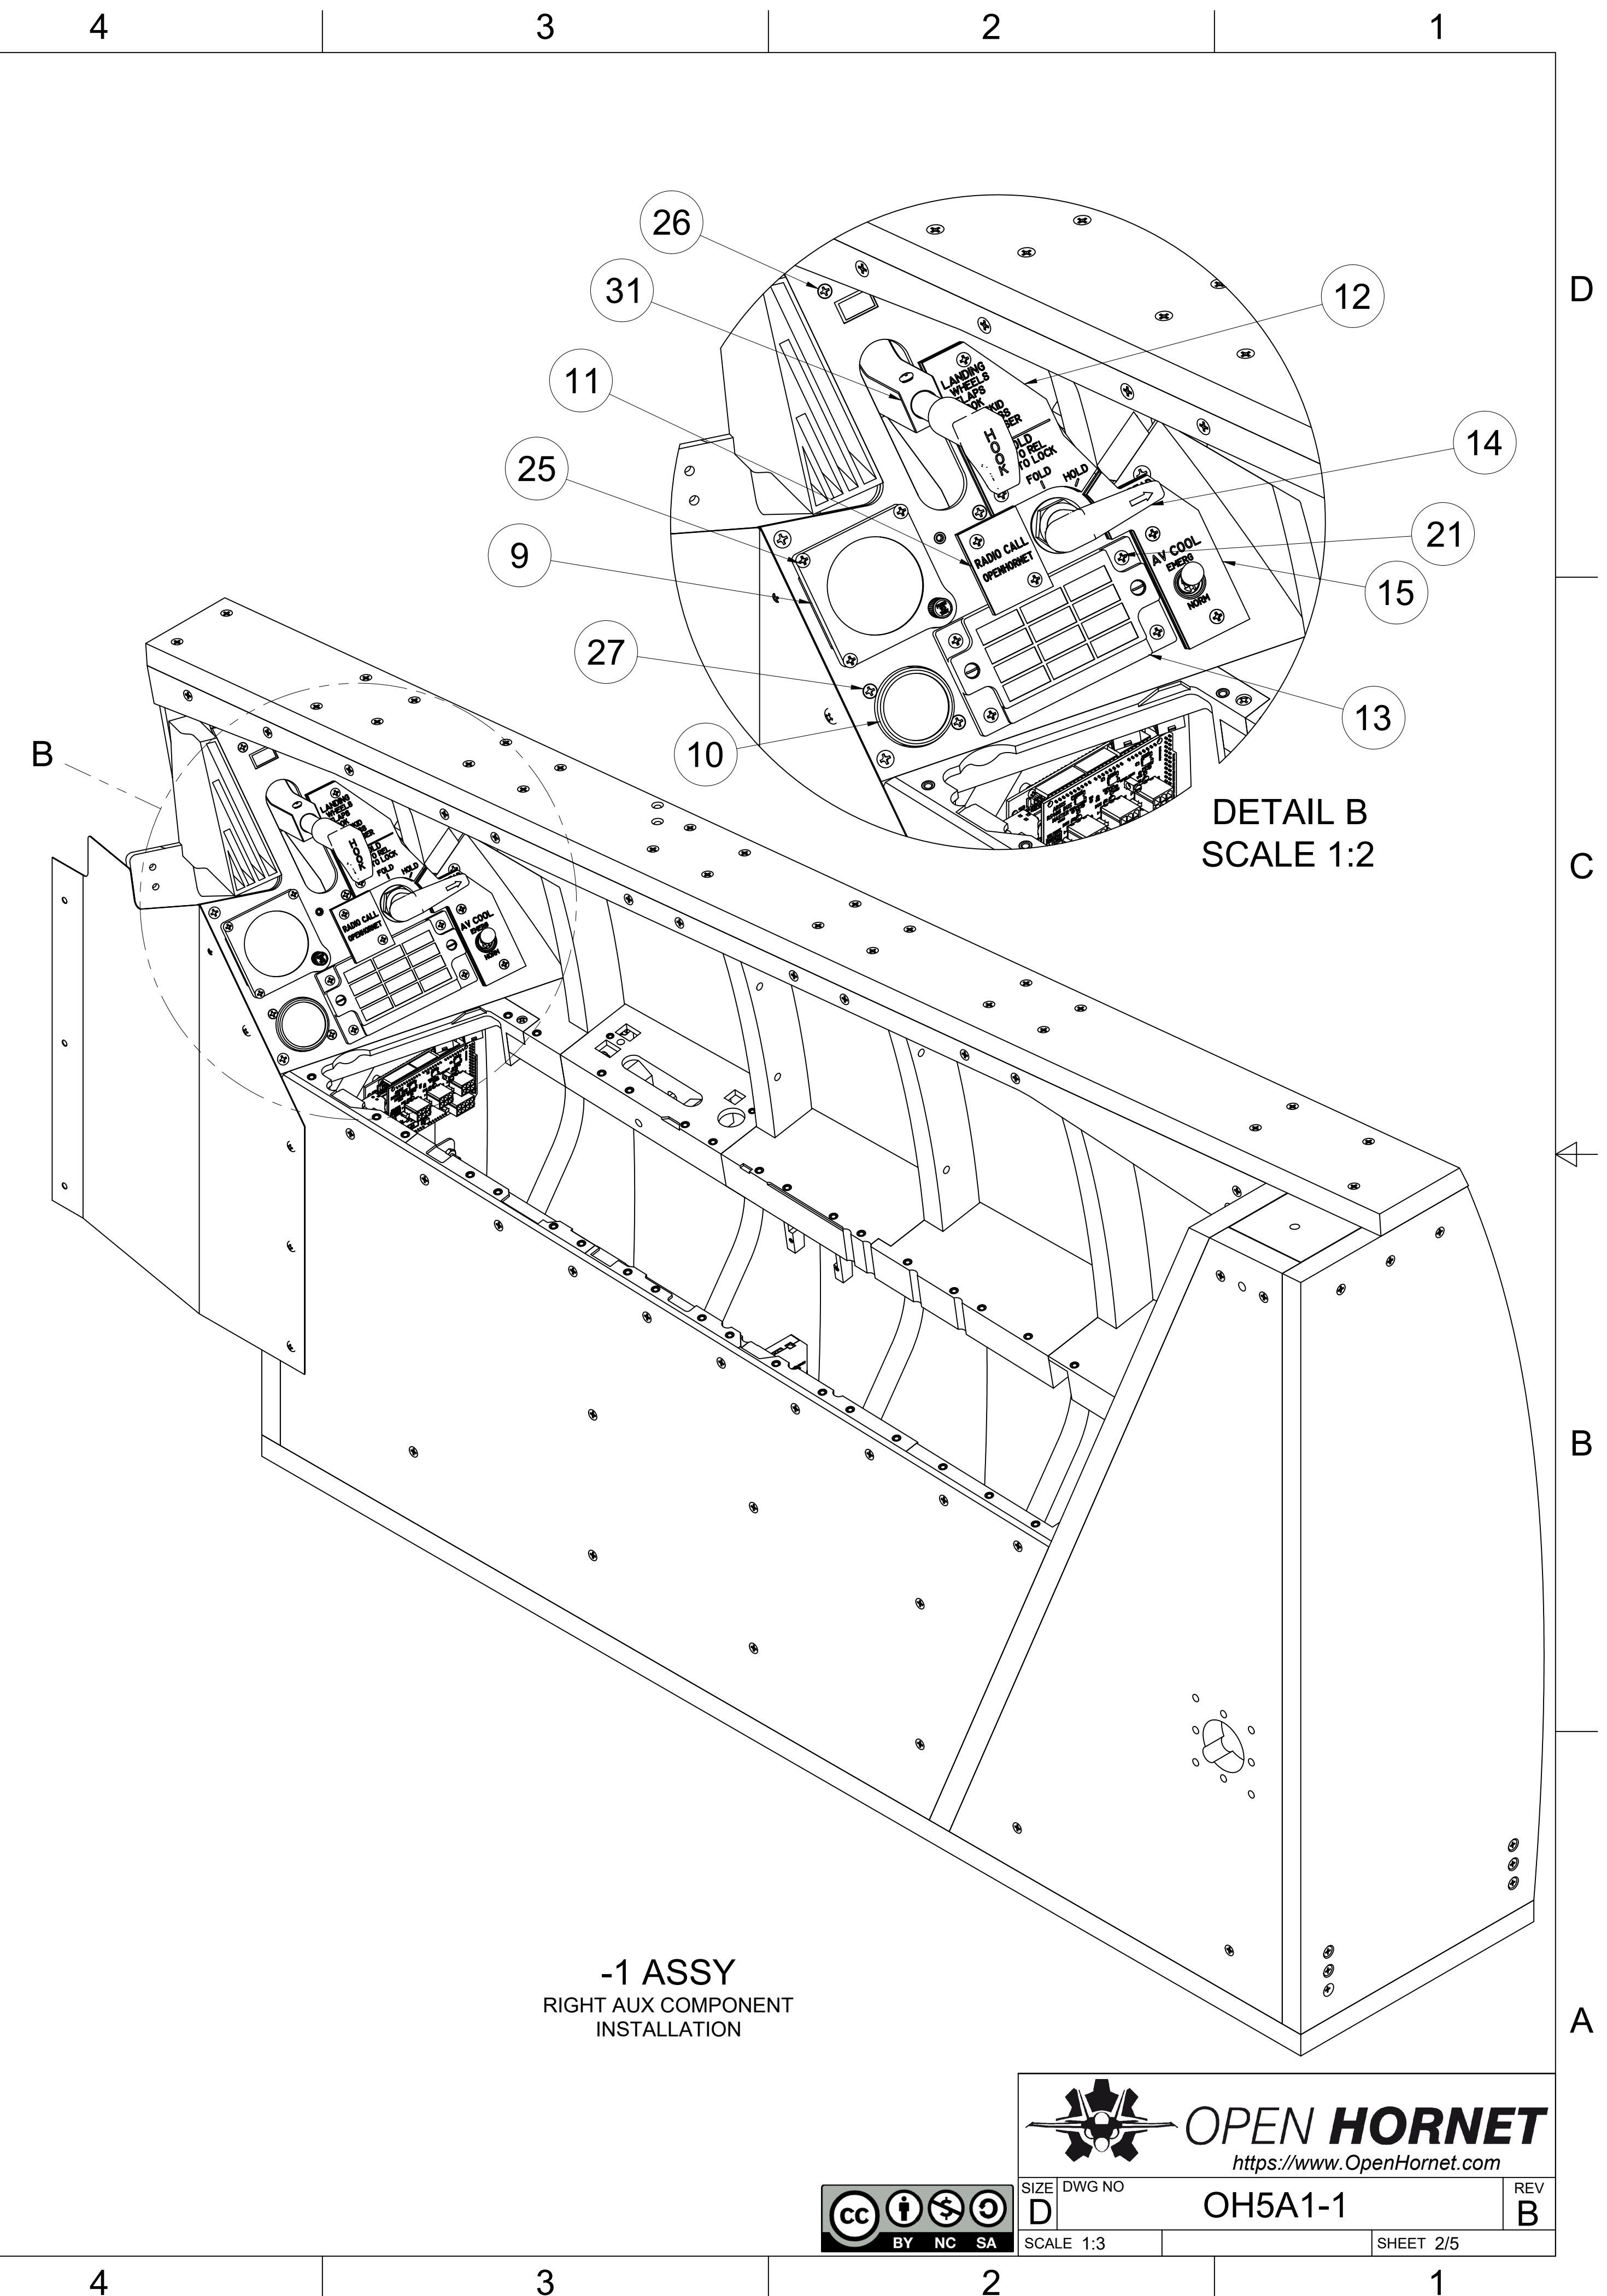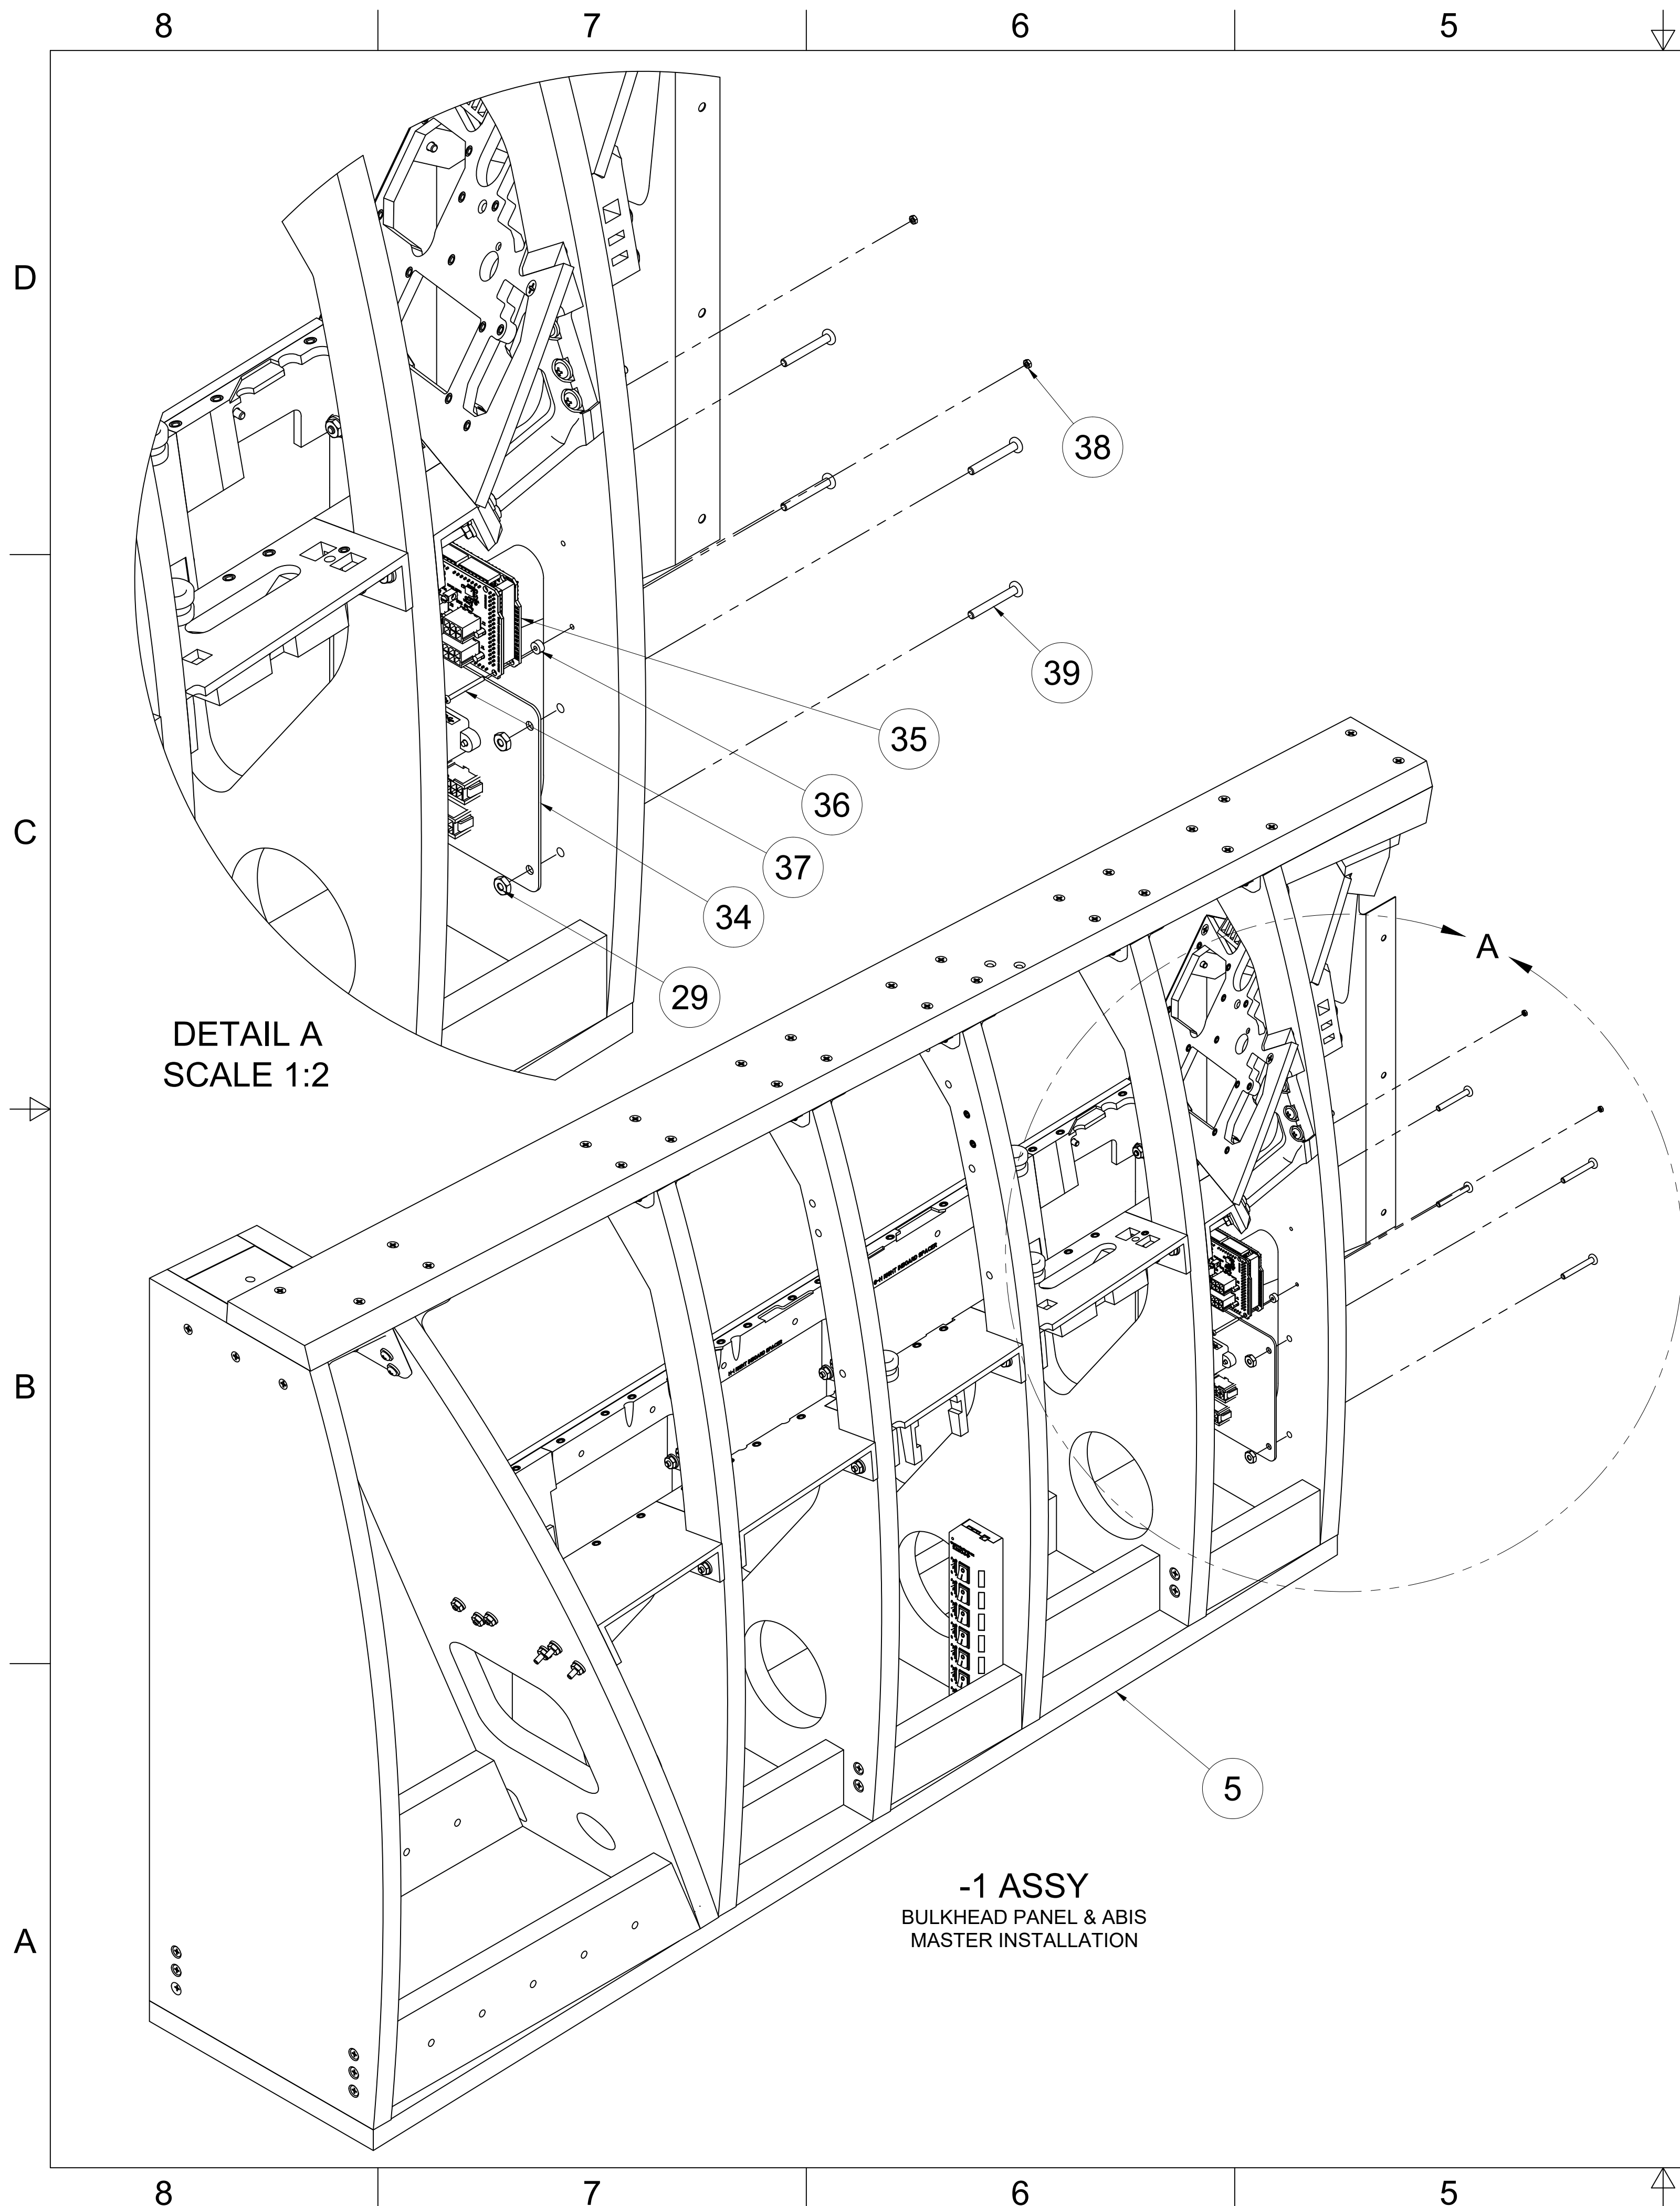


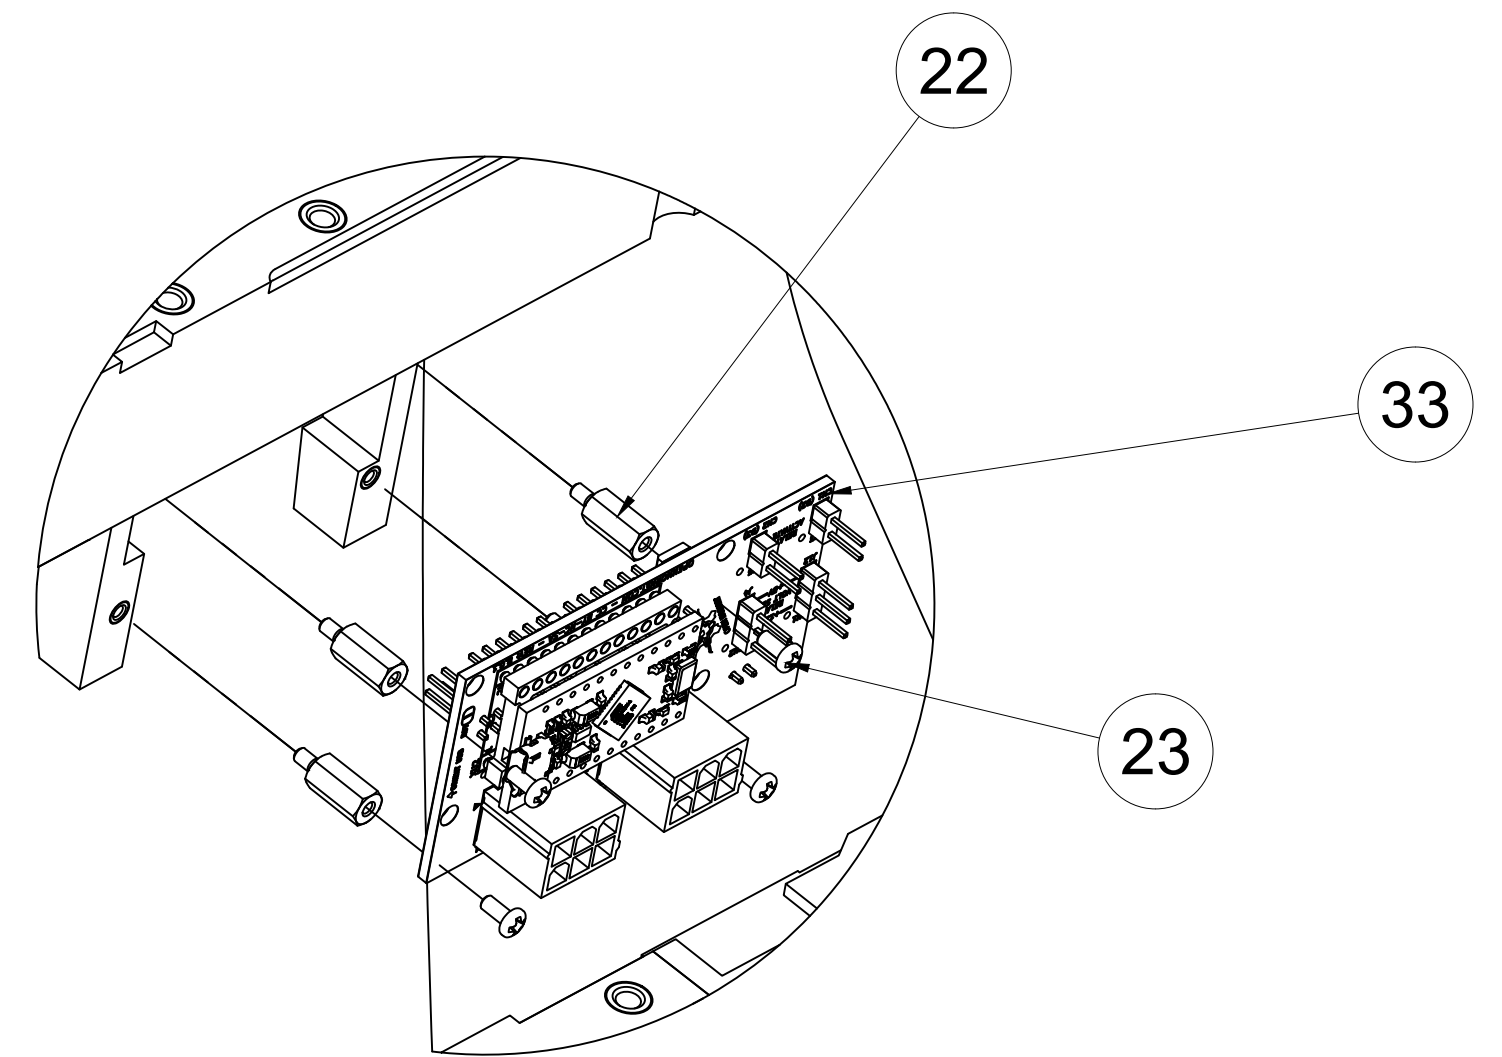

DETAIL C
SCALE 1:1

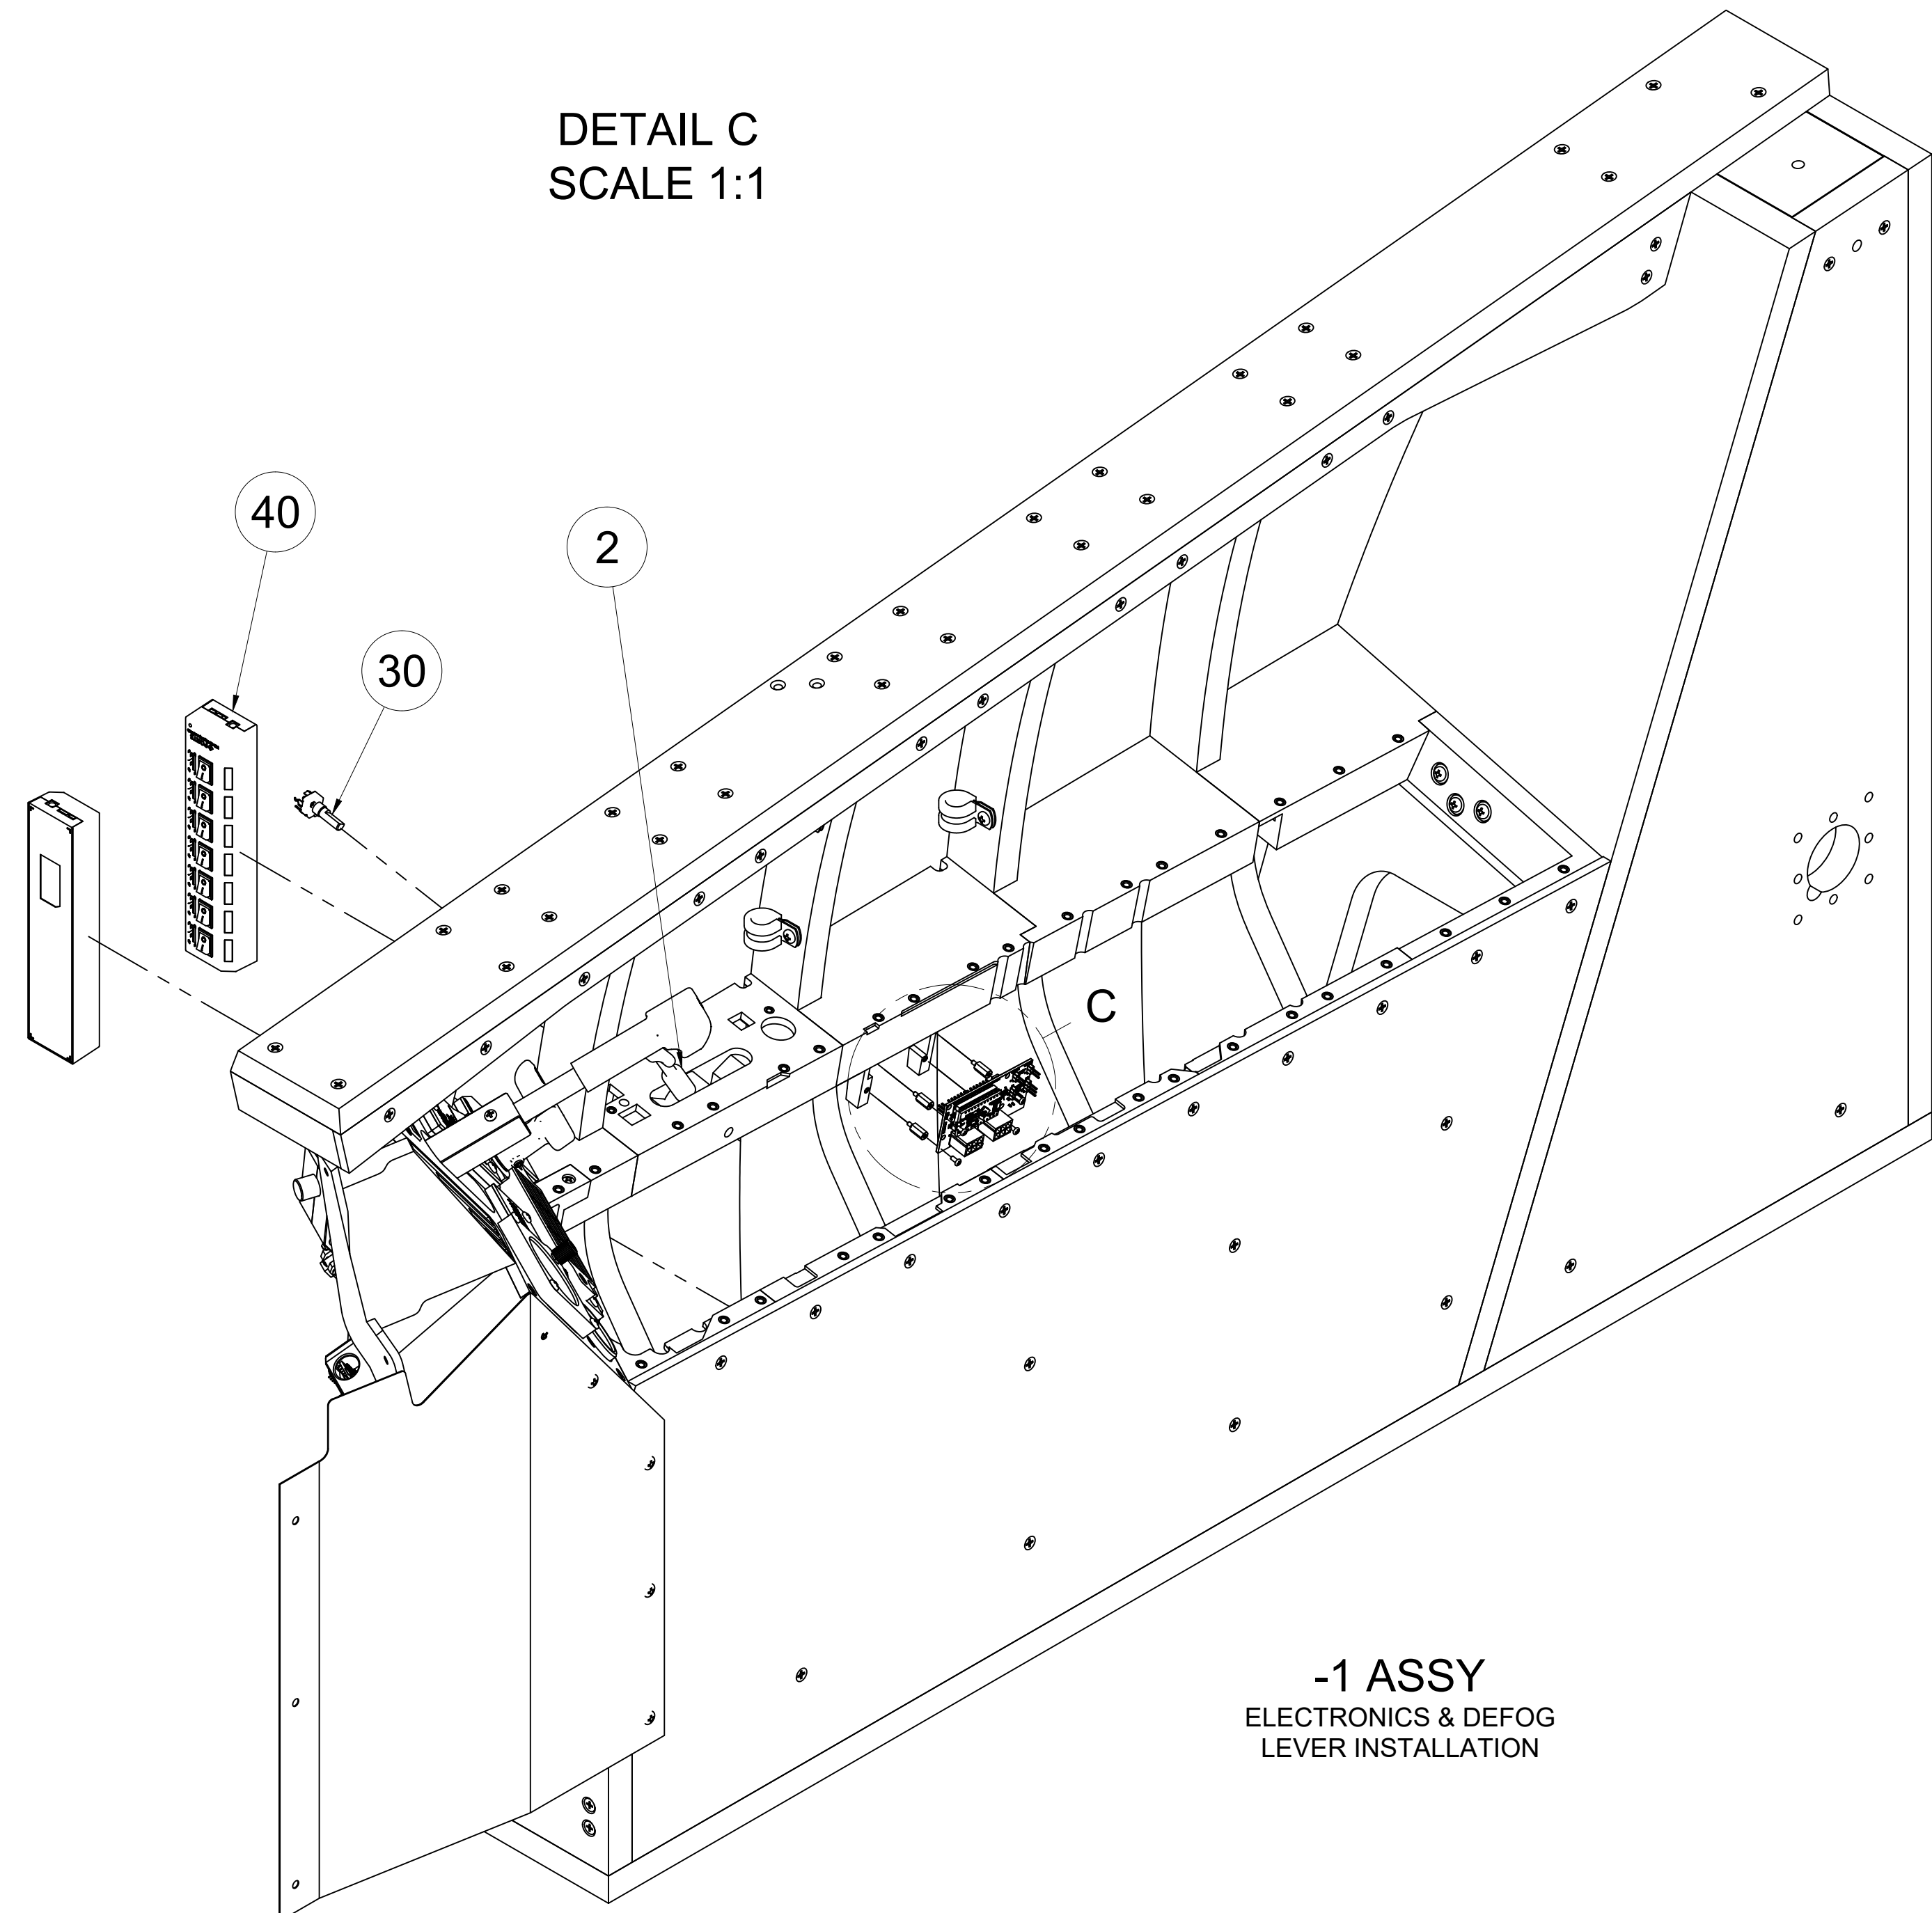


-1 ASSY
ELECTRONICS & DEFOG
LEVER INSTALLATION

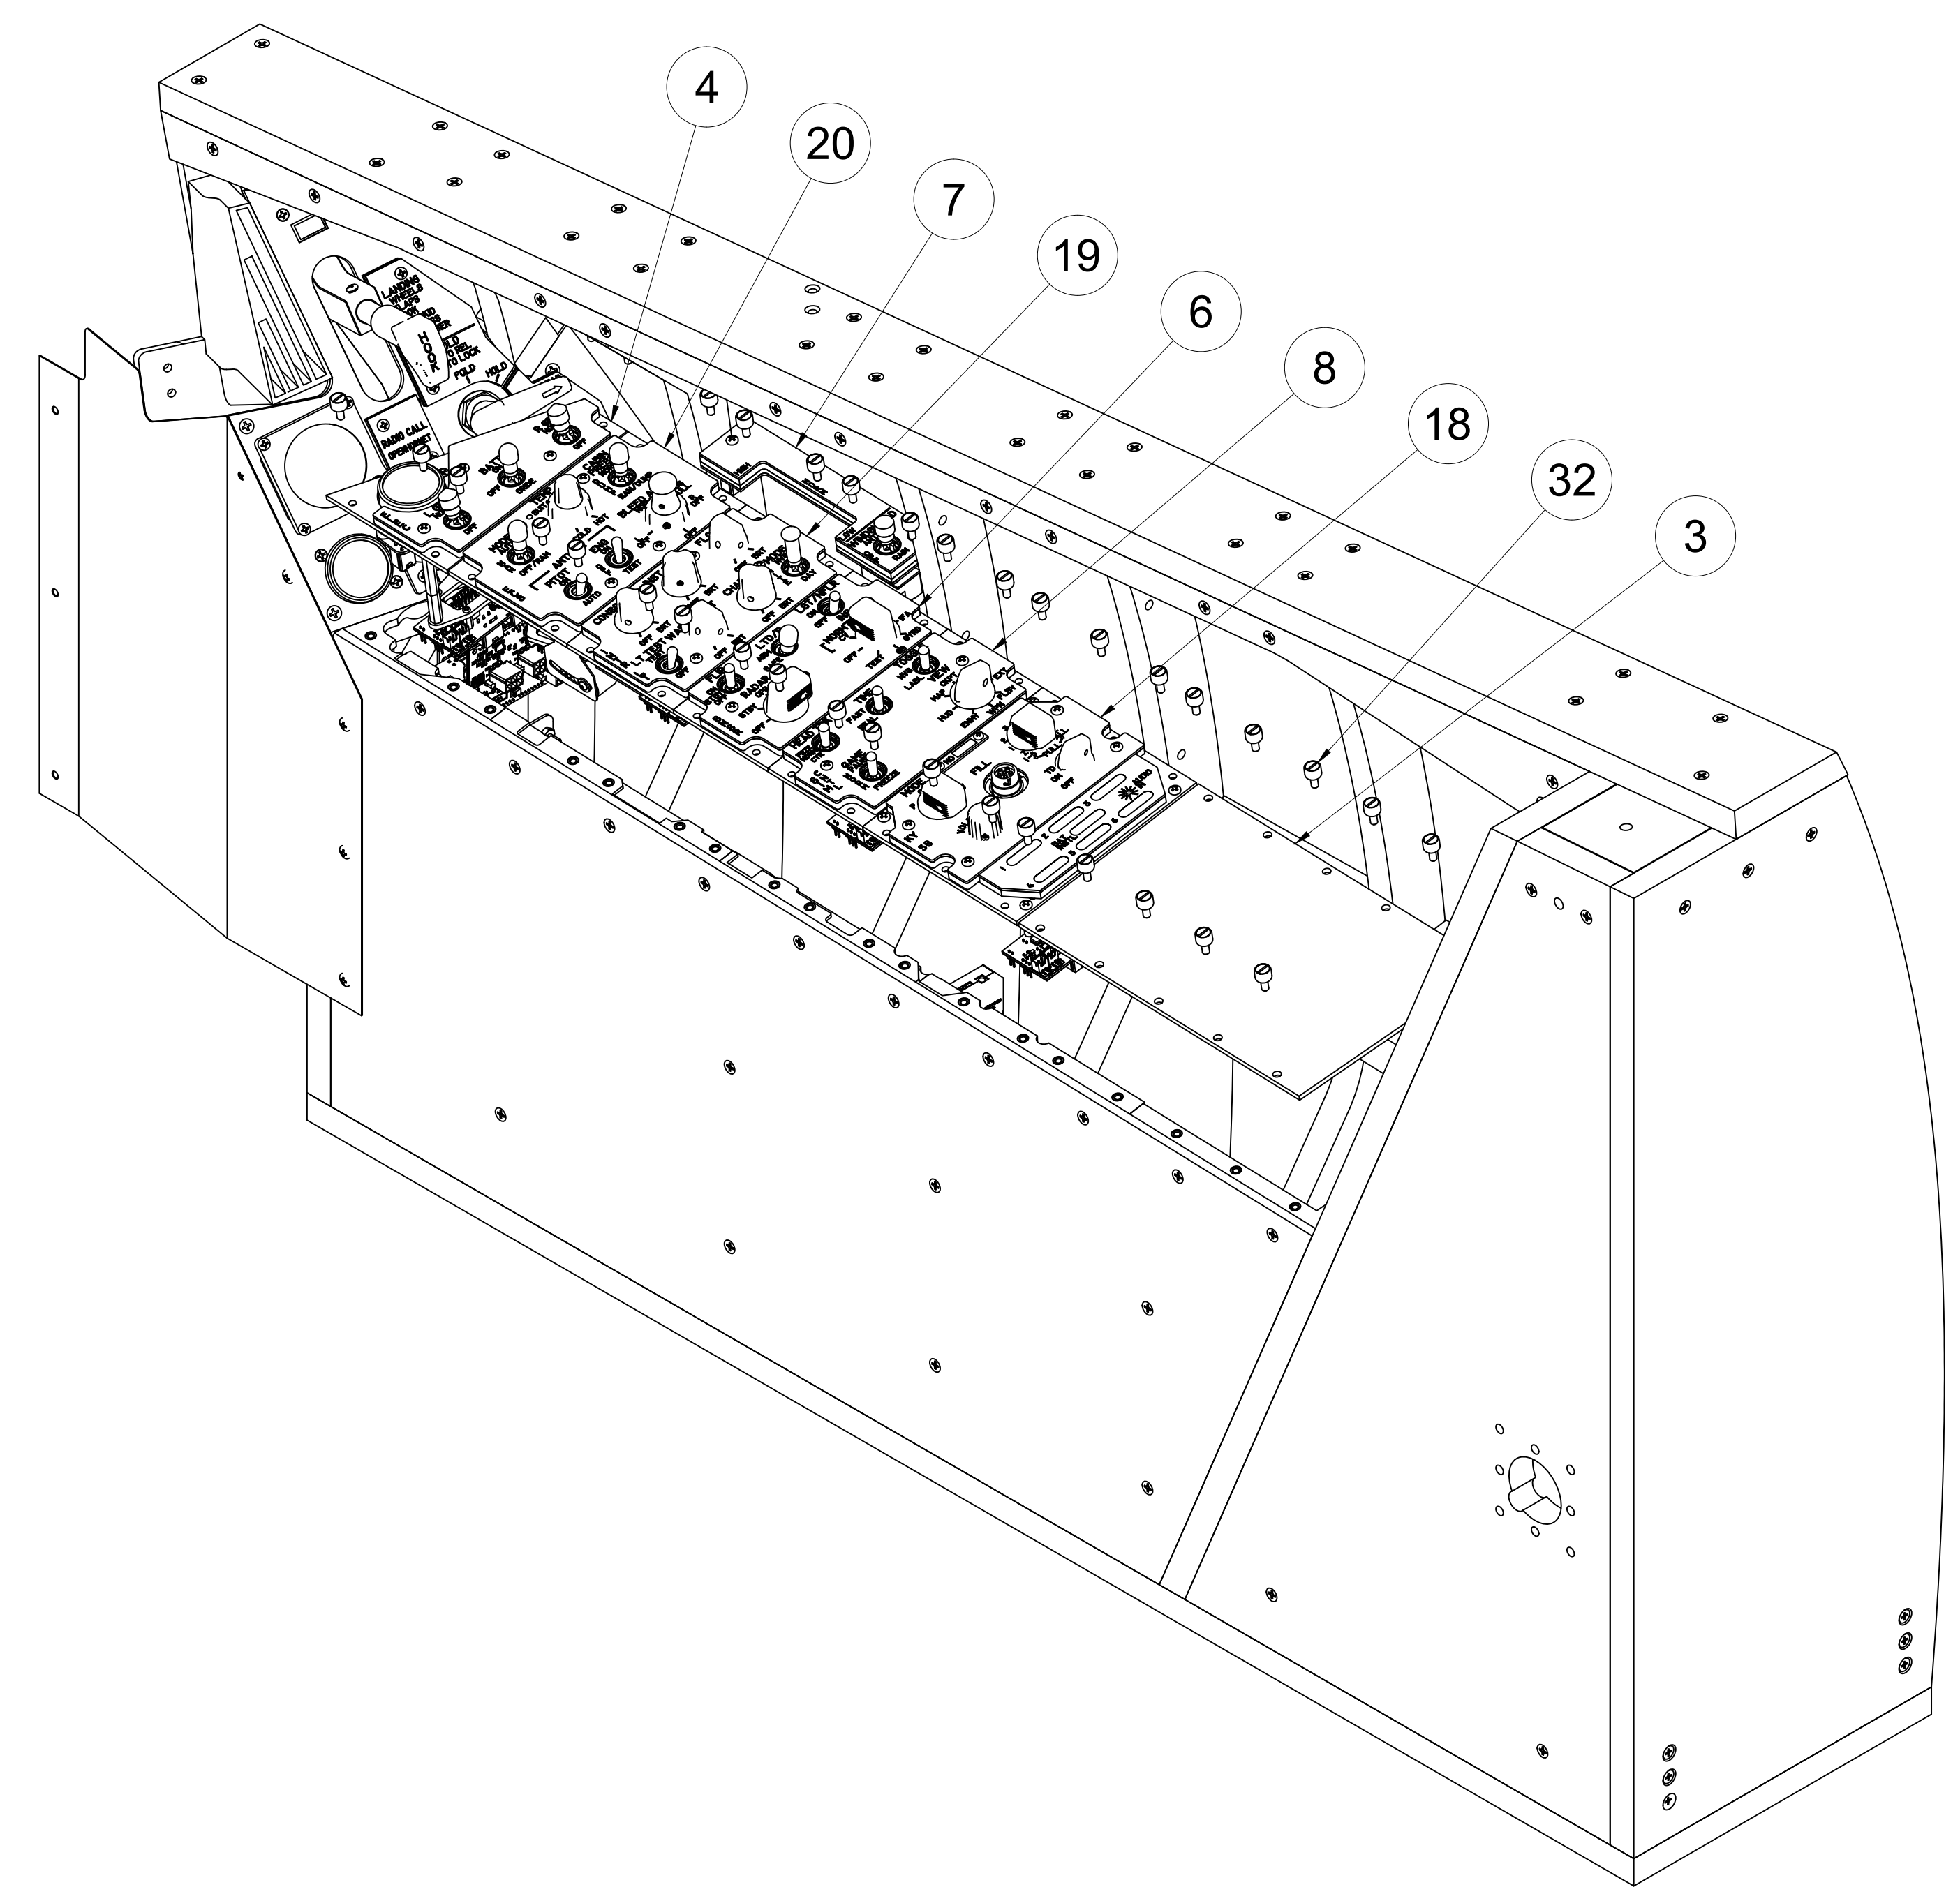

-1 ASSY
RIGHT CONSOLE PANEL
INSTALLATION



		OPEN HORNET https://www.OpenHornet.com	
SIZE	D	DWG NO	OH5A1-1
SCALE	1:3	REV	B
		SHEET 3/5	

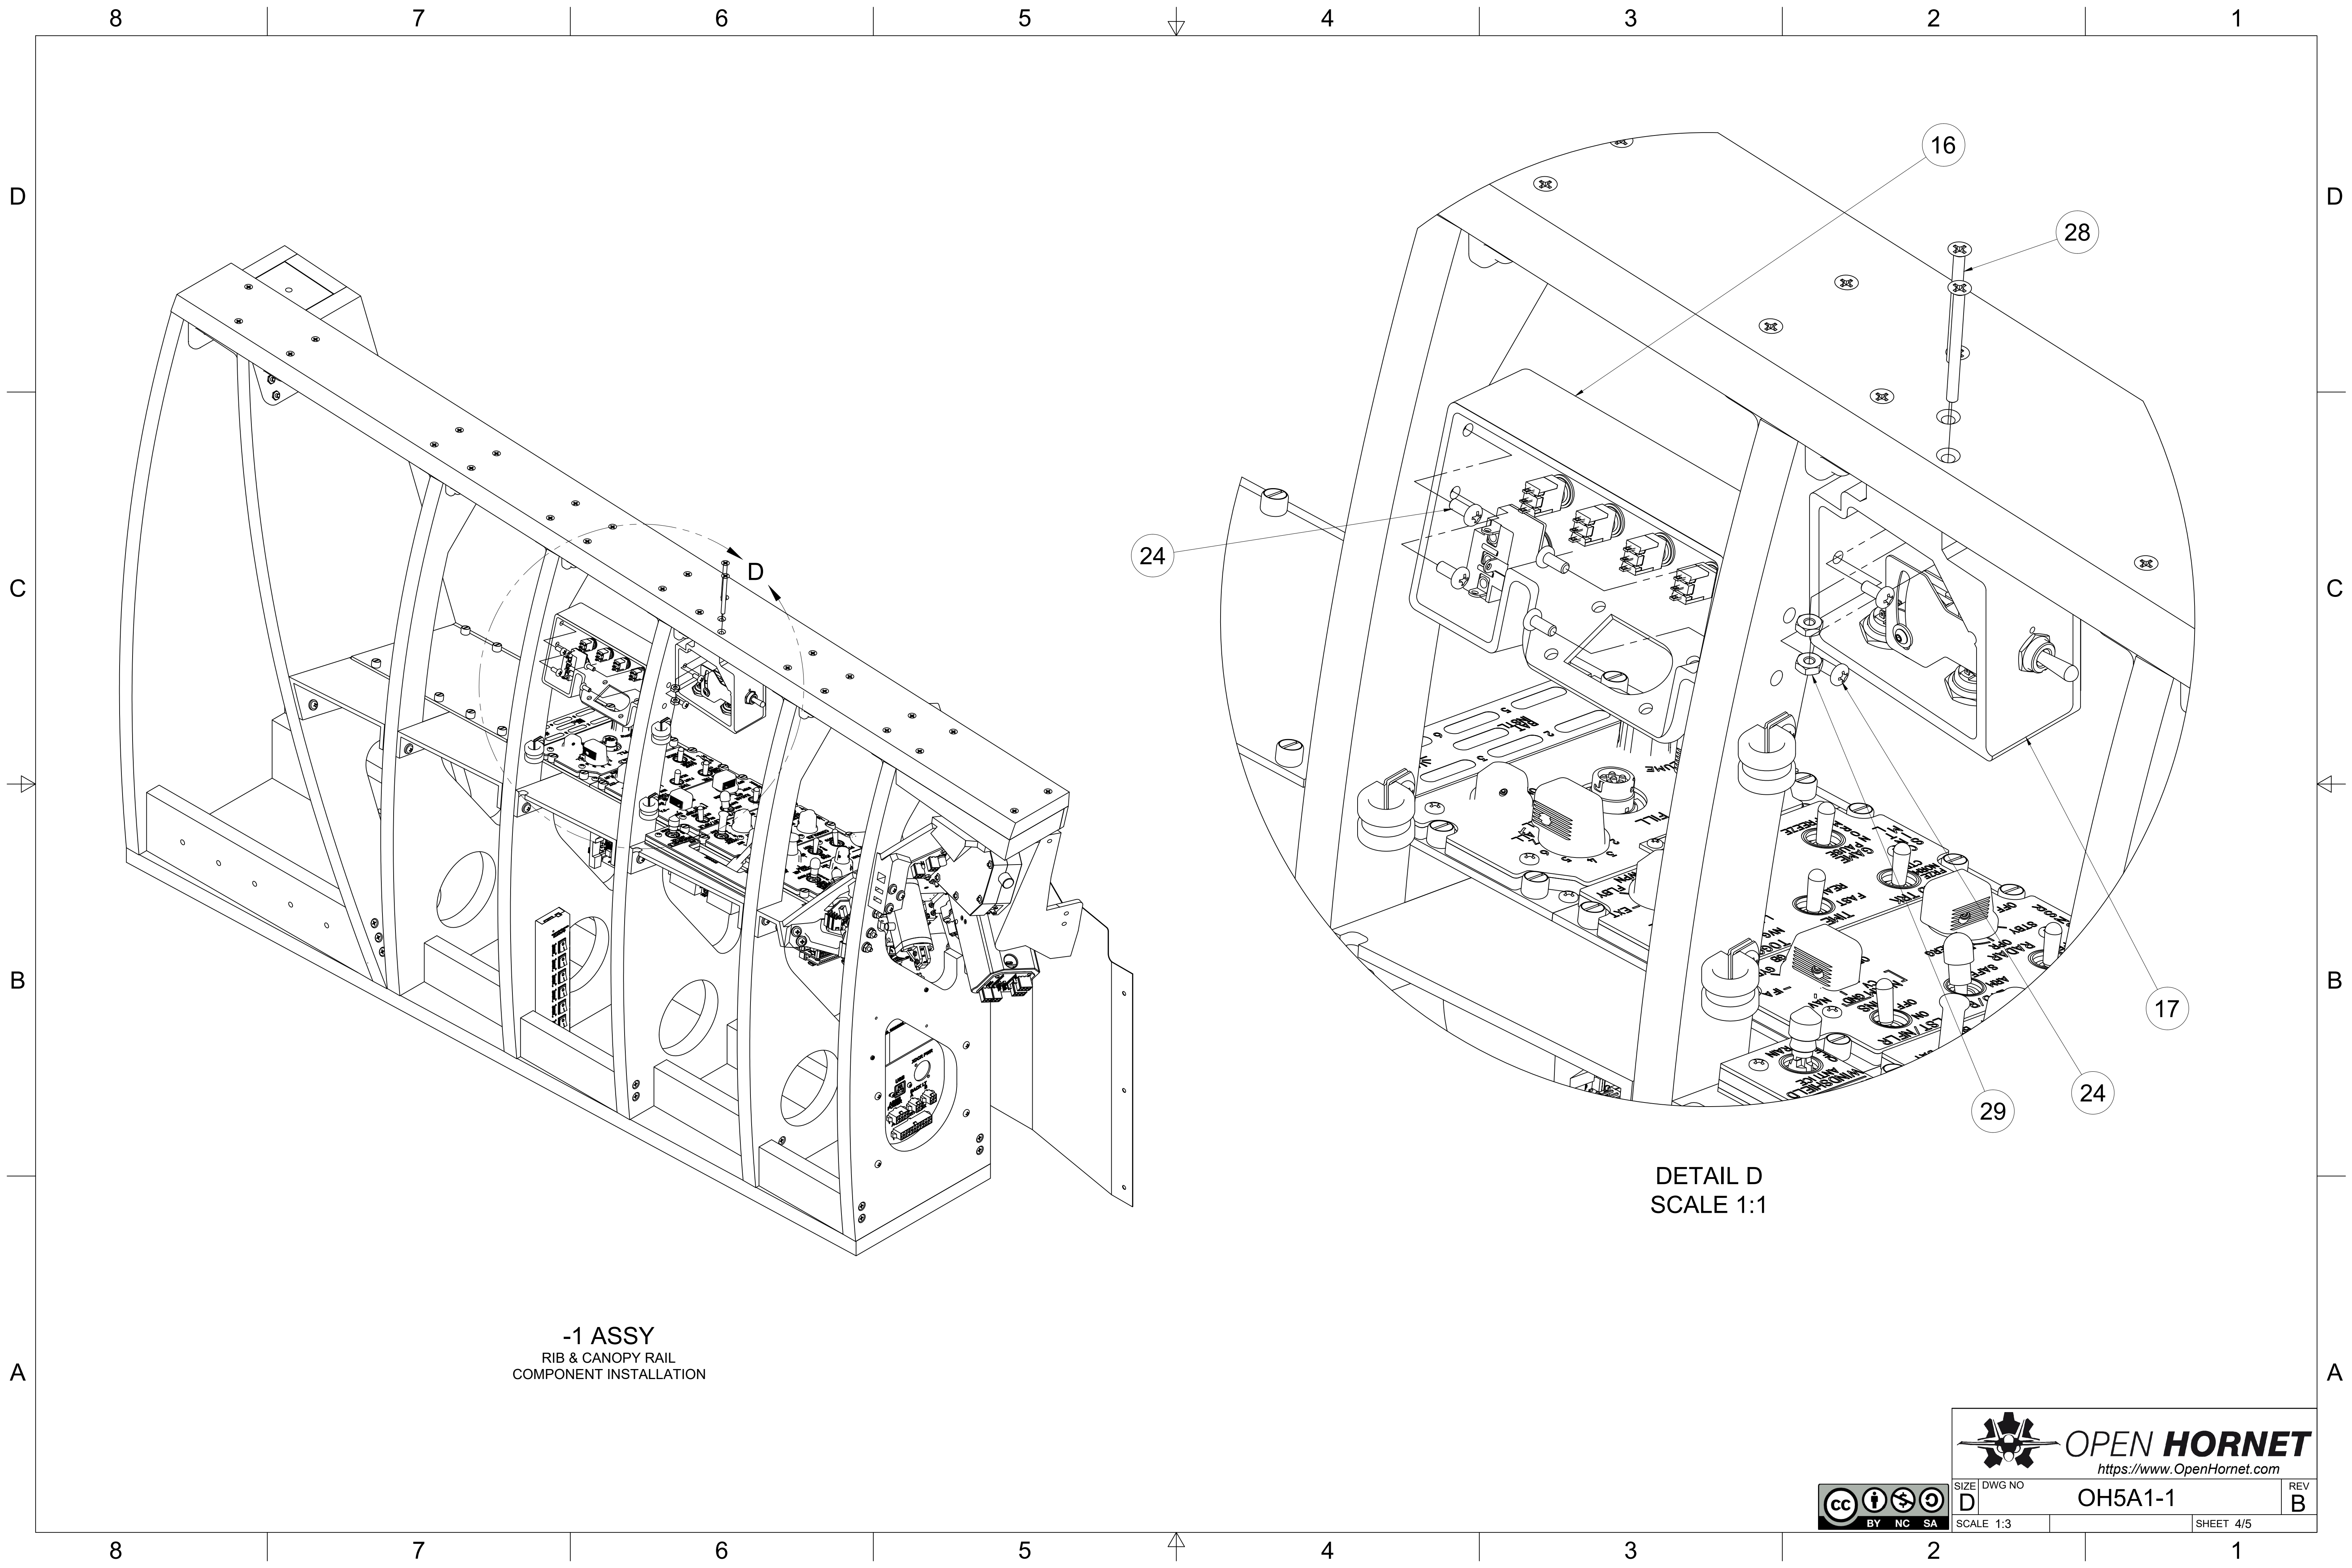

-1 ASSY
RIB & CANOPY RAIL
COMPONENT INSTALLATION

DETAIL D
SCALE 1:1

D

C

B

A

D

C

B

A

FABRICATE EXTERNAL SKIN
FROM .125 ABS, ALU OR SIMILAR
SHEET AND ATTACH CONSOLE
AS DESIRED. QUICK RELEASE
FASTENERS ARE SUGGESTED
TO FACILITATE RAPID REMOVAL.

1

40.4 [1027]

-1 ASSY
EXTERNAL SKIN
INSTALLATION



		OPEN HORNET https://www.OpenHornet.com	
SIZE	DWG NO	REV	
D	OH5A1-1	B	
SCALE 1:3		SHEET 5/5	