



D


- C




A

DCA

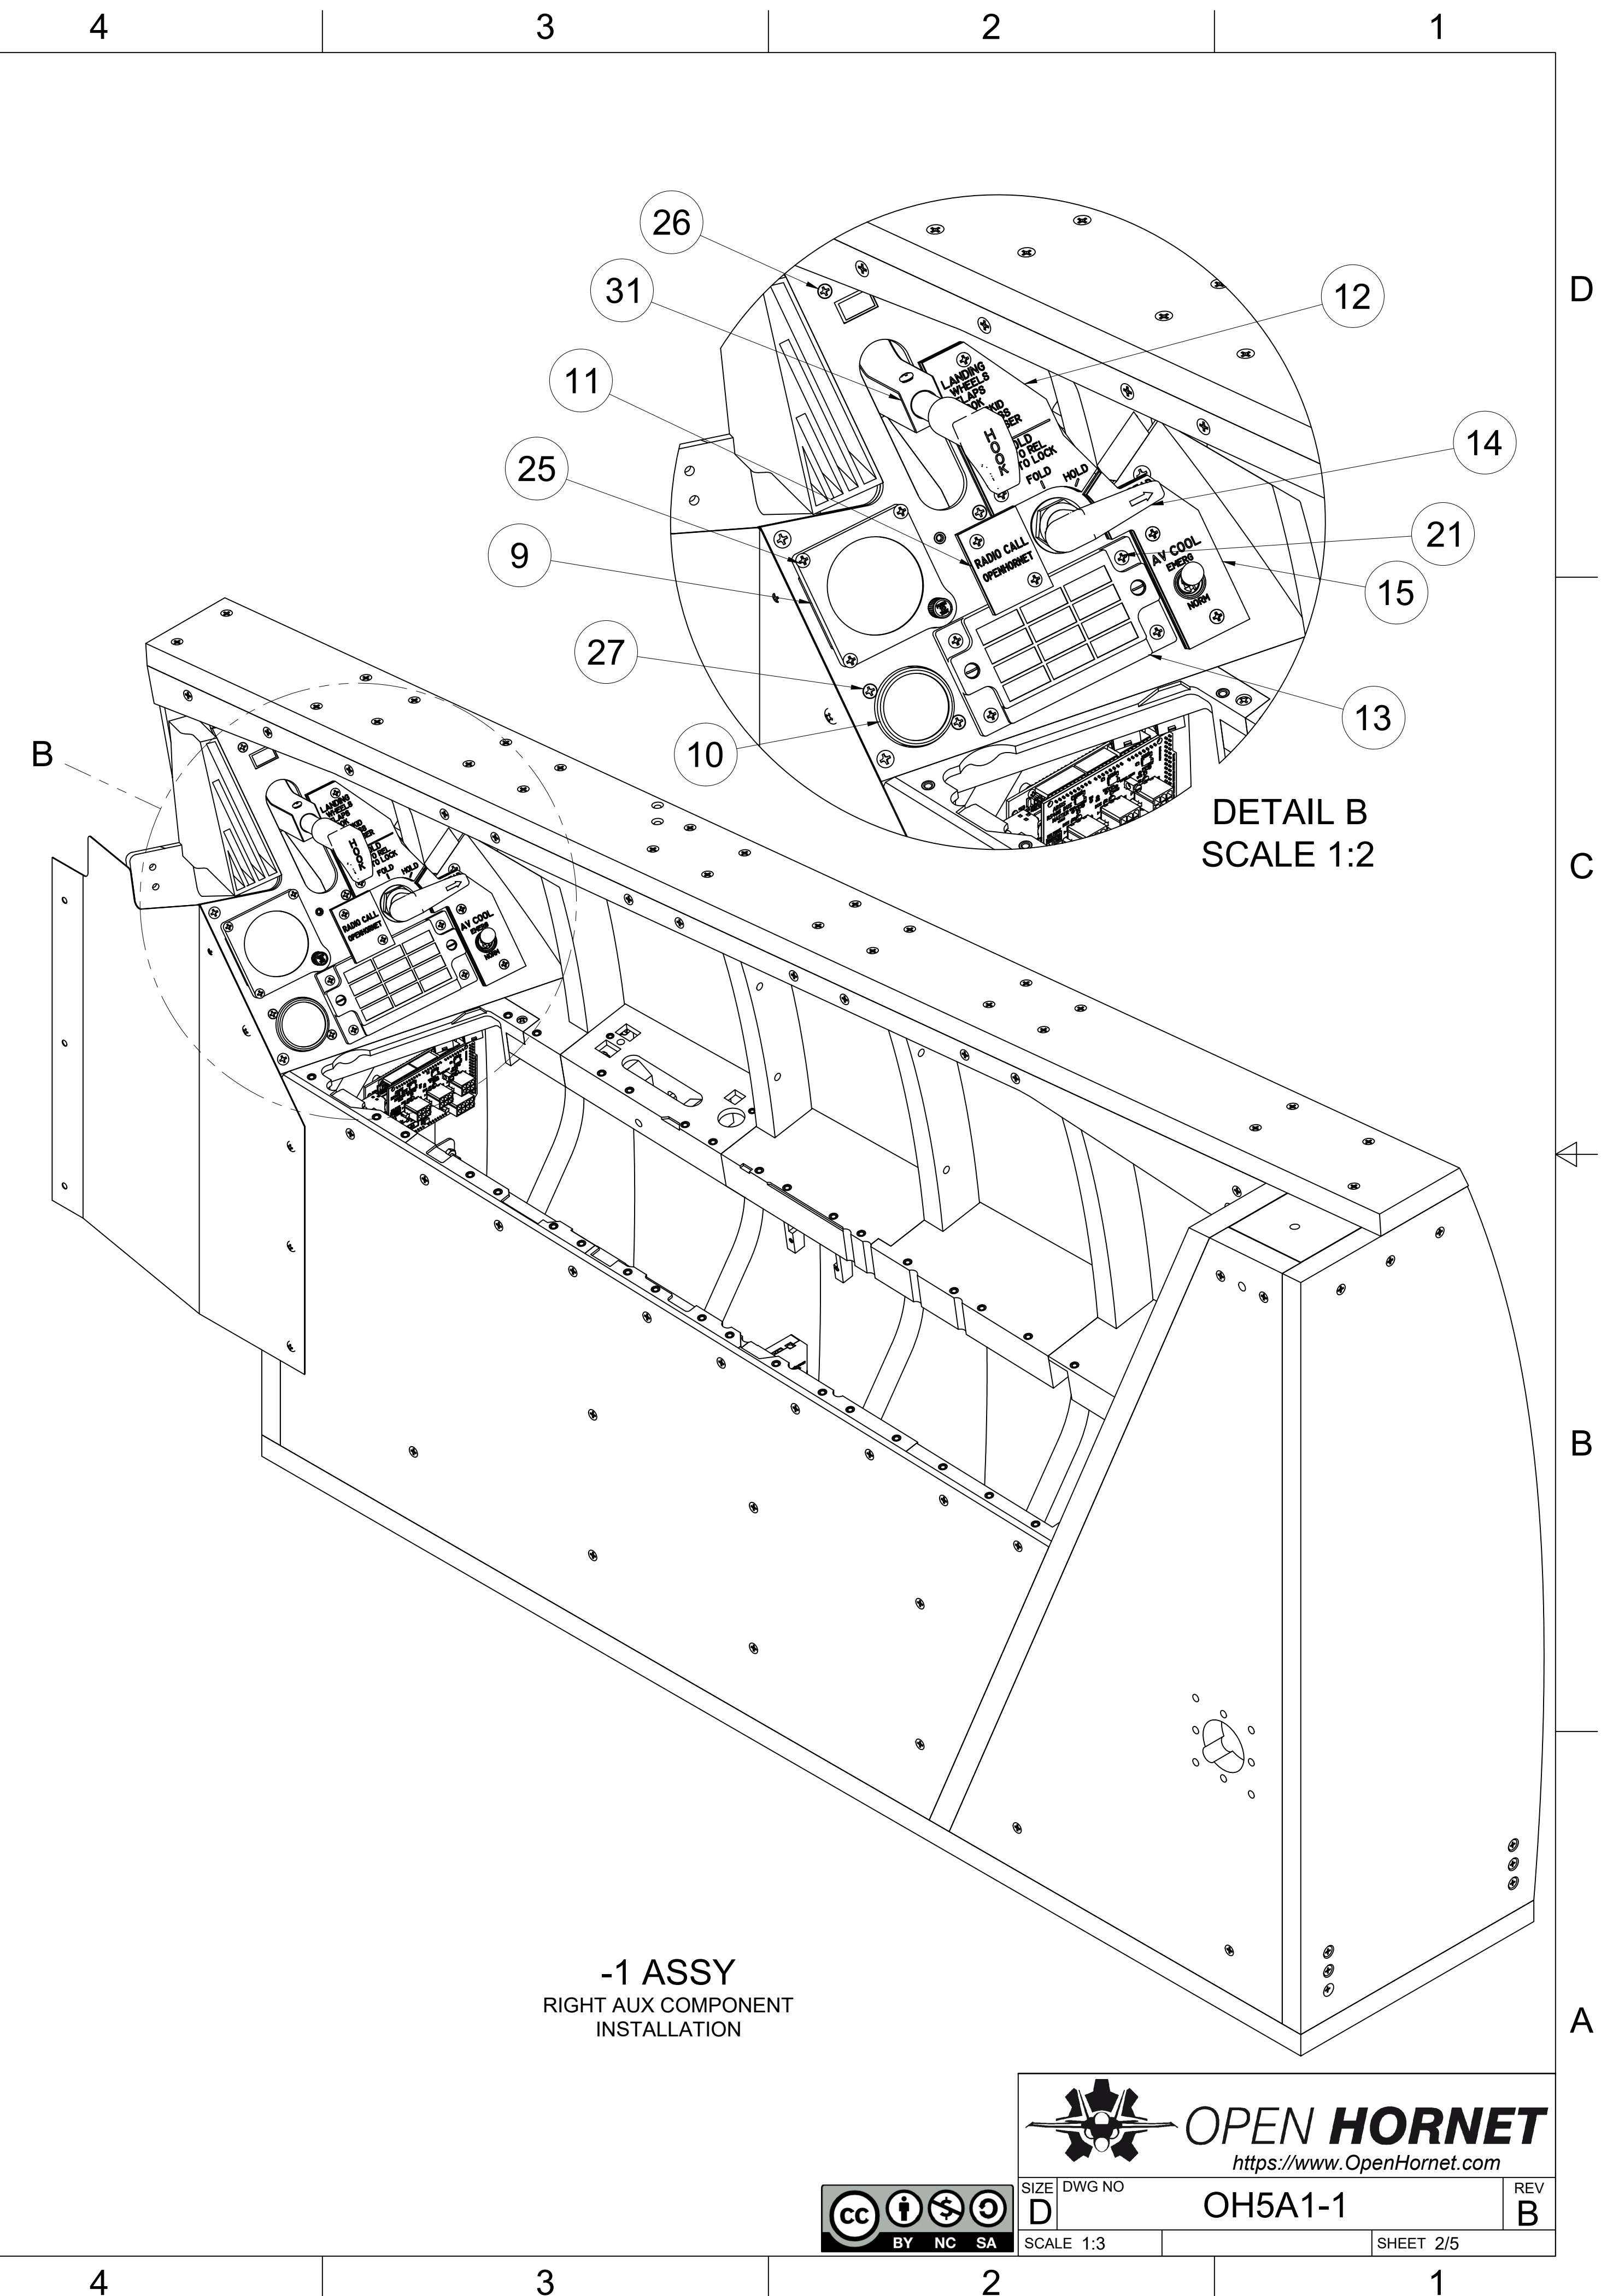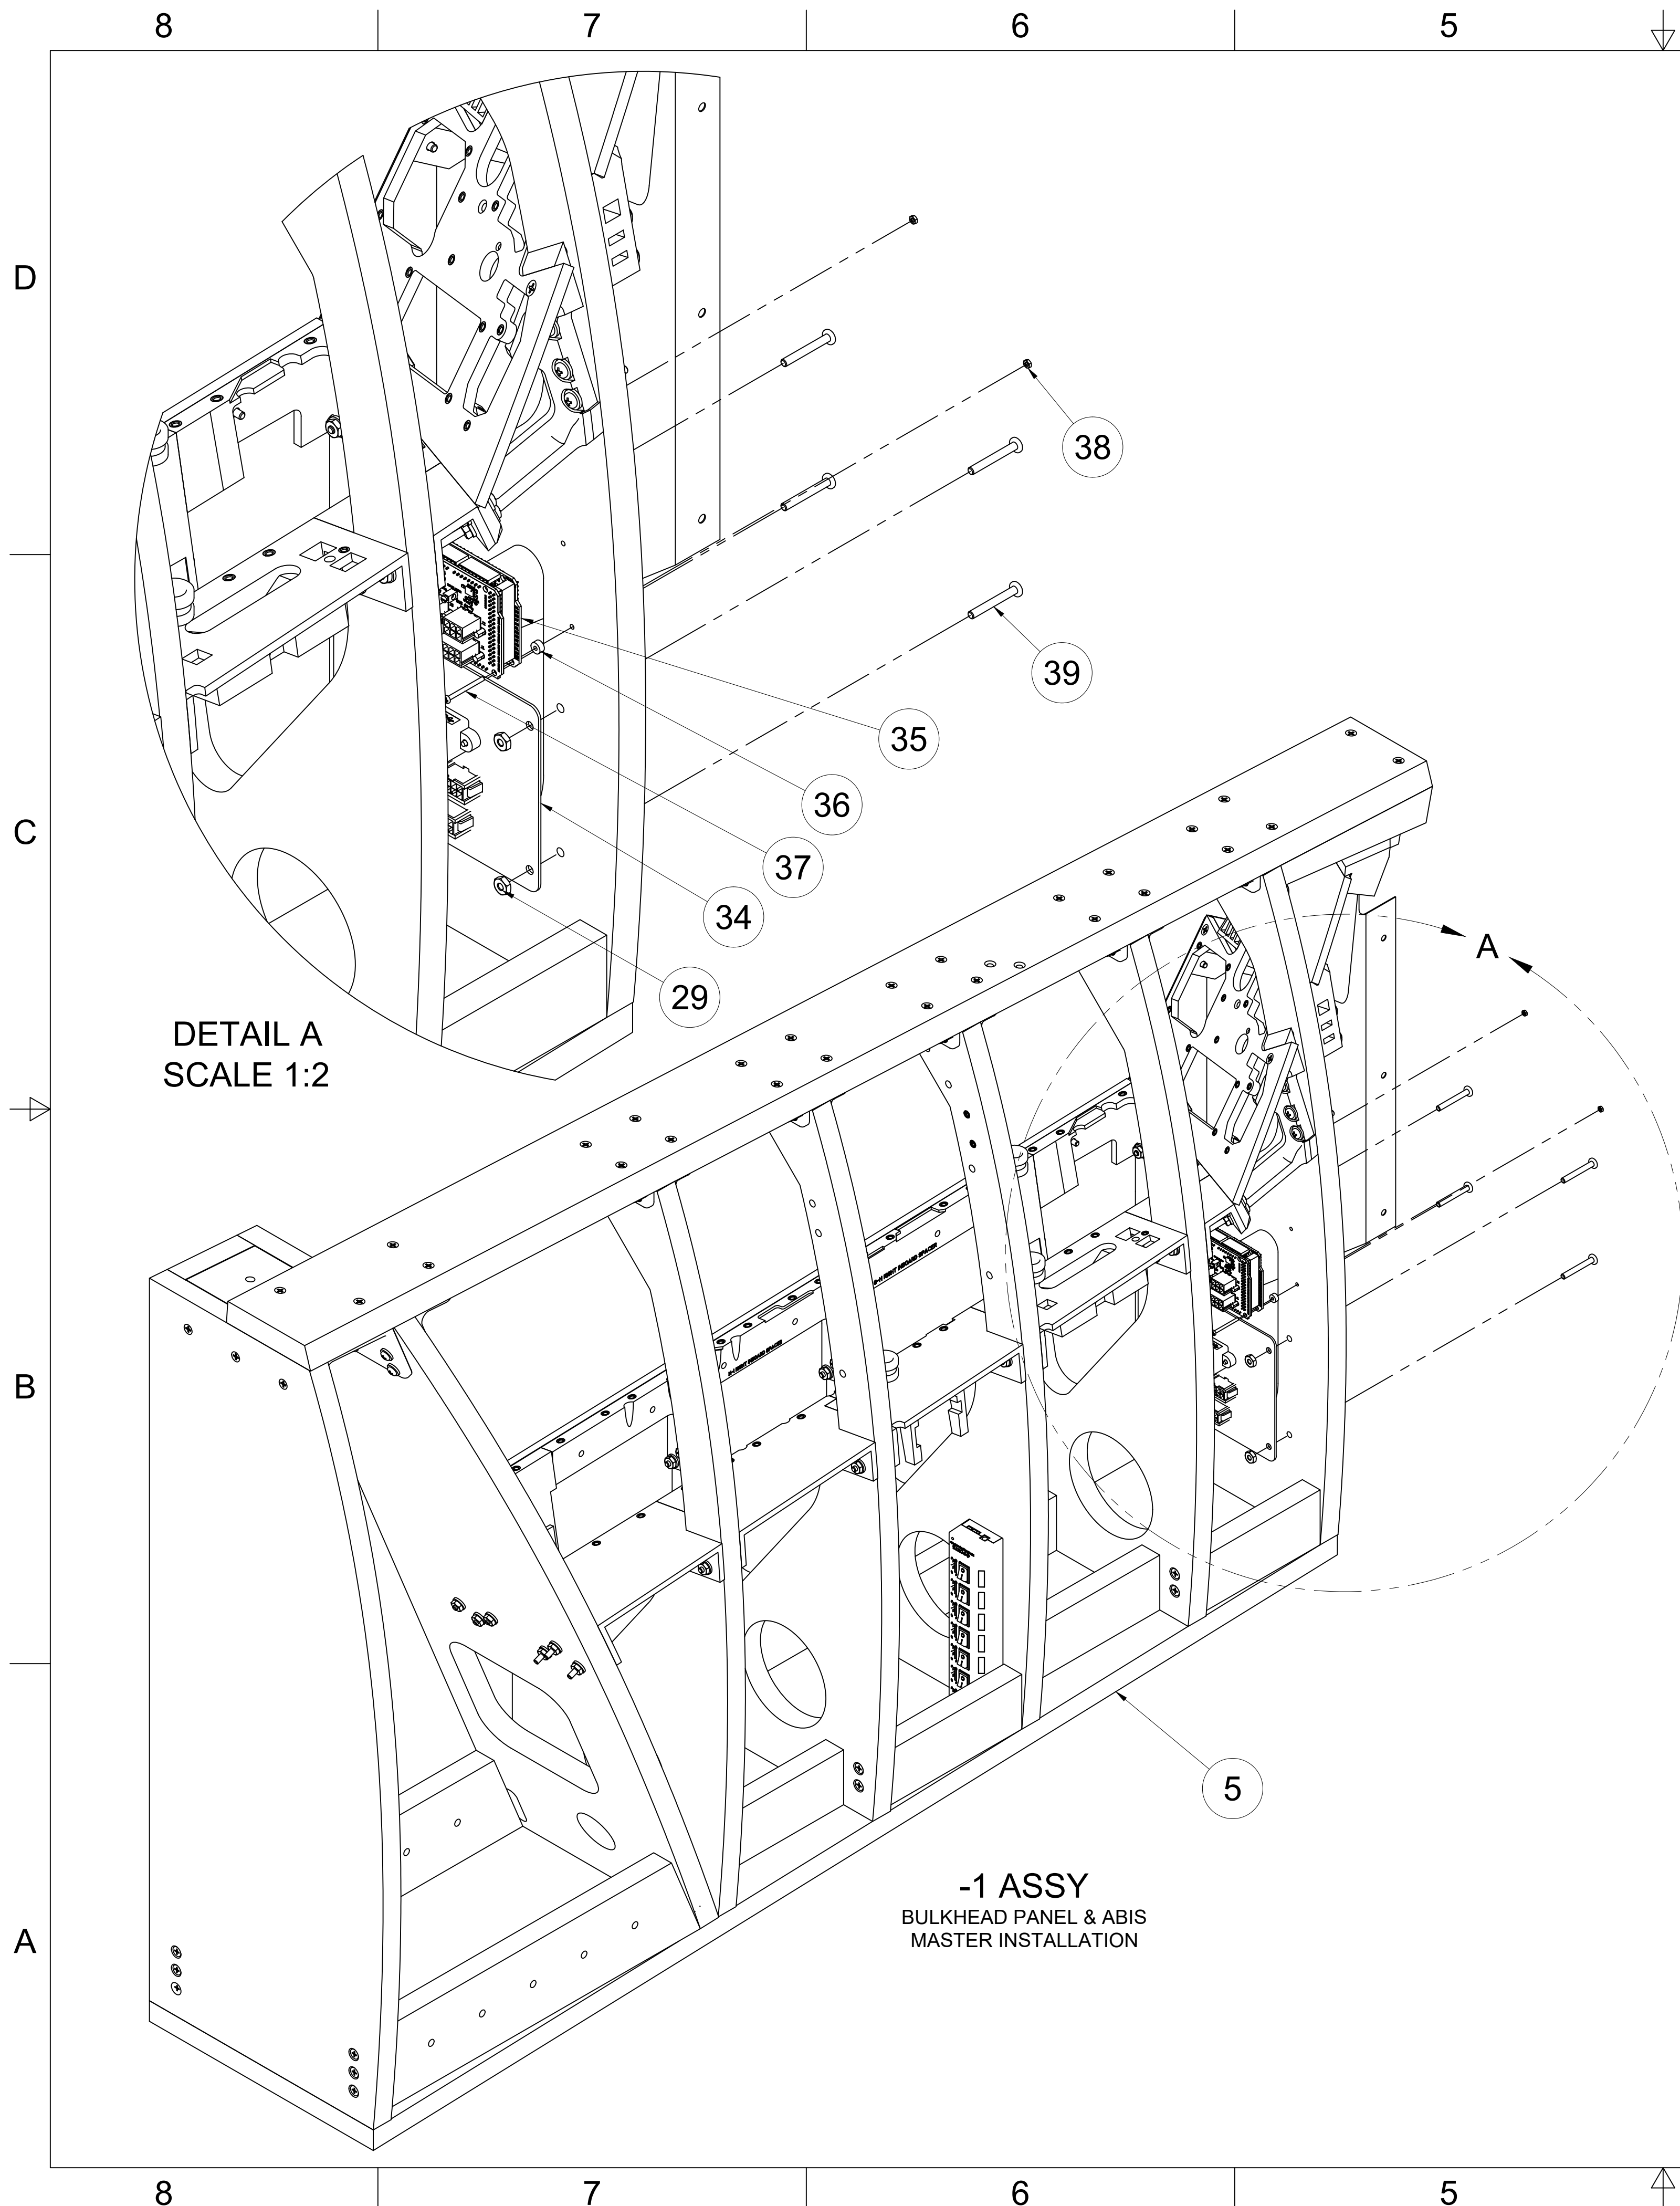


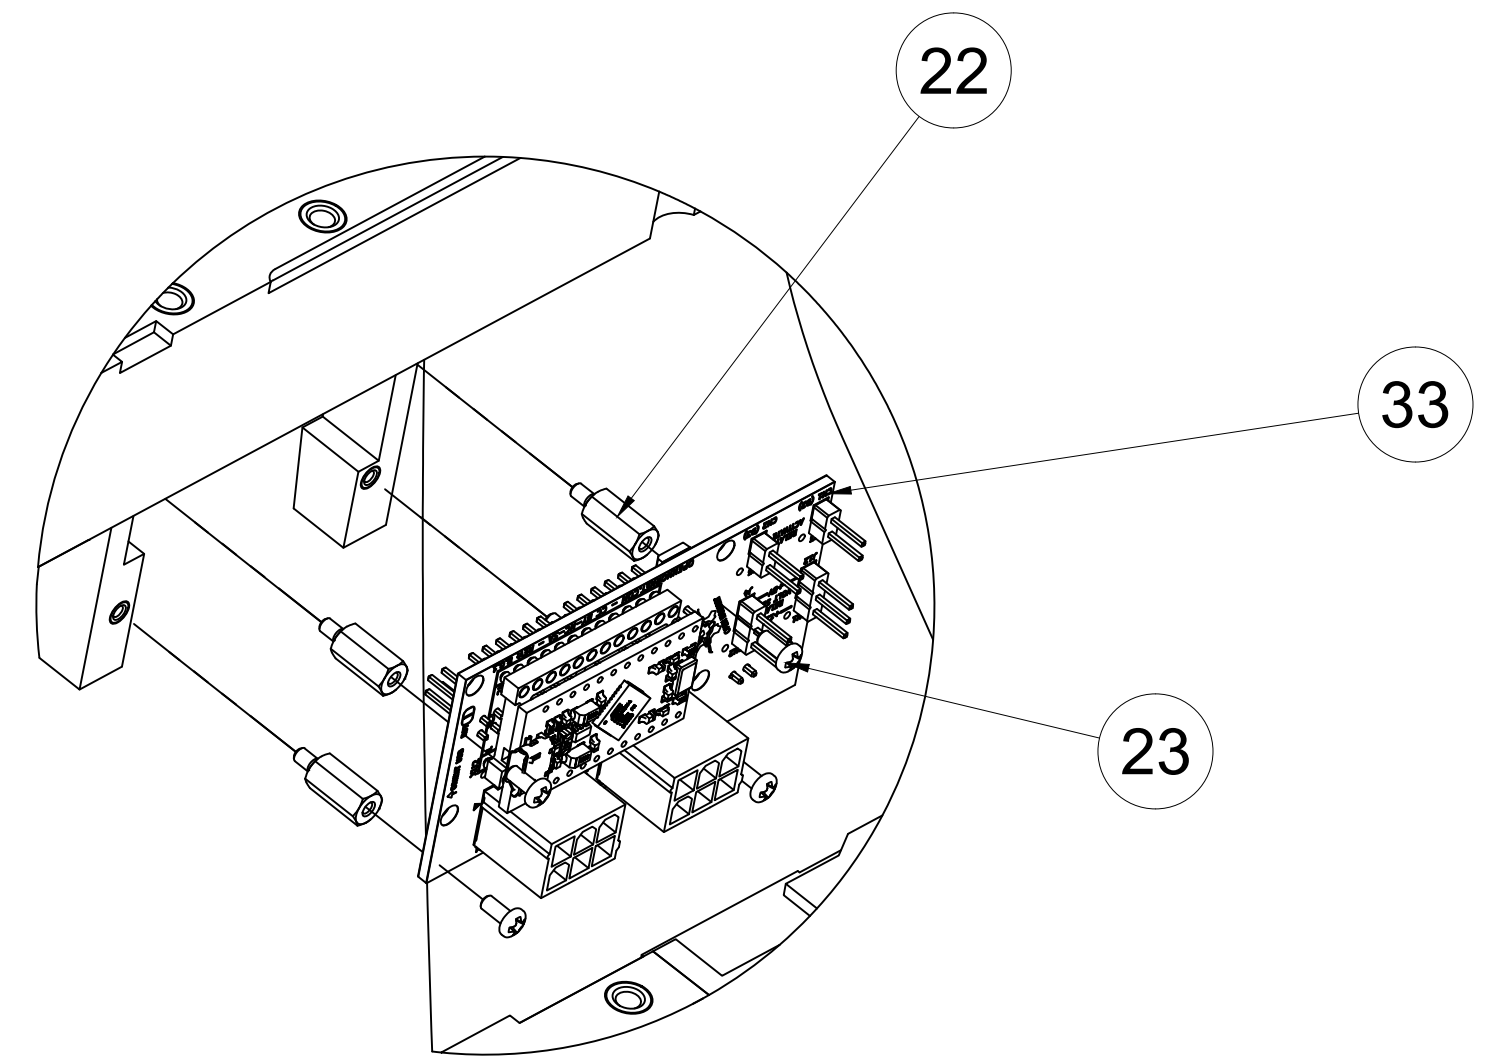


DETAIL C
SCALE 1:1

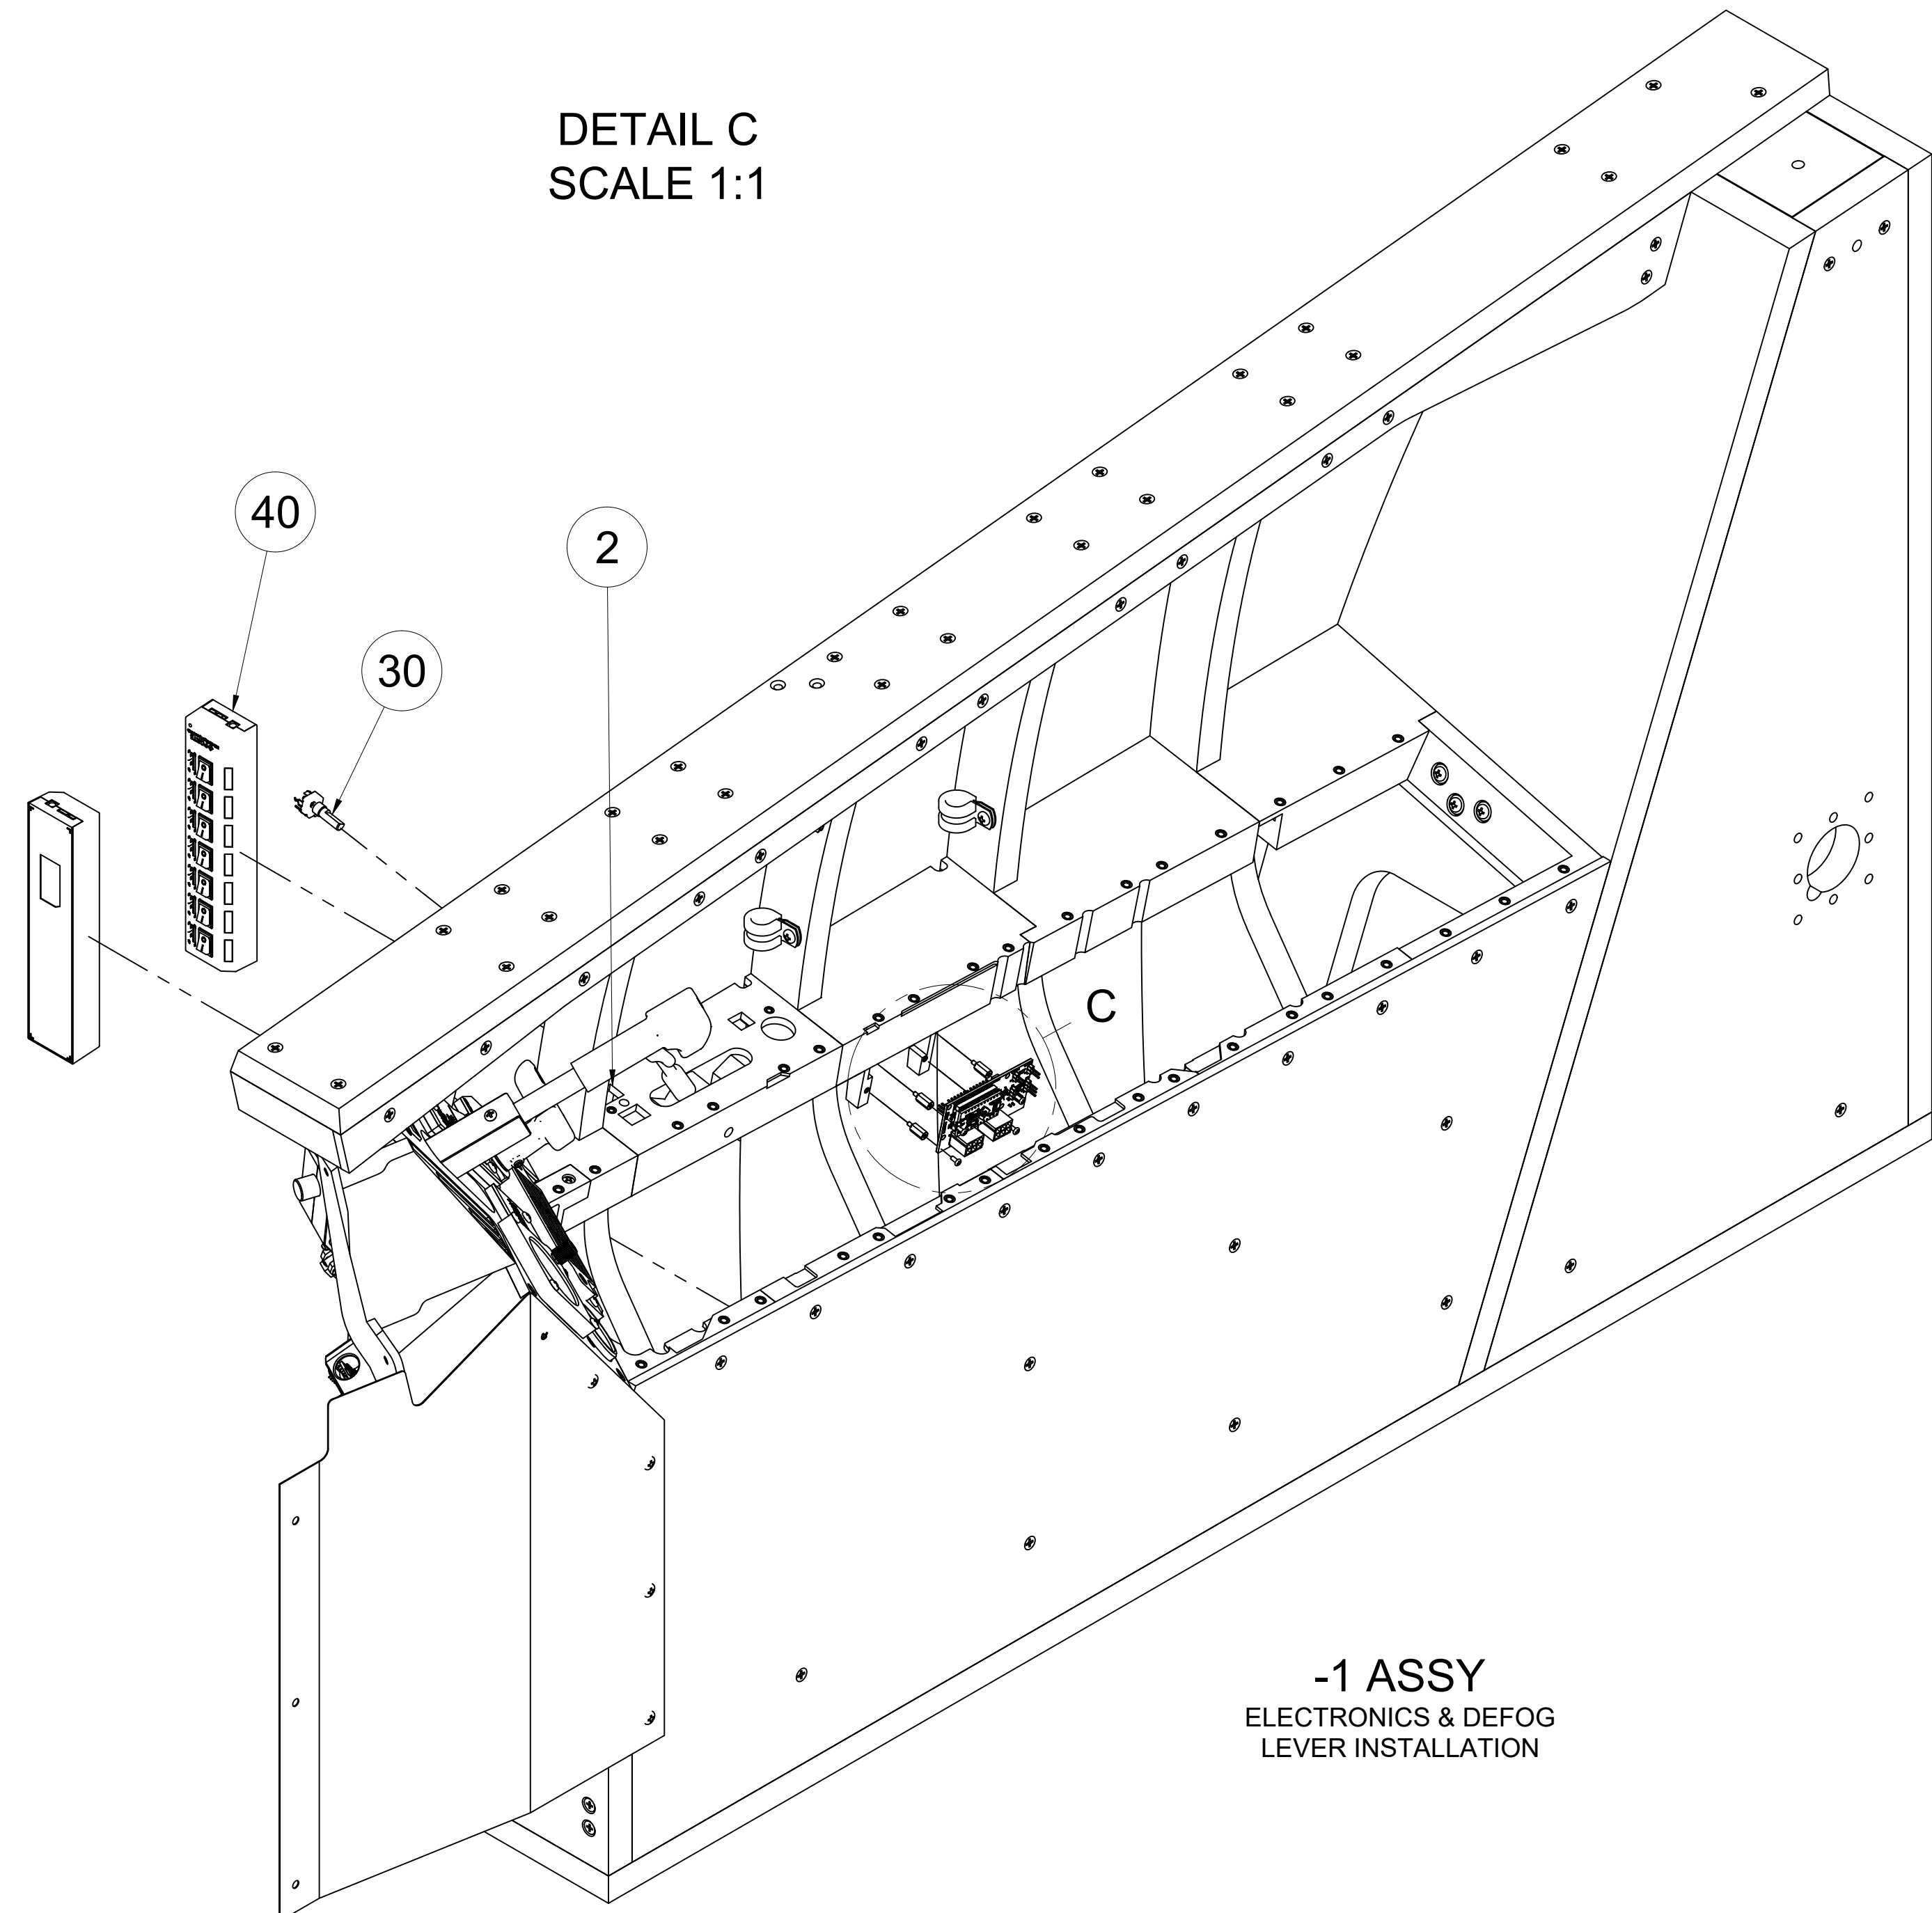


-1 ASSY
ELECTRONICS & DEFOG
LEVER INSTALLATION

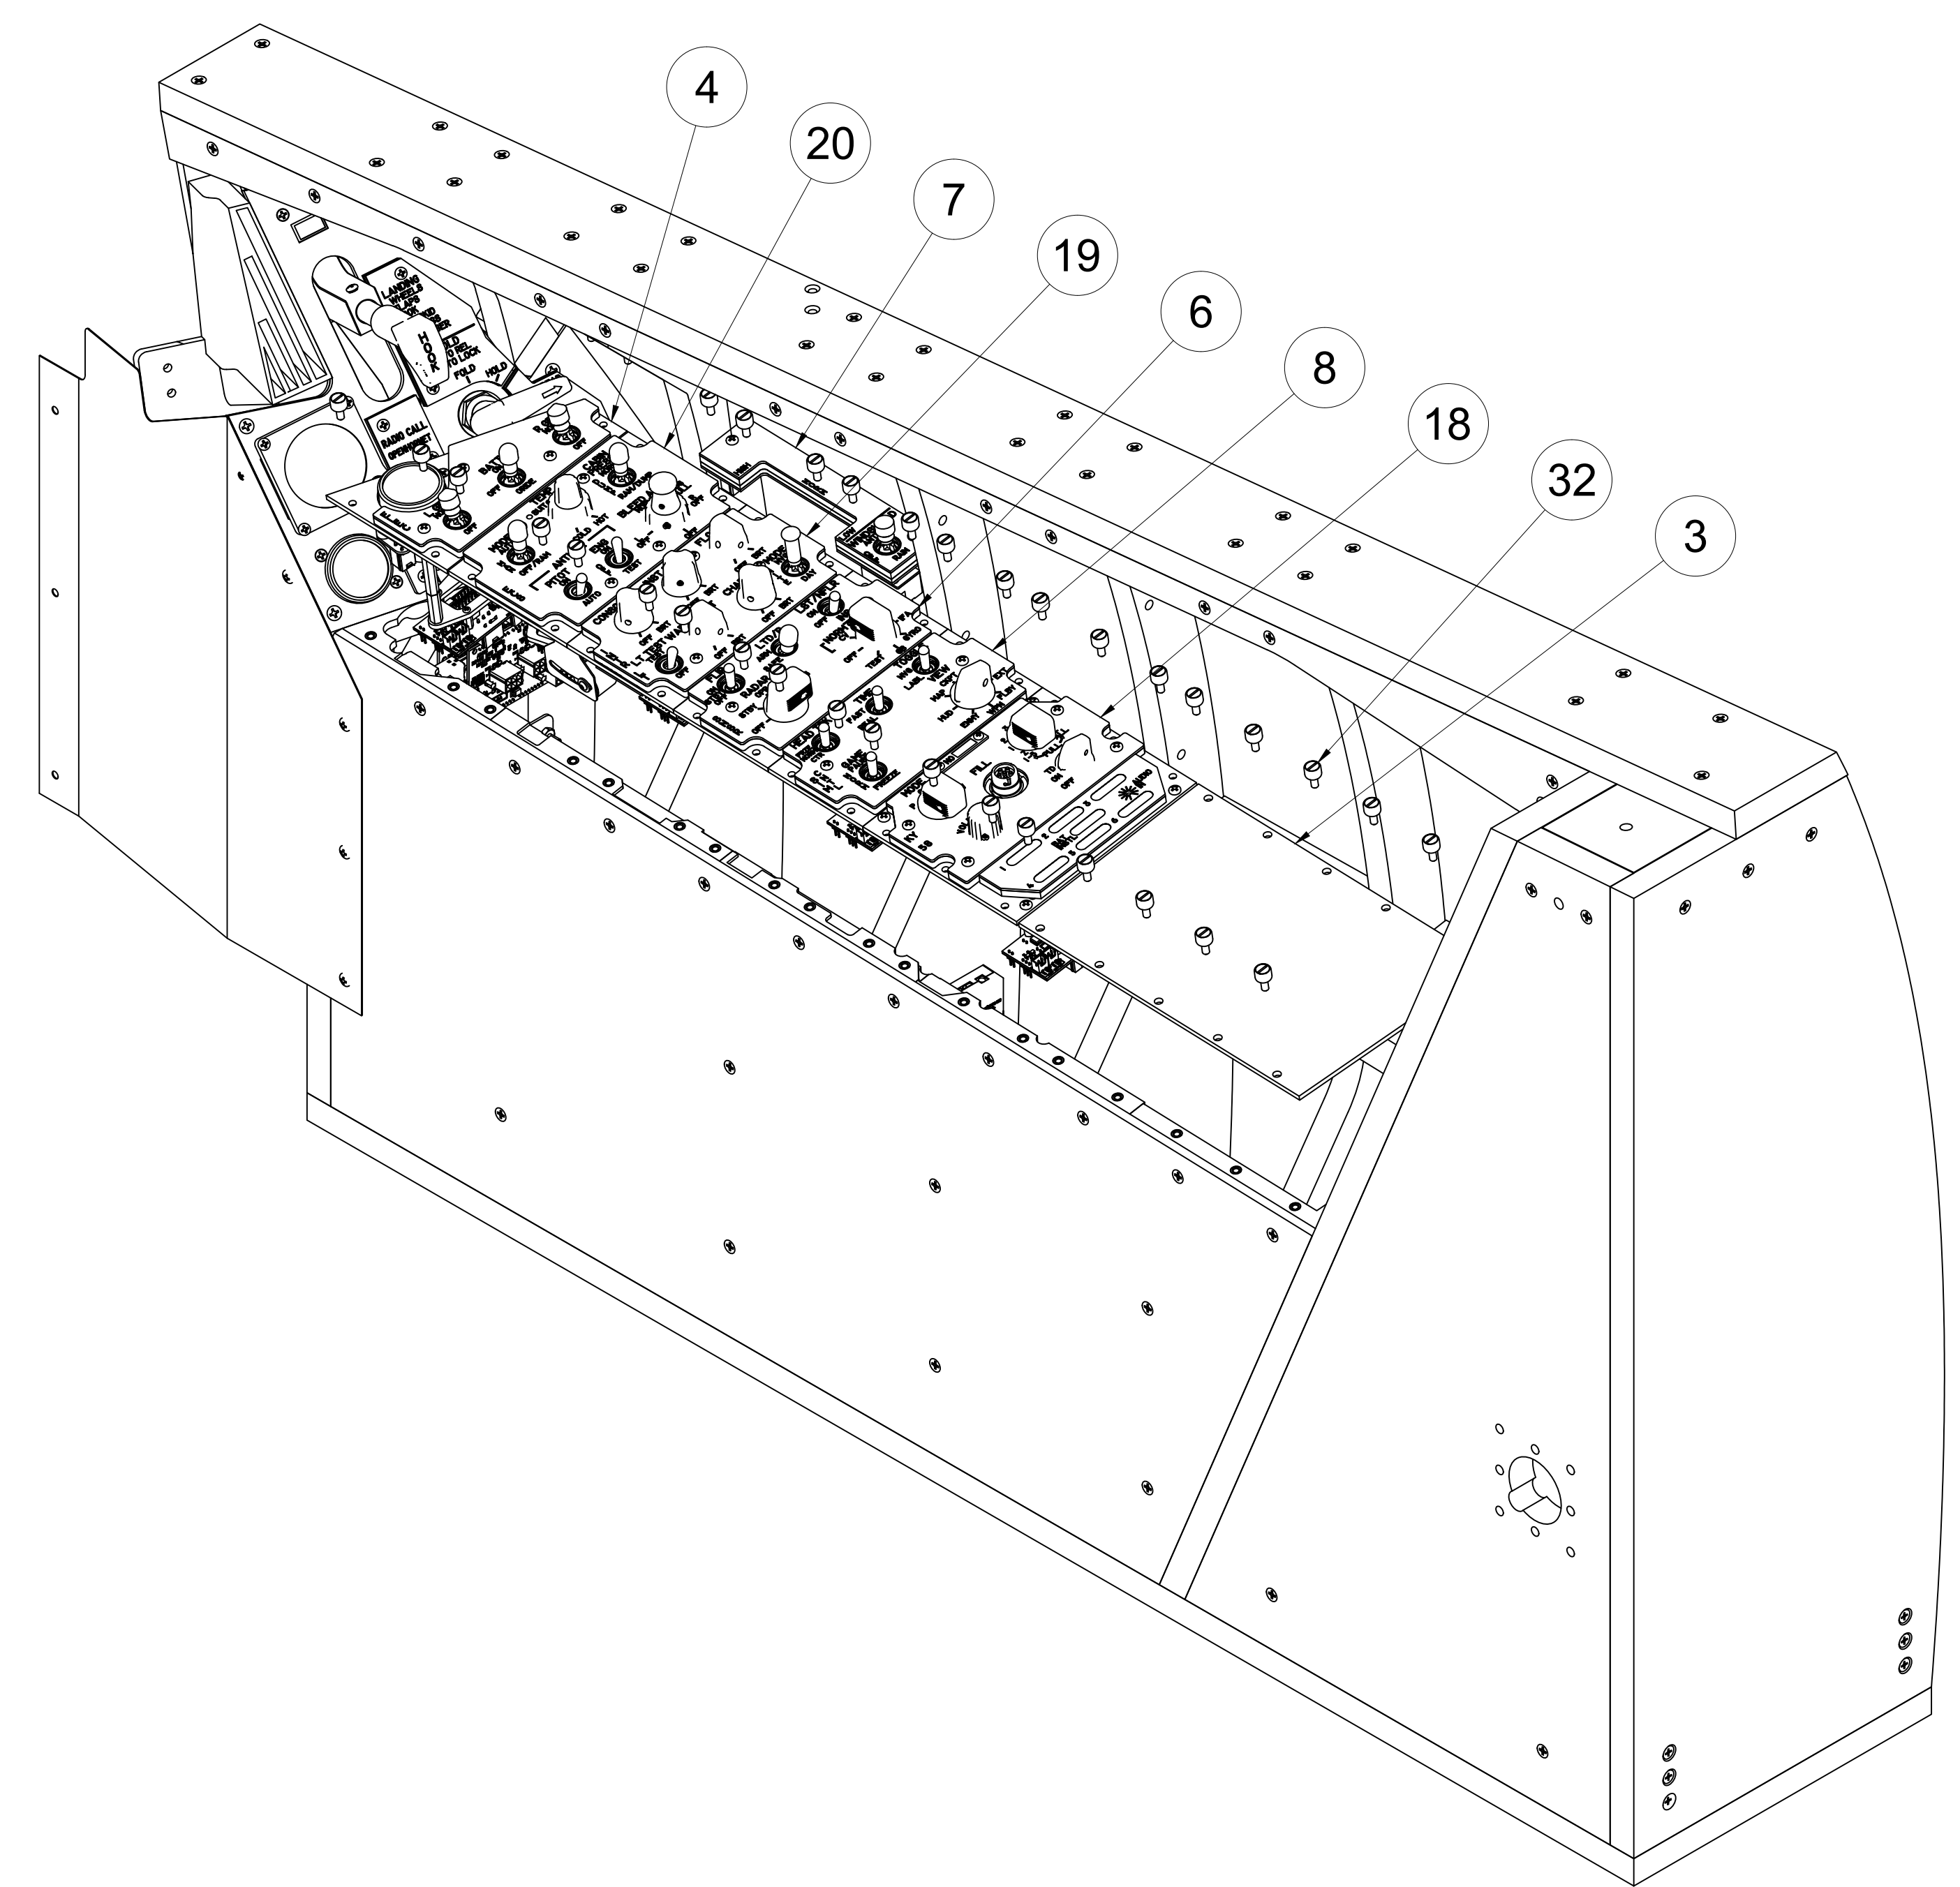


-1 ASSY
RIGHT CONSOLE PANEL
INSTALLATION

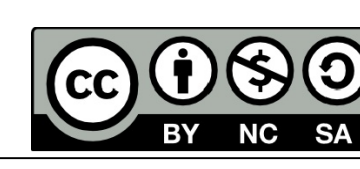

		OPEN HORNET	
		https://www.OpenHornet.com	
SIZE	DWG NO	REV	
D	OH5A1-1	B	
SCALE 1:3		SHEET 3/5	

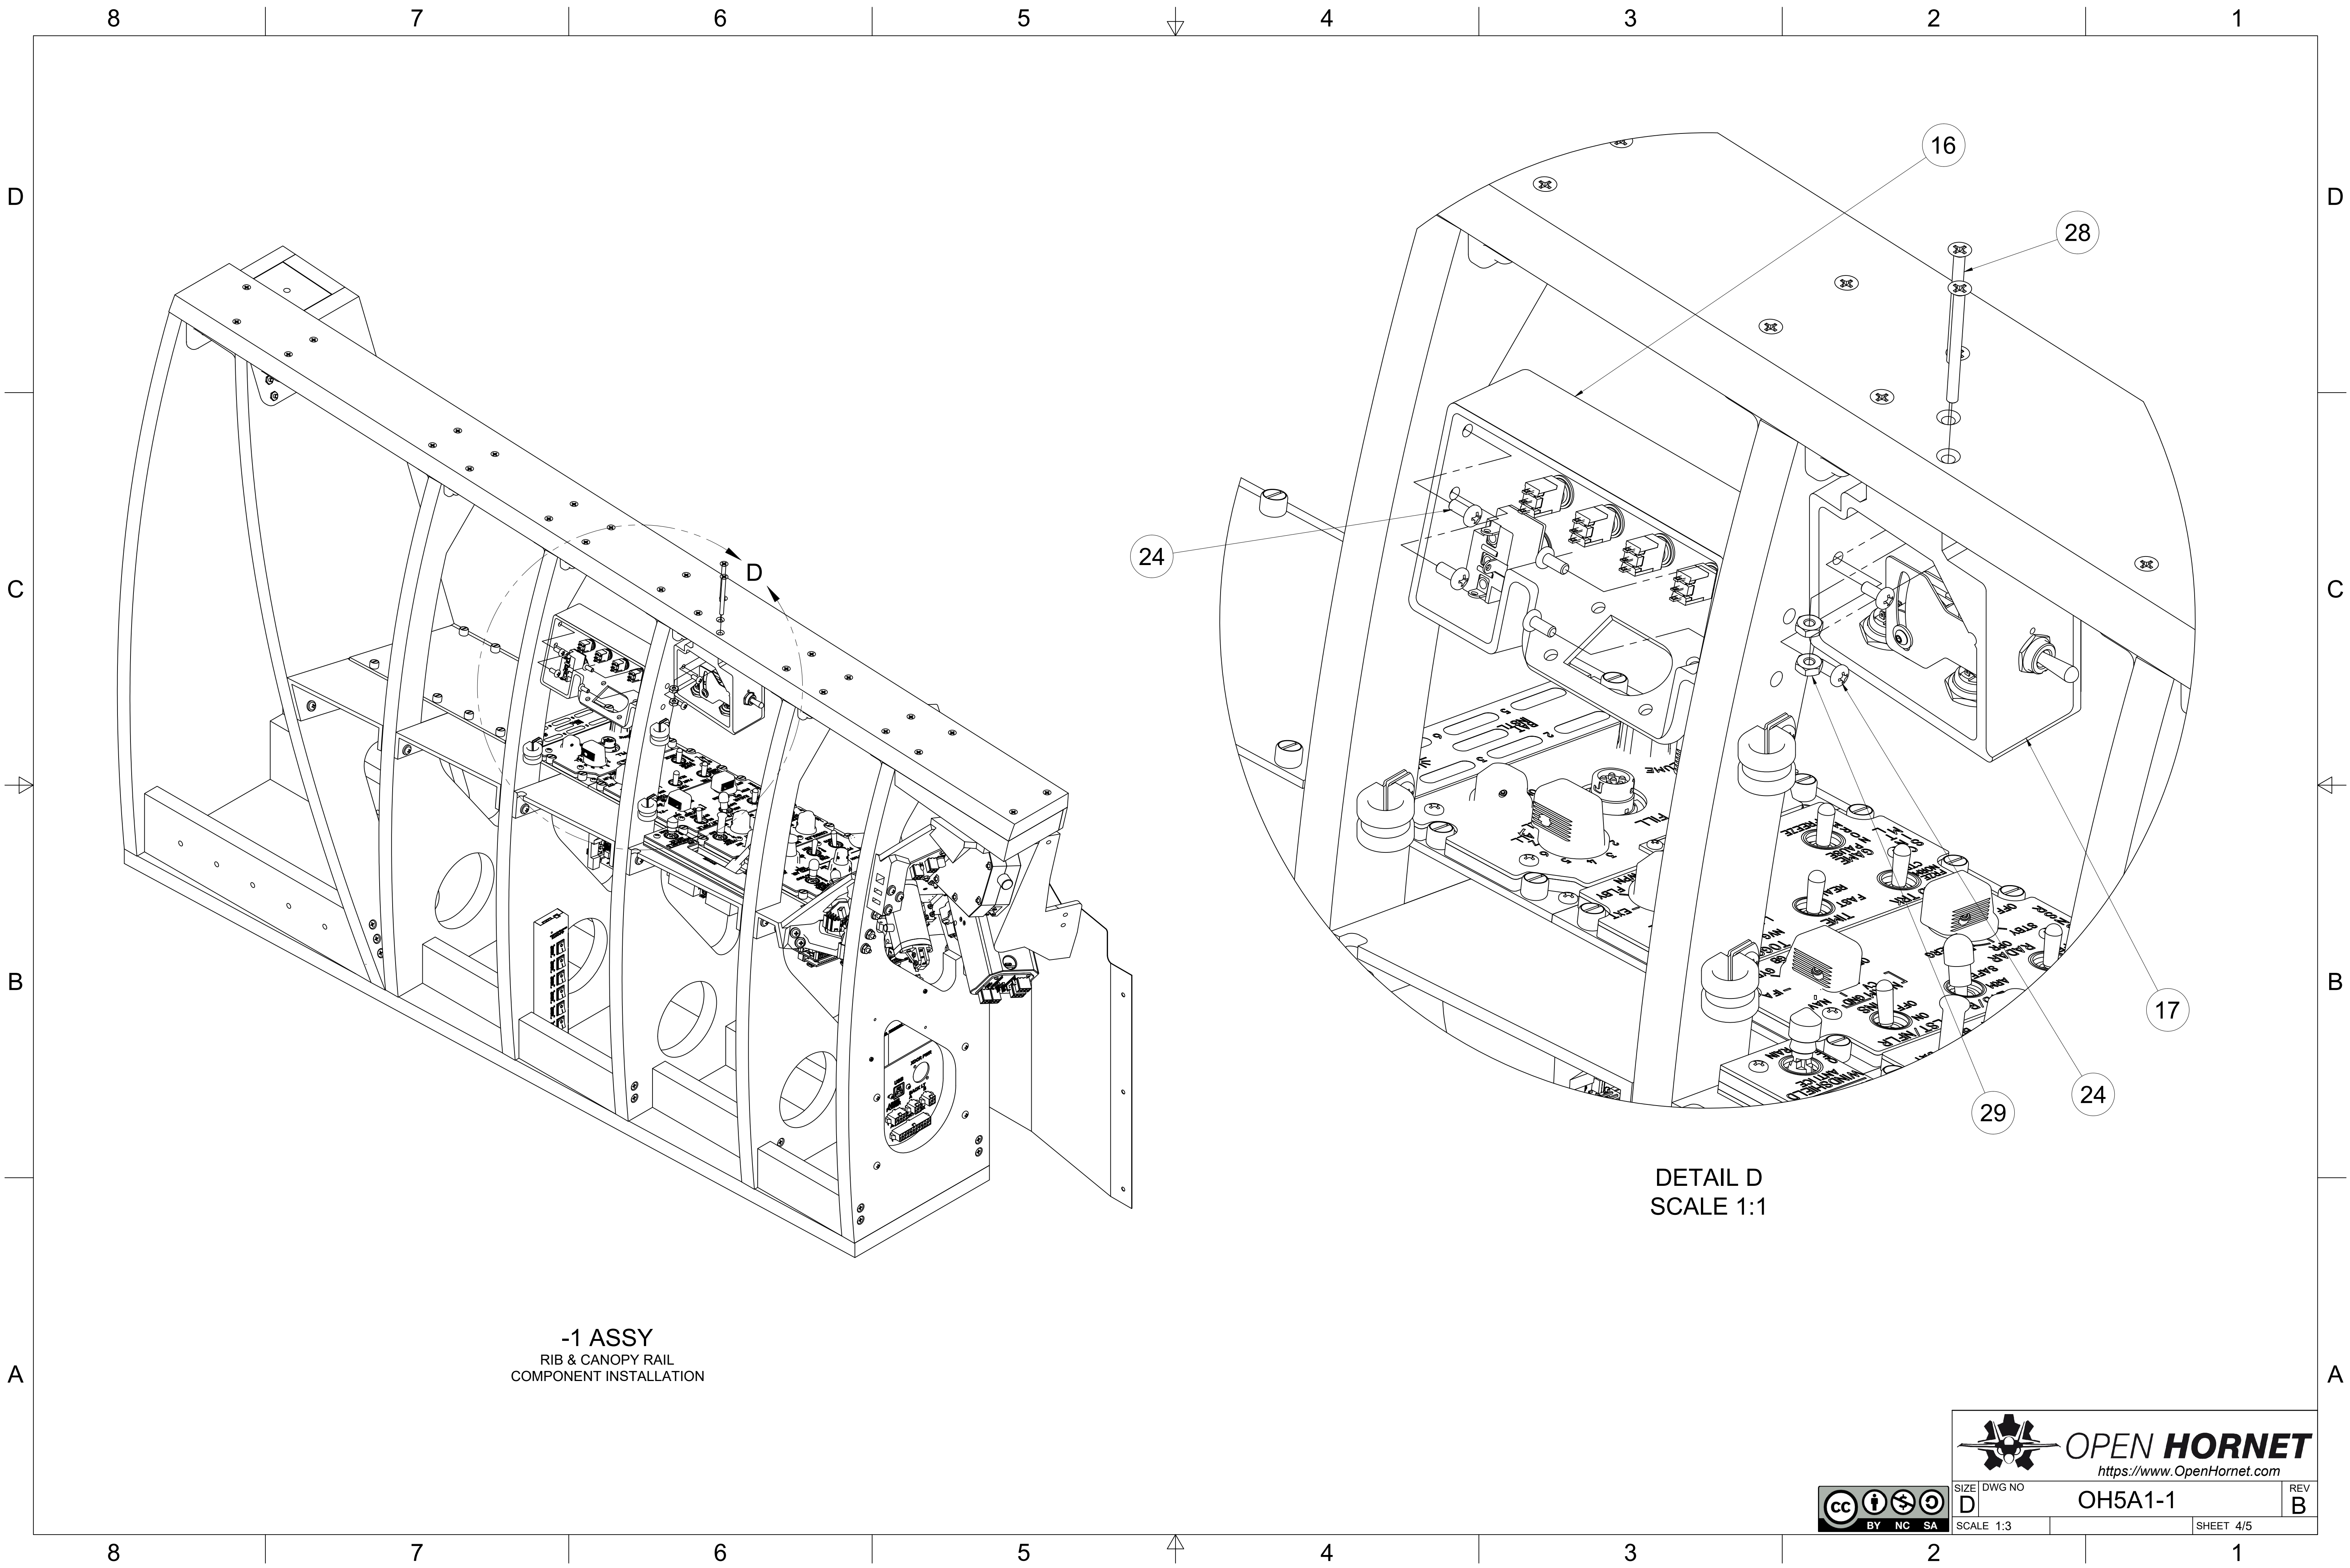

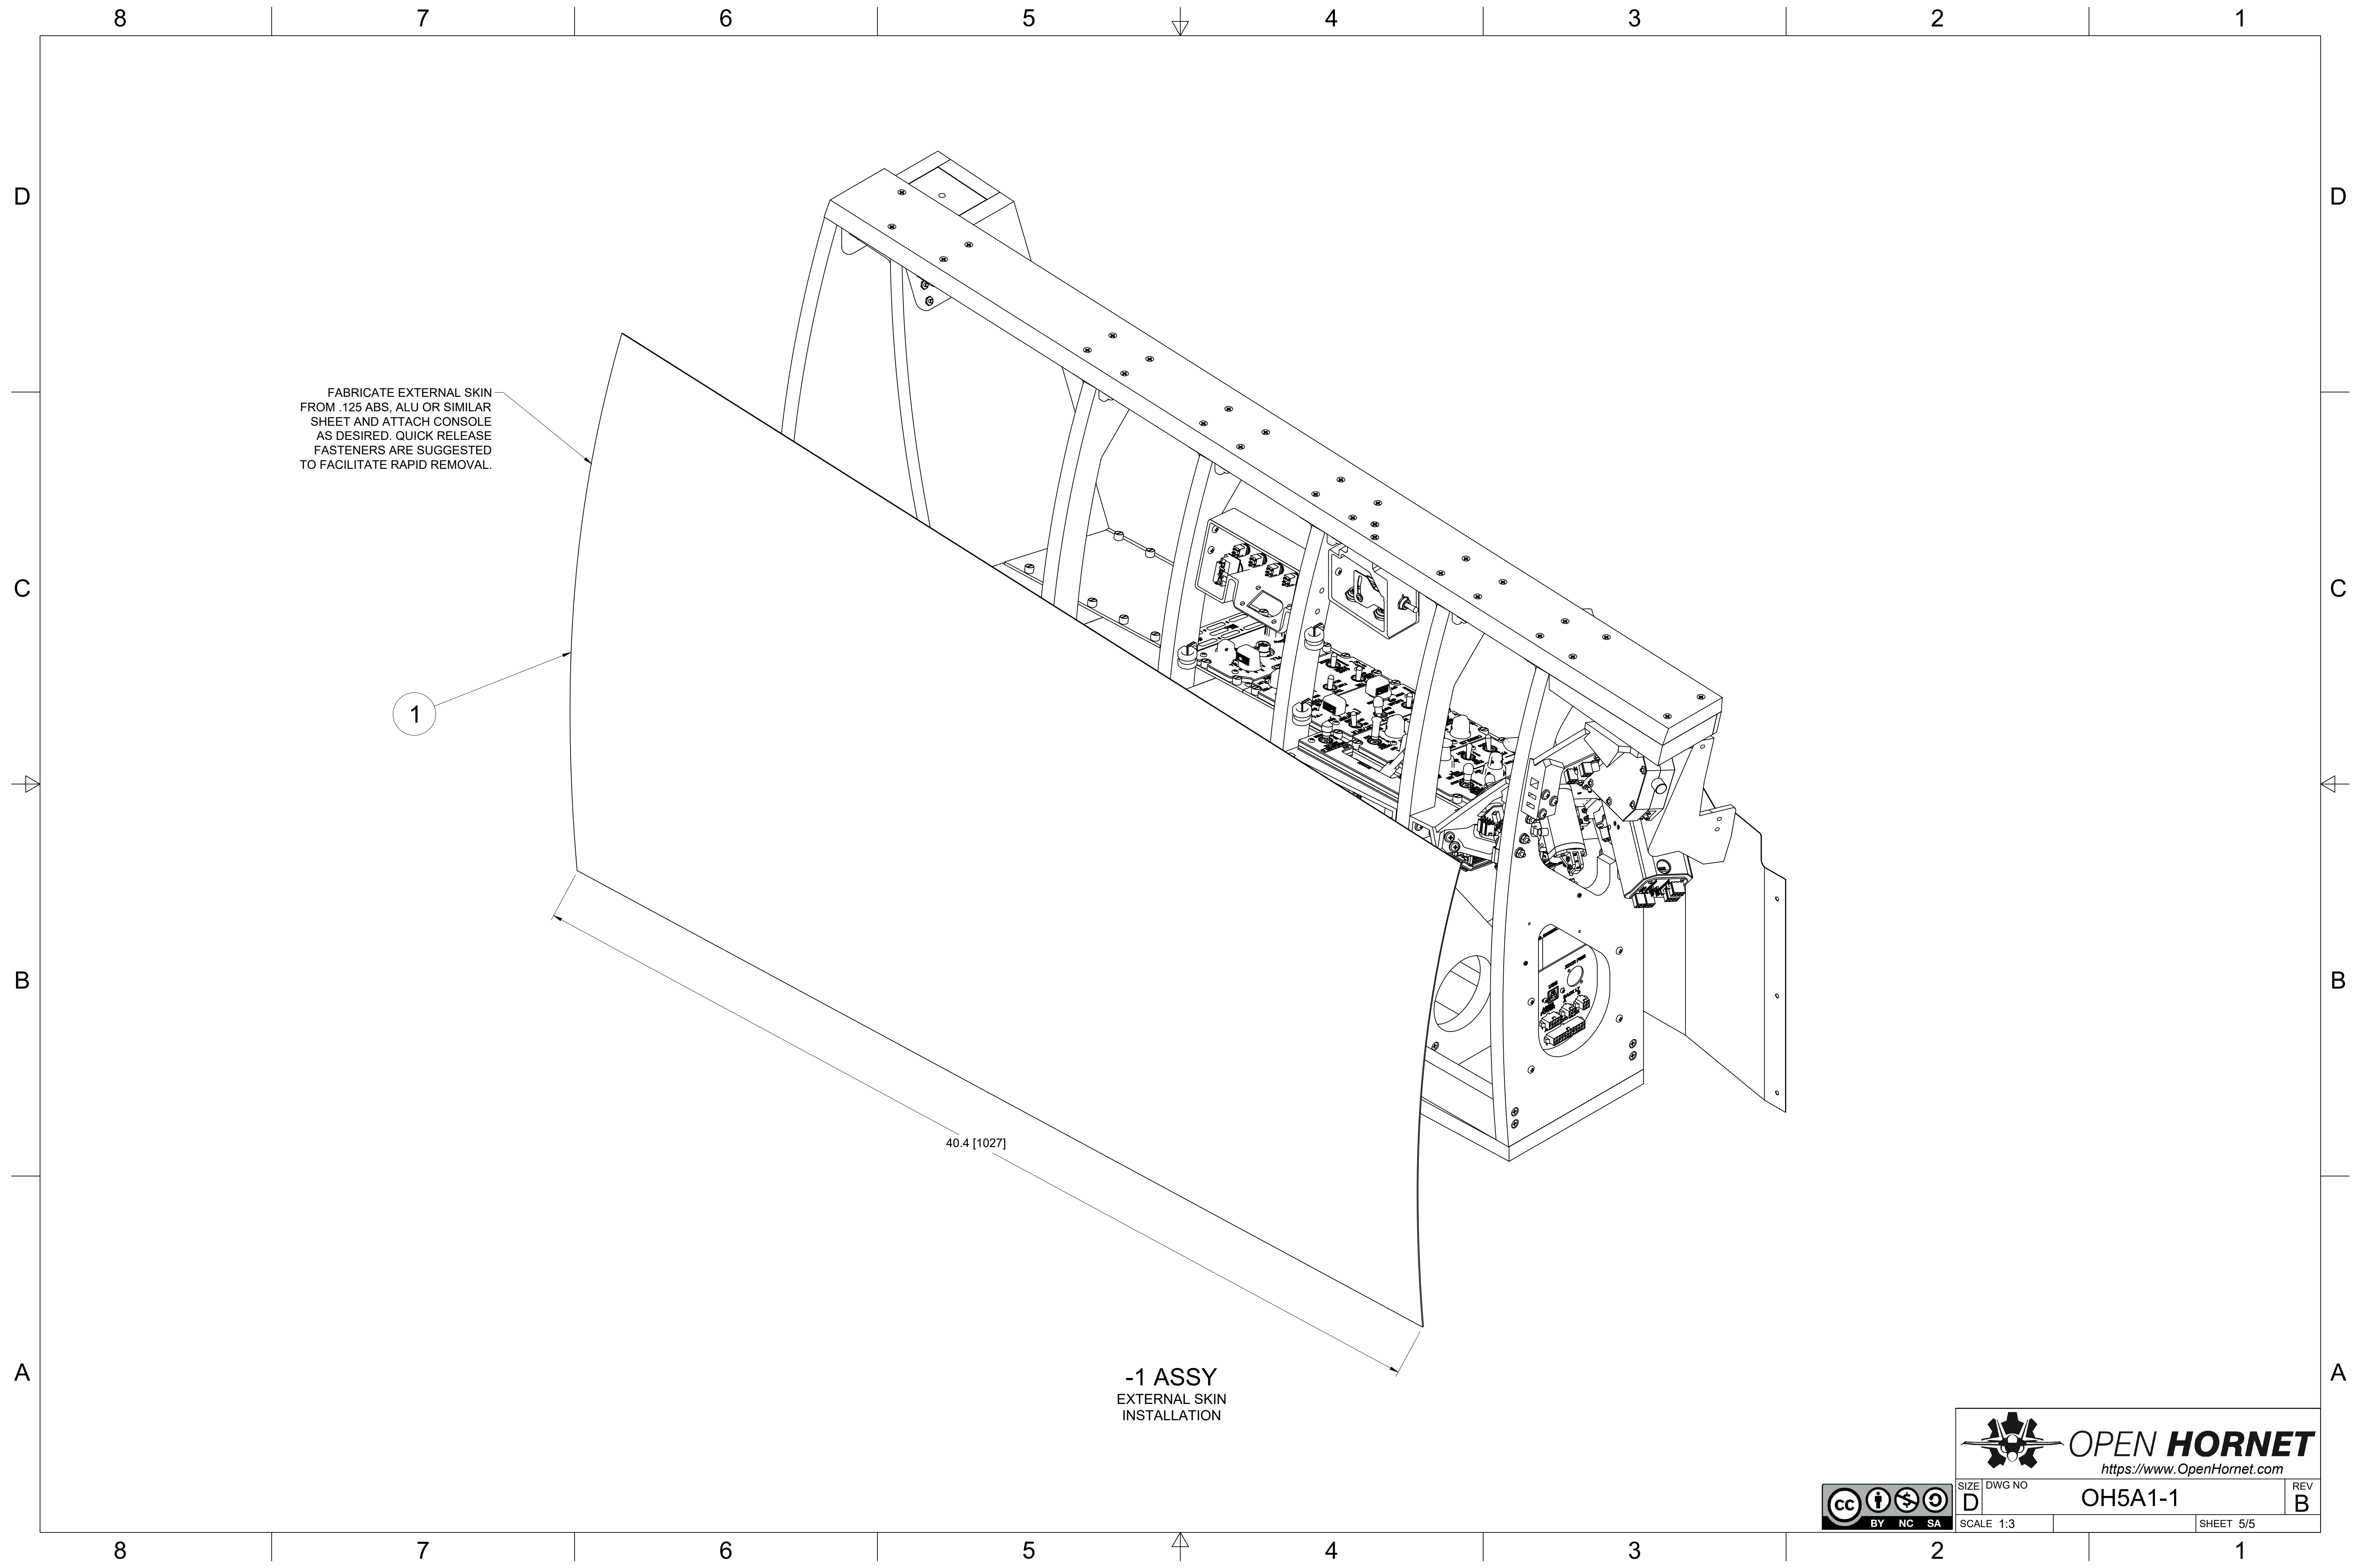

FABRICATE EXTERNAL SKIN FROM .125 ABS, ALU OR SIMILAR SHEET AND ATTACH CONSOLE AS DESIRED. QUICK RELEASE FASTENERS ARE SUGGESTED TO FACILITATE RAPID REMOVAL.

1

40.4 [1027]

-1 ASSY
EXTERNAL SKIN
INSTALLATION



OPEN HORNET
<https://www.OpenHornet.com>

SIZE	DWG NO	REV
D	OH5A1-1	B
SCALE 1:3	SHEET 5/5	