## COLUMBIA PRODUCTS SANI-LAV

**Operating Manual for Knife Sterilizers – Model 558** 



All Heating Elements have a 1" standard NPT male thread for through-the-side tank installation in knife sterilizers with 1" NPT threaded female flange. These models also come with a stainless steel nut and rubber washer for installation in knife sterilizers with a 1.25" hole.

## **Installation Instructions**


## Knife Sterilizers with a 1" NPT threaded female flange:

- 1. Remove the jam nut and rubber gasket (Illustration A).
- 2. Install pipe tape on threads (Illustration B).
- 3. Screw the heating element into the 1" NPT flange until tight. (Illustration C).
- 4. Fill box with water before turning unit on.

## Knife Sterilizers with a 1.25" hole only:

- 1. Remove the jam nut only, leaving the rubber gasket in place.
- 2. Insert the heating element through the 1.25" opening.
- 3. Reinstall the jam nut (Illustration D).
- 4. Tighten the jam nut securely.
- 5. Fill box with water before turning unit on.

**Caution:** Heating Elements must be fully submerged at all times. Low liquid level will cause burn-out. Do not immerse or spray box, these units are not water proof.

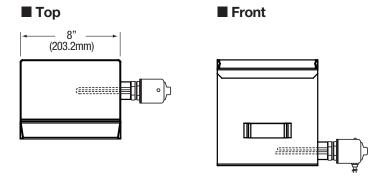

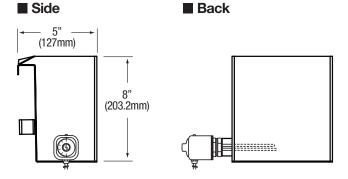




Illustration A



Illustration B



Illustration C



Illustration D