# Derivation of Continuity Equation in Spherical Coordinates

James Wright 2019-01-21

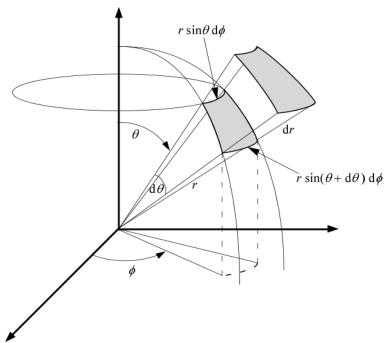


Figure 1: The control volume in spherical coordinates.

# 1 Overview

This document goes over the derivation of the continuity equation in spherical coordinates. In  $\S$  2, we'll derive the individual terms of the continuity equation for spherical coordinates. In  $\S$  3, we'll combine and simplify the terms into the continuity equations.

## 1.1 Spherical Coordinate System

It is assumed that the reader is already knowledgeable as to the nature of spherical coordinate systems. For reference, the volume of a spherical differential element is given by equation 1.

$$dV = r^2 \sin\theta dr d\theta d\phi \tag{1}$$

In this document, the velocity components will be given as  $u_r$ ,  $u_\theta$ , and  $u_\phi$  for the radial (r), polar  $(\theta)$ , and azimuthal  $(\phi)$  directions respectively.

## 1.2 Continuity Equation

The basic continuity equation is simply the sum of the mass entering the control volume equals the time rate of change of the mass in the control volume. The base equation that will be used is thus:

$$\frac{\partial m}{\partial t} = \sum \dot{m}_i$$

The mass flows entering/exiting the control volume can be written as the product of the flux at the face of a control volume,  $\dot{m}''_{ij}$ , and the area of said face,  $A_{ij}$ :

$$\frac{\partial m}{\partial t} = \sum \dot{m}_{ij}^{"} A_{ij} \tag{2}$$

Here, i represents one of the three coordinate directions  $(r, \theta, \phi)$ , and j represents the two opposite faces in the coordinate directions. We assume the flow is moving in the positive coordinate directions exclusively, so j can be thought of as the mass flow going in and mass flow going out.

This turns equation 2 into:

$$\frac{\partial m}{\partial t} + \sum_{i=r,\theta,\phi} (\dot{m}_{i,out}'' A_{i,out} - \dot{m}_{i,in}'' A_{i,in}) = 0$$
(3)

#### 1.3 Other Information

Many of the faces of the control volume can be simplified to a trapezoid. The area of a trapezoid is given as the product of the average of the two midsection sides,  $l_{short} + l_{long}$ , and the height of the trapezoid, h:

$$A_{trapezoid} = \frac{1}{2}(l_{short} + l_{long}) \times h \tag{4}$$

The order of differential terms is used extensively in this document. To summarize, whenever you have a differential term, such as dr, raised to a higher order, you assume it is equal to zero. This is sort of a reverse l'Hopital's rule, where as a function goes to infinity, the lower order terms dominate over higher order terms.

# 2 Deriving Individual Terms

We'll first start with the defining the four components of the continuity equation.

## 2.1 Mass Time Rate of Change

$$\frac{\partial m}{\partial t} = \frac{\partial \rho}{\partial t} dV$$

$$\frac{\partial m}{\partial t} = \frac{\partial \rho}{\partial t} r^2 \sin \theta dr d\theta d\phi \tag{5}$$

#### 2.2 Radial Mass Flow

#### 2.2.1 Radial Mass Flux

$$\dot{m}_{r,in}^{"} = \rho u_r \tag{6}$$

$$\dot{m}_{r,out}'' = \rho u_r + \frac{\partial \rho u_r}{\partial r} dr \tag{7}$$

#### 2.2.2 Radial Face Areas

**Inlet** The faces in the radial direction form a trapezoid, so we use equation 4 to calculate it's area.

$$l_{short} = r \sin(\theta) d\phi \qquad l_{long} = r \sin(\theta + d\theta) d\phi$$
$$A_{r,in} = \frac{1}{2} [r \sin(\theta) d\phi + r \sin(\theta + d\theta) d\phi] \times r d\theta \tag{8}$$

Using  $\sin(A+B) = \sin A \cos B + \sin B \cos A$ , we can expand the  $\sin(\theta+d\theta)$  term. We then also state that as  $d\theta \to 0$ :

$$\sin(d\theta) \approx d\theta \qquad \cos(d\theta) \approx 1$$

therefore we get the following:

$$\sin(\theta + d\theta) = \sin\theta\cos d\theta + \sin d\theta\cos\theta \approx \sin\theta + \cos\theta d\theta$$

Substituting this into equation 8 and reorganizing terms, we get the following:

Eqn. 
$$8 \Rightarrow r^2 \sin \theta d\theta d\phi + \frac{1}{2}r^2 \cos \theta d\theta^2 d\phi$$

We assume  $d\theta^2 \approx 0$  (see §1.3), which gives us:

$$A_{r,in} = r^2 \sin\theta d\theta d\phi \tag{9}$$

**Outlet** The outlet face is done identically to the inlet face.

$$l_{short} = (r + dr)\sin(\theta)d\phi \qquad l_{long} = (r + dr)\sin(\theta + d\theta)d\phi$$

$$A_{r,out} = \frac{1}{2}[(r + dr)\sin(\theta)d\phi + (r + dr)\sin(\theta + d\theta)d\phi] \times (r + dr)d\theta \qquad (10)$$

$$\Rightarrow \frac{1}{2}(r + dr)^{2}[\sin\theta + \sin(\theta + d\theta)]d\theta d\phi$$

Substituting the same trig identity as in 'Inlet' and expanding  $(r + dr)^2$ , and dropping higher order differential terms, we get:

$$\frac{1}{2}(r^2 + 2rdr + dr^2) [\sin\theta d\theta d\phi + \cos\theta d\theta^2 d\phi] \Rightarrow \frac{1}{2}(r^2 + 2rdr) \sin\theta d\theta d\phi$$

$$\therefore A_{r,out} = r^2 \sin\theta d\theta d\phi + 2r \sin\theta dr d\theta d\phi \tag{11}$$

### 2.2.3 Combining Radial Flow Terms

$$\dot{m}_r = (\dot{m}_{r,out}'' A_{r,out} - \dot{m}_{r,in}'' A_{r,in})$$

$$\Rightarrow \left(\rho u_r + \frac{\partial \rho u_r}{\partial r} dr\right) \left(r^2 \sin\theta d\theta d\phi + 2r \sin\theta dr d\theta d\phi\right) - (\rho u_r) \left(r^2 \sin\theta d\theta d\phi\right)$$

Expanding out the terms, we find that the first and last terms cancel each other out and that a  $dr^2$  appears:

$$\Rightarrow \underline{\rho u_r r^2 \sin \theta d\theta d\phi} + \frac{\partial \rho u_r}{\partial r} r^2 \sin \theta dr d\theta d\phi + 2\rho u_r r \sin \theta dr d\theta d\phi + \frac{\partial \rho u_r}{\partial r} 2r \sin \theta dr^2 d\theta d\phi - \underline{\rho u_r r^2 \sin \theta d\theta d\phi}$$

$$\therefore \dot{m}_r = \frac{\partial \rho u_r}{\partial r} r^2 \sin \theta dr d\theta d\phi + 2\rho u_r r \sin \theta dr d\theta d\phi \tag{12}$$

### 2.3 Polar Mass Flow

#### 2.3.1 Polar Mass Flux

$$\dot{m}_{\theta,in}^{"} = \rho u_{\theta} \tag{13}$$

$$\dot{m}_{\theta,out}'' = \rho u_{\theta} + \frac{\partial \rho u_{\theta}}{\partial \theta} d\theta \tag{14}$$

#### 2.3.2 Polar Face Areas

Inlet

$$l_{short} = r \sin \theta d\phi \qquad l_{long} = (r + dr) \sin \theta d\phi$$

$$A_{\theta,in} = \frac{1}{2} \left[ r \sin \theta d\phi + (r + dr) \sin \theta d\phi \right] \times dr \tag{15}$$

$$\Rightarrow \frac{1}{2} \left[ r \sin \theta dr d\phi + \left( r dr + dr^2 \right) \sin \theta d\phi \right] \Rightarrow \frac{1}{2} \left[ r \sin \theta dr d\phi + r \sin \theta dr d\phi \right]$$

$$A_{\theta,in} = r \sin \theta dr d\phi \tag{16}$$

Oulet

$$l_{short} = r \sin(\theta + d\theta) d\phi \qquad l_{long} = (r + dr) \sin(\theta + d\theta) d\phi$$
  

$$A_{\theta,out} = \frac{1}{2} \left[ r \sin(\theta + d\theta) d\phi + (r + dr) \sin(\theta + d\theta) d\phi \right] \times dr$$
(17)

Similarly to inlet, equation 17 reduces to:

$$\Rightarrow r \sin(\theta + d\theta) dr d\phi$$

Using the trig identity defined in the radial section, we find:

$$A_{\theta,out} = r\sin\theta dr d\phi + r\cos\theta dr d\theta d\phi \tag{18}$$

#### 2.3.3 Combining Polar Flow Terms

$$\dot{m}_{\theta} = (\dot{m}_{\theta,out}'' A_{\theta,out} - \dot{m}_{\theta,in}'' A_{\theta,in})$$

$$= \left(\rho u_{\theta} + \frac{\partial \rho u_{\theta}}{\partial \theta} d\theta\right) (r \sin \theta dr d\phi + r \cos \theta dr d\theta d\phi) - (\rho u_{\theta}) (r \sin \theta dr d\phi)$$

 $\Rightarrow \underline{\rho u_{\theta} r \sin \theta dr d\phi} + \frac{\partial \rho u_{\theta}}{\partial \theta} r \sin \theta dr d\theta d\phi + \rho u_{\theta} r \cos \theta dr d\theta d\phi$ 

$$+\frac{\partial \rho u_{\theta}}{\partial \theta} r \cos \theta dr d\theta^2 d\phi - \underline{\rho u_{\theta} r \sin \theta dr d\phi}$$

$$\dot{m}_{\theta} = \rho u_{\theta} r \cos \theta dr d\theta d\phi + \frac{\partial \rho u_{\theta}}{\partial \theta} r \sin \theta dr d\theta d\phi \tag{19}$$

## 2.4 Azimuthal Mass Flow

#### 2.4.1 Azimuthal Mass Flux

$$\dot{m}_{\phi,in}^{"} = \rho u_{\phi} \tag{20}$$

$$\dot{m}_{\phi,out}'' = \rho u_{\phi} + \frac{\partial \rho u_{\phi}}{\partial \phi} d\phi \tag{21}$$

#### 2.4.2 Azimuthal Face Areas

Inlet

$$l_{short} = rd\theta \qquad l_{long} = (r + dr)d\theta$$
  

$$A_{\phi,in} = \frac{1}{2} \left[ rd\theta + (r + dr) d\theta \right] \times dr$$
(22)

$$\Rightarrow \frac{1}{2} \left[ r dr d\theta + \left( r dr + dr^2 \right) d\theta \right] \Rightarrow \frac{1}{2} \left[ r dr d\theta + r dr d\theta \right]$$

$$A_{\phi,in} = r dr d\theta$$
(23)

**Outlet** The inlet area is the same as the outlet area.

$$A_{\phi,in} = A_{\phi,out} \tag{24}$$

#### 2.4.3 Combining Azimuthal Flow Terms

$$\dot{m}_{\phi} = (\dot{m}_{\phi,out}^{"} A_{\phi,out} - \dot{m}_{\phi,in}^{"} A_{\phi,in})$$

$$= \left(\rho u_{\phi} + \frac{\partial \rho u_{\phi}}{\partial \phi} d\phi\right) (r dr d\theta) - (\rho u_{\phi}) (r dr d\theta)$$

$$\Rightarrow \rho u_{\phi} r dr d\theta + \frac{\partial \rho u_{\phi}}{\partial \phi} r dr d\theta d\phi - \rho u_{\phi} r dr d\theta$$

$$\dot{m}_{\phi} = \frac{\partial \rho u_{\phi}}{\partial \phi} r dr d\theta d\phi \qquad (25)$$

# 3 Combining Terms

$$\frac{\partial m}{\partial t} + \sum_{i=r,\theta,\phi} (\dot{m}_{i,out}'' A_{i,out} - \dot{m}_{i,in}'' A_{i,in}) = 0$$
(26)