



Universal IDU - Air Handler

Job Name:	Location:	Date:
Engineer:	Submitted to:	Submitted by:
Approval:	Construction:	Unit #:
Reference:	Drawing #:	

Key Features:

- * Universal Air Handler Compatible with Hi UNI
- * **Build in A2L Safety Sensor** - Ensures safety for both homeowners and technicians
- * **Built-In Humidity Sensor**-Enhanced humidity management for improved indoor comfort
- * **Optional Field-Installed Heat Kits**, optional auxiliary electric heat kits can be installed.
- * **Up to 0.8" WC Maximum ESP**
- * **Multiple installation options**, including downflow or horizontal discharge configurations
- * **Built-in Hi-Checker** interface enables app-based fault diagnostics for enhanced maintenance convenience
- * **Integrated Drain Pan** -Constructed from corrosion-resistant composite material and sloped to help prevent standing water
- * **Intelligent Static Pressure Management** technology ensures whole-home comfort and quiet operation by automatically adjusting static pressure and airflow in real time,




SPECIFICATIONS

Model Name			AHU-18U3T25	AHU-24U3T25
Capacity	Cooling capacity	Btu/h	18000	24000
	Heating capacity	Btu/h	18000	24000
Electrical Data	Power	V/Hz/f	208-230V~,60Hz,1P	208-230V~,60Hz,1P
	Rated current	A	7.1	9.3
	Anti electric shock	/	Class I	Class I
	Degrees of protection	/	IPX0	IPX0
Fan Motor	Model	/	ZW702B500035	ZW702B500035
	Type/Qty	/	DC/1	DC/1
	Output	HP	1/2	1/2
	Speed(H/M/L)	r/min	350-1400	350-1400
Air flow (Rated)		CFM	800	800
ESP	Rated	in-H2O	0.58	0.58
	Range	in-H2O	0-0.8	0-0.8
Noise Level (Sound Pressure HI)		dB(A)	51	51
Dimension	Net Dimension (WxHxD)	inch	17-1/2 ×45×21	17-1/2 ×45×21
	Package Dimension (WxHxD)	inch	20-1/2 ×51-5/8 ×25-3/8	20-1/2 ×51-5/8 ×25-3/8
Weight	Net Weight	lbs	123.9	123.9
	Gross Weight	lbs	149.7	149.7
Pipe Size	Diameter(Liquid)	inch	3/8"	3/8"
	Diameter(Gas)	inch	5/8"	5/8"
Loading capacity		20'/40'/40HQ	40/80/160	40/80/160

Unit Dimension

Inch (mm)


18/24K

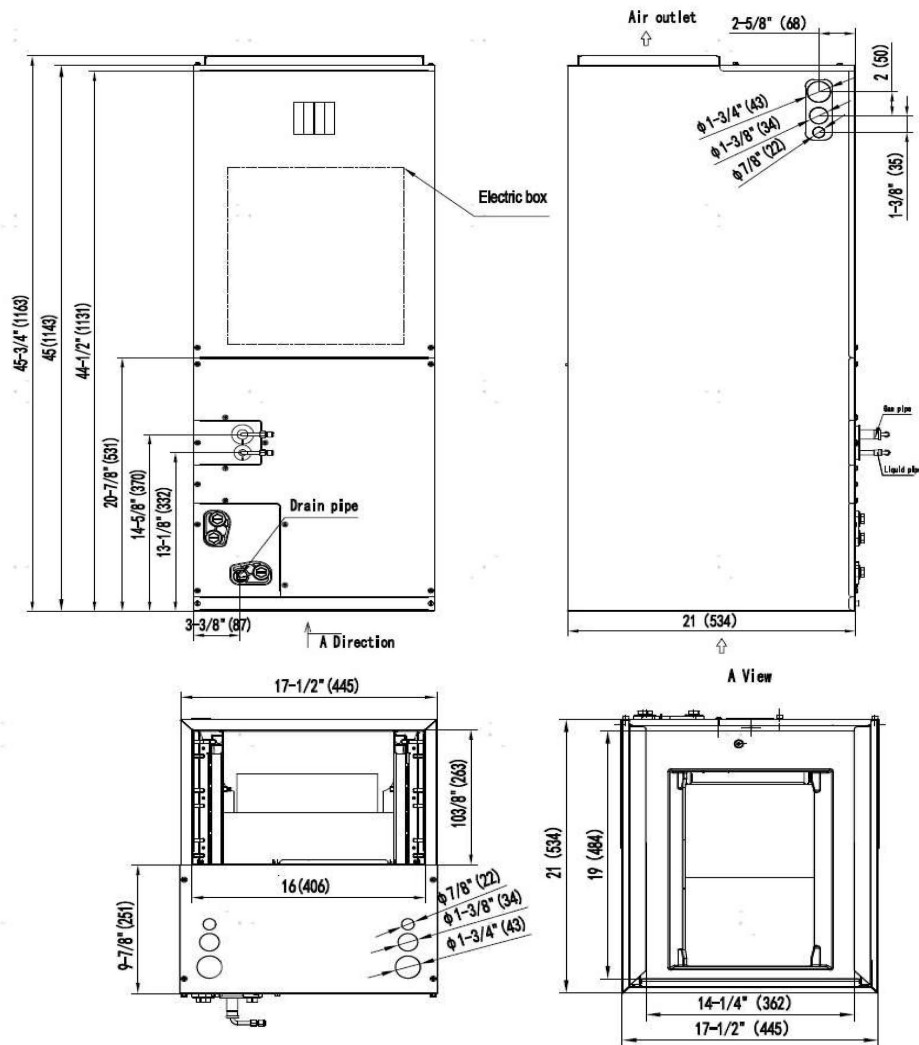

Accessories

Controller		
RCH-RTY5-0	Remote Controller	optional
HS-WC01U	Wired Controller (built-in infrared signal receiver)	optional
HS-WC02U	Wired Controller	optional
HS-WC01T	Central controller (Hisense IDU only)	optional

REMOTE CONTROLLER

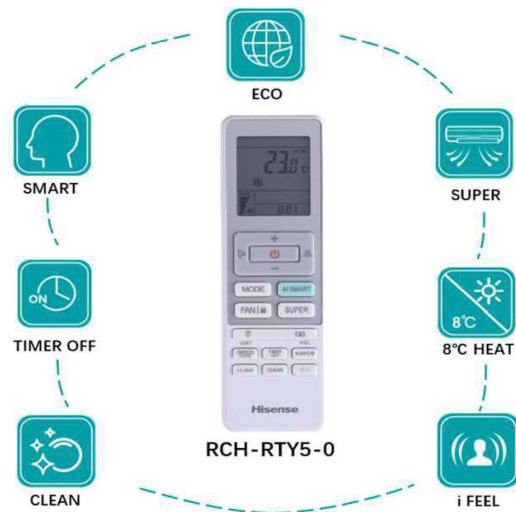

Button Description

	Press this button to select the operation mode
	Used to adjust the set temperature and the timer, also real time
	Used to adjust vertical adjustment louver swinging and set the desired up/down airflow direction
	Used to adjust the swing of the horizontal louver and set the left/right airflow direction
	Used to start or stop the fast cooling/heating (Fast cooling operates at high fan speed with 60°F (16°C) set temp automatically. Fast heating operates at auto fan speed with 80°F (30°C) set temp automatically)
	Used to select fan speed in sequence: auto, higher, high, medium, low, lower. Press this button for 5 seconds to activate LOCK mode; press it again for 5 seconds to deactivate the mode.
	Used to set or cancel I FEEL Mode. In I FEEL mode the Air Conditioner operates basis temperature sensor fitted in remote instead of machine. Advice to use I FEEL mode end the remote put where the indoor unit receives signal easily
	Used to set the Clean operation
	Used to start Smart Running Mode. Smart Mode automatically selects the appropriate operating mode—Cooling, Dry, Fan Only, or Heating

WIRED CONTROLLER



Large **LCD Display** for EZ read and control



24h Real Timer and **Weekly Timer** setting



Eliminate the feeling of being cold
Reduce power consumption

HS-WC01U
HS-WC02U



❖ **Signal receiver** of Remote Control – **only HS-WC01U**

❖ **Central Controller** for Max. 16 units - **only HS-WC01T**

Button Description

1. ON/OFF BUTTON

The appliance will be started or stopped when this button is pressed.

2. RUN INDICATOR

Indicates that the appliance is on.

3. MODE BUTTON

Press this button to select the operation mode.

4. FAN BUTTON

Used to select fan speed in sequence high-auto-low-medium-high.

5. SWING BUTTON

Used to stop or start the adjustment louver swinging and set the desired airflow direction.

6. TIMER/CLOCK BUTTON

Used to set the current time or set timer on/off.

7. SLEEP BUTTON

Used to set or cancel Sleep Mode operation.

8. ENTER BUTTON

Used to confirm settings.

9. CANCEL BUTTON

Used to cancel settings.

10. ADD. FUNC. BUTTON

Used to set filter clean, hot water, fresh air, electric heater, etc.

11. INCREASE SETTING BUTTON

Used to raise the set temperature;

It raise the values when setting.

12. DECREASE SETTING BUTTON

Used to lower the set temperature;

It lower the values when setting.

13. LIQUID CRYSTAL DISPLAY(LCD) SCREEN

Used to display indicator screens.

14. BUILT-IN INFRARED SIGNAL RECEIVER

Used to receive infrared signal.