


Battery compartment has 4 screws goes into stabilizers



#1 Bolts → clear bag


Front Fender plastic piece

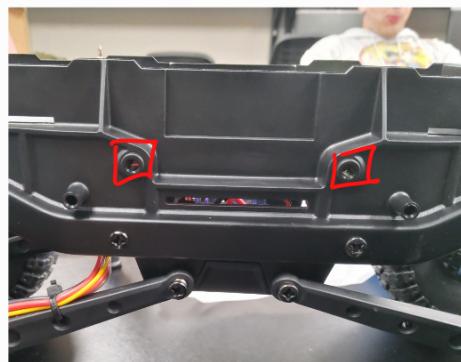


#2 Bolts x4 → white bag

Bolts from frame to battery/receiver holder

2 bolts x 8

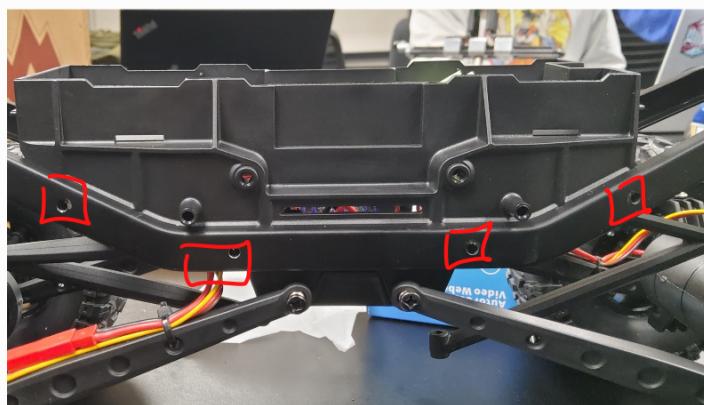

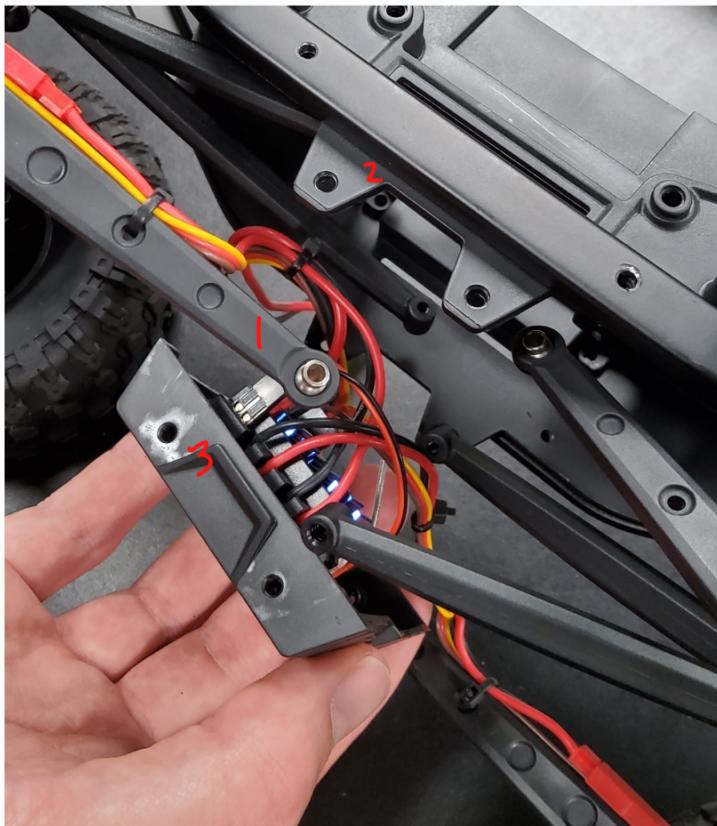

→ blue box
#3 Bolts go
through in order
listed 1 → 2 → 3