# JIANT FM · CONTROLS

every button, knob, layer, combo and page

firmware V10 · M-VAVE FM-1 · juanjiant-bit.github.io/JIANT

## NAVIGATION · SIX RULES

### 1 · SELECT WALKS THE PAGES

Every page of the section in one chain, a page a detent, stopping at both ends. No levels, no zoom.

FX: SENDS → DIST → AUTO PAN → BUSES → DLY → DLY 2 → … → PUNCH

### 2 · THE BUTTON: IN, OR ON

From another section: the page you were last on there. Already inside: the first page of the next group (round).

FX › DLY 2: FX → REVERB · EDIT › FILTER: EDIT → FOCUS

### 3 · PRESETS LOADS PRESETS

Always: the track's sounds; SEQ the patterns (PHRASES, OCT+ loads); GEN the genre. Never a page, a track or a module.

FX › DLY: PRESETS ▶ the next sound

### 4 · KNOB 1 PICKS

The step, the bar, the slot, the stage, the operator, the kit's sound, the row. The track: always ALGORITHM.

SEQ › STEP: K1 = all 64 steps · SEQ › BAR: K1 = the bar

### 5 · HOLD = THE LAYER

Held + SELECT: HOME GEN · EDIT SEQ LFO FX their dice · GLO the tempo · ENV SCL ARP SAVE their chain.

SEQ + G5 CLR STEP · SAVE + C5 NAME

### 6 · THE SCREEN SAYS WHERE

Tabs on top: the section's groups, the one shown lit, a dot a page. Footer: SECTION · GROUP · page and n/N.

FX · DELAY · DLY 2 6/16

## THE PANEL

### KNOBS AND TRANSPORT

| | |
|---|---|
| **MASTER** | Master volume. |
| **SELECT** | **Walks the section's pages**, a page a detent, stopping at the ends (the MENU: every row). Held with a button: HOME **GEN**; EDIT · SEQ · LFO · FX their **dice** (OK keeps, CANCEL back); GLO the tempo; ENV · SCL · ARP · SAVE their chain. |
| **PRESETS** | **Always presets**: the sounds (factory and user) on every page; SEQ: the patterns (PHRASES); GEN: the genre. Nothing in the MENU or with a button held. |
| **ALGORITHM** | Selects the track from any page: T1–T4, or T1–T6 with TRACKS 6. MENU: the tabs. A layer held: MAP · KNOBS · STATE. |
| **KNOB 1–4** | The four columns on screen; KNOB 1 picks (step, bar, slot, row). Fast sweeps the whole range, slow fine-tunes. With a layer held: the layer's. |
| **OCT– · OCT+** | The keyboard's octave (both together: back to 0); on DRUM the kit stays put: +1/+2/+3 ratchet x2/x4/x8, –1 SHORT, –2 GHOST, –3 FLAM, each sound its own (grid KNOB 3 HIT). On action pages and dialogs: back / confirm. |
| **PLAY** | Start / stop. GLO + PLAY: restart from the top. |
| **REC** | Arms live recording on the selected track (notes and knob moves, overdub). |
| **HOME** | Tap: HOME (on HOME the next group: ECO · BEING · GEN). **Hold: the MENU.** |
| **KEYS** | 27 keys play the selected track in its scale; with a layer held they become that layer's. |

### SECTIONS

| BUTTON | GROUPS (A TAP: THE NEXT) · PAGES (SELECT) | HOLD |
|---|---|---|
| **HOME** | ECO: ECO · MACROS \| BEING: BEING · ROUTES \| GEN: GEN 1 · GEN 2 · GEN 3 | MENU |
| **EDIT** | SOUND: EDIT 1 · EDIT 2 \| TONE: FILTER · MORPH · RETRIG · ROTOR · VOICE · VOICE 2 · WORDS \| FOCUS (FM6: … OPERATOR: OPERATOR · OP ENV · OPERATOR 2; DRUM: KIT: KIT · KIT 2 · KIT 3 \| SOUND: SOUND 1–4 \| LEVELS 1–2 \| TONE: X-MOD · FILTER · STEREO · VOICE) | INIT · RECALL · sound mutes |
| **SEQ** | PATTERN: PATTERN · STRETCH · PLAYHEADS \| TRACK: TRACK · MUTATE \| BAR: BAR · STEP · NOTE \| STEP: COMP · COMP 2 \| AUTO: AUTOMATION · AUTO LIST | SEQ TOOLS |
| **FX** | TRACK: SENDS · DIST · AUTO PAN \| BUSES \| DELAY: DLY 1–3 \| REVERB 1–2 \| CHORUS \| SLICER: SLICER · SL BUS 1–2 · SL PITCH \| PUNCH \| MASTER · TAPE · EQ | PUNCH-IN FX |
| **GLO** | LIVE: MANO · RIELES \| MIX: MIXER · SENDS \| GLOBAL \| SYSTEM \| COMPS (at power-on GLO opens MIXER) | MUTE · SOLO · LEVEL · TAP |
| **ENV** | TRACKS: TRACKS · TRACKS DEST \| ENV: ENV · ENV DEST \| STAGE | — |
| **LFO** | MOD \| LFO: LFO · LFO DEST \| MSEQ: MSEQ · MSEQ 2 | MACROS M1–M4 (stay latched) |
| **SCL** | KEY \| CHORD | ROOT by key |
| **ARP** | ARP: ARP · ARP 2 | — |
| **SAVE** | SONG: TIMELINE · SECTIONS \| PROJECT: PROJECTS · ARRANGE · TOOLS \| SOUND: USER · PRESETS (from outside, USER / SECTIONS come armed) | SONG layer · C5 NAME |
| **REC** | (transport) | CLEAR · CLICK |

BUTTON from elsewhere: the page last shown; inside: the next group. SELECT walks every page of the section.

## LAYERS · HOLD A BUTTON

### FX · PUNCH-IN EFFECTS

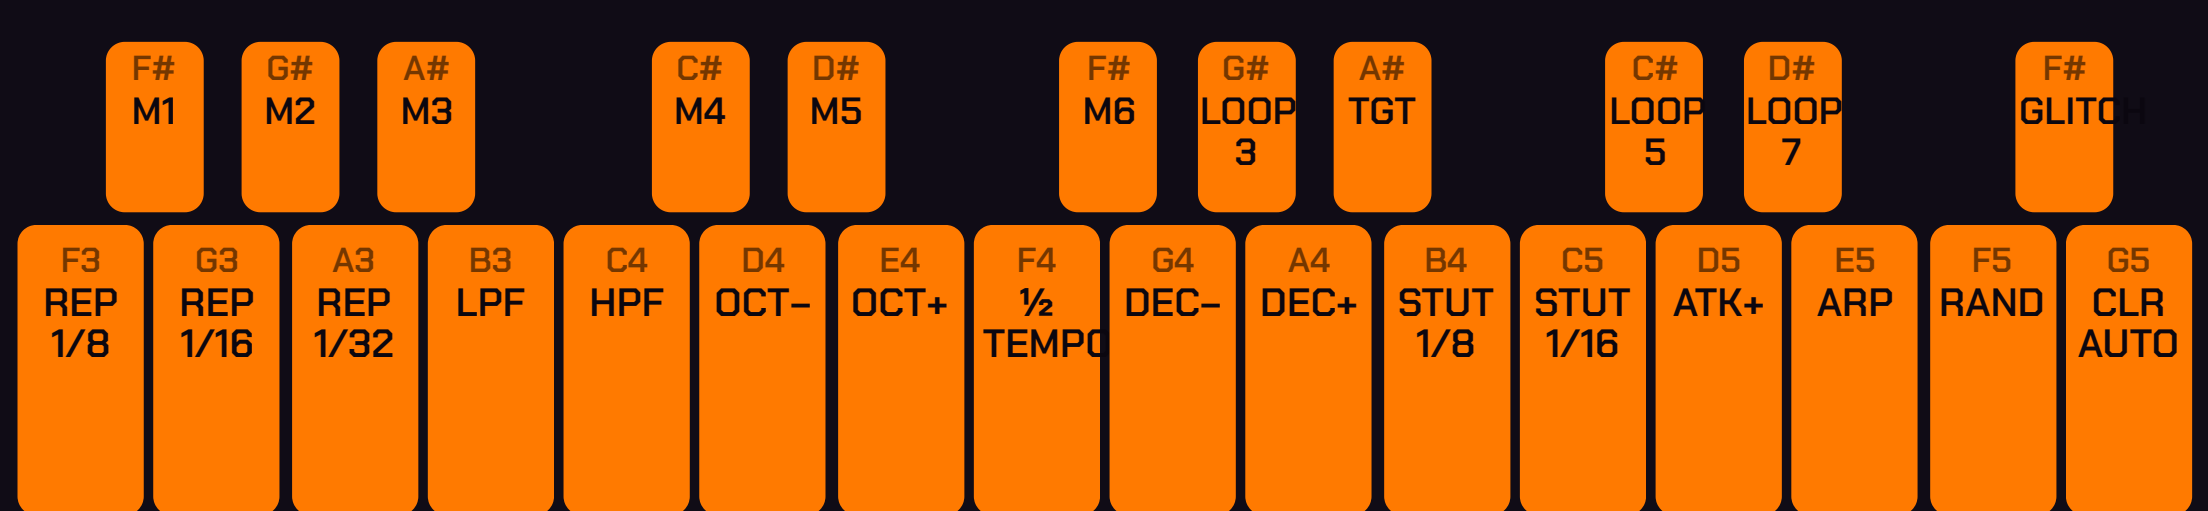

A key plays its effect while held (MENU FX LATCH ON: toggles); hold FX and let go untouched: **LOCKED** open, FX again unlocks; OCT- all off. In on the next 1/16. Black 1–6 mute T1–T6, A#4 picks which tracks the MIDI ones touch (all · synths · drums). G#4 C#5 D#5 loop the last 3 / 5 / 7 steps; F#5 **GLITCH** skips on the 1/16 grid, its cycle locked to the bar (par9). With REC armed and playing they record into the section's lane; G5 clears it.

KNOBS

| | | | |
|---|---|---|---|
| FILTER | CRUSH | THROW | DEPTH |

### GLO · MIX

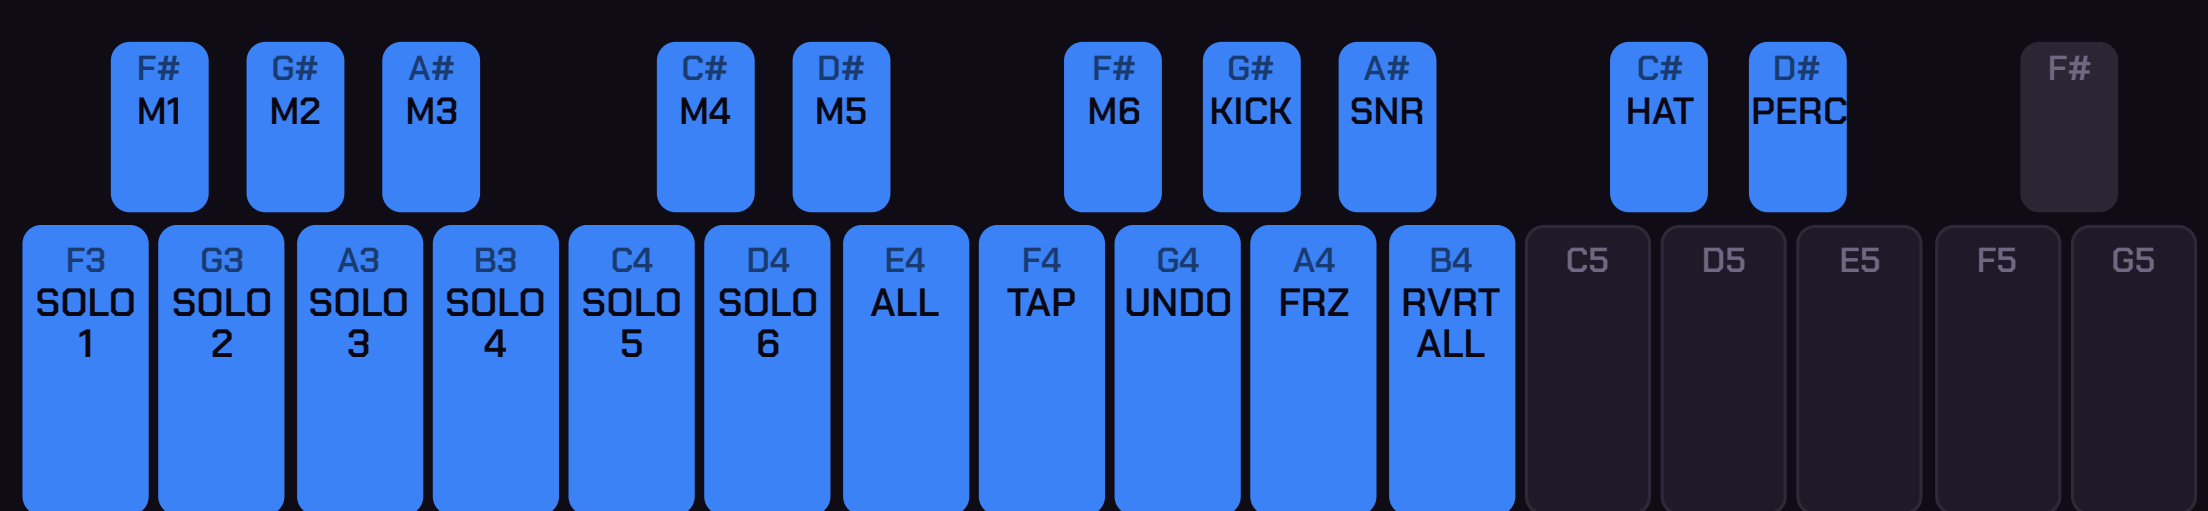

Black 1–6 mute T1–T6 (latched), 7–10 the DRUM-X groups. White: solo while held, E4 unmutes all, F4 tap tempo, G4 **UNDO** the last big change (again: redo), A4 **FREEZE** MUTATE, B4 **REVERT ALL** (every track back to MUTATE's anchor). SELECT: the tempo. PLAY: restart.

KNOBS

| | | | |
|---|---|---|---|
| LEVEL T1 | LEVEL T2 | LEVEL T3 | LEVEL T4 |

T5 or T6 selected: the knobs are T3–T6.

### SAVE · SONG

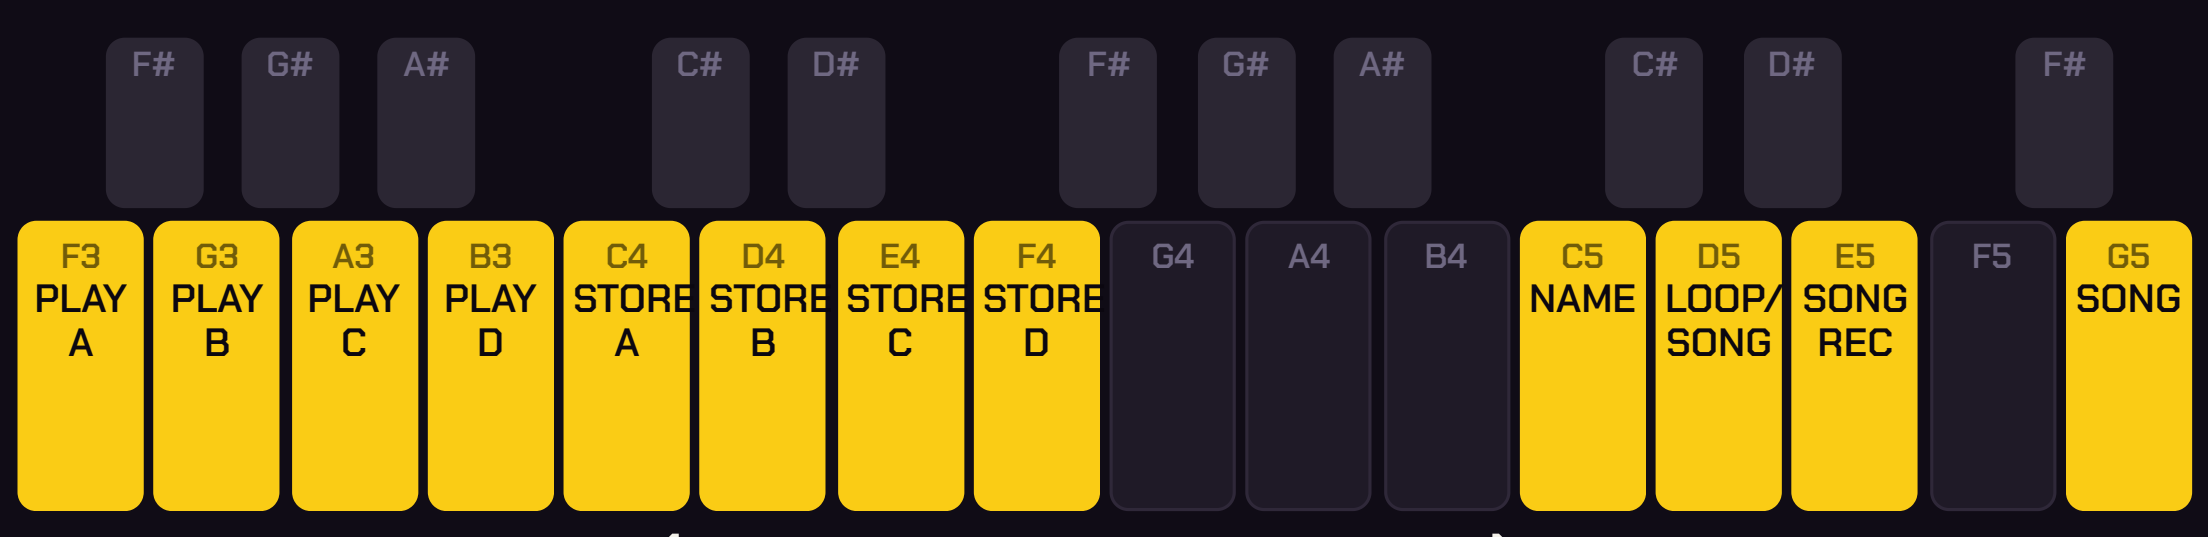

PLAY A–D on the next bar (several in one hold: a quick chain), STORE the section into A–D. OCT+ stores the playing section, OCT– recalls it. C5 renames (USER, SECTIONS, PROJECTS). On the SONG page KNOB 4 stores a scene.

KNOBS

| | | | |
|---|---|---|---|
| SONG 1–8 | - | - | - |

### EDIT · SOUND

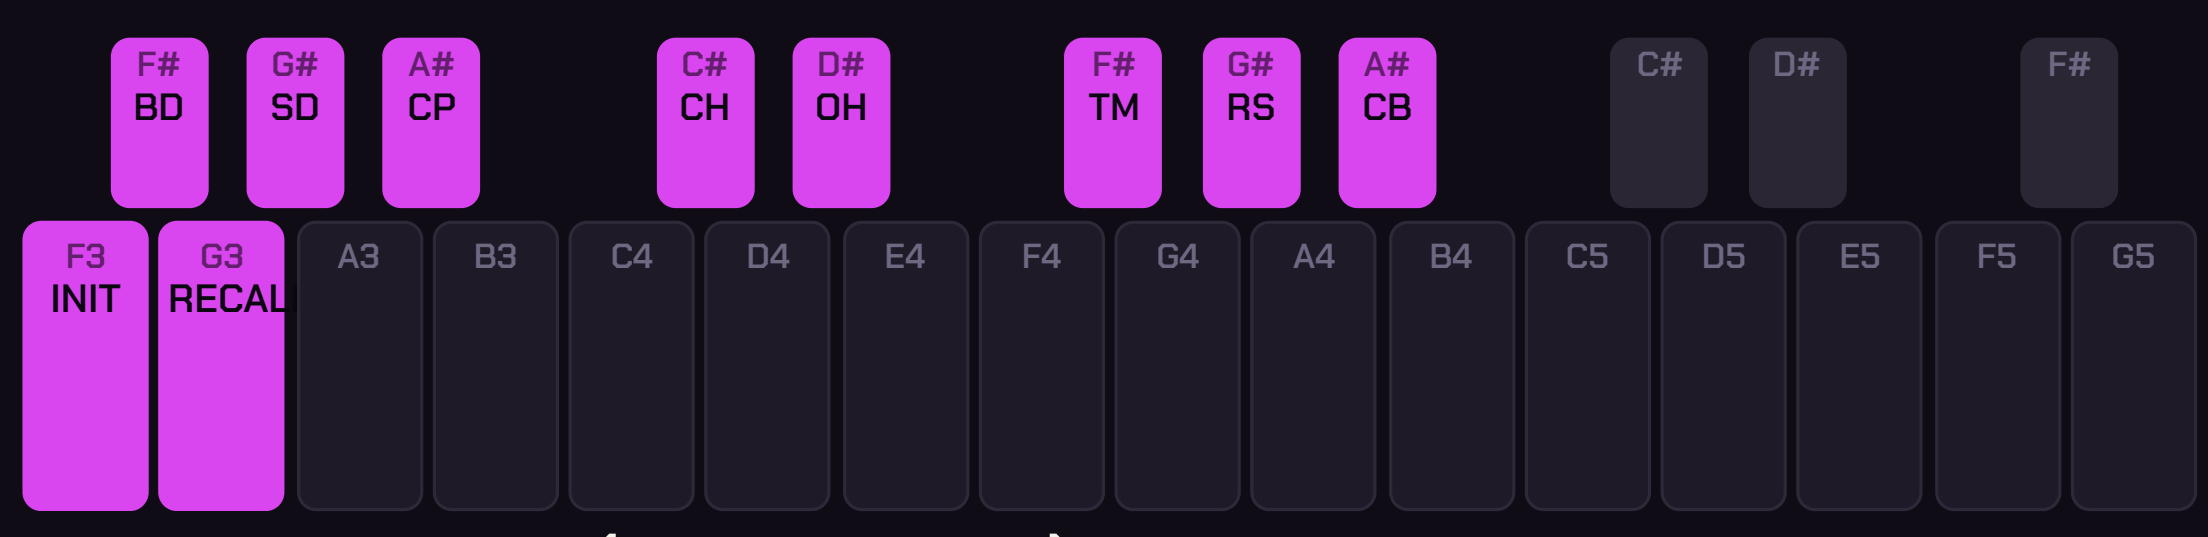

INIT: the factory sound (DRUM: the kit too). RECALL: the sound stored in the section. On a DRUM track black 1–8 mute each DRUM-X sound.

KNOBS

| | | | |
|---|---|---|---|
| EDIT 1 | EDIT 2 | EDIT 3 | EDIT 4 |

### LFO · MACROS

Knobs M1–M4; they stay latched when let go (LFO again: off). F3 rolls new routes, G3 clears them (only tracks that sound). LFO + SELECT: the track's LFO diced.

KNOBS

| | | | |
|---|---|---|---|
| M1 | M2 | M3 | M4 |

### SCL · SCALE

Any key sets the ROOT. ROOT and SCALE are every melodic track's (and RESO's).

KNOBS

| | | | |
|---|---|---|---|
| ROOT | SCL | OFS | PIT |

### SEQ · TOOLS

On the SEQ pages: F3 CLEAR · G3 REVERSE · A3 B3 SHIFT · C4 RANDOM · D4 COOK · E4 BEAT · F4 CLR AUTO (the automation) · G5 CLR STEP (AUTO LIST: the record) · D5 REVERT (the track back to MUTATE's anchor; GLO + G4 undoes).

KNOBS

| | | | |
|---|---|---|---|
| LEN | DIV | SWING | GATE |

### REC · RECORD

F3 CLEAR the track (at once; GLO + G4 undoes it), G3 the metronome CLICK.

KNOBS

| | | | |
|---|---|---|---|
| CLICK | - | - | - |

## COMBOS

### BUTTONS TOGETHER

| | |
|---|---|
| HOME + SELECT | GEN, the song generator (HOME's last pages). |
| EDIT · SEQ · LFO · FX + SELECT | Their dice: sound · sequence · LFO · effects (KEEP? OK / CANCEL). |
| ENV · SCL · ARP · SAVE + SELECT | Into that section and along its chain. |
| SEQ + G5 | CLR STEP: the cursor step and its locks (AUTO LIST: deletes the record). |
| SAVE + C5 | NAME: rename the slot, the section, the project. |
| REC + FX EDIT ENV LFO SCL ARP GLO | Clear that part's automation on the selected track (FX: the punch-in lane too). |
| SEQ + REC | CLEAR ALL SEQUENCES? (OCT+ confirms). |
| SAVE + OCT+ / OCT– | Store / recall the playing section. |
| GLO + PLAY | Restart from the top. |
| GLO + SELECT | Tempo (from any page). |
| STEP HELD + KNOB | A parameter lock on that step (roll, grid). |
| HOME held | MENU: skins (AIR · COLORS · BOTTOM · HUD), SCOPE on the EDIT pages, palettes, knob accel, FX latch, hold time, USB level, animation… |

## EVERY PAGE · KNOB 1 – 4

### ENV

| | | | | |
|---|---|---|---|---|
| ENV | ATK | DEC | SUS | REL |
| ENV DEST | FILTER | PITCH | SHAPE | LOOP |
| STAGE | STAGE | VALUE | LOOP | - |

### LFO

| | | | | |
|---|---|---|---|---|
| LFO | RATE | WAVE | PHASE | FADE |
| LFO DEST | PITCH | FILTER | SHAPE | AMP |
| MOD | SLOT | SRC | DEST | AMT |
| MSEQ | STEP | LEVEL | LEN | SLEW |
| MSEQ 2 | DIV | - | - | - |

### SCL · ARP

| | | | | |
|---|---|---|---|---|
| SCL | ROOT SCALE QUANT ALL TR | | | |
| CHORD | CHORD | VOICING | STRUM | - |
| ARP | MODE | RATE | OCT | GATE |
| ARP 2 | SWING | PROB | HOLD | ORDER |

### FX

| | | | | |
|---|---|---|---|---|
| FX | DIST | CHORUS | DLY | REV |
| DIST | DIST | TYPE | TONE | - |
| AUTO PAN | DEPTH | RATE | SYNC | WAVE |
| SLICER | MODE | PAT | RATE | DEPTH |
| SL BUS | T1 | T2 | T3 | T4 |
| SL BUS 2 | T5 | T6 | FX | - |
| SL PITCH | STEP | PITCH | LEN | QUANT |
| DLY | TIME | FEEDBK | TONE | MIX |
| DLY 2 | WIDE | PITCH | SPRAY | MOD |
| DLY 3 | TYPE | PING | - | - |
| REVERB | TYPE | SIZE | DAMP | PRE/AIR |
| REVERB 2 | MOD | RATE | FILT | WIDE |
| CHORUS | RATE | DEPTH | STEREO | - |
| PUNCH | LEN | RES | REC | CLEAR |
| MASTER | CLIP | PUNCH | DUCK | REL |
| TAPE | TAPE | WOW | - | - |
| EQ | LOW LO MID HI MID HIGH | | | |

### EDIT

| | | | | |
|---|---|---|---|---|
| EDIT 1 | E1 | E2 | E3 | E4 |
| EDIT 2 | E5 | E6 | E7 | E8 |
| WORDS | LANG LYRIC POS (OCT+ TYPE) | | | |
| RETRIG | RTRG | - | - | - |
| OPERATOR | OP | RATIO | FINE | LEVEL |
| OP ENV | OP | STAGE | RATE | LEVEL |
| OPERATOR 2 | OP | MODE | DETUNE | VEL |
| FILTER | TYPE | CUT | RES | DRIVE |
| VOICE | VOICE | GLIDE | MODE | PRIO |
| VOICE 2 | ALLOC | DETUNE | - | - |
| FOCUS | PARAM | VALUE | SRC | AMT |
| KIT 3 | BP | FEEDBK | HANDS | - |
| X-MOD | RATE | DEPTH | SHAPE | RAND |
| LEVELS | KICK | SNARE | CLAP | HATCL |
| LEVELS 2 | HATOP | TOM | RIM | BELL |
| SOUND | SOUND | SIDE | PITCH | PMOD |
| SOUND 2 | SOUND | DECAY | NOISE | COLOR |
| SOUND 3 | SOUND | MODE | PM.TYPE | DRIVE |
| SOUND 4 | SOUND | LAYER | FEEDBK | SEND |
| STEREO | IMAGE | - | - | - |

### SEQ

| | | | | |
|---|---|---|---|---|
| PATTERN | LEN | DIV | SWING | GATE |
| STRETCH | x/÷ | REPEAT | NUDGE | ROTATE |
| PLAYHEADS | HEAD | RATE | DIR | INTVL |
| TRACK | PITCH CHANCE HUMAN REC Q | | | |
| MUTATE | SOUND | PATTERN | AMOUNT | MODE |
| BAR | BAR | LEN | - | - |
| STEP | STEP | NOTE | TIME | FLAG |
| STEP · DRUM | STEP | LANE | HIT | ACC |
| NOTE | FOCUS | PITCH | MOVE | MICRO |
| AUTOMATION | PLAY | EVENT | LOCK | CLEAR |
| AUTO LIST | ROW | STEP | PARAM | VALUE |
| COMP | STEP | TYPE | VAL | EVERY |
| COMP 2 | STEP | TYPE | VAL | EVERY |

### GLO · SAVE

| | | | | |
|---|---|---|---|---|
| MANO | RATE LOOP THIN DJ FILT (the keys: live modifiers) | | | |
| RIELES | PISTAS | RATE | CORTE | DENS |
| MIXER | LEVEL PAN REV DJ FILT | | | |
| GLOBAL | BPM | SWING | CLOCK | TUNE |
| SYSTEM | TRACKS | LOAD | ROUTE | CPU |
| PRESETS | No. | ENG | FAV | LIST |
| USER | SLOT | LOAD | ERASE | SAVE |
| PROJECTS | PROJECT | SECT | LOAD | SAVE |
| SECTIONS | SECT | NAME | LOAD | SAVE |
| ARRANGE | ROW SECT BARS SCENE (OCT+ adds a row) | | | |
| TIMELINE | ROW LANE · SEC: SECT BARS · T1–T6: FROM VAR | | | |
| TOOLS | CLEAR SEQ · INIT SOUND · DEL ROW · CLEAR SONG · NEW PROJECT · CPU TEST: K1 picks, OCT+ | | | |

GPL-3.0 · fork of Felucca (Hügelton Instruments) · song mode from SLOOP