


BJT Curve Tracer

Var
Eqn

VAR
VAR1
VCE =0 V
IBB =0 A

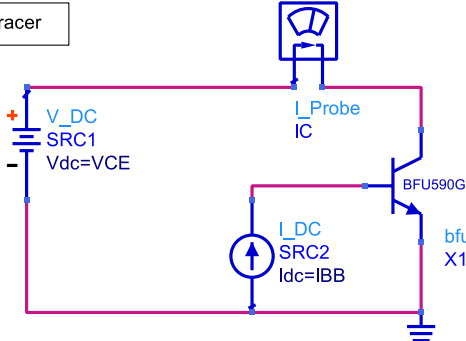

bfu5xx_v2_lib_BFU590G_schematic
X1



PARAMETER SWEEP

ParamSweep
Sweep1
SweepVar="IBB"
SimInstanceName[1]="DC1"
SimInstanceName[2]=
SimInstanceName[3]=
SimInstanceName[4]=
SimInstanceName[5]=
SimInstanceName[6]=
Start=20 uA
Stop=100 uA
Step=10 uA



DC

DC
DC1
SweepVar="VCE"
Start=0
Stop=5
Step=0.1



DisplayTemplate
disptemp1
"BJT_curve_tracer"