


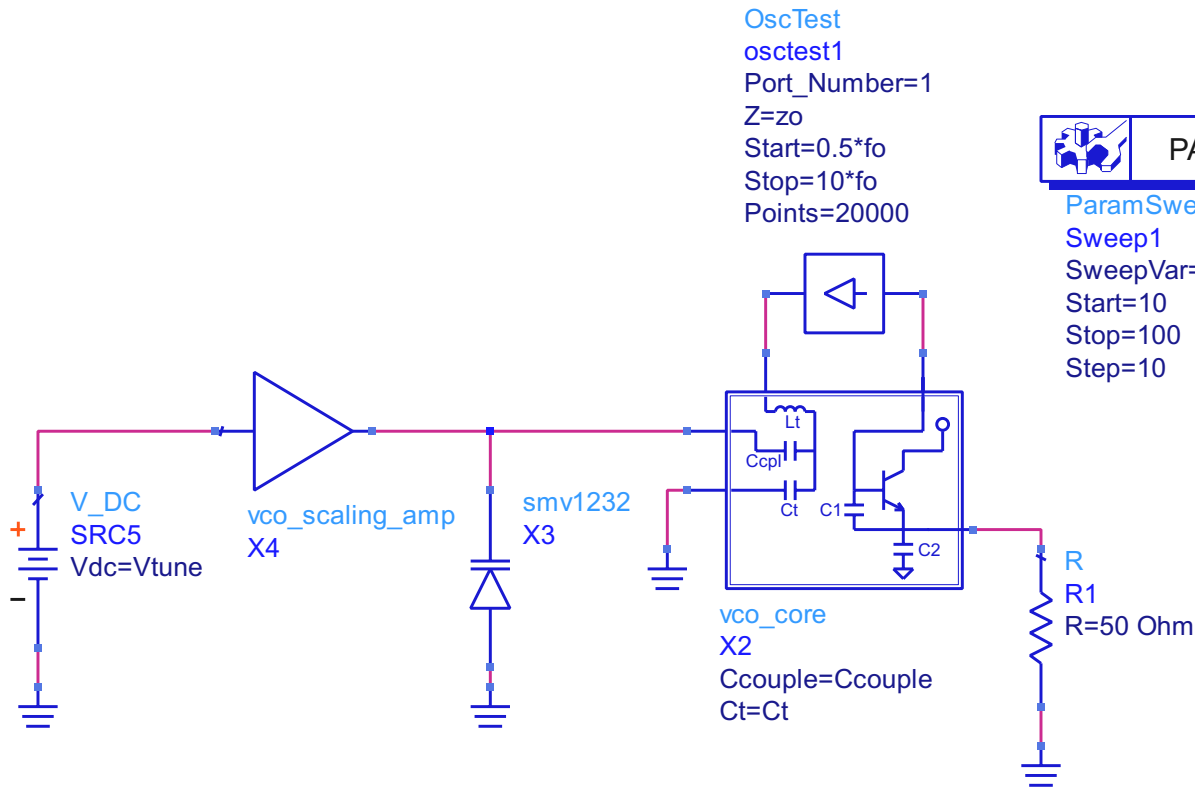

OscTest
osctest1
Port_Number=1
Z=zo
Start=0.5*fo
Stop=10*fo
Points=20000



PARAMETER SWEEP

ParamSweep

Sweep1

SweepVar="zo"

Start=10

Stop=100

Step=10

Var
Eqn

VAR

VAR3

zo=50.0

fo=1 GHz

Var
Eqn

VAR

VAR2

Ccouple=2.9 {o}

Vtune=0.5

Ct=0.55 {o}