


3D assembly reference - lid removed

Visual guide only - not to scale. Use the dimensions and draft warnings on pages 2-4.

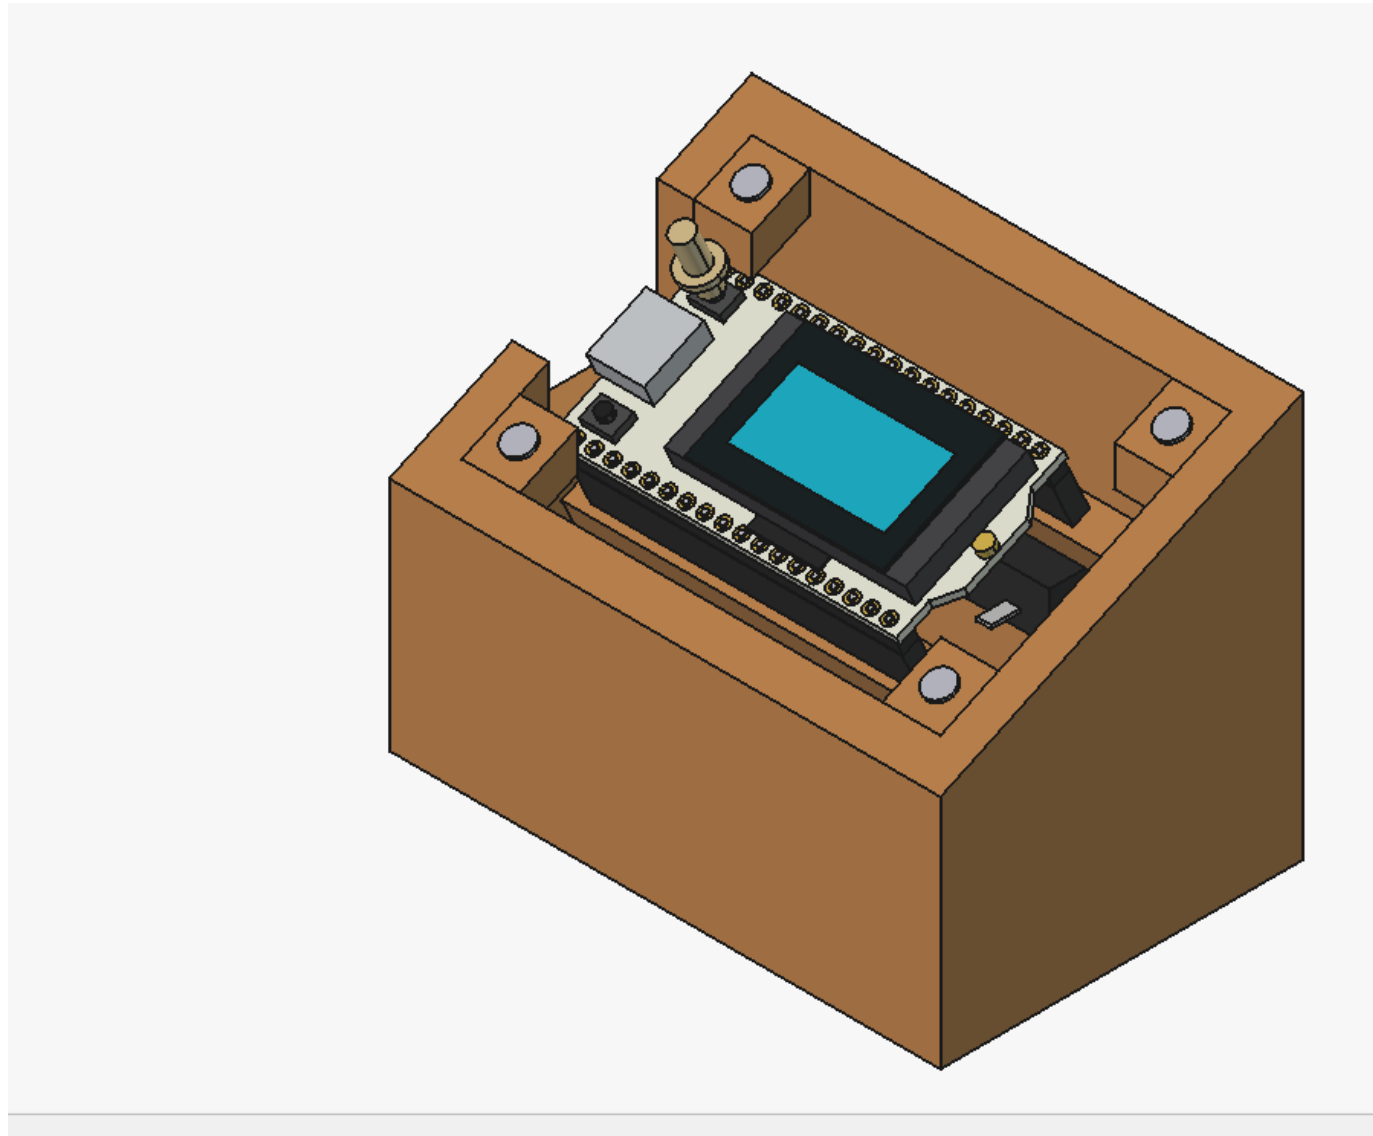


Four magnet blocks hold the lid. Two socket carriers support the board; its pins stay fitted.

User-supplied view. Component fit and mounting details still need checks on the real hardware.

Wooden case: side panels and assembly

DRAFT - NOT RELEASED FOR CUTTING. Millimetres. Print at 100%, never Fit to page.

A - SIDE PANELS: 2 mirrored pieces, 5 mm thick

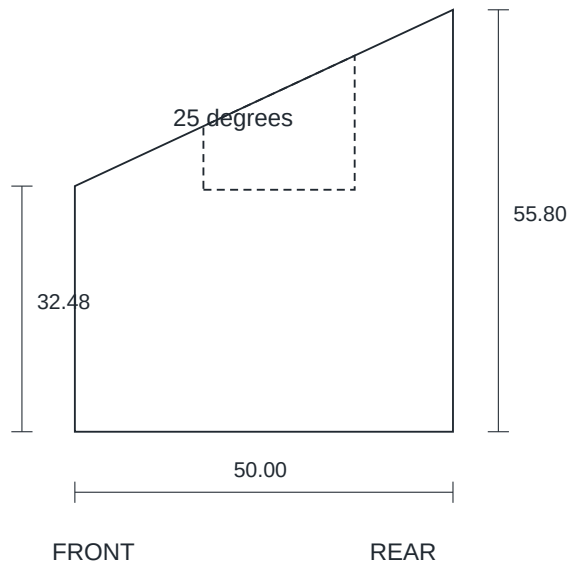

Outer size: 76 wide x 50 deep.

Height with lid: 38 front / 61.32 rear.

Sides run the full depth.

Front and rear fit BETWEEN the sides.

Bottom fits inside all four walls.

Glue joints are proposed butt joints.

Use square cuts unless a bevel is labelled.

Top outline is a 25-degree slope, not an edge bevel.

Round outside edges only after dry fitting.

USB notch - LEFT SIDE ONLY

Draft position: starts 17 mm from front, 20 mm wide; bottom 32 mm above base.

Open from the sloped top edge. Two downward saw cuts plus a straight bottom cut.

DO NOT CUT YET: seat the real board, plug in your cable, then mark the clearance.


Measure stock first. This drawing assumes exactly 5.00 mm finished thickness.

50 mm print check

Wooden case: front, rear and bottom


DRAFT - NOT RELEASED FOR CUTTING. Millimetres. Print at 100%, never Fit to page.

B - FRONT: 1 piece

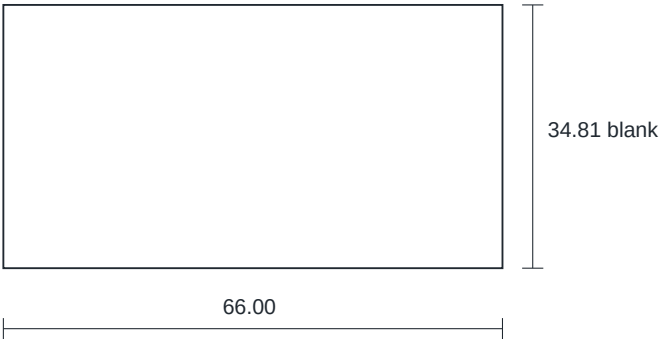


Plane top to 25 degrees: outside 32.48, inside 34.81 high.

C - REAR: 1 piece

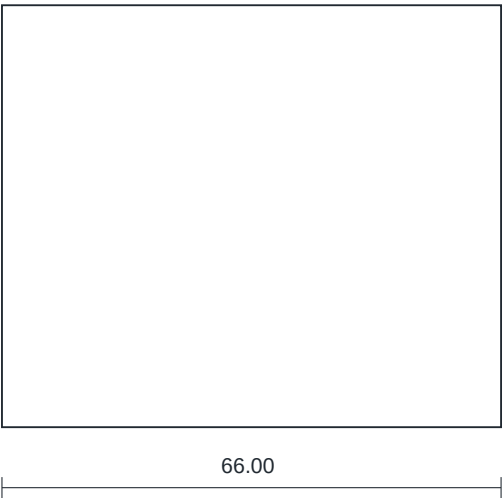

Blank height 55.80. Outside high edge.
Inside top height 53.47. Top bevel 25 degrees.

D - BOTTOM: 1 piece, 5 mm thick

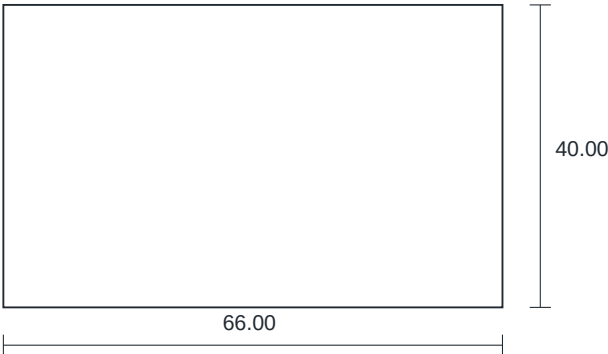

Rear rocker opening: nominal 19 x 6.8 mm.
Mark ONLY after checking the real switch.
Its clips may not grip 5 mm wood.
Do not thin the wall to make it fit.

Leave a small fitting allowance on blanks.
Plane to the finished dimensions after dry fitting.

Removable lid, magnets and board mounting

DRAFT - NOT RELEASED FOR CUTTING. Millimetres. Print at 100%, never Fit to page.

E - LID: 1 piece, true thickness 5 mm

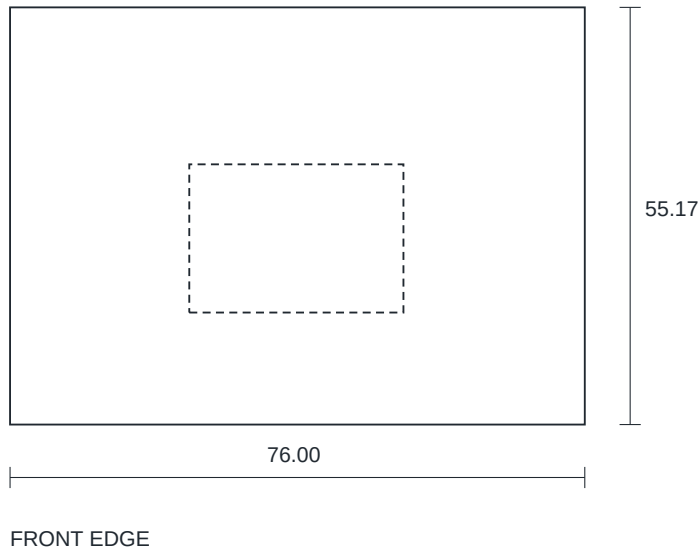


Diagram is the OUTSIDE lid face.

Front/rear edges: 25-degree bevel from square.

Offset across 5 mm thickness: 2.33 mm.

Measure blank length on ONE face, not tip to tip.

Simpler option: leave lid edges square first.

This changes the edge overhang, not the slope.

Dashed OLED opening: 28.32 x 19.60, provisional.

Mark from mounted display before drilling/sawing.

MAGNETS - no screw holes

4 separate 8 x 8 mm blocks from 5 mm wood. Glue inside corners, tops parallel to lid.

4 magnets: diameter 3 mm; assumed thickness 1.5 mm. Measure first.

Draft pockets: diameter 3.2 mm, depth 1.6 mm. Test on scrap; use a drill depth stop.

4 steel targets under lid: proposed diameter 4 mm x 0.5 mm. Set flush; test holding force.

BOARD MOUNTING - fit before cutting carriers

Keep male pins. Fit two insulated 1x18 female sockets, 2.54 mm pitch, on 5 mm wooden carriers.

Carrier lengths, glue positions, PRG plunger and lid locating stops must be set from the real assembly.

50 mm print check