Laboratory Exercise 2

Using Logic Instructions with the ARM Processor

Logic instructions are needed in many embedded applications. Logic instructions are useful for manipulation of bit strings and for dealing with data at the bit level where only a few bits may be of special interest. They are essential in dealing with input/output tasks. In this exercise we will consider some typical uses. We will use the ARM Cortex-A9 processor in the DE1-SoC Computer.

Part I

In this part you will implement an ARM assembly language program that counts the longest string of 1's in a word of data. For example, if the word of data is 0x103fe00f, then the required result is 9.

Perform the following:

- 1. Create a new folder to hold your Monitor Program project for this part. Create a file called *part1.s*, and type the assembly language code shown in Figure 1 into this file. This code uses an algorithm involving shift and AND operations to find the required result—make sure that you understand how this works.
- 2. Make a new Monitor Program project in the folder where you stored the *part1.s* file. Use the DE1-SoC Computer for this project.
- 3. Compile and load the program. Fix any errors that you encounter (if you mistyped some of the code). Once the program is loaded into memory in the DE1-SoC Computer, single step through the code to see how the program works.

Part II

Perform the following.

- 1. Make a new folder and make a copy of the file *part1.s* in that new folder. Give the new file a name such as *part2.s*.
- 2. In the new file *part2.s*, take the code which calculates the number of consecutive 1's and make it into a subroutine called ONES. Have the subroutine use register R1 to receive the input data and register R0 for returning the result.
- 3. Add more words in memory starting from the label TEST_NUM. You can add as many words as you like, but include at least 10 words. To terminate the list include the word 0 at the end—check for this 0 entry in your main program to determine when all of the items in the list have been processed.
- 4. In your main program, call the newly-created subroutine in a loop for every word of data that you placed in memory. Keep track of the longest string of 1's in any of the words, and have this result in register R5 when your program completes execution.

5. Make sure to use breakpoints or single-steping in the Monitor Program to observe what happens each time the ONES subroutine is called.

```
/* Program that counts consecutive 1's */
              .text
              .global
                        _start
_start:
              LDR
                        R1, TEST_NUM // load the data word into R1
              MOV
                        R0, #0
                                         // R0 will hold the result
LOOP:
                        R1, #0
              CMP
                                         // loop until the data contains no more 1's
              BEQ
                        END
              LSR
                        R2, R1, #1
                                         // perform SHIFT, followed by AND
              AND
                        R1, R1, R2
              ADD
                        R0, #1
                                         // count the string lengths so far
                        LOOP
              В
END:
              В
                        END
TEST_NUM: .word
                        0x103fe00f
              .end
```

Figure 1: Assembly-language program that finds the largest string of 1's.

Part III

One might be interested in the longest string of 0's, or even the longest string of alternating 1's and 0's. For example, the binary number 101101010001 has a string of 6 alternating 1's and 0's.

Write a new assembly language program that determines the following:

- Longest string of 1's in a word of data—put the result into register R5
- Longest string of 0's in a word of data—put the result into register R6
- Longest string of alternating 1's and 0's in a word of data—put the result into register R7 (Hint: What happens when an n-bit number is XORed with an n-bit string of alternating 0's and 1's?)

Make each calculation in a separate subroutine called ONES, ZEROS, and ALTERNATE. Call each of these subroutines in the loop that you wrote in Part III, and keep track of the largest result for each calculation, from your list of data.

Part IV

In this part you are to extend your code from Part III so that the results produced are shown on the 7-segment displays in the DE1-SoC Computer. Display the longest string of 1's (R5) on HEX1 - 0, the longest string of 0's (R6) on HEX3 - 2, and the longest string of alternating 1's and 0's (R7) on HEX5 - 4.

Each result should be displayed as a two-digit decimal number. You may want to use the approach discussed in Part IV of Exercise 1 to convert the numbers in registers R5, R6, and R7 from binary to decimal.

The parallel port in the DE1-SoC Computer connected to the 7-segment displays HEX3 - 0 is memory mapped at the address 0xFF200020, and the port connected to HEX5 - 4 is at the address 0xFF200030. Figure 2 shows how the display segments are connected to the parallel ports. To show each of the numbers from 0 to 9 it is necessary to light up the appropriate display segments. For example, to show 0 on HEX0 you have to turn on all of the segments except for the middle one (segment 6). Hence, you would store the bit-pattern $(001111111)_2$ into the address 0xFF200020 to show this result. A subroutine that produces such bit patterns in given in Figure 3.

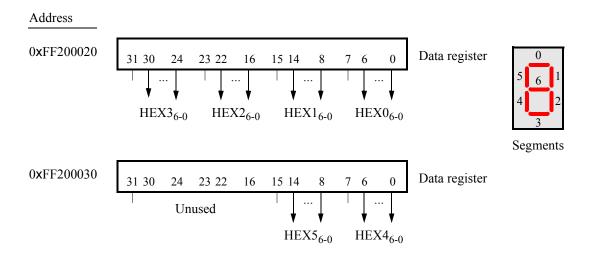


Figure 2: The parallel ports connected to the seven-segment displays HEX5 - 0.

An example of code that shows the content of registers on the 7-segment displays illustrated in Figure 4. Note that this code uses the DIVIDE subroutine that was discussed in Part IV of Exercise 1. The code in the figure shows only the steps needed for register R5. Extend the code to display all three registers on the 7-segment displays as described above.

```
/* Subroutine to convert the digits from 0 to 9 to be shown on a HEX display.
     Parameters: R0 = the decimal value of the digit to be displayed
    Returns: R0 = bit patterm to be written to the HEX display
*/
SEG7_CODE: LDR
                         R1, =BIT_CODES
               LDRB
                         R0, [R1, R0]
               BX
                         LR
BIT_CODES:
                         0b00111111, 0b00000110, 0b01011011, 0b01001111, 0b01100110
               .byte
                         0b01101101, 0b011111101, 0b00000111, 0b011111111, 0b01100111
               .byte
               .skip
                         2
                                 // pad with 2 bytes to maintain word alignment
          Figure 3: A subroutine that produces bit patterns for 7-segment displays.
 code for Part III (not shown)
/* Display R5 on HEX1-0, R6 on HEX3-2 and R7 on HEX5-4 */
 DISPLAY:
               LDR
                         R8, =0xFF200020
                                                // base address of HEX3-HEX0
               MOV
                         R0, R5
                                                // display R5 on HEX1-0
                                                // ones digit will be in R0; tens digit in R1
               BL
                         DIVIDE
               MOV
                         R10, R1
                                                // save the tens digit
               BL
                         SEG7_CODE
                                                // save bit code
               MOV
                         R4, R0
               MOV
                         R0, R10
                                                // retrieve the tens digit, get bit code
               BL
                         SEG7_CODE
               ORR
                         R4, R4, R0, LSL #8
```

Figure 4: A code fragment for showing registers in decimal on 7-segment displays.

// display the numbers from R6 and R5

code for R6 (not shown)

code for R7 (not shown)

R4, [R8]

STR

Copyright © 1991-2016 Intel Corporation. All rights reserved. Intel, The Programmable Solutions Company, the stylized Intel logo, specific device designations, and all other words and logos that are identified as trademarks and/or service marks are, unless noted otherwise, the trademarks and service marks of Intel Corporation in the U.S. and other countries. All other product or service names are the property of their respective holders. Intel products are protected under numerous U.S. and foreign patents and pending applications, mask work rights, and copyrights. Intel warrants performance of its semiconductor products to current specifications in accordance with Intel's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Intel assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Intel Corporation. Intel customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

This document is being provided on an "as-is" basis and as an accommodation and therefore all warranties, representations or guarantees of any kind (whether express, implied or statutory) including, without limitation, warranties of merchantability, non-infringement, or fitness for a particular purpose, are specifically disclaimed.