Order loading plan

EXAMPLE-1001

EXAMPLE-1001

UK pallet | UK pallet - example - 120 x 100 x 60 cm

Usable space: 120 W x 100 D x 60 H cm. Height starts above the base.

2 pallets | 39 boxes packed / 39 required | 439 units ordered

Selected: Automatic - best fit. Layout: Group similar box sizes.

How to follow this plan

1. Label each pallet with its number below. Check its contents list before loading.

2. Follow numbered steps in ascending order, from the lowest base height upwards. Complete each stage before starting the next.

3. In the top view, FRONT is at the bottom and BACK at the top. Positions measure from the front-left corner; height measures from the deck. Rotate each box to its listed W x D x H.

Diagrams show calculated positions. Labels are step numbers; S1, S2, etc. identify SKUs. P marks a partial box, which still uses a full box footprint. Grey boxes provide context.

Geometry estimate: check load weight, box strength and permitted rotations before loading. These properties are not configured in this planner.

Pallet	Boxes	Units	Contents
1	30	360	TOWEL-001: 30
2	9	79	TOWEL-001: 5; BAG-002: 4

Pallet 1 - contents

EXAMPLE-1001

UK pallet | 30 boxes | 60 cm load height

Label: EXAMPLE-1001 / Pallet 1. Load steps run from 1 to 30.

Key / SKU / Description	Full	Partial	Units
S1 | TOWEL-001 Cotton hand towels	30	0	360

Read the following placement sheets in order. Different box heights can create different starting elevations; these are stages, not necessarily uniform layers.

Completed load - top and front views

BACK - depth 100 cm

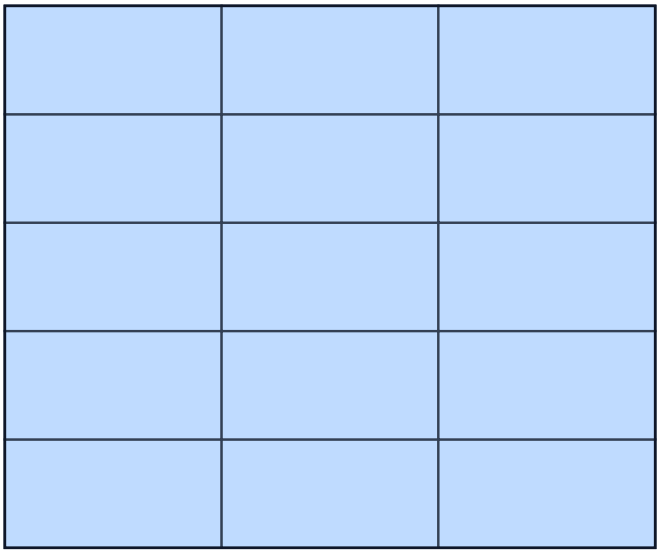

FRONT - width 120 cm

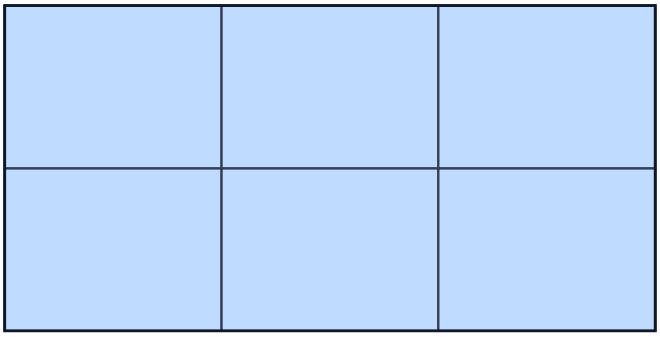

FRONT ELEVATION - 60 cm high

The top view shows the uppermost boxes. Follow the stage sheets for numbered placements, including boxes hidden in these views.

Pallet 1 - stage 1 of 2

EXAMPLE-1001

Base height 0 cm | Place boxes 1-15

BACK - depth 100 cm

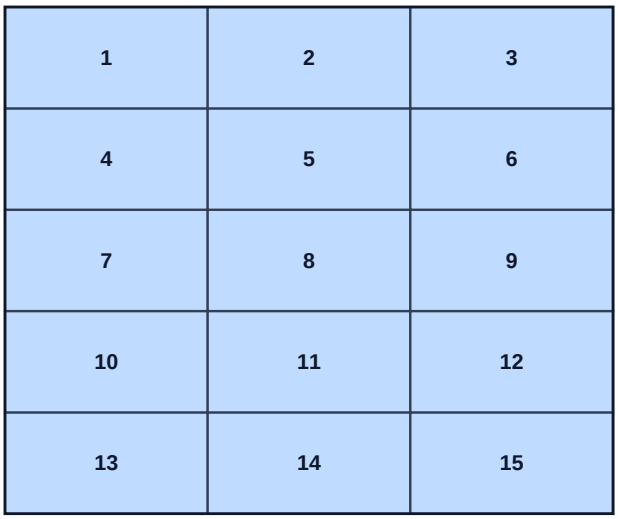

FRONT - width 120 cm

FRONT ELEVATION - 60 cm high

Top view: numbered boxes are this sheet's steps. Front view: nearer boxes may hide boxes behind. Use the coordinates below for exact placement.

Step	SKU key	Units	Left / Front / Base (cm)	W x D x H (cm)
1	S1	12	0 / 80 / 0	40 x 20 x 30
2	S1	12	40 / 80 / 0	40 x 20 x 30
3	S1	12	80 / 80 / 0	40 x 20 x 30
4	S1	12	0 / 60 / 0	40 x 20 x 30
5	S1	12	40 / 60 / 0	40 x 20 x 30
6	S1	12	80 / 60 / 0	40 x 20 x 30
7	S1	12	0 / 40 / 0	40 x 20 x 30
8	S1	12	40 / 40 / 0	40 x 20 x 30
9	S1	12	80 / 40 / 0	40 x 20 x 30
10	S1	12	0 / 20 / 0	40 x 20 x 30
11	S1	12	40 / 20 / 0	40 x 20 x 30
12	S1	12	80 / 20 / 0	40 x 20 x 30
13	S1	12	0 / 0 / 0	40 x 20 x 30
14	S1	12	40 / 0 / 0	40 x 20 x 30
15	S1	12	80 / 0 / 0	40 x 20 x 30

Pallet 1 - stage 2 of 2

EXAMPLE-1001

Base height 30 cm | Place boxes 16-30

BACK - depth 100 cm

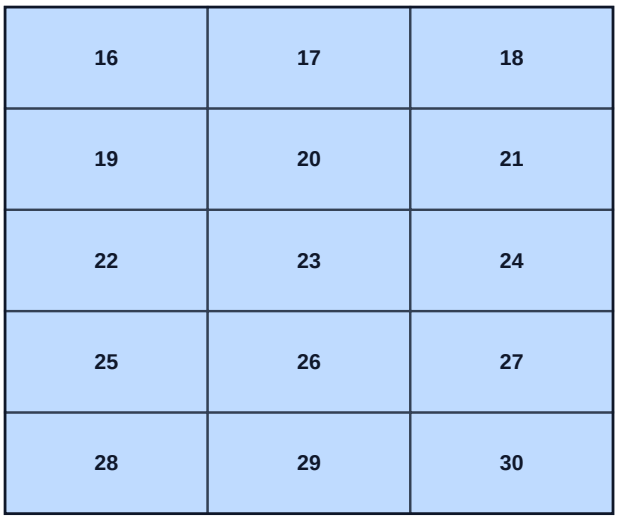

FRONT - width 120 cm

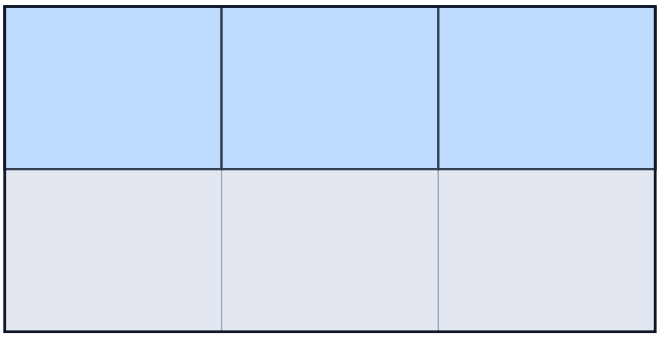

FRONT ELEVATION - 60 cm high

Top view: numbered boxes are this sheet's steps. Front view: nearer boxes may hide boxes behind. Use the coordinates below for exact placement.

Step	SKU key	Units	Left / Front / Base (cm)	W x D x H (cm)
16	S1	12	0 / 80 / 30	40 x 20 x 30
17	S1	12	40 / 80 / 30	40 x 20 x 30
18	S1	12	80 / 80 / 30	40 x 20 x 30
19	S1	12	0 / 60 / 30	40 x 20 x 30
20	S1	12	40 / 60 / 30	40 x 20 x 30
21	S1	12	80 / 60 / 30	40 x 20 x 30
22	S1	12	0 / 40 / 30	40 x 20 x 30
23	S1	12	40 / 40 / 30	40 x 20 x 30
24	S1	12	80 / 40 / 30	40 x 20 x 30
25	S1	12	0 / 20 / 30	40 x 20 x 30
26	S1	12	40 / 20 / 30	40 x 20 x 30
27	S1	12	80 / 20 / 30	40 x 20 x 30
28	S1	12	0 / 0 / 30	40 x 20 x 30
29	S1	12	40 / 0 / 30	40 x 20 x 30
30	S1	12	80 / 0 / 30	40 x 20 x 30

Pallet 2 - contents

EXAMPLE-1001

UK pallet | 9 boxes | 50 cm load height

Label: EXAMPLE-1001 / Pallet 2. Load steps run from 1 to 9.

Key / SKU / Description	Full	Partial	Units
S1 | TOWEL-001 Cotton hand towels	5	0	60
S2 | BAG-002 Reusable storage bags	3	1	19

Read the following placement sheets in order. Different box heights can create different starting elevations; these are stages, not necessarily uniform layers.

Completed load - top and front views

BACK - depth 100 cm

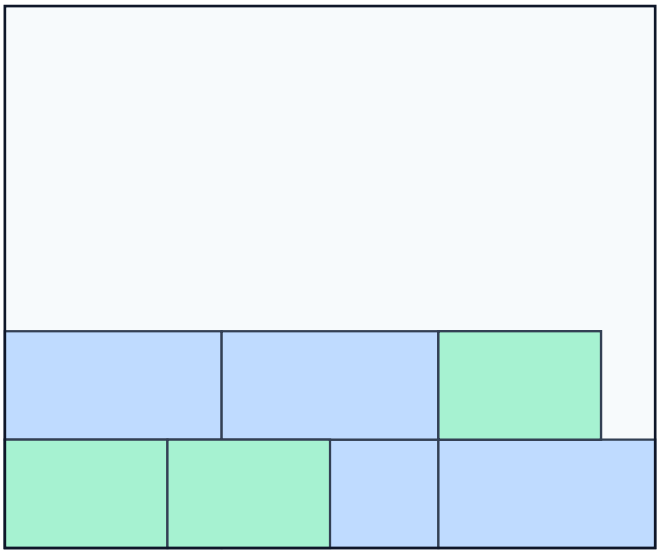

FRONT - width 120 cm

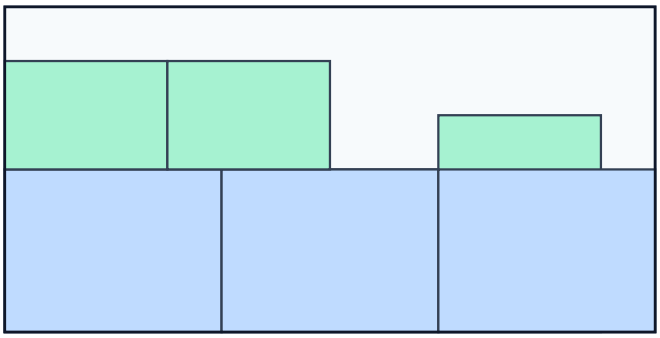

FRONT ELEVATION - 60 cm high

The top view shows the uppermost boxes. Follow the stage sheets for numbered placements, including boxes hidden in these views.

Pallet 2 - stage 1 of 3

EXAMPLE-1001

Base height 0 cm | Place boxes 1-6

BACK - depth 100 cm

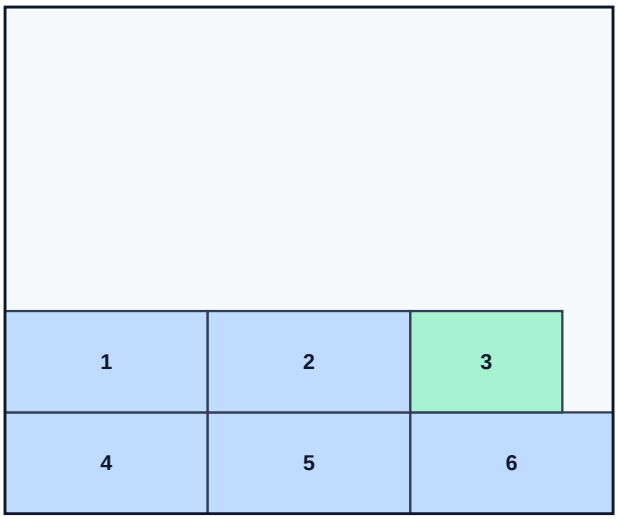

FRONT - width 120 cm

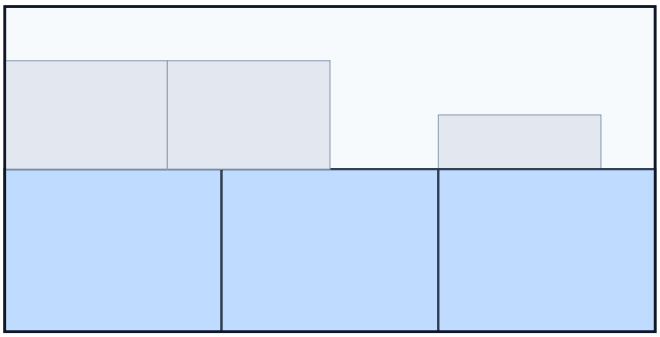

FRONT ELEVATION - 60 cm high

Top view: numbered boxes are this sheet's steps. Front view: nearer boxes may hide boxes behind. Use the coordinates below for exact placement.

Step	SKU key	Units	Left / Front / Base (cm)	W x D x H (cm)
1	S1	12	0 / 20 / 0	40 x 20 x 30
2	S1	12	40 / 20 / 0	40 x 20 x 30
3	S2	6	80 / 20 / 0	30 x 20 x 20
4	S1	12	0 / 0 / 0	40 x 20 x 30
5	S1	12	40 / 0 / 0	40 x 20 x 30
6	S1	12	80 / 0 / 0	40 x 20 x 30

Pallet 2 - stage 2 of 3

EXAMPLE-1001

Base height 20 cm | Place boxes 7-7

BACK - depth 100 cm

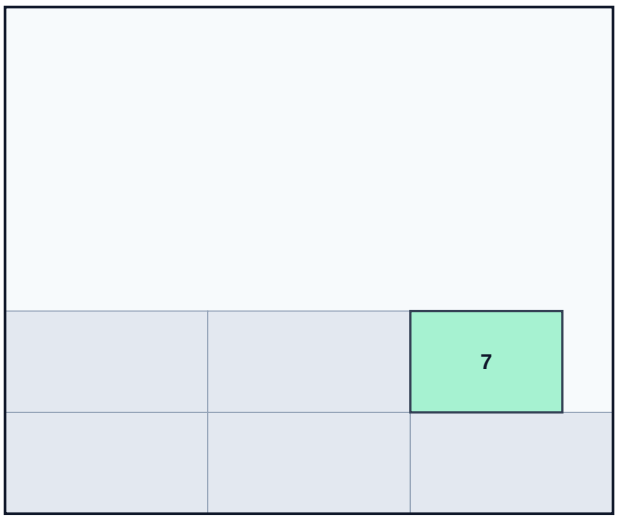

FRONT - width 120 cm

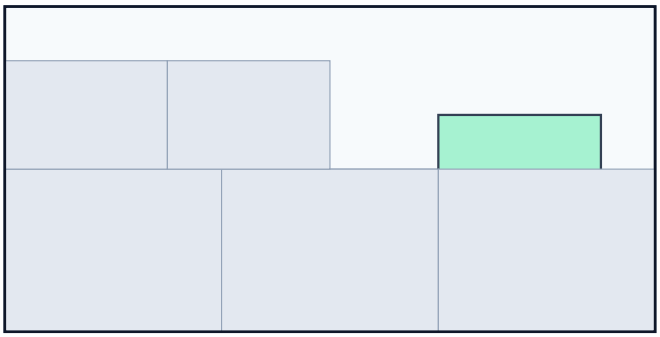

FRONT ELEVATION - 60 cm high

Top view: numbered boxes are this sheet's steps. Front view: nearer boxes may hide boxes behind. Use the coordinates below for exact placement.

Step	SKU key	Units	Left / Front / Base (cm)	W x D x H (cm)
7	S2	6	80 / 20 / 20	30 x 20 x 20

Pallet 2 - stage 3 of 3

EXAMPLE-1001

Base height 30 cm | Place boxes 8-9

BACK - depth 100 cm

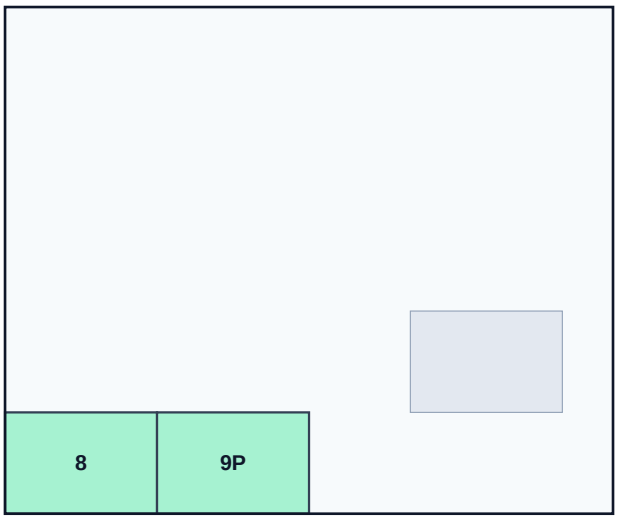

FRONT - width 120 cm

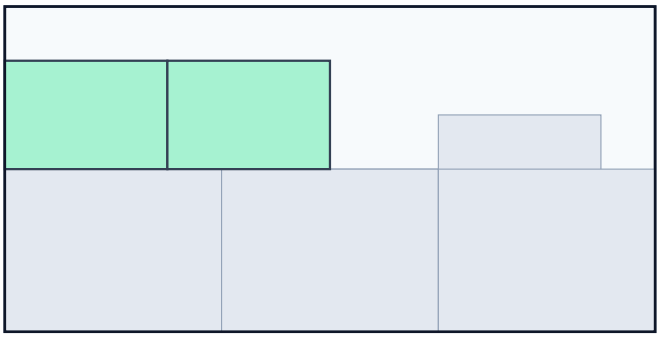

FRONT ELEVATION - 60 cm high

Top view: numbered boxes are this sheet's steps. Front view: nearer boxes may hide boxes behind. Use the coordinates below for exact placement.

Step	SKU key	Units	Left / Front / Base (cm)	W x D x H (cm)
8	S2	6	0 / 0 / 30	30 x 20 x 20
9 P	S2	1	30 / 0 / 30	30 x 20 x 20