




GLUE THE SIDE PANELS TO THE BASEBOARD (MORE BRACKETS CAN BE ADDED)

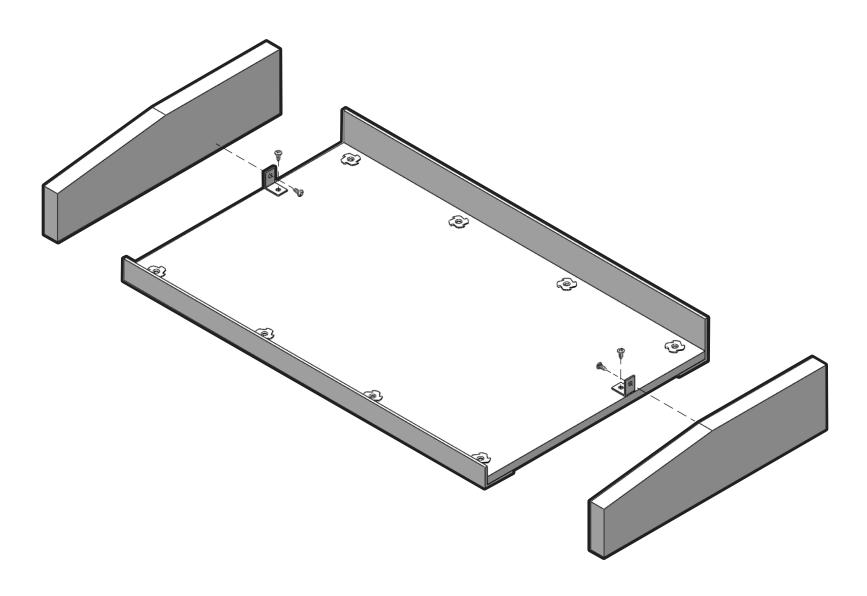


GLUE THE CROSSBARS IN PLACE (USE THE EURORACK FRAME TO SET SPACING)

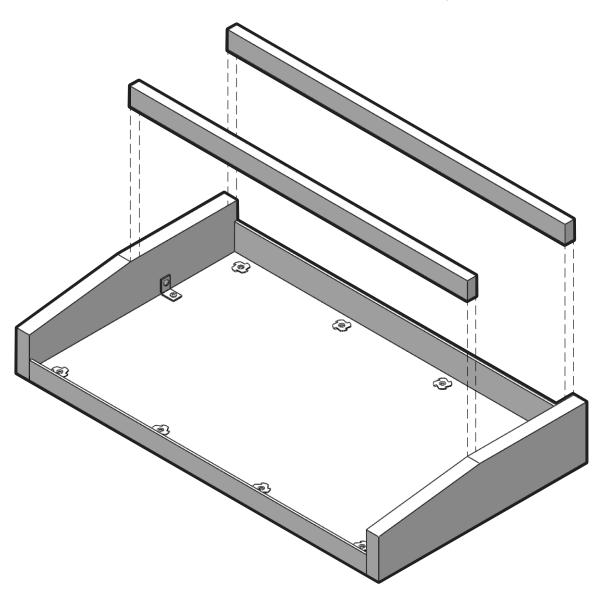


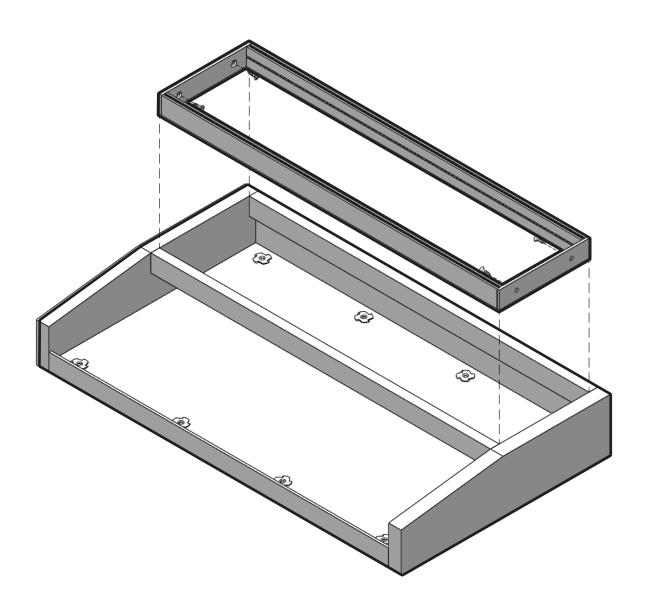

AFTER THE GLUE IS CURED, REMOVE THE FRONT PANEL TO INSTALL THE KEYSTEP

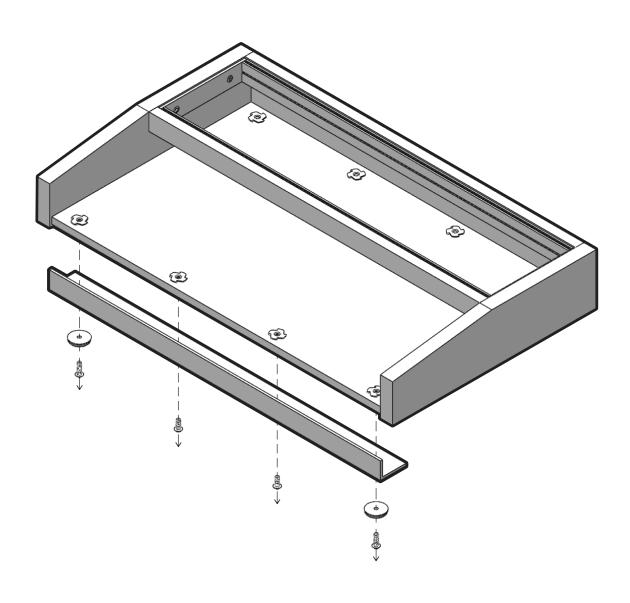

INSTALL THE BRACKETS (2 SMALL, 2 LARGE) THAT HOLD THE KEYSTEP IN PLACE (USE THE KEYSTEP TO MARK THE POSITIONING)

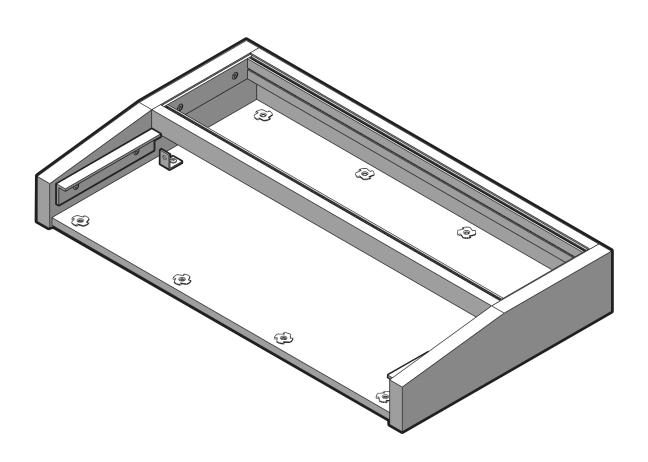

INSERT THE KEYSTEP

08

