


Bramble Pager v1 : FPC fold mockup (print at 100%, verify the 50mm

exactly 50.0 mm

- 1. Cut out the panel rectangle below (59.2 x 29.2) with its tail.
- 2. Fold the tail 180 deg UNDER along the dashed line (contacts face DOWN after fold).
- 3. Place display-up onto the connector drawing so the tail tip lands in the connector.
- 4. VERIFY: panel finger 1 (marked) must land on connector pin 24 (marked). Mirror = correct.

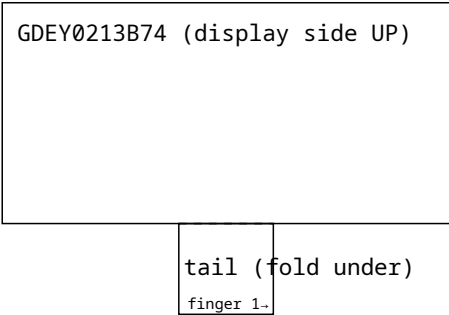

Board top view (1:1): FH34SRJ connector at board (144.4..158.6, 75.6..79.7)

