
PCB-carrier — full-size template, both sides

Print at 100 % ("Actual size"), US Letter. Generated from PCB-carrier-layout.json and the fit mock's own holes — regenerate, do not edit.

TALL SIDE — faces 270°


the fit mock's TOP face as printed

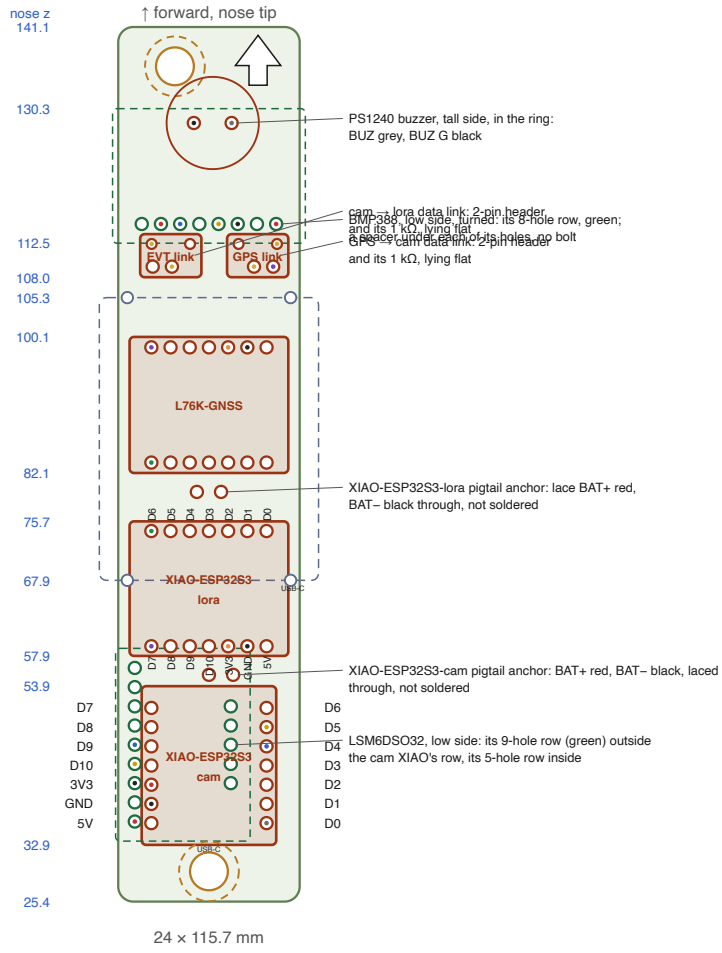

this bar must measure 100 mm — if not, reprint at 100 % / Actual size

LOW SIDE — faces 90°

the fit mock's BED face as printed

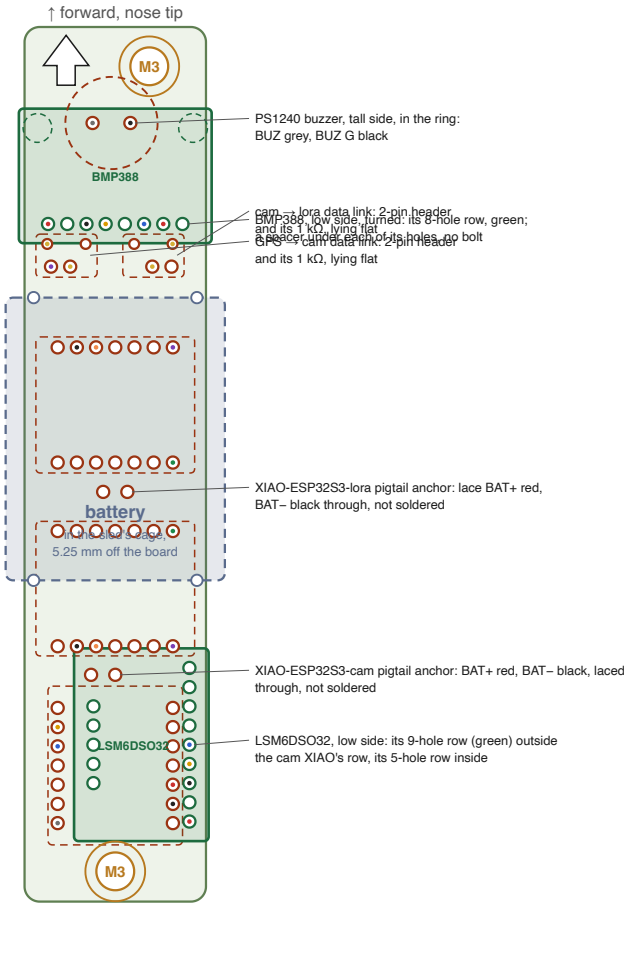

Pad colour = net

- +3V3
- +3V3_LORA
- GND
- VBAT
- SDA
- SCL
- BUZZER
- GPS_TX
- GPS_RX

How to use it: hold the fit mock TOP face toward you, the arrow pointing up — it matches the TALL SIDE panel, hole for hole. Turn it over left to right: the LOW SIDE panel. Solid outlines are parts on that side; dashed are parts on the other side. White circles are the mock's holes, rimmed red for a tall-side part and green for a low-side part; the dot in each is its net. The LSM6DSO32 is slid sideways: its 9-hole row is outside the cam XIAO's row, its 5-hole row inside. Pin names beside the XIAO rows are for the XIAO plugged in from the tall side. The small blue-rimmed holes at the long edges mark the battery's two ends. BAT+/BAT− anchor each XIAO's battery pigtail: laced through, not soldered. Row spacing, which a printed mock is here to prove: XIAO and L76K-GNSS 15.24 mm apart (±7.62, Seeed's footprint); LSM6DSO32 12.70 mm, slid so one row clears the cam XIAO's. Source of truth: hardware/PCB-carrier/PCB-carrier.md.