

Petzval Lens STOP Analysis

Many optical systems are required to be operated in extreme environments, where temperature changes are significant. This will invariably induce deformations in the optical geometry. In order to simulate the effects of structural and thermal deformation on the optical performance of a lens a structural-thermal-optical performance (STOP) analysis should be performed. In this tutorial an integrated STOP analysis is demonstrated.

The Petzval Lens tutorial is used as the basis for this model, together with a simple barrel geometry (see Figure 1). The assembly is subjected to uniform temperature of -25° C and the effect on the displacement fields and image quality is shown.

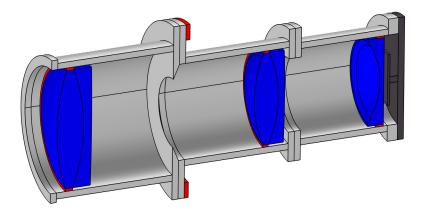


Figure 1: An overview of the Petzval Lens STOP analysis geometry. The lenses are shown in blue, the lens supports are colored red, and the detector assembly is dark gray. A simple barrel assembly connects these elements.

Model Definition

Details of the lens simulated in this tutorial can be found in the Petzval Lens tutorial (see Ref. 1, p. 191). For this model, a simple barrel geometry and detector assembly has been added. The instructions for creating the geometry can be found in Appendix — Geometry Instructions.

Following insertion into the model, the geometry sequence should look like Figure 2. The mesh also needs to be refined slightly in order to improve the discretization and to account for the overall change in size of the geometry. The resulting mesh is shown in Figure 3.

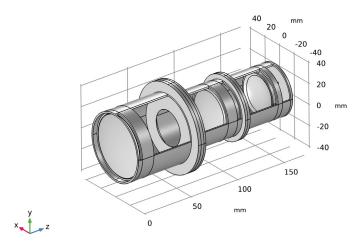


Figure 2: The Petzval Lens Stop Analysis geometry sequence.

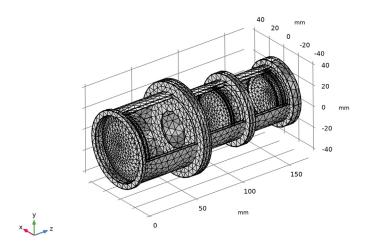


Figure 3: The Petzval Lens Stop Analysis mesh.

The refractive indices of the glasses are computed using the Sellmeier optical dispersion model which defines the refractive index as a function of the wavelength of light. The Sellmeier coefficients for each material are found in the Optical material library. For most of the optical glasses in the Optical material library, additional material properties including density, Young's modulus, Poisson's ratio, and coefficient of thermal expansion are also available.

The entire barrel detector assembly is assumed to made entirely from aluminum. This material is available in another built-in material library.

Each of the lenses is assumed to be held in place by a ring of room temperature vulcanized silicone (RTV). The properties of the RTV silicone are all nominal (that is, an average of various common RTV silicones). The temperature dependent properties of RTV silicone are also ignored (for example, Ref. 4 and Ref. 5). The thickness of the elastomer supports is computed using the nominal athermal equation given in Ref. 6, p. 203.

In this example the RTV is treated using a simple linear elastic material model. In an extremely high-fidelity simulation it might be preferable to use a hyperelastic material model for the RTV. For a model involving a nonlinear material model, see Petzval Lens STOP Analysis with Hyperelasticity.

The nominal temperature, wavelength, and field angles used in this simulation are given in Table 1.

TABLE I: GLOBAL PARAMETER DEFINITIONS.

Parameter	Value	Description
T_0	−25°C	Nominal temperature
$\lambda_{ m vac}$	475 nm, 550 nm, 625 nm	Vacuum wavelengths
$\theta_{x,i}$	0°, 0°, 0°	Nominal x field angle, field $i = 1,2,3$
$\theta_{y,i}$	0°, 3.5°, 7.0°	Nominal y field angle, field $i = 1,2,3$
$N_{ m ring}$	15	Number of hexapolar rings.
P_{nom}	41.5 mm	Nominal entrance pupil diameter
$P_{\mathrm{fac}1}$	-1.142	Pupil shift factor I
$P_{ m fac2}$	-0.080	Pupil shift factor 2

Several of the parameters defined in Table 1 are used to derive additional parameters such as the ray direction vector components, the stop and image plane z-coordinates, and the entrance pupil location. Table 2 gives the expressions used to derive these parameters. Note that the pupil shift factor is an empirical approximation to ensure that the chief ray passes through the center of the stop at all field angles.

TABLE 2: GLOBAL PARAMETER DEFINITIONS (DERIVED).

Parameter	Value	Description
$v_{x,i}$	$\tan \theta_{x,i}$	Ray direction vector, x -component, field i .
$v_{y,i}$	$\tan heta_{y,i}$	Ray direction vector, y -component, field i .
v_z	1	Ray direction vector, z-component
$z_{ m stop}$	$\sum_{n=1}^{2} (T_{\mathrm{c},n} + T_n)$	Stop z -coordinate, where $T_{{ m c},n}$ is the central thickness of element n and T_n is the separation between elements n and $n+1$. Note that the stop is the third element in the Petzval lens.
$z_{ m image}$	$\sum_{n=1}^{6} (T_{c,n} + T_n)$	Image plane z -coordinate, where $T_{{\rm c},n}$ is the central thickness of element n and T_n is the separation between elements n and $n+1$. Including the stop, the Petzval lens has 6 elements.
$P_{{ m fac},i}$	$P_{\rm fac1} + P_{\rm fac2} \sin \theta_i$	Pupil shift factor, field i , where $\theta_i = \sqrt{\theta_{x,i}^2 + \theta_{y,i}^2}$
Δx_i	$(\Delta z + P_{\text{fac},i} z_{\text{stop}}) \tan \theta_{x,i}$	Pupil shift, x -coordinate, field i .
Δy_i	$(\Delta z + P_{\text{fac},i} z_{\text{stop}}) \tan \theta_{y,i}$	Pupil shift, y -coordinate, field i .
$t_{s,i}$	$\frac{d}{2} \frac{(1-v_e)(\alpha_1-\alpha_2)}{\alpha_e-\alpha_1-v_e(\alpha_2-\alpha_1)}$	Athermal thickness of support i , where d is the lens diameter, $\alpha_{\rm e}$, $\alpha_{\rm l}$, and $\alpha_{\rm 2}$, are the CTEs of the elastomer, the mount, and the lens respectively, and $v_{\rm e}$ is Poisson's ratio.

Results and Discussion

Following a Stationary study which computes the displacement field due to thermal expansion, a Ray Tracing study is made over three field angles and three wavelengths (see Table 1). The resulting temperature and displacement fields can be seen together with a ray trace in Figure 4 and Figure 5. Both figures also show the von Mises stress within the lenses (and barrel). The large stress within the second lens group is due to the significant difference between the coefficients of thermal expansion (CTE) of each element.

Figure 6 shows a spot diagram on the nominal image surface. That is, this is the detector surface after being subject to thermal and structural deformation at -25° C. The **Spot Diagram** plot can be used to determine the location of the best focus plane, defined as the plane for which the root mean square spot size is minimized. This is shown in Figure 7. Note that the plane of best focus is located 72 μ m behind the nominal image surface.

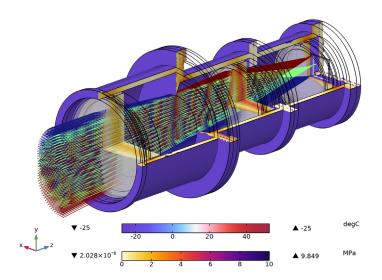


Figure 4: A ray trace shown together with a 3/4 section view of the Petzval lens assembly. The von Mises stress field is on the cross-sections.

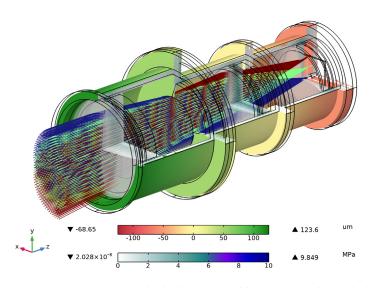


Figure 5: In this ray trace, the displacement field is shown together with the von Mises stress.

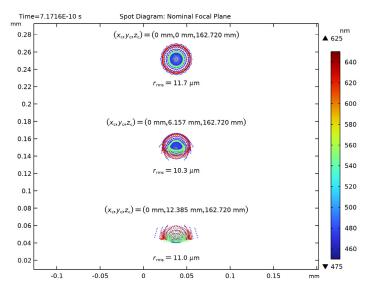


Figure 6: The image quality on the nominal image surface. This is the detector surface after being subject to thermal expansion.

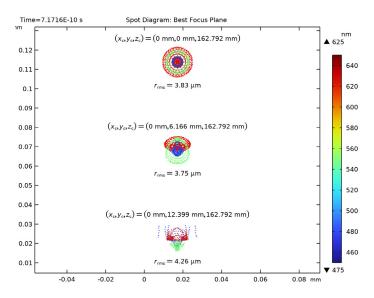


Figure 7: Image quality on the best focus plane. That is, this is the surface that gives the minimum RMS spot size on-axis. It is about 72 microns displaced from the nominal plane.

This tutorial model, in which STOP analysis is performed at a single uniform temperature, is extended in the following examples:

- Petzval Lens STOP Analysis Isothermal Sweep A parametric sweep over a range of uniform temperatures is performed. The position of the best focus image plane is determined as a function of temperature.
- Petzval Lens STOP Analysis with Hyperelasticity In this model the RTV lens supports are modeled as a hyperelastic material using the Nonlinear Structural Materials Module.
- Petzval Lens STOP Analysis with Surface-to-Surface Radiation For this model, the lens assembly is placed inside a thermo-vacuum enclosure where the exterior temperature is significantly different from the interior. The lens assembly is exposed to this exterior through a pair of windows via surface-to-surface radiation. The resulting thermal gradient and displacement field within the optical system are shown together with the effect on image quality.

References

- 1. M.J. Kidger, Fundamental Optical Design, Bellingham WA, USA: SPIE Press, 2001.
- 2. https://www.schott.com/.
- 3. https://oharacorp.com/optical-glass/.
- 4. M.A. Salama, W.M. Rowe, and R.K. Yasui, "Thermoelastic Analysis of Solar Cell Arrays and their Material Properties." Technical Memorandum 33-626, NASA, 1973.
- 5. T.M. Mower, "Thermomechanical behavior of aerospace-grade RTV (silicone adhesive)," Int. J. Adhes. Adhes., vol. 87, pp. 64-72, 2018.
- 6. P.R. Yoder, Jr., Opto-Mechanical Systems Design, Bellingham WA, USA: SPIE Press, 2006.

```
Application Library path: Ray Optics Module/
Structural_Thermal_Optical_Performance_Analysis/
petzval lens stop analysis
```

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Optics>Ray Optics>Geometrical Optics (gop).
- 3 Click Add.
- 4 In the Select Physics tree, select Structural Mechanics>Solid Mechanics (solid).
- 5 Click Add.
- 6 Click \Longrightarrow Study.
- 7 In the Select Study tree, select Empty Study. The studies will be added below.
- 8 Click Done.

PETZVAL LENS STOP ANALYSIS GEOMETRY SEQUENCE

Insert the prepared geometry sequence from file. You can read the instructions for creating the geometry in Appendix — Geometry Instructions. Following insertion, the original Petzval Lens optical prescription will be available in the **Parameters** node.

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, type Petzval Lens Stop Analysis Geometry Sequence in the Label text field.
- 3 In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.
- **4** Browse to the model's Application Libraries folder and double-click the file petzval lens stop analysis geom sequence.mph.
- 5 In the Insert Sequence dialog box, click OK.
- 6 In the Geometry toolbar, click **Build All**.
- 7 Click the Orthographic Projection button in the Graphics toolbar.
- 8 Click the . Click and Hide button in the Graphics toolbar.
- 9 In the Graphics window toolbar, click ▼ next to ¶ Select Objects, then choose Select Boundaries.
- 10 On the object fin, select Boundary 19 only. Continue to select boundaries that allow the inside of the lens assembly to be seen. Orient the view to match Figure 2.

GLOBAL DEFINITIONS

Lens Prescription

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, type Lens Prescription in the Label text field. The lens prescription was added when the geometry sequence was inserted above. Next, create parameter nodes for material and general properties.

Material Properties

- I In the Home toolbar, click Pi Parameters and choose Add>Parameters.
- 2 In the Settings window for Parameters, type Material Properties in the Label text field. These material properties contain other parameters than will be used in extensions of this study.
- 3 Locate the Parameters section. Click **Load from File.**
- 4 Browse to the model's Application Libraries folder and double-click the file petzval_lens_stop_analysis_material_parameters.txt.

General Properties

- I In the Home toolbar, click Pi Parameters and choose Add>Parameters.
- 2 In the Settings window for Parameters, type General Properties in the Label text field.
- 3 Locate the Parameters section. Click **Load from File.**
- **4** Browse to the model's Application Libraries folder and double-click the file petzval lens stop analysis parameters.txt.

Lens Prescription

- I In the Model Builder window, click Lens Prescription.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
tS_1	tS_1_i	0.0013194 m	Lens group 1 support thickness
tS_2	tS_2_i	0.0010896 m	Lens group 1 support thickness
tS_3	tS_3_i	9.1902E-4 m	Lens group 1 support thickness

DEFINITIONS

Create a selection defining the lens barrels and detector assemblies. In this simulation it will be assumed they are made of the same material.

Lens Barrels and Detector

- I In the **Definitions** toolbar, click **Union**.
- 2 In the Settings window for Union, type Lens Barrels and Detector in the Label text field.
- 3 Locate the Input Entities section. Under Selections to add, click + Add.
- 4 In the Add dialog box, in the Selections to add list, choose All (Barrel 1), All (Barrel 2), All (Barrel 3), and Detector Assembly.
- 5 Click OK.

Lenses and Supports

Also, create a selection including only the lenses and supports.

- I In the **Definitions** toolbar, click **Union**.
- 2 In the Settings window for Union, type Lenses and Supports in the Label text field.
- 3 Locate the Input Entities section. Under Selections to add, click + Add.
- 4 In the Add dialog box, in the Selections to add list, choose Supports and All Lenses.
- 5 Click OK.

Next, create operators to make the deformed image plane coordinates available to postprocessing features. Select three of the four image surface corners.

Average I (aveop I)

- I In the Definitions toolbar, click Monlocal Couplings and choose Average.
- 2 In the Settings window for Average, locate the Source Selection section.
- 3 From the Geometric entity level list, choose Point.
- 4 Select Point 57 only.

Average 2 (aveop2)

- I Right-click Average I (aveopI) and choose Duplicate.
- 2 In the Settings window for Average, locate the Source Selection section.
- 3 Click Clear Selection.
- 4 Select Point 181 only.

Average 3 (aveop3)

- I Right-click Average 2 (aveop2) and choose Duplicate.
- 2 In the Settings window for Average, locate the Source Selection section.
- 3 Click Clear Selection.

4 Select Point 183 only.

MESH I

Free Triangular 1

- I In the Mesh toolbar, click A Boundary and choose Free Triangular.
- 2 In the Settings window for Free Triangular, locate the Boundary Selection section.
- 3 From the Selection list, choose Clear Apertures.

Size 1

- I Right-click Free Triangular I and choose Size.
- 2 In the Settings window for Size, locate the Element Size section.
- **3** From the **Predefined** list, choose **Extremely fine**. Refine the mesh of the lens surfaces.

Free Tetrahedral I

In the Mesh toolbar, click A Free Tetrahedral.

Size 1

- I Right-click Free Tetrahedral I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 Select Domain 21 only.
- 5 Locate the Element Size section. From the Predefined list, choose Finer. This is part of the detector assembly.

Size 2

- I In the Model Builder window, right-click Free Tetrahedral I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Supports.
- **5** Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the Element Size Parameters section.
- 7 Select the Minimum element size check box. In the associated text field, type 2[mm].


Size

- I In the Model Builder window, under Component I (compl)>Mesh I click Size.
- 2 In the Settings window for Size, locate the Element Size section.

- 3 From the Predefined list, choose Coarse.
- 4 Click Build All. The mesh should look like Figure 3.

GEOMETRICAL OPTICS (GOP)

- I In the Model Builder window, under Component I (compl) click Geometrical Optics (gop).
- 2 In the Settings window for Geometrical Optics, locate the Domain Selection section.
- 3 From the Selection list, choose All Lenses.

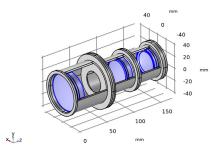

- 4 Locate the Ray Release and Propagation section. From the Wavelength distribution of released rays list, choose Polychromatic, specify vacuum wavelength. The list of polychromatic wavelengths will be entered below.
- 5 In the Maximum number of secondary rays text field, type 0. In this simulation stray light is not being traced, so reflected rays will not be produced at the lens surfaces. Note that because rays will be traced through a deformed geometry, it is not possible to use geometry normals for ray-boundary interactions. This check box should remained cleared.
- 6 Locate the Material Properties of Exterior and Unmeshed Domains section. From the Optical dispersion model list, choose Air, Edlen (1953).
- 7 In the $T_{\rm ext}$ text field, type T0. The refractive index of the air surrounding the camera lens will be a function of temperature.

Medium Properties 1

- I In the Model Builder window, under Component I (compl)>Geometrical Optics (gop) click Medium Properties I.
- 2 In the Settings window for Medium Properties, locate the Medium Properties section.
- 3 From the Refractive index of domains list, choose Get dispersion model from material.
- 4 Click to expand the **Model Inputs** section. From the T list, choose **Common model input**.

GLOBAL DEFINITIONS

Default Model Inputs

- I In the Model Builder window, under Global Definitions click Default Model Inputs.
- 2 In the Settings window for Default Model Inputs, locate the Browse Model Inputs section.
- 3 In the tree, select General>Temperature (K) minput.T.
- 4 Find the Expression for remaining selection subsection. In the Temperature text field, type T0. This temperature is defined in the parameters node.

GEOMETRICAL OPTICS (GOP)

Material Discontinuity I

- I In the Model Builder window, under Component I (compl)>Geometrical Optics (gop) click Material Discontinuity 1.
- 2 In the Settings window for Material Discontinuity, locate the Rays to Release section.
- 3 From the Release reflected rays list, choose Never.

Obstructions

- I In the Physics toolbar, click **Boundaries** and choose Wall.
- 2 In the Settings window for Wall, type Obstructions in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Obstructions.
- 4 Locate the Wall Condition section. From the Wall condition list, choose Disappear.

Stob

- I In the Physics toolbar, click Boundaries and choose Wall.
- 2 In the Settings window for Wall, type Stop in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Aperture Stop.
- 4 Locate the Wall Condition section. From the Wall condition list, choose Disappear.

Image

- I In the Physics toolbar, click **Boundaries** and choose Wall.
- 2 In the Settings window for Wall, type Image in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Image Plane. The default Wall condition is Freeze.

Release from Grid I

- I In the Physics toolbar, click **Solution** Global and choose Release from Grid.
- 2 In the Settings window for Release from Grid, locate the Initial Coordinates section.

- 3 From the Grid type list, choose Hexapolar.
- **4** Specify the \mathbf{q}_c vector as

dx1	x
dy1	у
dz	z

5 Specify the $\mathbf{r_c}$ vector as

nix	x
niy	у
niz	z

- 6 In the R_c text field, type 20.75[mm].
- 7 In the $N_{\rm c}$ text field, type 15.
- 8 Locate the Ray Direction Vector section. Specify the \boldsymbol{L}_0 vector as

vx1	х
vy1	у
٧Z	z

- 9 Locate the Vacuum Wavelength section. From the Distribution function list, choose List of values.
- **10** In the **Values** text field, type 475[nm] 550[nm] 625[nm].

Release from Grid 2

- I Right-click Release from Grid I and choose Duplicate.
- 2 In the Settings window for Release from Grid, locate the Initial Coordinates section.
- **3** Specify the $\mathbf{q}_{\mathbf{c}}$ vector as

4 Locate the Ray Direction Vector section. Specify the ${f L}_0$ vector as

vx2	x
vy2	у

Release from Grid 3

- I Right-click Release from Grid 2 and choose Duplicate.
- 2 In the Settings window for Release from Grid, locate the Initial Coordinates section.
- **3** Specify the \mathbf{q}_c vector as


dx3	x
dy3	у

4 Locate the Ray Direction Vector section. Specify the \mathbf{L}_0 vector as

vx3	x
vy3	у

SOLID MECHANICS (SOLID)

I In the Model Builder window, under Component I (compl) click Solid Mechanics (solid).

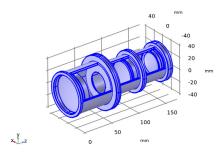

- 2 In the Settings window for Solid Mechanics, click to expand the Discretization section.
- 3 From the Displacement field list, choose Cubic serendipity. As for the Geometrical Optics interface, a cubic shape order is chosen to reduce discretization error.

Linear Elastic Material I

In the Model Builder window, under Component I (compl)>Solid Mechanics (solid) click Linear Elastic Material I.

Thermal Expansion 1

I In the Physics toolbar, click 🕞 Attributes and choose Thermal Expansion. The temperature model input value of **Thermal Expansion** is by default the common model input. In this way, the uniform temperature T0 is applied to the Solid Mechanics.

Fixed Constraint I

I In the Physics toolbar, click **Boundaries** and choose Fixed Constraint.

- 2 In the Settings window for Fixed Constraint, locate the Boundary Selection section.
- 3 From the Selection list, choose All (Rigid Support). It is assumed that the lens assembly is attached to an external rigid structure via this annulus. The external structure does not otherwise participate in the physics.

ADD MATERIAL

- I In the Home toolbar, click **Add Material** to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Optical>Schott Glass>Schott N-BK7 Glass.
- 4 Click Add to Component in the window toolbar.
- 5 In the tree, select Optical>Schott Glass>Schott N-KZFS5 Glass.
- 6 Click Add to Component in the window toolbar.
- 7 In the tree, select Optical>Schott Glass>Schott N-SK2 Glass.
- **8** Click **Add to Component** in the window toolbar.
- 9 In the tree, select Optical>Schott Glass>Schott N-SF5 Glass.
- **10** Click **Add to Component** in the window toolbar.
- II In the Home toolbar, click 👯 Add Material to close the Add Material window.

MATERIALS

Schott N-BK7 Glass (mat I)

- I In the Model Builder window, under Component I (compl)>Materials click Schott N-BK7 Glass (mat I).
- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Lens Material 1.

Schott N-KZFS5 Glass (mat2)

- I In the Model Builder window, click Schott N-KZFS5 Glass (mat2).
- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Lens Material 2.

Schott N-SK2 Glass (mat3)

- I In the Model Builder window, click Schott N-SK2 Glass (mat3).
- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Lens Material 3.

Schott N-SF5 Glass (mat4)

- I In the Model Builder window, click Schott N-SF5 Glass (mat4).
- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Lens Material 4.

ADD MATERIAL

- I In the Home toolbar, click 👯 Add Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Aluminum 6063-T83.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click 🤼 Add Material to close the Add Material window.

MATERIALS

Aluminum 6063-T83 (mat5)

- I In the Settings window for Material, locate the Geometric Entity Selection section.
- 2 From the Selection list, choose Lens Barrels and Detector.

RTV

- I In the Model Builder window, right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- **3** From the **Selection** list, choose **Supports**.
- 4 In the Label text field, type RTV.
- **5** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	E	E_RTV	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	nu_RTV	I	Young's modulus and Poisson's ratio

Property	Variable	Value	Unit	Property group
Density	rho	rho_RTV	kg/m³	Basic
Coefficient of thermal expansion	alpha_iso; alphaii = alpha_iso, alphaij = 0	alpha_RTV	I/K	Basic

STUDY I

Add the studies necessary to perform a STOP analysis. First, add a stationary study to compute the geometry deformation at the nominal temperature. Next, add a Ray Tracing study to perform a ray trace through the deformed geometry.

Stationary

- I In the Study toolbar, click Study Steps and choose Stationary>Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form	
Geometrical Optics (gop)		Automatic (Time dependent)	
Solid Mechanics (solid)	\checkmark	Automatic (Stationary)	

Ray Tracing

- In the Study toolbar, click Study Steps and choose Time Dependent>Ray Tracing.
- 2 In the Settings window for Ray Tracing, locate the Study Settings section.
- 3 From the Time-step specification list, choose Specify maximum path length.
- 4 From the Length unit list, choose mm.
- 5 In the Lengths text field, type 0 215. The maximum optical path length is sufficient to allow all rays to pass beyond the nominal location of the image plane.
- 6 Select the Include geometric nonlinearity check box. This ensures that the ray tracing is performed on the deformed geometry created in Step 1 of the Study.

7 Locate the Physics and Variables Selection section. In the table, enter the following settings:

Physics interface	Solve for	Equation form
Geometrical Optics (gop)	V	Automatic (Time dependent)
Solid Mechanics (solid)		Automatic (Stationary)


Disable the Freeze condition on the image plane so that spot diagrams on both the nominal (deformed) image plane and the best focus image plane can be generated.

- f 8 Select the Modify model configuration for study step check box.
- 9 In the tree, select Component I (compl)>Geometrical Optics (gop)>Image.
- **10** Right-click and choose **Disable**.
- II In the Study toolbar, click **Compute**.

RESULTS


Ray Trajectories (gob)

The Ray Trajectories plot and the Stress plots (see below) are created by default with this combination of physics and study steps.

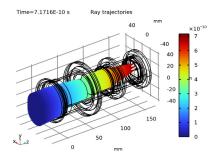

Stress (solid)

In the Model Builder window, click Stress (solid).

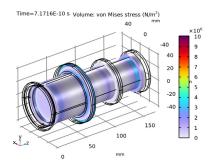

Selection

- I In the Model Builder window, expand the Results>Datasets node.
- 2 Right-click Study I/Solution I (soll) and choose Selection.
- 3 In the Settings window for Selection, locate the Geometric Entity Selection section.
- 4 From the Geometric entity level list, choose Domain.
- 5 From the Selection list, choose All Lenses. This selection is used to limit the domains in which some datasets will be processed.

Create an Intersection Point 3D dataset to show the image quality on the deformed image surface. Later, use the Spot Diagram postprocessing feature to generate a second Intersection Point 3D dataset that lies on plane which minimizes the RMS image quality onaxis.

Intersection Point 3D I

- I In the Results toolbar, click More Datasets and choose Intersection Point 3D.
- 2 In the Settings window for Intersection Point 3D, locate the Surface section.
- 3 From the Plane entry method list, choose Three points.
- 4 In row Point I, set x to aveop1(x).
- 5 In row Point I, set y to aveop1(y).
- 6 In row Point I, set z to aveop1(z).
- 7 In row Point 2, set x to aveop2(x).
- 8 In row Point 2, set y to aveop2(y).
- 9 In row Point 2, set z to aveop2(z).
- 10 In row Point 3, set x to aveop3(x).

II In row Point 3, set y to aveop3(y).

12 In row Point 3, set z to aveop3(z). These points are three of the four image surface corners.

Temberature

In the following steps, the Ray Trajectories plot is duplicated and extended to show the temperature field within the lens assembly together with the von Mises stress within the lenses.

Temperature

- I In the Model Builder window, right-click Ray Trajectories (gop) and choose Duplicate.
- 2 In the Settings window for 3D Plot Group, type Temperature in the Label text field.
- 3 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 4 Locate the Plot Settings section. From the View list, choose New view.
- 5 Locate the Color Legend section. Select the Show maximum and minimum values check box.
- 6 Select the Show units check box.
- **7** From the **Position** list, choose **Bottom**.
- 8 Click to expand the Number Format section. Select the Manual color legend settings check box.
- **9** In the **Precision** text field, type 4.

Ray Trajectories 1

- I In the Model Builder window, expand the Temperature node, then click Ray Trajectories 1.
- 2 In the Settings window for Ray Trajectories, locate the Extra Time Steps section.
- 3 From the Maximum number of extra time steps rendered list, choose All.

Color Expression 1

- I In the Model Builder window, expand the Ray Trajectories I node, then click Color Expression 1.
- 2 In the Settings window for Color Expression, locate the Expression section.
- 3 In the Expression text field, type gop.prf. This is the Ray release feature index; that is, the field number.
- **4** In the **Unit** field, type um.
- 5 Locate the Coloring and Style section. Clear the Color legend check box.

Filter 1

- I In the Model Builder window, click Filter I.
- 2 In the Settings window for Filter, locate the Ray Selection section.
- 3 From the Rays to include list, choose Logical expression.
- 4 In the Logical expression for inclusion text field, type at(0,qx>0.1[mm]). Restrict the rays visible to one half of the view. Also, rays are not rendered just beyond the nominal, undeformed image plane z-coordinate.

Surface 1

- I In the Model Builder window, right-click Temperature and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type solid.T.
- 4 From the Unit list, choose degC.
- **5** Click to expand the **Range** section. Select the **Manual color range** check box.
- 6 In the Minimum text field, type -27.5.
- 7 In the Maximum text field, type 52.5.
- 8 Locate the Coloring and Style section. Click Change Color Table.
- 9 In the Color Table dialog box, select Wave>WaveLight in the tree.
- IO Click OK.

Selection 1

- I Right-click Surface I and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Assembly Surfaces.

Filter I

- I In the Model Builder window, right-click Surface I and choose Filter.
- 2 In the Settings window for Filter, locate the Element Selection section.
- 3 In the Logical expression for inclusion text field, type $x>0.5[mm] \mid y<-0.5[mm]$.

Surface 2

- I Right-click Surface I and choose Duplicate.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type 1.
- 4 Locate the Coloring and Style section. From the Coloring list, choose Uniform.
- 5 From the Color list, choose Gray.

Transparency I

Right-click Surface 2 and choose Transparency.

Selection 1

- I In the Settings window for Selection, locate the Selection section.
- **2** From the **Selection** list, choose **Lens Exteriors**.

Slice 1

- I In the Model Builder window, right-click Temperature and choose Slice.
- 2 In the Settings window for Slice, locate the Expression section.
- 3 In the Expression text field, type solid.mises.
- 4 From the Unit list, choose MPa.
- 5 Locate the Plane Data section. In the Planes text field, type 1.
- **6** Click to expand the **Range** section. Select the **Manual color range** check box.
- 7 In the Maximum text field, type 10.
- 8 Locate the Coloring and Style section. Click Change Color Table.
- **9** In the Color Table dialog box, select Thermal>HeatCamera in the tree.
- IO Click OK.
- II In the Settings window for Slice, locate the Coloring and Style section.
- 12 From the Color table transformation list, choose Reverse.

Selection 1

- I Right-click Slice I and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Lens Barrels and Detector.

Filter 1

- I In the Model Builder window, right-click Slice I and choose Filter.
- 2 In the Settings window for Filter, locate the Element Selection section.
- 3 In the Logical expression for inclusion text field, type v>0.

Slice 2

- I Right-click Slice I and choose Duplicate.
- 2 In the Settings window for Slice, locate the Plane Data section.
- 3 From the Plane list, choose zx-planes.
- 4 In the Planes text field, type 1.

5 Click to expand the Inherit Style section. From the Plot list, choose Slice 1.

Filter I

- I In the Model Builder window, expand the Slice 2 node, then click Filter I.
- 2 In the Settings window for Filter, locate the Element Selection section.
- 3 In the Logical expression for inclusion text field, type x<0.

Slice 3

In the Model Builder window, under Results>Temperature right-click Slice I and choose Duplicate.

Selection I

- I In the Model Builder window, expand the Slice 3 node, then click Selection I.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Lenses and Supports.

Slice 3

- I In the Model Builder window, click Slice 3.
- 2 In the Settings window for Slice, locate the Inherit Style section.
- 3 From the Plot list, choose Slice 2.

Transparency I

- I Right-click Slice 3 and choose Transparency.
- 2 In the Settings window for Transparency, locate the Transparency section.
- 3 In the Transparency text field, type 0.25.

In the Model Builder window, under Results>Temperature right-click Slice 2 and choose Duplicate.

Selection I

- I In the Model Builder window, expand the Slice 4 node, then click Selection I.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Lenses and Supports.

Transparency I

- I In the Model Builder window, right-click Slice 4 and choose Transparency.
- 2 In the Settings window for Transparency, locate the Transparency section.
- 3 In the Transparency text field, type 0.25.

- 4 In the Temperature toolbar, click Plot.
- 5 Click the Orthographic Projection button in the Graphics toolbar.
- 6 Click the | Show Grid button in the Graphics toolbar. Orient the resulting figure to match Figure 4.

Displacement

Copy and modify the temperature plot to illustrate the displacement field within the lens assembly.

Displacement

- I In the Model Builder window, right-click Temperature and choose Duplicate.
- 2 In the Settings window for 3D Plot Group, type Displacement in the Label text field.

Surface I

- I In the Model Builder window, expand the Displacement node, then click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type w.
- **4** In the **Unit** field, type um.
- 5 Locate the Range section. In the Minimum text field, type -125.
- 6 In the Maximum text field, type 125.
- 7 Locate the Coloring and Style section. Click Change Color Table.
- 8 In the Color Table dialog box, select Traffic>TrafficLight in the tree.
- 9 Click OK.
- 10 In the Settings window for Surface, locate the Coloring and Style section.
- II From the Color table transformation list, choose Reverse.

Deformation I

- I Right-click Surface I and choose Deformation. This is used to exaggerate the lens thermal deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 25.

Deformation I

- I In the Model Builder window, right-click Surface 2 and choose Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 25.

Slice 1

- I In the Model Builder window, under Results>Displacement click Slice I.
- 2 In the Settings window for Slice, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Aurora Aurora Australis in the tree.
- 5 Click OK.
- 6 In the Settings window for Slice, locate the Coloring and Style section.
- 7 From the Color table transformation list, choose None.

Deformation I

- I Right-click Slice I and choose Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 25.

Deformation I

In the Model Builder window, right-click Slice 2 and choose Deformation.

Deformation I

In the Model Builder window, right-click Slice 3 and choose Deformation.

Deformation I

- I In the Model Builder window, right-click Slice 4 and choose Deformation.
- 2 In the **Displacement** toolbar, click **Plot**. Orient the result to match Figure 5.

Spot Diagrams

Finally, create two spot diagrams. The first will show the image quality on the nominal image plane. That is, the deformed image surface from the geometry. The second spot diagram will show the spots on the plane of best focus, using the on-axis rays.

Shot Diagram, Nominal

- I In the Home toolbar, click Add Plot Group and choose 2D Plot Group.
- 2 In the Settings window for 2D Plot Group, type Spot Diagram, Nominal in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose None.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **Manual**.
- 5 In the **Title** text area, type **Spot Diagram**: **Nominal Focal Plane**.
- 6 Locate the Color Legend section. Select the Show maximum and minimum values check box.

7 Select the **Show units** check box.

Sbot Diagram 1

- I In the Spot Diagram, Nominal toolbar, click More Plots and choose Spot Diagram.
- 2 In the Settings window for Spot Diagram, locate the Data section.
- 3 From the Image surface list, choose Intersection Point 3D 1. This is the Intersection Point **3D** dataset defined above using three corners of the deformed image surface.
- 4 Locate the Layout section. From the Layout list, choose Rectangular grid.
- 5 In the Number of columns text field, type 1.
- 6 From the Origin location list, choose Average over area.
- 7 In the Vertical padding factor text field, type 1.
- **8** Click to expand the **Annotations** section. Select the **Show spot coordinates** check box.
- **9** From the Coordinate system list, choose Global.
- 10 In the Display precision text field, type 6.

Color Expression 1

- I Right-click Spot Diagram I and choose Color Expression.
- 2 In the Settings window for Color Expression, locate the Expression section.
- 3 In the Expression text field, type gop.lambda0.
- 4 From the **Unit** list, choose **nm**.
- 5 Click to expand the Range section. Select the Manual color range check box.
- **6** In the **Minimum** text field, type 450.
- 7 In the Maximum text field, type 650.
- 8 In the Spot Diagram, Nominal toolbar, click om Plot. The first spot diagram should look like Figure 6.

Shot Diagram, Best Focus

- I In the Model Builder window, right-click Spot Diagram, Nominal and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Spot Diagram, Best Focus in the Label text field.
- 3 Locate the Title section. In the Title text area, type Spot Diagram: Best Focus Plane.
- 4 Locate the Plot Settings section. From the View list, choose New view.

Spot Diagram 1

I In the Model Builder window, expand the Spot Diagram, Best Focus node, then click Spot Diagram I.

- 2 In the Settings window for Spot Diagram, locate the Data section.
- 3 From the Image surface list, choose Ray I.
- 4 Locate the Filters section. Select the Filter by release feature index check box. The rays from the on-axis release will be used.
- 5 Click to expand the Focal Plane Orientation section. From the Normal to focal plane list, choose **User defined**. The default is that the image plane normal direction is the z-axis.
- 6 From the Transverse direction list, choose User defined.
- 7 Click Create Focal Plane Dataset
- 8 Locate the Filters section. Clear the Filter by release feature index check box.
- 9 In the Spot Diagram, Best Focus toolbar, click Plot.
- 10 Click the **Zoom Extents** button in the **Graphics** toolbar. The second spot diagram should look like Figure 7.

Appendix — Geometry Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 Click M Done.

PETZVAL LENS STOP ANALYSIS GEOMETRY SEQUENCE

Insert the prepared Petzval Lens geometry sequence from file. The instructions for creating the lens geometry can be found in the appendix of the Petzval Lens tutorial.

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- **3** From the **Length unit** list, choose **mm**.
- 4 In the Label text field, type Petzval Lens STOP Analysis Geometry Sequence.
- 5 In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.

6 Browse to the model's Application Libraries folder and double-click the file petzval lens stop analysis petzval lens geom sequence.mph. Following insertion, the full lens prescription will be available in the Parameters node.

Add parameters to define the dimensions of the lens supports.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file petzval lens stop analysis geom sequence parameters.txt. Now, modify the clear aperture on the first surface of lens 1, the size of the aperture stop and the dimensions of the image plane.
- **5** In the table, enter the following settings:

Name	Expression	Value	Description
d1_clear_1	0	0	L1, surface 1 clear aperture diameter
d0_S	dS_1	0.06 m	Stop maximum diameter
d0_D	25.0[mm]	0.025 m	Detector diameter

PETZVAL LENS STOP ANALYSIS GEOMETRY SEQUENCE

- I In the Geometry toolbar, click **Build All**.
- 2 Click the Orthographic Projection button in the Graphics toolbar.
- 3 In the Model Builder window, under Component I (compl) click Petzval Lens STOP Analysis Geometry Sequence.
- 4 In the Settings window for Geometry, in the Graphics window toolbar, click ▼ next to Go to Default View, then choose Go to ZY View.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar. Orient the view to place the optical axis (z-axis) horizontal and the y-axis vertical.

GLOBAL DEFINITIONS

In the following steps a geometry part will be created. This part will be used to create barrels which will hold each of the three Petzval lens groups.

BARREL

- I In the Model Builder window, expand the Global Definitions>Geometry Parts node.
- 2 Right-click Global Definitions and choose Geometry Parts>3D Part.
- 3 In the Settings window for Part, type Barrel in the Label text field.
- **4** Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Default expression	Value	Description
L	50.0[mm]	0.05 m	Length
D_in	50.0[mm]	0.05 m	Inner diameter
T_wall	3.0[mm]	0.003 m	Wall thickness
D1_out	65.0[mm]	0.065 m	Front ring outer diameter
D1_in	45.0[mm]	0.045 m	Front ring inner diameter
D2_out	75.0[mm]	0.075 m	Rear ring outer diameter
D2_in	45.0[mm]	0.045 m	Rear ring inner diameter
L1	3.0[mm]	0.003 m	Front ring thickness
L2	3.0[mm]	0.003 m	Rear ring thickness

Central Barrel Annulus

- I In the Geometry toolbar, click Part Instance and choose Circular Planar Annulus.
- 2 In the Settings window for Part Instance, type Central Barrel Annulus in the Label text field.
- 3 Locate the Input Parameters section. In the table, enter the following settings:

Name	Expression	Value	Description
d0	D_in+2*T_wall	0.056 m	Diameter, outer
dl	D_in	0.05 m	Diameter, inner

4 Locate the **Position and Orientation of Output** section. Find the **Displacement** subsection. In the **zw** text field, type L1.

Central Barrel

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, type Central Barrel in the Label text field.
- **3** On the object **pil**, select Boundary 1 only.

4 Locate the **Distances** section. In the table, enter the following settings:

Distances (m)	
L-(L1+L2)	

Front Ring Annulus

- I In the Geometry toolbar, click Part Instance and choose Circular Planar Annulus.
- 2 In the Settings window for Part Instance, type Front Ring Annulus in the Label text field.
- **3** Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Expression	Value	Description
d0	D1_out	0.065 m	Diameter, outer
dl	D1_in	0.045 m	Diameter, inner

Front Ring

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, type Front Ring in the Label text field.
- 3 On the object pi2, select Boundary 1 only.
- **4** Locate the **Distances** section. In the table, enter the following settings:

Distances (m)	
L1	

Rear Ring Annulus

- I In the Geometry toolbar, click Part Instance and choose Circular Planar Annulus.
- 2 In the Settings window for Part Instance, type Rear Ring Annulus in the Label text field.
- 3 Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Expression	Value	Description
d0	D2_out	0.075 m	Diameter, outer
dl	D2_in	0.045 m	Diameter, inner

- 4 Locate the Position and Orientation of Output section. Find the Coordinate system to match subsection. From the Take work plane from list, choose Front Ring Annulus (pi2).
- 5 From the Work plane list, choose Surface (wpl).

6 Find the **Displacement** subsection. In the **zw** text field, type L.

Rear Ring

- I In the Geometry toolbar, click **Extrude**.
- 2 In the Settings window for Extrude, type Rear Ring in the Label text field.
- **3** On the object **pi3**, select Boundary 1 only.
- **4** Locate the **Distances** section. In the table, enter the following settings:

Distances (m) L2

5 Select the **Reverse direction** check box.

AII

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 In the Settings window for Union, type All in the Label text field.
- 3 Click in the **Graphics** window and then press Ctrl+A to select all objects.
- 4 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.

Front Plane

- I In the Geometry toolbar, click Swork Plane.
- 2 In the Settings window for Work Plane, type Front Plane in the Label text field.
- 3 Locate the Plane Definition section. From the Plane type list, choose Transformed.
- 4 From the Take work plane from list, choose Front Ring Annulus (pi2).
- 5 From the Work plane to transform list, choose Surface (wpl).

Rear Plane

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, type Rear Plane in the Label text field.
- 3 Locate the Plane Definition section. From the Plane type list, choose Transformed.
- 4 From the Take work plane from list, choose Rear Ring Annulus (pi3).
- 5 From the Work plane to transform list, choose Surface (wpl).
- 6 In the Geometry toolbar, click **Build All**.

Next, modify the dimensions of the lens group apertures. These will be extruded to create the lens supports.

PETZVAL LENS STOP ANALYSIS GEOMETRY SEQUENCE

Group | Aperture (pi8)

- I In the Model Builder window, under Component I (compl)> Petzval Lens STOP Analysis Geometry Sequence click Group I Aperture (pi8).
- 2 In the Settings window for Part Instance, locate the Input Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
d0	dS_1	60 mm	Diameter, outer

Group 2 Aperture (pi9)

- I In the Model Builder window, click Group 2 Aperture (pi9).
- 2 In the Settings window for Part Instance, locate the Input Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
d0	dS_2	47 mm	Diameter, outer

Group 3 Aperture (pil0)

- I In the Model Builder window, click Group 3 Aperture (pil0).
- 2 In the Settings window for Part Instance, locate the Input Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
d0	dS_3	44.5 mm	Diameter, outer

4 Locate the Position and Orientation of Output section. Find the Displacement subsection. In the **zw** text field, type 4.

Group I Support

- I In the **Geometry** toolbar, click **Extrude**.
- 2 In the Settings window for Extrude, type Group 1 Support in the Label text field.
- **3** On the object **pi8**, select Boundary 1 only.
- 4 Locate the Distances section. From the Specify list, choose Vertices to extrude to.
- 5 On the object pi2, select Point 11 only.
- 6 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. Click New.

- 7 In the New Cumulative Selection dialog box, type Supports in the Name text field.
- 8 Click OK.

Group 2 Support

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, type Group 2 Support in the Label text field.
- **3** On the object **pi9**, select Boundary 1 only.
- 4 Locate the Distances section. From the Specify list, choose Vertices to extrude to.
- **5** On the object **pi5**, select Point 11 only.
- 6 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. From the Contribute to list, choose Supports.

Group 3 Support

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, type Group 3 Support in the Label text field.
- **3** On the object **pil0**, select Boundary 1 only.
- 4 Locate the Distances section. From the Specify list, choose Vertices to extrude to.
- 5 On the object pi6, select Point 12 only.
- 6 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. From the Contribute to list, choose Supports.
- 7 In the Geometry toolbar, click **Build All**.

Barrel I (bil I)

- I In the Geometry toolbar, click A Part Instance and choose Barrel.
- 2 In the Settings window for Part Instance, locate the Position and Orientation of Output section.
- 3 Find the Coordinate system in part subsection. From the Work plane in part list, choose Front Plane (wpl).
- 4 Find the Coordinate system to match subsection. From the Take work plane from list, choose Lens I (pil).
- 5 From the Work plane list, choose Surface I vertex intersection (wpl).

6 Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Expression	Value	Description
L	T_1+Tc_1+Tc_2+T_2+ 6[mm]	63 mm	Length
D_in	dS_1	60 mm	Inner diameter
T_wall	3.0[mm]	3 mm	Wall thickness
DI_out	70.0[mm]	70 mm	Front ring outer diameter
DI_in	dS_1	60 mm	Front ring inner diameter
D2_out	85.0[mm]	85 mm	Rear ring outer diameter
D2_in	d1_S	33.262 mm	Rear ring inner diameter
LI	3.0[mm]	3 mm	Front ring thickness
L2	3.0[mm]	3 mm	Rear ring thickness

- 7 Locate the Position and Orientation of Output section. Find the Displacement subsection. In the **zw** text field, type -3.0[mm].
- 8 Click to expand the **Domain Selections** section. In the table, select the **Keep** check box for AII.

Cone I (cone I)

- I In the Geometry toolbar, click Cone.
- 2 In the Settings window for Cone, locate the Coordinate System section.
- 3 From the Take work plane from list, choose Barrel I (pill).
- 4 From the Work plane list, choose Rear Plane (wp2).
- 5 Locate the Size and Shape section. In the Height text field, type 3[mm].
- 6 In the Bottom radius text field, type d1_S/2.
- 7 In the Top radius text field, type dS_2/2.
- **8** Locate the **Position** section. In the **zw** text field, type -3[mm].

Difference I (dif1)

- I In the Geometry toolbar, click Booleans and Partitions and choose Difference.
- **2** Select the object **pill** only.
- 3 In the Settings window for Difference, locate the Difference section.
- **4** Click to select the **Activate Selection** toggle button for **Objects to subtract**.
- **5** Select the object **cone1** only.

Barrel 2 (pil2)

- I In the Geometry toolbar, click Part Instance and choose Barrel.
- 2 In the Settings window for Part Instance, locate the Position and Orientation of Output section.
- 3 Find the Coordinate system in part subsection. From the Work plane in part list, choose Front Plane (wpl).
- 4 Find the Coordinate system to match subsection. From the Take work plane from list, choose Barrel I (pill).
- 5 From the Work plane list, choose Rear Plane (wp2).
- **6** Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Expression	Value	Description	
L	T_3+Tc_4+Tc_5+2[mm]	57 mm	Length	
D_in	dS_2	47 mm	Inner diameter	
T_wall	3.0[mm]	3 mm Wall thickness		
DI_out	85.0[mm]	85 mm	Front ring outer diameter	
DI_in	dS_2	47 mm	Front ring inner diameter	
D2_out	65.0[mm]	65 mm	Rear ring outer diameter	
D2_in d2_clear_5+3[mm]		35.984 mm	Rear ring inner diameter	
LI	3.0[mm]	3 mm	Front ring thickness	
L2	3.0[mm]	3 mm	Rear ring thickness	

7 Locate the **Domain Selections** section. In the table, select the **Keep** check box for **All**.

Barrel 3 (pil3)

- I In the Geometry toolbar, click Part Instance and choose Barrel.
- 2 In the Settings window for Part Instance, locate the Position and Orientation of Output section.
- 3 Find the Coordinate system in part subsection. From the Work plane in part list, choose Front Plane (wpl).
- 4 Find the Coordinate system to match subsection. From the Take work plane from list, choose Barrel 2 (pil2).
- 5 From the Work plane list, choose Rear Plane (wp2).

6 Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Expression	Value	Description	
L	T_5+Tc_6+T_6	50.777 mm	Length	
D_in	dS_3	44.5 mm	4.5 mm Inner diameter	
T_wall	3.0[mm]	3 mm	Wall thickness	
DI_out	65.0[mm]	65 mm	Front ring outer diameter	
DI_in	d2_clear_5+3[mm]	35.984 mm	Front ring inner diameter	
D2_out	60.0[mm]	60 mm	Rear ring outer diameter	
D2_in	dS_3	44.5 mm	Rear ring inner diameter	
LI	3.0[mm]	3 mm	Front ring thickness	
L2	5.0[mm]	5 mm	Rear ring thickness	

7 Locate the Domain Selections section. In the table, select the Keep check box for All.

Finally, create a simplified detector mount.

Detector

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, type Detector in the Label text field.
- 3 Locate the General section. From the Input faces list, choose Image Plane.

Detector Mount

- I In the Geometry toolbar, click (Cylinder.
- 2 In the Settings window for Cylinder, type Detector Mount in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type 1.5[mm].
- 4 In the **Height** text field, type 4.0[mm].
- 5 Locate the Coordinate System section. From the Take work plane from list, choose Barrel 3 (pil3).
- 6 From the Work plane list, choose Rear Plane (wp2).
- 7 Locate the **Position** section. In the **zw** text field, type -4.0[mm].

Detector Mount Rear

- I In the Geometry toolbar, click (Cylinder.
- 2 In the Settings window for Cylinder, type Detector Mount Rear in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type 30.0[mm].
- 4 In the Height text field, type 3.0[mm].

- 5 Locate the Coordinate System section. From the Take work plane from list, choose Barrel 3 (pil3).
- 6 From the Work plane list, choose Rear Plane (wp2).

Detector Assembly

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 In the Settings window for Union, type Detector Assembly in the Label text field.
- 3 Select the objects cyll, cyl2, and ext4 only.
- 4 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.

Rigid Support

- I In the Geometry toolbar, click Part Instance and choose Circular Planar Annulus.
- 2 In the Settings window for Part Instance, type Rigid Support in the Label text field.
- 3 Locate the **Input Parameters** section. In the table, enter the following settings:

Name	Expression	Value	Description	
d0	85.0[mm]	85 mm	Diameter, outer	
dl	70.0[mm]	70 mm	Diameter, inner	
nix	0	0	Local optical axis, x-component	
niy	0	0	Local optical axis, y-component	
niz	1	I	Local optical axis, z-component	

- 4 Locate the Position and Orientation of Output section. Find the Coordinate system to match subsection. From the Take work plane from list, choose Barrel 2 (pil2).
- 5 From the Work plane list, choose Front Plane (wp1).
- 6 Find the **Displacement** subsection. In the **zw** text field, type 5.0[mm].
- 7 Click to expand the **Boundary Selections** section. In the table, select the **Keep** check box for All.

Rigid Support Ring

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, type Rigid Support Ring in the Label text field.
- **3** On the object **pil4**, select Boundary 1 only.

4 Locate the **Distances** section. In the table, enter the following settings:

Distances (mm) 2.0[mm]

- **5** Select the **Reverse direction** check box.
- 6 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. From the **Contribute to** list, choose **Supports**.

Assembly Surfaces

- I In the Geometry toolbar, click \(\frac{1}{2} \) Selections and choose Complement Selection.
- 2 In the Settings window for Complement Selection, type Assembly Surfaces in the Label text field.
- 3 Locate the Geometric Entity Level section. From the Level list, choose Boundary.
- 4 Locate the Input Entities section. Click + Add.
- 5 In the Add dialog box, select Lens Exteriors in the Selections to invert list.
- 6 Click OK.
- 7 In the Settings window for Complement Selection, click **Build All Objects**.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar. Compare the resulting geometry to Figure 2.