

Electroplating of Multiple Components in a Rack

When several components are to be electroplated they are typically mounted on a rack in the electroplating bath. An important aspect is then achieving a uniform thickness of the plated layer for all components mounted on the rack. Numerical modeling allows to investigate the effect of several geometrical and operational parameters on electroplating uniformity in order to optimize the electroplating process.

In this tutorial model, electroplating of an array of oil pump covers mounted on a rack is considered. Within the array, one oil pump cover is displaced toward the anode in order to demonstrate the effect geometrical effect on the current distribution in the bath. A secondary current distribution with full Butler-Volmer kinetics for both anode and cathode is used here to compute the thickness of the deposited layer at the cathode surface.

The example is based on a scientific paper (Ref. 1).

Model Definition

The model geometry is shown in Figure 1. The anode is a planar dissolving anode. The cathode consists of an array of oil pump covers to be decorated by metal plating.

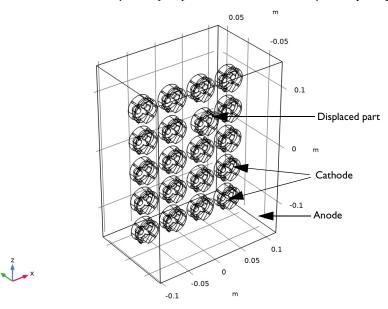


Figure 1: The model geometry.

The model geometry is parameterized so that any oil pump cover can be displaced toward or away from the anode surface. In the results shown below, one oil pump cover is displaced toward the anode surface, as indicated in Figure 1.

ELECTROLYTE CHARGE TRANSPORT

Use the Secondary Current Distribution interface to solve for the electrolyte potential, ϕ_l (SI unit: V), according to

$$\mathbf{i}_l = -\sigma_l \nabla \phi_l$$
$$\nabla \cdot \mathbf{i}_l = 0$$

where \mathbf{i}_l (SI unit: A/m²) is the electrolyte current density vector and σ_l (SI unit: S/m) is the electrolyte conductivity, which is assumed to be a constant.

Use the default Insulation condition for all boundaries except the anode and cathode surfaces:

$$\mathbf{n} \cdot \mathbf{i}_l = 0$$

where \mathbf{n} is the normal vector, pointing out of the domain.

The main electrode reaction on both the anode and the cathode surfaces is the nickel dissolution/deposition reaction according to

$$Ni^{2+} + 2e^- \Leftrightarrow Ni(s)$$

Use a Butler-Volmer expression to model this reaction; this sets the local current density to

$$i_{\text{loc, Ni}} = i_{0, \text{Ni}} \left(\exp \left(\frac{\alpha_a F \eta_{\text{Ni}}}{RT} \right) - \exp \left(-\frac{\alpha_c F \eta_{\text{Ni}}}{RT} \right) \right)$$

where $i_{0,\text{Ni}}$ is the exchange current density, α_a is the anodic transfer coefficient, α_c is the cathodic transfer coefficient, and η_{Ni} is the overpotential.

The overpotential $\eta_{Ni}(V)$ is calculated from:

$$\eta_{\text{Ni}} = \phi_{s, \text{ ext}} - \phi_l - E_{\text{eq, Ni}}$$

On the anode and cathode surfaces, the electrolyte current density is set to the local current density of the nickel dissolution/deposition reaction:

$$\mathbf{n} \cdot \mathbf{i}_l = i_{\text{loc, Ni}}$$

The electric potential of the metal is selected as a bootstrap by setting this potential to 0 V at the anode and the average current density of -100 A/m^2 is applied at the cathode surface. This results in positive local current density at the anode surface and negative at the cathode surfaces.

The deposition thickness at the cathode boundary surfaces, d (m), is calculated according to

$$d = \frac{-i_{\text{loc, Ni}} \underline{M}}{nF} t$$

where M is the mean molar mass (59 g/mol), ρ is the density (8900 kg/m³) of the nickel atoms, n is the number of participating electrons, and t is the plating time.

The model is solved using a Stationary study.

Results and Discussion

Figure 2 shows a streamline plot of the electrolyte current density and a surface plot of the total current density at the oil pump cover (cathode) surfaces. The current flows from the anode surface to the cathode surface in the electrolyte. The surface plot of the total current density indicates nonuniform current density distribution across the complex shape of the oil pump cover, and between different components in the array. Generally for each individual component, the current density is the highest at the oil pump cover boundaries closest to the anode surface and is the lowest at the boundaries farthest away from the anode surface. In the array, the current density is the highest at the displaced oil pump cover, located more closely to the anode. It is also observed that the oil pump covers mounted along the outer edge of the rack receive higher current than those mounted at the center of the rack. In summary, the nonuniform current distribution, seen in Figure 2,

is attributed to both the complex shape of the cover as well as the mounting position on the rack.

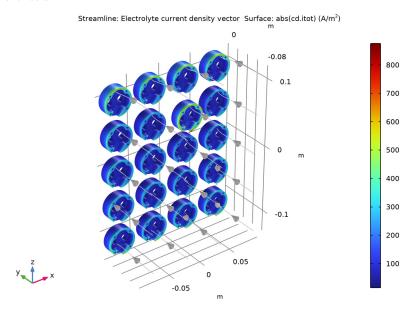


Figure 2: Current density distribution in the rack.

Figure 3 shows the corresponding electroplating thickness over the cathode surfaces. Since the deposition thickness is proportional to the stationary local electrode current density at the cathode surface in this model, the deposition distribution is identical to the current distribution. The lowest deposition thickness is found to be at the bottom surface of the oil pump cover and the highest deposition thickness is found to be at the top surface of the displaced oil pump cover.

The numerical models of this type are useful in optimizing the deposition process by changing design parameters such as plating rack configuration, plating cell geometry, distance between the anode and cathode surface, conductivity of the electrolyte and operational parameters such as applied current or potential.

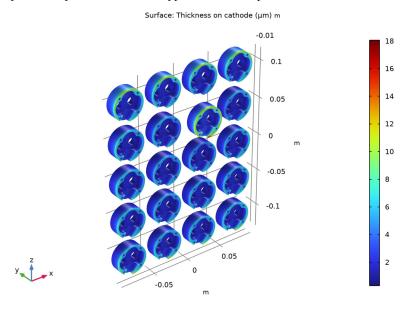


Figure 3: The electroplating thickness at the cathode.

Reference

1. J. Deconinck, G. Floridor, B. Van den Bossche, L. Bortels, and G. Nelissen, "Numerical 3D BEM Simulation of the Chromium Layer Thickness Distribution on Parts in a Rack Plating Configuration," Simulation of Electrochemical Processes, vol. 48, p. 173, 2005.

Application Library path: Electrodeposition_Module/Tutorials/ electroplating rack

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **1** 3D.
- 2 In the Select Physics tree, select Electrochemistry>
 Primary and Secondary Current Distribution>Secondary Current Distribution (cd).
- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select Preset Studies for Selected Physics Interfaces> Stationary with Initialization.
- 6 Click M Done.

GLOBAL DEFINITIONS

Load the model parameters from a text file.

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file electroplating rack parameters.txt.

GEOMETRY I

The model geometry is available as a parameterized geometry sequence in a separate MPH-file. If you want to build it from scratch, follow the instructions in the section Appendix — Geometry Modeling Instructions. Otherwise load it from file with the following steps.

- I In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.
- **2** Browse to the model's Application Libraries folder and double-click the file electroplating rack geom sequence.mph.
- 3 In the Insert Sequence dialog box, click OK.
- 4 In the Geometry toolbar, click Build All.
- 5 Click the Wireframe Rendering button in the Graphics toolbar.

SECONDARY CURRENT DISTRIBUTION (CD)

Now start setting up the current distribution model. First, set the domain selection to 1 to solve the current distribution only in the electrolyte domain.

- I In the Model Builder window, under Component I (compl) click Secondary Current Distribution (cd).
- 2 In the Settings window for Secondary Current Distribution, locate the Domain Selection section.
- 3 In the list, choose 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, and 21.
- 4 Click Remove from Selection.
- **5** Select Domain 1 only.

Electrolyte I

Next, set the user defined electrolyte conductivity.

- I In the Model Builder window, under Component I (compl)> Secondary Current Distribution (cd) click Electrolyte 1.
- 2 In the Settings window for Electrolyte, locate the Electrolyte section.
- **3** From the σ_1 list, choose **User defined**. In the associated text field, type sigma.

Electrode Surface - Anode

Now define the nickel dissolution electrode reaction on the anode surface.

- I In the Physics toolbar, click **Boundaries** and choose **Electrode Surface**.
- 2 In the Settings window for Electrode Surface, type Electrode Surface Anode in the Label text field.
- **3** Select Boundary 2 only.

Keep the default boundary condition for this surface, setting (grounding) the electric potential to zero.

Electrode Reaction I

Set the Butler-Volmer electrode kinetics for the nickel dissolution reaction.

- I In the Model Builder window, click Electrode Reaction I.
- 2 In the Settings window for Electrode Reaction, locate the Equilibrium Potential section.
- **3** In the $E_{\rm eq}$ text field, type Eeq_Ni.
- 4 Locate the Electrode Kinetics section. From the Kinetics expression type list, choose Butler-Volmer.
- **5** In the i_0 text field, type i0_Ni.

Electrode Surface - Anode

Now duplicate this node to define the cathode settings. Set the average current density at the cathode surface.

I In the Model Builder window, right-click Electrode Surface - Anode and choose Duplicate.

Electrode Surface - Cathodes

- In the Model Builder window, under Component I (compl)>
 Secondary Current Distribution (cd) click Electrode Surface Anode I.
- 2 In the Settings window for Electrode Surface, type Electrode Surface Cathodes in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Array 1.
- 4 Locate the Electrode Phase Potential Condition section. From the Electrode phase potential condition list, choose Average current density.
- **5** In the $i_{l,average}$ text field, type Iavg.

MESH I

While meshing, first mesh one oil pump cover and then copy the same mesh for the other oil pump covers.

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Sequence Type section.
- **3** From the list, choose **User-controlled mesh**.


Free Tetrahedral I

- I Click the Transparency button in the Graphics toolbar.
- 2 In the Model Builder window, under Component I (compl)>Mesh I click Free Tetrahedral I.
- **3** Select Domain 2 only.

Size 1

- I Right-click Free Tetrahedral I and choose Size.
- 2 In the Settings window for Size, locate the Element Size section.
- 3 From the Predefined list, choose Finer.
- **4** Click the **Transparency** button in the **Graphics** toolbar.

5 Click Build Selected.

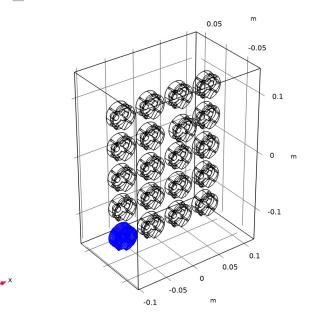


Сору І

- I In the Mesh toolbar, click Copy and choose Copy.
- 2 Select Domain 2 only.
- **3** In the **Settings** window for **Copy**, locate the **Destination Entities** section.
- **4** Click to select the **Activate Selection** toggle button.
- **5** Select Domains 3–21 only.

6 Click 📳 Build Selected.

The mesh should look like this:

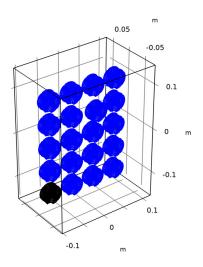




Free Tetrahedral 2

- I In the Mesh toolbar, click A Free Tetrahedral.
- 2 Click the Transparency button in the Graphics toolbar.

3 In the Settings window for Free Tetrahedral, click **Build All**. The mesh should look like this:

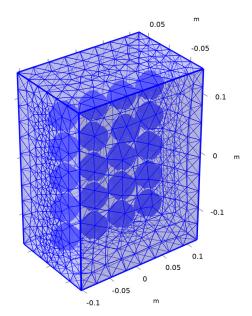

DEFINITIONS

Before solving, load the definition of a postprocessing variable from a text file.

Variables 1

- I In the Home toolbar, click **a= Variables** and choose **Local Variables**.
 - The electroplating thickness at the cathode surface, defined in the variable thickness_cathode, is evaluated from the local electrode reaction current density together with the reaction stoichiometry, and surface properties such as density and molecular weight and plating time parameters.
- 2 In the Settings window for Variables, locate the Variables section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file electroplating_rack_variables.txt.

STUDY I

The model is now ready to be solved.

I In the Home toolbar, click **Compute**.

RESULTS

Polish the streamlines of the default electrolyte current density plot group, and change the selection of the surface plot to the cathode surface only.

Streamline 1

- I In the Model Builder window, expand the Results>Electrolyte Current Density (cd) node, then click Streamline 1.
- 2 In the Settings window for Streamline, locate the Streamline Positioning section.
- 3 From the Positioning list, choose On selected boundaries.
- **4** Locate the **Selection** section. Click to select the **Selection** toggle button.
- **5** Select Boundary 2 only.

Color Expression 1

- I In the Model Builder window, expand the Streamline I node.
- 2 Right-click Color Expression I and choose Disable.

Surface I

In the Model Builder window, under Results>Electrolyte Current Density (cd) click Surface 1.

Selection 1

- I In the Electrolyte Current Density (cd) toolbar, click 🗣 Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Array 1.

Electrolyte Current Density (cd)

- I In the Model Builder window, under Results click Electrolyte Current Density (cd).
- 2 In the Settings window for 3D Plot Group, locate the Plot Settings section.
- 3 Clear the Plot dataset edges check box.
- **4** Click the **Transparency** button in the **Graphics** toolbar.
- 5 In the Electrolyte Current Density (cd) toolbar, click Plot.

The plot should look like Figure 2.

Electroplating Thickness

Next, plot electroplating thickness on the cathode surface.

I In the Home toolbar, click <a> Add Plot Group and choose 3D Plot Group.

- 2 In the Settings window for 3D Plot Group, type Electroplating Thickness in the Label text field.
- 3 Locate the Plot Settings section. Clear the Plot dataset edges check box.

Surface I

- I In the Electroplating Thickness toolbar, click Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type thickness cathode.
- **4** From the **Unit** list, choose μ m.

Selection 1

- I In the Electroplating Thickness toolbar, click \(\frac{1}{2} \) Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Array 1.

Electroplating Thickness

- I In the Model Builder window, under Results click Electroplating Thickness.

The plot should look like Figure 3.

Appendix — Geometry Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click 1 3D.
- 2 Click Mone.

GLOBAL DEFINITIONS

Parameters 1

First load the geometrical parameters from a text file.

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.

4 Browse to the model's Application Libraries folder and double-click the file electroplating_rack_geometrical_parameters.txt.

OIL PUMP COVER

Now, start with creating a geometry part for oil pump cover.

- 2 In the Settings window for Part, type Oil Pump Cover in the Label text field.

Cylinder I (cyl1)

- I In the Geometry toolbar, click Cylinder.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type D_opc/2.
- 4 In the **Height** text field, type t_opc.

Cylinder 2 (cyl2)

- I In the Geometry toolbar, click Cylinder.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type d_opc/2.
- 4 In the Height text field, type t_opc.
- 5 Locate the Position section. In the x text field, type d_opc*4/5.

Mirror I (mir I)

- I In the Geometry toolbar, click Transforms and choose Mirror.
- 2 Select the object cyl2 only.
- 3 In the Settings window for Mirror, locate the Input section.
- 4 Select the **Keep input objects** check box.
- 5 Locate the Normal Vector to Plane of Reflection section. In the x text field, type 1.
- 6 In the z text field, type 0.

Work Plane I (wbl)

- I In the Geometry toolbar, click 🕌 Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the **z-coordinate** text field, type t opc/2.

Work Plane I (wb I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wp I)>Circle I (c1)

- I In the Work Plane toolbar, click Circle.
- 2 In the Settings window for Circle, locate the Size and Shape section.
- 3 In the Radius text field, type d_opc.
- 4 Locate the Position section. In the xw text field, type d_opc*4/5.

Work Plane I (wpl)>Mirror I (mirl)

- I In the Work Plane toolbar, click \(\sum_{\chi} \) Transforms and choose Mirror.
- **2** Select the object **c1** only.
- 3 In the Settings window for Mirror, locate the Input section.
- 4 Select the Keep input objects check box.

Work Plane I (wp I)>Union I (uni I)

- I In the Work Plane toolbar, click | Booleans and Partitions and choose Union.
- 2 Click in the **Graphics** window and then press Ctrl+A to select both objects.
- 3 In the Settings window for Union, locate the Union section.
- 4 Clear the Keep interior boundaries check box.

Extrude I (extI)

- I In the Model Builder window, under Global Definitions>Geometry Parts>Oil Pump Cover right-click Work Plane I (wpl) and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (m)

Cylinder 3 (cyl3)

- I In the **Geometry** toolbar, click **Cylinder**.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type d opc.
- 4 In the Height text field, type t_opc/2.
- 5 Locate the Position section. In the y text field, type d opc*4/5.
- 6 In the z text field, type t_opc*3/5.

Work Plane 2 (wb2)

I In the Geometry toolbar, click Work Plane.

- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the z-coordinate text field, type t opc*3/5.

Work Plane 2 (wp2)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 2 (wp2)>Polygon 1 (pol1)

- I In the Work Plane toolbar, click / Polygon.
- 2 In the Settings window for Polygon, locate the Coordinates section.
- 3 From the Data source list, choose Vectors.
- **4** In the **xw** text field, type d_opc*4/5 0 0 -d_opc*8/5 -d_opc*8/5 -d_opc*4/5 -d_opc*4/5 -d_opc*4/5 -d_opc*4/5.
- 5 In the yw text field, type -d_opc -D_opc/2 -D_opc/2 -D_opc/2 -D_opc/2 -d_opc -d opc 0 0 0.

Extrude 2 (ext2)

- I In the Model Builder window, under Global Definitions>Geometry Parts>Oil Pump Cover right-click Work Plane 2 (wp2) and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- 3 From the Specify list, choose Vertices to extrude to.
- **4** On the object **cyl3**, select Point 6 only.

Cylinder 4 (cyl4)

- I In the **Geometry** toolbar, click **(L) Cylinder**.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type 0.3*d_opc/2.
- 4 In the Height text field, type t_opc.
- 5 Locate the Position section. In the x text field, type 0.43*D_opc/sqrt(2).
- 6 In the y text field, type 0.43*D_opc/sqrt(2).


Rotate I (rot1)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- **2** Select the object **cyl4** only.
- 3 In the Settings window for Rotate, locate the Input section.
- 4 Select the **Keep input objects** check box.
- 5 Locate the Rotation section. In the Angle text field, type 90, 180, 270.

Difference I (dif1)

- I In the Geometry toolbar, click Booleans and Partitions and choose Difference.
- **2** Select the object **cyll** only.
- 3 In the Settings window for Difference, locate the Difference section.
- 4 Click to select the Activate Selection toggle button for Objects to subtract.
- 5 Select the objects cyl2, cyl3, cyl4, ext1, ext2, mir1, rot1(1), rot1(2), and rot1(3) only.
- 6 Click | Build Selected.

The geometry of oil pump cover should look like this:

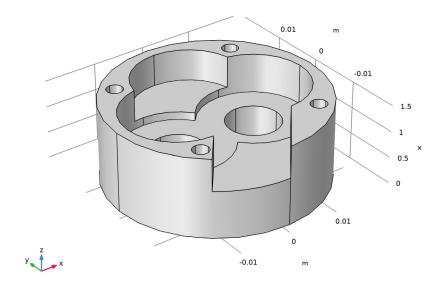

GLOBAL DEFINITIONS

Now, create a geometry part for plating tank.

PLATING TANK

- I In the Geometry toolbar, click Create Part.
- 2 In the Settings window for Part, type Plating Tank in the Label text field.

Block I (blk I)

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, locate the Size and Shape section.

- 3 In the Width text field, type $n_x*D_opc+(n_x+1)*dist_x$.
- 4 In the **Depth** text field, type n_y*D_opc+(n_y+1)*dist_y.
- 5 In the **Height** text field, type H_tank.
- 6 Locate the Position section. From the Base list, choose Center.
- 7 In the z text field, type H tank/2.

GEOMETRY I

Now, assemble an array of oil pump covers in the electroplating tank.

Oil Pump Cover I (pil)

- I In the Geometry toolbar, click A Part Instance and choose Oil Pump Cover.
- 2 In the Settings window for Part Instance, locate the Position and Orientation of Output section.
- 3 Find the Displacement subsection. In the xw text field, type ((D_opc+dist_x)*(1-n x))/2.
- 4 In the yw text field, type $((D_opc+dist_y)*(1-n_y))/2$.

Plating Tank I (pi2)

- I In the Geometry toolbar, click A Part Instance and choose Plating Tank.
- 2 In the Settings window for Part Instance, locate the Position and Orientation of Output section.
- 3 Find the Displacement subsection. In the zw text field, type -z out*6.


Array I (arr I)

- I In the Geometry toolbar, click Transforms and choose Array.
- 2 Click the Wireframe Rendering button in the Graphics toolbar.
- **3** Select the object **pil** only.
- 4 In the Settings window for Array, locate the Size section.
- 5 In the x size text field, type $n \times x$.
- 6 In the y size text field, type n y.
- 7 Locate the **Displacement** section. In the x text field, type D_opc+dist_x.
- 8 In the y text field, type D opc+dist x.
- 9 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 10 From the Show in physics list, choose Boundary selection.

II Click Pauld Selected.

12 Click the **Zoom Extents** button in the **Graphics** toolbar.

The geometry of an array of oil pump covers should look like this:

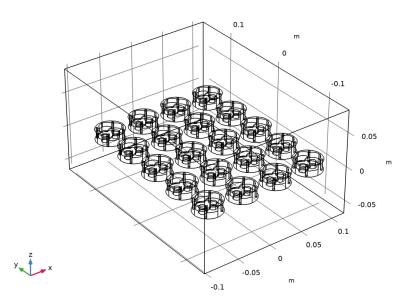

Cylinder Selection I (cylsell)


One can displace a particular oil pump cover making use of cylinder selection.

- I In the Geometry toolbar, click \(\frac{1}{2} \) Selections and choose Cylinder Selection.
- 2 In the Settings window for Cylinder Selection, locate the Geometric Entity Level section.
- **3** From the **Level** list, choose **Object**.
- 4 Locate the Input Entities section. From the Entities list, choose From selections.
- 5 Click + Add.
- 6 In the Add dialog box, select Array I in the Selections list.
- 7 Click OK.
- 8 In the Settings window for Cylinder Selection, locate the Size and Shape section.
- 9 In the Outer radius text field, type D opc/2.
- 10 Locate the **Position** section. In the x text field, type $(n \times D \operatorname{opc} + (n \times +1) \times \operatorname{dist} x)$ 2+floor(part in)*(dist x+D opc)-D opc/2.

II In the y text field, type - $(n_y*D_opc+(n_y+1)*dist_y)/2+((part_in_ope+(n_ope+($ floor(part_in))*10)*(dist_y+D_opc)-D_opc/1.25.

Move I (movI)


- I In the Geometry toolbar, click Transforms and choose Move.
- 2 In the Settings window for Move, locate the Input section.
- 3 From the Input objects list, choose Cylinder Selection 1. The oil pump cover to be displaced is highlighted below:

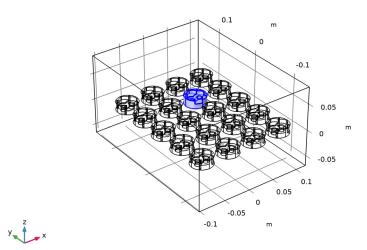

4 Locate the **Displacement** section. In the **z** text field, type **z_out**.

5 Click **Build Selected**.

The geometry of an array of oil pump covers should look like this:

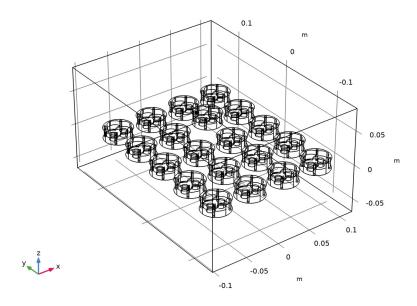

Rotate I (rot1)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 In the Settings window for Rotate, locate the Input section.
- 3 From the Input objects list, choose Array 1.
- 4 Click in the **Graphics** window and then press Ctrl+A to select all objects.
- 5 Locate the Rotation section. From the Axis type list, choose x-axis.
- 6 In the Angle text field, type 90.

7 Click Build Selected.

The final geometry should look like this:

