

Combining Creep Material Models

This model illustrates how to combine different creep models to accurately represent the material behavior. An example for such a material model combination is to add a Norton-Bailey's law with a Norton's law as described in the equation

$$\frac{\partial \varepsilon_{\rm c}}{\partial t} = (A_1 \sigma_{\rm e}^{n_1} + A_2 \sigma_{\rm e}^{n_2} m t^{m-1}) g(T)$$

Model Definition

This model is a modification of the application library model Thermally Induced Creep. The same geometry, hollow sphere, load, inner pressure and thermal gradient, are used here. The parameters of Norton's law are also reused and govern secondary creep. The primary creep data, which differentiates the two models, is defined as

$$A_2 \sigma_{\mathrm{e}}^{n_2} m t^{m-1} g(T)$$

Parameter $A_2 = 10 \text{ h}^{-1}$ accounts for the stress normalization of the equivalent stress, σ_e , in MPa and time, t, in hours. The other parameters are $n_2 = 3.5$, m = 0.5, and $g(T) = e^{-12500/T}$, where T defines the temperature in K.

Results and Discussion

Figure 1 shows the von Mises stress at 10⁸ h when both primary creep and secondary creep are active. The largest equivalent stress, found in the center of the sphere, demonstrates that the relaxation take place starting from the inner radius and continuing toward the outer boundary. Without creep due to the internal pressure, the largest stresses are found on the inner radius and decreases toward the outer radius instead.

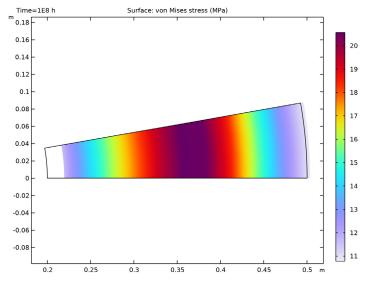


Figure 1: Distribution of von Mises stress at $t = 10^8$ h.

To compare both creep models, secondary creep against combined creep, see Figure 2 where the time history of the equivalent stress is shown at three different locations. It is clear that the primary creep relaxes the inner boundary earlier than the secondary creep. Over time, both creep models converge to the same result. This is expected because the influence of the primary creep fades away with time.

Figure 3 shows the evolution of the creep strains using the two models at the same points as used in Figure 2. The effect of including primary creep is clearly visible, and also how it fades away with time. Lastly, the history of the stress profile is shown in Figure 4. Relaxation causes the location of peak stress to propagate from the inner to the outer surface.

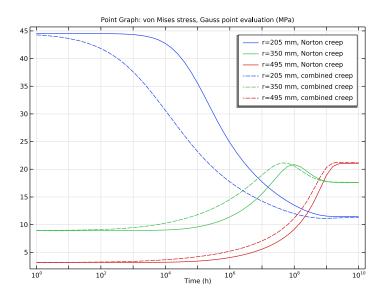


Figure 2: History of von Mises stress at radius 205 mm, 350 mm, and 495 mm, of the secondary creep only (solid lines), and with primary creep included (dashed lines).

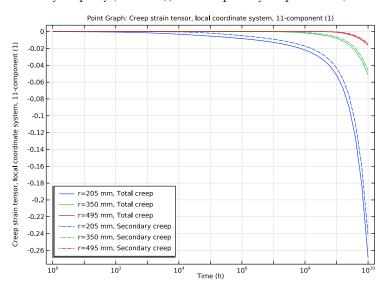


Figure 3: History of combined and secondary creep strain at radius 205 mm, 350 mm, and 495 mm.

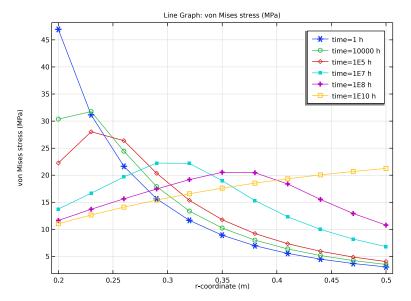


Figure 4: von Mises stress versus radius at $t = 1, 10^4, 10^5, 10^7, 10^8$, and 10^{10} hours with primary creep included.

Modeling in COMSOL Multiphysics

In COMSOL Multiphysics you can combine several creep models by adding Additional **Creep** sub nodes to a **Creep** node.

Norton-Bailey's creep law for primary creep can in COMSOL Multiphysics be defined by adding a hardening model to a Norton creep law. Using a time hardening model, we get

$$\frac{\partial \varepsilon_{\mathbf{c}}}{\partial t} = A \left(\frac{\sigma_{\text{eff}}}{\sigma_{\text{ref}}}\right)^{n} m \left(\frac{t + t_{\text{shift}}}{t_{\text{ref}}}\right)^{m-1} e^{-\frac{Q}{RT}}$$

In order to normalize the equivalent stress in MPa and the time in h, set the reference stress $\sigma_{ref} = 1$ MPa and the reference time $t_{ref} = 1$ h. Set the time shift t_{shift} to 1 min in order to avoid the singularity that occurs at t = 0. Considering the long time scale of the analysis this has a negligible effect on the results.

Application Library path: Nonlinear_Structural_Materials_Module/Creep/combined_creep

Modeling Instructions

APPLICATION LIBRARIES

- I From the File menu, choose Application Libraries.
- 2 In the Application Libraries window, select Nonlinear Structural Materials Module>Creep> thermally_induced_creep in the tree.
- 3 Click Open.

COMPONENT I (COMPI)

In the Model Builder window, expand the Component I (compl) node.

SOLID MECHANICS (SOLID)

In the Model Builder window, expand the Component I (compl)>Solid Mechanics (solid) node.

Creeb I

In the Model Builder window, expand the Component I (compl)>Solid Mechanics (solid)> Linear Elastic Material I node, then click Creep I.

Additional Creeb 1

- I In the Physics toolbar, click _ Attributes and choose Additional Creep.
- 2 In the Settings window for Additional Creep, locate the Creep Model section.
- **3** From the A list, choose **User defined**. In the associated text field, type 10[1/h].
- **4** From the σ_{ref} list, choose **User defined**. From the *n* list, choose **User defined**. In the associated text field, type 3.5.
- **5** Find the **Isotropic hardening model** subsection. From the $h\left(\epsilon_{\text{ce}},t\right)$ list, choose **Time hardening**.
- **6** In the *m* text field, type 0.5.
- **7** In the t_{shift} text field, type 1[min].
- **8** Find the **Thermal effects** subsection. From the g(T) list, choose **Arrhenius**.
- **9** In the Q text field, type 1.0393e5[J/mol].

Study 1 solves the model with only **Creep I** enabled. Disable **Additional Creep I** for this study.

STUDY I

Steb 1: Time Dependent

- I In the Model Builder window, expand the Study I node, then click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Physics and Variables Selection section.
- 3 Select the Modify model configuration for study step check box.
- 4 In the tree, select Component I (compl)>Solid Mechanics (solid)> Linear Elastic Material I>Creep I>Additional Creep I.
- 5 Click ODisable.

Add a new study to solve for the combined creep.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Time Dependent.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 2

- I In the Settings window for Time Dependent, locate the Study Settings section.
- 2 From the Time unit list, choose h.
- 3 In the Output times text field, type 0 10^{range(0,0.2,10)}.
- **4** From the **Tolerance** list, choose **User controlled**.
- 5 In the Relative tolerance text field, type 1e-4.

Solution 2 (sol2)

- I In the Study toolbar, click Show Default Solver.
- 2 In the Model Builder window, expand the Solution 2 (sol2) node, then click Time-Dependent Solver 1.

- 3 In the Settings window for Time-Dependent Solver, click to expand the Time Stepping section.
- 4 Select the Initial step check box. In the associated text field, type 1[min].
- 5 From the Steps taken by solver list, choose Strict.
- 6 In the Study toolbar, click **Compute**.

RESULTS

Stress with Combined Creep

Select the solution at 10^8 hours to reproduce Figure 1.

- I In the Settings window for 2D Plot Group, type Stress with Combined Creep in the Label text field.
- 2 Locate the Data section. From the Time (h) list, choose 1E8.

Surface I

- I In the Model Builder window, expand the Stress with Combined Creep node, then click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 From the Unit list, choose MPa.
- 4 In the Stress with Combined Creep toolbar, click Plot.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

The commands below illustrate how to generate Figure 2.

Stress with Combined Creep, 3D

- I In the Model Builder window, under Results click Stress, 3D (solid) I.
- 2 In the Settings window for 3D Plot Group, type Stress with Combined Creep, 3D in the Label text field.
- 3 Locate the Data section. From the Time (h) list, choose 1E8.

Surface 1

- I In the Model Builder window, expand the Stress with Combined Creep, 3D node, then click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 From the Unit list, choose MPa.
- 4 In the Stress with Combined Creep, 3D toolbar, click Plot.

Cut Point 2D I

- I In the Model Builder window, expand the Results>Datasets node.
- 2 Right-click Results>Datasets>Cut Point 2D I and choose Duplicate.

Cut Point 2D 2

- I In the Model Builder window, click Cut Point 2D 2.
- 2 In the Settings window for Cut Point 2D, locate the Data section.
- 3 From the Dataset list, choose Study 2/Solution 2 (sol2).

Point Graph 1

- I In the Model Builder window, expand the Results>von Mises Stress node, then click Point Graph 1.
- 2 In the Settings window for Point Graph, click to expand the Legends section.
- 3 In the Legend text field, type r=eval(r,mm) mm, Norton creep.
- 4 Right-click Point Graph I and choose Duplicate.

Point Graph 2

- I In the Model Builder window, click Point Graph 2.
- 2 In the Settings window for Point Graph, locate the Data section.
- 3 From the Dataset list, choose Cut Point 2D 2.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 5 Click to expand the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.
- 6 From the Color list, choose Cycle (reset).
- 7 Locate the Legends section. In the Legend text field, type r=eval(r,mm) mm, combined creep.
- 8 In the von Mises Stress toolbar, click Plot.

To get Figure 4, continue with the steps below:

Cut Line 2D I

- I In the Results toolbar, click Cut Line 2D.
- 2 In the Settings window for Cut Line 2D, locate the Data section.
- 3 From the Dataset list, choose Study 2/Solution 2 (sol2).
- 4 Locate the Line Data section. In row Point 1, set R to 0.2.
- **5** In row **Point 2**, set **R** to **0.5**.

von Mises Stress, Profile

- I In the Results toolbar, click \(\subseteq \text{ID Plot Group.} \)
- 2 In the Settings window for ID Plot Group, type von Mises Stress, Profile in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Cut Line 2D 1.
- 4 From the Time selection list, choose From list.
- 5 In the Times (h) list, choose 1, 10000, 1E5, 1E7, 1E8, and 1E10.

Line Graph 1

- I Right-click von Mises Stress, Profile and choose Line Graph.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Solid Mechanics>Stress>solid.misesGp - von Mises stress - N/m2.
- 3 Locate the y-Axis Data section. From the Unit list, choose MPa.
- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 5 In the Expression text field, type r.
- 6 Click to expand the Coloring and Style section. Find the Line markers subsection. From the Marker list, choose Cycle.
- 7 Click to expand the Quality section. From the Resolution list, choose No refinement.
- 8 Click to expand the **Legends** section. Select the **Show legends** check box.
- 9 Find the Prefix and suffix subsection. In the Prefix text field, type time=.
- 10 In the von Mises Stress, Profile toolbar, click Plot.

Plot the creep strains with and without primary creep, see Figure 3.

Creeb Strains

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Creep Strains in the Label text field.

Point Graph 1

- I In the Creep Strains toolbar, click Point Graph.
- 2 In the Settings window for Point Graph, locate the Data section.
- 3 From the Dataset list, choose Cut Point 2D 2.
- 4 Click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Solid Mechanics>Strain>Creep strain tensor,

local coordinate system>solid.eclGp11 - Creep strain tensor, local coordinate system, 11component.

- **5** Locate the **Legends** section. Select the **Show legends** check box.
- 6 From the Legends list, choose Evaluated.
- 7 In the Legend text field, type r=eval(r,mm) mm, Total creep.
- 8 Right-click Point Graph I and choose Duplicate.

Point Graph 2

- I In the Model Builder window, click Point Graph 2.
- 2 In the Settings window for Point Graph, locate the Data section.
- 3 From the Dataset list, choose Cut Point 2D 1.
- 4 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.
- 5 From the Color list, choose Cycle (reset).
- 6 Locate the Legends section. In the Legend text field, type r=eval(r,mm) mm, Secondary creep.
- 7 Locate the Title section. From the Title type list, choose None.
- 8 Click the x-Axis Log Scale button in the Graphics toolbar.

Creeb Strains

- I In the Model Builder window, click Creep Strains.
- 2 In the Settings window for ID Plot Group, locate the Legend section.
- 3 From the Position list, choose Lower left.
- 4 In the Creep Strains toolbar, click Plot.