

# Submarine Cable 5 — Bonding Inductive

In the *Inductive Effects* tutorial (the previous tutorial in this series), the **Coil group** option is mentioned as a means to mimic the effects of cross bonding, but the exact extent of the validity of this approach is not shown. In order to investigate the different bonding types more closely, this tutorial considers three sections of cable individually, represented by three separate Magnetic Fields interfaces.

The model uses a strongly simplified geometry. Even so, the results correspond very well to those from the *Inductive Effects* tutorial. This justifies both the simplified geometry in this tutorial, as well as the cross-bonding approach suggested in the *Inductive Effects* tutorial. Finally, as opposed to the other inductive models in this series, this one allows for investigating dissimilar section lengths.

# Model Definition

The cable geometry is heavily simplified. The geometry as used in the *Capacitive*, *Inductive* and *Thermal Effects* tutorials has been stripped from all details that do not significantly contribute to the inductive problem. Everything that from the inductive viewpoint can be considered an insulator has been replaced by air, leaving the three phases, the screens, and the armor; see Figure 1.

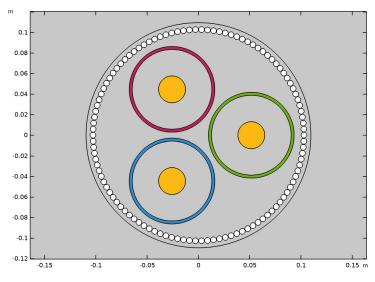


Figure 1: The simplified cable cross section, including the three phases (yellow), the screens (red, green, and blue), and the armor (white).

#### THEORETICAL BASIS

When it comes to solving for the electromagnetic fields, the methods used here are identical to the ones used in the Inductive Effects tutorial. For more details on the involved electromagnetic theory, see that tutorial's theory section.

As for the Electrical Circuit interface, this is governed by Kirchhoff's circuit laws. Based on the principles of conservation of electric charge and conservation of energy, they state the following:

- 1 At any node in an electrical circuit, the sum of all currents entering or leaving that node must be zero.
- **2** The directed sum of the potential differences in any closed network must be zero.

In addition to this, there is the multiphysics coupling between the circuit and the three finite element models: The current that is dictated by the circuit is applied in the Magnetic Fields interfaces. Here, by integrating the electric field, the *electromotive force* (emf) is determined. The resulting voltage is fed back into the circuit as a potential difference. For each series chain (see Figure 2), the sum of the potential differences from the three screens gives the potential across a small helper resistor<sup>1</sup>, which responds with a current. This current is then fed back into the finite element models, making the coupling complete.

#### MODELING APPROACH

The tutorial starts with the basics, by exciting a current in the phases using a Coil feature with the setting **Single conductor** applied<sup>2</sup>. The currents induced by the electromotive force (emf) in the screens may flow freely; there is no restriction in the out-of-plane direction. This configuration is effectively the same as Solid Bonding.

In a second step, three additional **Coil** features are added. These set the total net crosssectional current to zero for each screen individually, while still allowing for variations within the screens. This configuration is effectively the same as Single-Point Bonding.

In a third step, two duplicate **Magnetic Fields** interfaces are created, resulting in one separate finite element model for each cable section. Al three Magnetic Fields interfaces are then set to an out-of-plane thickness of one third of the total cable length.

<sup>1.</sup> Note that the resistor needs to be properly scaled with respect to the screen's internal resistance. If the resistor is too small, the model will become ill-posed (similar to the issue we encountered in the Capacitive Effects tutorial), if the resistor is too large, it will significantly influence the results by suppressing the screen currents. As a rule of thumb, a value of about 10<sup>-6</sup> times the screen resistance is advised.

<sup>2.</sup> For more information on the coil feature and its settings, see the *Inductive Effects* tutorial in this series.

The six screens that result are connected to a circuit, as given by Figure 2. A multiphysics coupling is achieved by using a Coil domain in the Magnetic Fields interface, and an External I Vs. U feature in the Electrical Circuits interface. The resulting configuration is effectively identical to Cross Bonding.

The results are compared to those found in the *Inductive Effects* tutorial. Finally, you will be encouraged to try dissimilar section lengths, as this is something the other inductive models in this series cannot do.

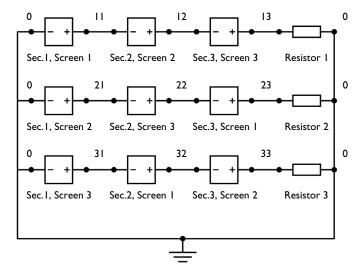


Figure 2: The cross bonding scheme, as it appears in the electrical circuit, including positive/ negative indication, node numbers, and screen- and section numbers.

#### ON BONDING TYPES

# Solid Bonding

In case of *solid bonding*, each screen is electrically paired with the same phase across the entire length of the cable. Furthermore, it is bonded and connected to ground at both ends; see Figure 3.

For the inductive problem, this means circulating currents will flow. As the three phase currents have a 120° phase difference, so will the currents induced by their electromotive force (emf) in the screens: The currents pushed forward by screen 1, will enter the bonding points and then flow back through screen 2 and screen 3. In a well balanced cable the sum of the currents from all three screens will be zero, so there will be no net current flowing from one ground point to the other.

Notice that from the inductive viewpoint, in this configuration it does not make sense to talk about an electric scalar potential V (not in the stationary-electric sense anyway). Screen currents will flow back and forth, yet on both ends of the cable the electric potential is 0 V (as the screen is connected to ground). The traditional stationary-electric reasoning fails here, because the electric fields  $\nabla \times \mathbf{E} = -\mathrm{j}\omega \mathbf{B}$  are not *curl-free*<sup>3</sup>. The electric potential that does occur in the screens, is caused by the charging currents, as treated in the Bonding Capacitive tutorial.

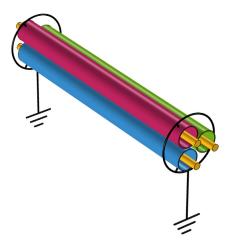


Figure 3: Schematic depiction of solid bonding, where the screens (red, green, and blue) are bonded and grounded at both ends.

This configuration may be the least efficient of the tree bonding types — the screen losses are high, as seen in the *Inductive Effects* tutorial — but it is also the most robust one. Since submarine cables are supposed to have a life expectancy of about forty years (with repairs being very costly), this is the preferred choice. Single-point bonding would increase the chances of having corrosion phenomena at one end of the cable, and cross bonding would complicate matters even further.

#### Single-Point Bonding

In case of single-point bonding, each screen is still paired with a single phase, but this time it is bonded and connected to ground at one end only; see Figure 4. The magnetic fields from the phase currents will still induce an emf across the screens, but since there is no closed circuit, circulating currents will not form. In this case, it does make sense to talk

<sup>3.</sup> If this phenomenon seems strange to you, please consider the classical textbook example of a metal ring in a time-harmonic magnetic field: It has no beginning or end (no + or - terminal), there is no battery or ground point, yet a current is flowing — forward on one side, back on the other.

about a magnetically induced electric potential in the screens: The voltage at the floating end is induced by both capacitive and inductive phenomena.

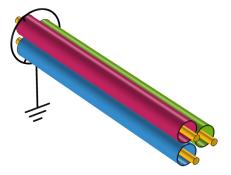


Figure 4: Schematic depiction of single-point bonding, where the screens (red, green, and blue) are bonded and grounded at one end only.

And it is this voltage that limits the applicability of this configuration. The cable system must be designed to limit the screen voltage to a locally permitted level (around 3 to 5 kV). Special care needs to be taken to prevent excessive voltage built up due to transient effects or screen-to-earth faults. For the end that is not bonded, surge voltage limiters or arc suppression coils are applied (ARC, also known as a *Petersen coil*).

The induced voltages in the screens are directly proportional to both the currents in the phases — or, more precisely, their time derivative — as well as the total length of the cable. Consequently, this configuration is used for shorter stretches only. Because of the increased risk of corrosion, it is mainly used for terrestrial applications (as opposed to submarine)<sup>4</sup>.

#### Cross Bonding

Cross bonding shows the most sophisticated configuration — and conceptually, the most elegant one. In case of cross bonding, the total length of cable is split in three sections of equal length. From an electrical point of view, the screen is paired with a different phase for each section; see Figure 5.

<sup>4.</sup> Treatment of the single-point bonding configuration within the context of this submarine cable tutorial series should therefore be seen as a demonstration of a concept, rather than a demonstration of a real-world application. Including these bonding types extends this tutorial series to a point where it is useful for demonstrating terrestrial applications as well.

As for each electrically connected set of screens the electromotive forces in the three cable sections show a 120° phase shift, the effects cancel out: For a well balanced cable, the total net current induced in the screens will be zero<sup>5</sup>.

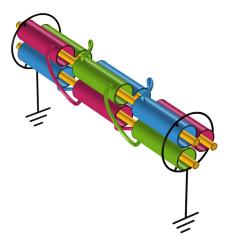


Figure 5: Schematic depiction of cross bonding, where the screens (red, green, and blue) are split in three cross-bonded sections of equal length.

In this configuration, the maximum screen voltage occurs at the intersections. Like for single-point bonding, precautions need to be taken to limit the screen voltage to a certain level. The intersections increase the complexity of the cable system, and consequently, the risk of failure (due to leakage, corrosion and such). Therefore, like for single-point bonding, this configuration is not preferred for submarine cable systems<sup>6</sup>.

## Results and Discussion

The first tested bonding configuration (solid bonding), is more or less a direct copy of the plain 2D model discussed in the Inductive Effects tutorial. And indeed, the results are practically identical, even though the geometry is strongly simplified: The screen and phase losses are about 13 kW/km and 47 kW/km, still.

When switching to single-point bonding, the screen losses go down significantly, to 2.9 kW/km. As a direct consequence, the AC resistance goes down too, to 45 m $\Omega$ /km (approaching the DC one, as expected). A redistribution of magnetic energy leads to some

<sup>5.</sup> Note that this does not hold entirely for the charging currents; see the Bonding Capacitive tutorial.

<sup>6.</sup> Treatment of the cross bonding configuration within the context of this submarine cable tutorial series should therefore be seen as a *demonstration of a concept*, rather than a demonstration of a real-world application.

watered effects<sup>7</sup>, raising the phase losses marginally. The absolute voltage induced across the screens is about 473 V.

Finally, when using cross bonding, all results remain the same except for the screen voltages. Across each section, there is a 158 V potential difference. As the voltages across the three consecutive screens in a series chain (Figure 2) show a 120° phase shift, the screen potential along the cable<sup>8</sup> will form an equilateral triangle on the complex plane (with one tip connected to ground).

#### ON ACCURACY

The first tested configuration shows an almost perfect agreement with the much more detailed plain 2D model from the Inductive Effects tutorial. This is, of course, a very nice result as it legitimates this model as a means to investigate the different bonding types for the more detailed versions.

When you start to think about it however, the results agree so well, it is a bit confronting: It basically means that — at least from an inductive viewpoint — all the nice little details that we have been adding to the geometry so far, have been inconsequential (that includes the detailed mesh and the additional computational effort).

Most of the material properties that we have been entering so carefully in the *Introduction* tutorial, have been inconsequential as well. This is similar to the observation done in the Capacitive Effects tutorial, where the cable's capacitive properties are found to be given by a fairly simple analytical expression containing one material property only.

The observation that these details are inconsequential, however, does not make them meaningless. Proving something to be insignificant by adding it to a numerical model is a perfectly viable strategy. It is a good way to investigate what is important about a device.

A common misconception is to think a more detailed model is by definition a more accurate one. As these results show, it is not the amount of details that makes a good model; it is the kind of details.

Application Library path: ACDC\_Module/Tutorials,\_Cables/ submarine cable 05 bonding inductive

<sup>7.</sup> For more on this, see the Inductive Effects tutorial — in particular the parts where the armor twist and the phase twist are introduced.

<sup>8.</sup> The screen potential due to inductive effects, that is. The raise in screen potential due to capacitive effects is discussed in the Capacitive Effects tutorial.

From the File menu, choose New.

#### NEW

In the New window, click Model Wizard.

#### MODEL WIZARD

- I In the Model Wizard window, click **2** 2D.
- 2 In the Select Physics tree, select AC/DC>Electromagnetic Fields>Magnetic Fields (mf).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select General Studies>Frequency Domain.
- 6 Click M Done.

#### **GLOBAL DEFINITIONS**

This model uses a subset of the parameters already defined for the other tutorials. In order to gain access to them, you can load them all. While doing so, you can adjust the cable length parameters to match the first bonding type investigated (solid bonding).

## Geometric Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, type Geometric Parameters 1 in the Label text field.
- 3 Locate the Parameters section. Click **Load from File.**
- **4** Browse to the model's Application Libraries folder and double-click the file submarine\_cable\_a\_geom\_parameters.txt.

### Geometric Parameters 2

- I In the Home toolbar, click P Parameters and choose Add>Parameters.
- 2 In the Settings window for Parameters, type Geometric Parameters 2 in the Label text field.
- 3 Locate the Parameters section. Click **Load from File.**
- 4 Browse to the model's Application Libraries folder and double-click the file submarine\_cable\_b\_geom\_parameters.txt.

5 In the table, adjust the parameters Lsec1 and Lsec3 as follows:

Name	Expression	Description
Lsec1	1	Relative length cross bonding section 1
Lsec3	0	Relative length cross bonding section 3

# **Electromagnetic Parameters**

- I In the Home toolbar, click P Parameters and choose Add>Parameters.
- 2 In the Settings window for Parameters, type Electromagnetic Parameters in the Label text field.
- 3 Locate the Parameters section. Click **Load from File**.
- **4** Browse to the model's Application Libraries folder and double-click the file submarine\_cable\_c\_elec\_parameters.txt.

#### **GEOMETRY I**


As this tutorial intents to focus on the effects of bonding types, the geometry is kept simple. From the *Inductive Effects* tutorial we know the fiber may be neglected. Furthermore, the insulators have little or no influence on the inductive part and may just as well be replaced by air. What we are left with is a number of circles representing the copper, the lead and the steel.

Start by adding one phase, together with its screen. By setting their labels, and enabling the Resulting objects selection, you automatically set a domain selection that coincides with the shape you create. The selections will then propagate through the sequence (when a shape is copied, its selection will cover both the original and the copy).

#### Phases

- I In the Geometry toolbar, click Circle.
- 2 In the Settings window for Circle, type Phases in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type Dcon/2.
- 4 Locate the **Position** section. In the x text field, type Dpha/sqrt(3).
- 5 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 6 Click **Pauld Selected**.

7 Click the ++ Zoom Extents button in the Graphics toolbar.

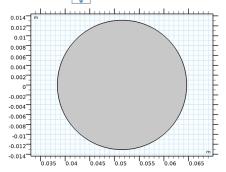


8 Right-click Phases and choose Duplicate.

#### Screens

- I In the Model Builder window, under Component I (compl)>Geometry I click Phases I (c2).
- 2 In the Settings window for Circle, type Screens in the Label text field.
- **3** Locate the **Object Type** section. From the **Type** list, choose **Curve**.
- 4 Locate the Size and Shape section. In the Radius text field, type Dins/2+Tpbs.
- **5** Click to expand the **Layers** section. In the table, enter the following settings:

Layer name	Thickness (m)	
Layer 1	Tpbs	


- 6 Click **Build Selected.**
- Zoom Extents button in the Graphics toolbar.

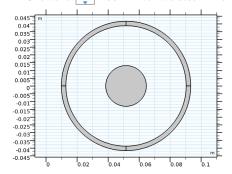


Next, create rotated copies of the phase and screen. Unify the objects in order to remove unnecessary interior boundaries.

Rotate I (rot1)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 Click in the **Graphics** window and then press Ctrl+A to select both objects.

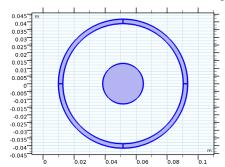


- 3 In the Settings window for Rotate, locate the Rotation section.
- 4 In the Angle text field, type O[deg], 120[deg], 240[deg].
- 5 Click | Build Selected.
- 6 Click the **Zoom Extents** button in the **Graphics** toolbar.

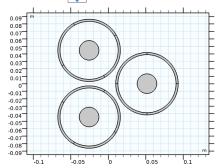


Union I (uni I)

I In the Geometry toolbar, click Booleans and Partitions and choose Union.

2 Click in the **Graphics** window and then press Ctrl+A to select all objects.

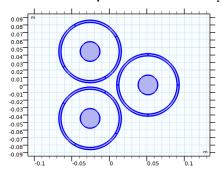

- 3 In the Settings window for Union, locate the Union section.
- 4 Clear the Keep interior boundaries check box.
- 5 Click | Build Selected.

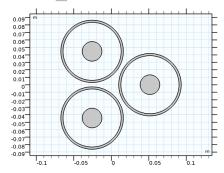


Note this is just one of many different ways to get to this result. The rings for example, could alternatively have been made by adding circles of radius Dins/2+Tpbs, and subtracting from those, circles of radius Dins/2 (again, using Booleans and Partitions).

For the armor, there should be an *integer amount* of wires in the cable's circumference. This number, Narm, is stored as a parameter. Use the **Rotate** transform and the range() operator, to distribute the wires equally in the interval [0,360] degrees.

## Cable Armor


- I In the Geometry toolbar, click ( ) Circle.
- 2 In the Settings window for Circle, type Cable Armor in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type Tarm/2.
- 4 Locate the **Position** section. In the x text field, type Darm/2.
- 5 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.

6 Click | Build Selected.

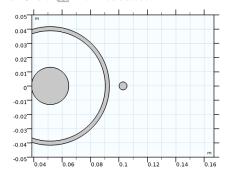


Rotate 2 (rot2)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 In the Settings window for Rotate, locate the Input section.
- 3 From the Input objects list, choose Cable Armor.

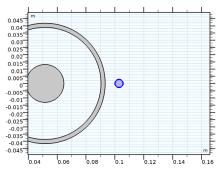


- 4 In the Settings window for Rotate, locate the Rotation section.
- 5 In the Angle text field, type 360[deg]\*range(1/Narm,1/Narm,1).
- 6 Click Pauld Selected.

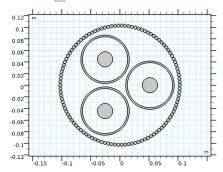

Finally, add some circles indicating the cable-soil interface and the outer boundary of the modeling domain.

#### Cable Domains

- I In the Geometry toolbar, click Circle.
- 2 In the Settings window for Circle, type Cable Domains in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type Dcab/2.
- 4 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 5 Click | Build Selected.
- **6** Click the **Y Zoom Extents** button in the **Graphics** toolbar.

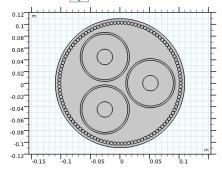

7 Right-click Cable Domains and choose Duplicate.


# Electromagnetic Domains

- I In the Model Builder window, under Component I (compl)>Geometry I click Cable Domains I (c5).
- 2 In the Settings window for Circle, type Electromagnetic Domains in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type 5\*Dcab/2.

#### Form Union (fin)

- I In the Geometry toolbar, click **Build All**.
- 2 Click the **Zoom Extents** button in the **Graphics** toolbar.

3 In the Model Builder window, click Form Union (fin).

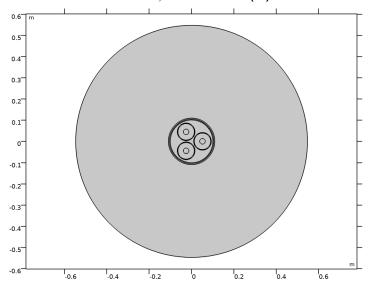

#### DEFINITIONS

For the electromagnetic analysis, the default domain condition is **Free Space**; it models air, or vacuum. You can consider it the empty canvas to draw on. In order to model solid domains, add an Ampère's Law in Solids feature. Start by adding a union selection for the metals.

#### Metals


- I In the **Definitions** toolbar, click **Union**.
- 2 In the Settings window for Union, type Metals in the Label text field.
- 3 Locate the Input Entities section. Under Selections to add, click + Add.
- 4 In the Add dialog box, in the Selections to add list, choose Phases, Screens, and Cable Armor.
- 5 Click OK.

# MAGNETIC FIELDS (MF)

Ampère's Law in Solids I

- I In the Model Builder window, under Component I (compl) right-click Magnetic Fields (mf) and choose Ampère's Law in Solids.
- 2 In the Settings window for Ampère's Law in Solids, locate the Domain Selection section.

- 3 From the Selection list, choose Metals.
- 4 Click the Loom to Selection button in the Graphics toolbar.

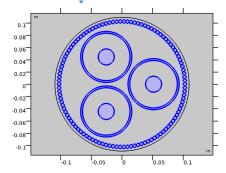

#### DEFINITIONS

The materials are roughly the same as those used in the *Inductive Effects* tutorial. To start with, you can modify the View to show the material colors. Then, the materials will be added, they will be given an appropriate label (if they do not already have it), a selection and an appearance.

## View 1

- I In the Model Builder window, under Component I (compl)>Definitions click View I.
- 2 In the Settings window for View, locate the Colors section.
- 3 Select the Show material color and texture check box.


## ADD MATERIAL

- I In the Home toolbar, click 🙀 Add Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Right-click and choose Add to Component I (compl).
- 5 In the Home toolbar, click **Add Material** to close the Add Material window.

#### MATERIALS

Air (mat1)


I Click the **Toom to Selection** button in the **Graphics** toolbar.

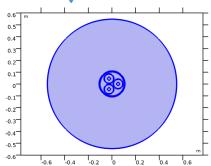

A good approach is to assign the first material to all domains by default. Subsequently, you can override it locally, using additional materials. This ensures every domain has access to material properties.

# Copper

- I In the Model Builder window, right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Copper in the Label text field.
- 3 Locate the Geometric Entity Selection section. From the Selection list, choose Phases.
- 4 Click the **Zoom In** button in the **Graphics** toolbar, twice.

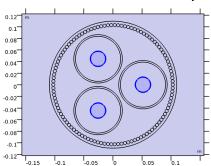


5 Click to expand the Appearance section. From the Material type list, choose Copper.

Lead

- I Right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Lead in the Label text field.


3 Locate the Geometric Entity Selection section. From the Selection list, choose Screens.

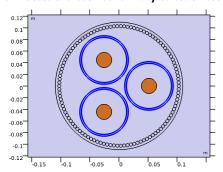

4 Click to expand the Appearance section. From the Material type list, choose Lead.

#### Galvanized steel

- I Right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Galvanized steel in the Label text field.
- 3 Locate the Geometric Entity Selection section. From the Selection list, choose Cable Armor.

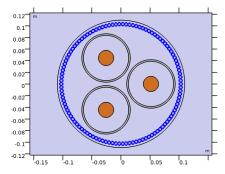

4 Click to expand the Appearance section. From the Material type list, choose Steel.

# MATERIALS

Now, you will see that COMSOL starts detecting missing material properties. The properties that should be added are listed in the following table. Please check all of them for the correct value, even the ones that are already filled in. Note that for cases like this, a convenient option is to copy-paste the values directly from this \*.pdf file to COMSOL. I In the Model Builder window, under Component I (compl)>Materials, add the following material properties:

	Label	mur	sigma [S/m]	epsilonr
matl	Air	1	1e-14[S/m]	1
mat2	Copper	Mcup	Ncon*Scup	1
mat3	Lead	Mpbs	Spbs	1
mat4	Galvanized steel	Marm	Sarm	1

# Modeling Instructions — Solid Bonding

In case of solid bonding, each screen is electrically paired with the same phase across the entire length of the cable. Furthermore, it is bonded and grounded at both ends. The electromotive force (emf) from the main conductors will induce a current in the screens, see section Solid Bonding.

Let us reproduce this behavior. Start by setting the interface label, and the out-of-plane thickness. Then, introduce the coil domains needed for setting the phase currents.


## MAGNETIC FIELDS, SECTION I

- I In the Model Builder window, under Component I (compl) click Magnetic Fields (mf).
- 2 In the Settings window for Magnetic Fields, type Magnetic Fields, Section 1 in the **Label** text field.
- ${f 3}$  Locate the Thickness section. In the d text field, type Lsec1\*Lcab.

#### Phase I

- I In the **Physics** toolbar, click **Domains** and choose **Coil**.
- 2 In the Settings window for Coil, type Phase 1 in the Label text field.

3 Select Domain 51 only.

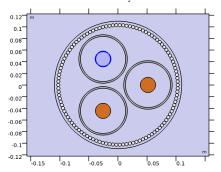

The settings window for the coil feature contains a lot of sections. For many of these, the default settings are sufficient. Collapse them to have a closer look at the important part; the Coil section.


4 Click to collapse the Material Type section, the Coordinate System Selection section, and the Constitutive Relation sections.

Next, proceed by setting the currents.

**5** Locate the **Coil** section. In the  $I_{coil}$  text field, type **IO**.

## Phase 2

- I In the Physics toolbar, click **Domains** and choose **Coil**.
- 2 In the Settings window for Coil, type Phase 2 in the Label text field.
- 3 Select Domain 80 only.

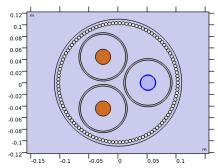


**4** Locate the **Coil** section. In the  $I_{coil}$  text field, type I0\*exp(-120[deg]\*j).

# Phase 3

- I In the Physics toolbar, click **Domains** and choose **Coil**.
- 2 In the Settings window for Coil, type Phase 3 in the Label text field.

3 Select Domain 50 only.

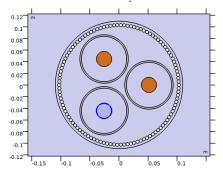

**4** Locate the **Coil** section. In the  $I_{\rm coil}$  text field, type I0\*exp(+120[deg]\*j).

For more details on the coil settings, please have a look at the *Inductive Effects* tutorial. Proceed by specifying the frequency and computing the result. After that, you can finetune the default plot settings to get a better picture of the field.

#### STUDY I

Step 1: Frequency Domain

- I In the Model Builder window, under Study I click Step I: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- 3 In the Frequencies text field, type f0.
- 4 In the Home toolbar, click **Compute**.

#### RESULTS

Surface I

- I In the Model Builder window, expand the Results>Magnetic Flux Density Norm (mf) node, then click Surface 1.
- 2 In the Settings window for Surface, locate the Coloring and Style section.
- 3 Set the Color calibration parameter value to -1.5.


Streamline 1

In the Model Builder window, right-click Streamline I and choose Disable.

#### Contour I

- I In the Model Builder window, click Contour I.
- 2 In the Settings window for Contour, locate the Levels section.
- 3 In the Total levels text field, type 20.


4 In the Magnetic Flux Density Norm (mf) toolbar, click Plot.

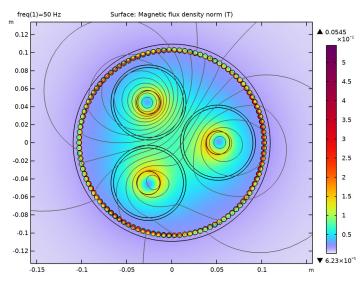

Assuming you have been through the previous tutorial in this series, the Magnetic Flux Density Norm plot should look fairly familiar. We will not modify it further this time (the topic has been treated in detail in the Inductive Effects tutorial). Instead, let us have a look at the corresponding losses.

## Phase Losses

- I In the Results toolbar, click 8.85 More Derived Values and choose Integration> Surface Integration.
- 2 In the Settings window for Surface Integration, type Phase Losses in the Label text field.
- 3 Locate the Selection section. From the Selection list, choose Phases.

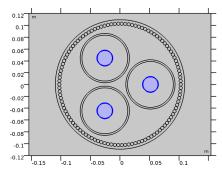


**4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
mf.Qh	W/km	Phase losses (solid bonding)

5 Click **= Evaluate**.

Screen Losses

- I In the Results toolbar, click 8.85 More Derived Values and choose Integration> Surface Integration.
- 2 In the Settings window for Surface Integration, type Screen Losses in the Label text field.
- **3** Locate the **Selection** section. From the **Selection** list, choose **Screens**.

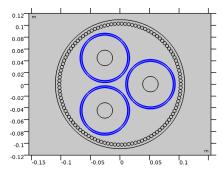

**4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
mf.Qh	W/km	Screen losses (solid bonding)

5 Click **= Evaluate**.

### TABLE 2

I Go to the Table 2 window.

The losses per kilometer should be about 47 kW and 13 kW for the phases and screens respectively.

The resemblance with the results from the *Inductive Effects* tutorial are striking, confronting even. It is a clear sign that many details included in the initial model have been superfluous in the end (for a reflection on this, see section On Accuracy).

At the same time, these results show this is a valid simplification. Feel free to verify these statements. Please be cautious however, when comparing this model to the one from the Inductive Effects tutorial; be aware of the difference between the plain 2D model, the 2.5D model, and the one with the Milliken conductors.

Let us see if the same goes for the lumped parameters:

#### RESULTS

## Phase AC Resistance

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, type Phase AC Resistance in the Label text field.
- **3** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
<pre>(mf.RCoil_1+mf.RCoil_2+ mf.RCoil_3)/(3*Lsec1*Lcab)</pre>	mohm/km	Phase AC resistance (solid bonding)

4 Click **= Evaluate**.

#### Phase Inductance

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, type Phase Inductance in the Label text field.
- **3** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
(mf.LCoil_1+mf.LCoil_2+	mH/km	Phase inductance (solid
mf.LCoil_3)/(3*Lsec1*Lcab)		bonding)

4 Click **= Evaluate**.

#### TABLE 4

I Go to the Table 4 window.

Here too, the resemblance is striking (53 m $\Omega$ /km and 0.42 mH/km). Furthermore, notice these results are symmetric while the detailed plain 2D model in the Inductive Effects tutorial shows a slight but consistent difference between the phases. This effect is caused by the fiber's armor.

As the currents in the screens can flow freely, the losses are comparably high. This leads to a high phase AC resistance. One way to bring down the screen losses, is by means of singlepoint bonding.


In case of single-point bonding, each screen is still paired with a single phase, but this time it is bonded and grounded at one end only. The phase currents will still generate an electromotive force (emf) in the screens, but since there is no closed circuit, no net current will flow (see section Single-Point Bonding).

Let us reproduce this behavior. Introduce the coil domains needed to suppress the screen currents.

# MAGNETIC FIELDS, SECTION I (MF)

#### Screen 1

- I In the Physics toolbar, click **Domains** and choose **Coil**.
- 2 In the Settings window for Coil, type Screen 1 in the Label text field.
- **3** Select Domain 37 only.

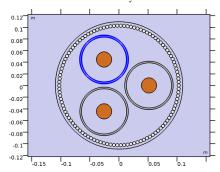


**4** Locate the **Coil** section. In the  $I_{\text{coil}}$  text field, type O[A].

## Screen 2

- I In the Physics toolbar, click **Domains** and choose **Coil**.
- 2 In the Settings window for Coil, type Screen 2 in the Label text field.


3 Select Domain 68 only.

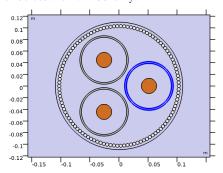

**4** Locate the **Coil** section. In the  $I_{\rm coil}$  text field, type O[A].

#### Screen 3

- I In the Physics toolbar, click **Domains** and choose **Coil**.
- 2 In the Settings window for Coil, type Screen 3 in the Label text field.
- 3 Select Domain 36 only.

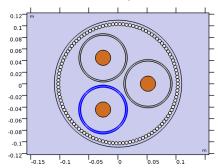

**4** Locate the **Coil** section. In the  $I_{\text{coil}}$  text field, type O[A].

Here, you have used the **Coil** feature to set a zero net current for each screen individually. When solving the model, an out-of-plane voltage will be applied such that the total current per screen is O[A]. This voltage will be equal in magnitude to the one induced by the electromotive force, but opposite in sign. Proceed by computing the results.

#### STUDY I

In the **Home** toolbar, click **Compute**.

Feel free to reevaluate Derived Values>Phase Losses, Screen Losses, Phase AC Resistance, and Phase Inductance.

When doing so, please do not forget to update the descriptions in the expression tables change "Phase losses (solid bonding)" to "Phase losses (single-point bonding)", and so on... Otherwise, distinguishing the results for the various bonding types may be difficult.

#### TABLE

I Go to the **Table** window.

The phase losses and the inductance should go up slightly (to 47 kW/km and 0.43 mH/km), the screen losses should go down significantly (to 2.9 kW/km), and the phase AC resistance should go down as well, to 45 m $\Omega$ /km, approaching the DC value given by Rcon; 34 m $\Omega$ /km.

Now, let us check the voltages induced in the screens, across the length of the cable.

#### RESULTS

Screen Voltage

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, type Screen Voltage in the Label text field.
- **3** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
abs(mf.VCoil_4)	V	Voltage across screen 1 (single-point bonding)
abs(mf.VCoil_5)	V	Voltage across screen 2 (single-point bonding)
abs(mf.VCoil_6)	V	Voltage across screen 3 (single-point bonding)

4 Click **= Evaluate**.

#### TABLE 5

I Go to the Table 5 window.

So the voltage in the screen at the end that is floating, will oscillate with an amplitude of about 473 V. Note that if you remove the abs (...) operator from the expression, you will get three different complex values for screen 1, 2, and 3, each of them having a phase shift of 120° with respect to the other two.

The longer the cable and the stronger the phase current, the higher the induced voltage. As a consequence, single-point bonding is only suitable for limited lengths of cable. Cross bonding is suitable for much longer stretches.

# Modeling Instructions — Cross Bonding

In case of cross bonding, the total length of cable is split in three sections of equal length. From an electrical point of view, the screen is paired with a different phase for each section. Consequently, for a well balanced cable, the total net current induced in the screens will be zero (see section Cross Bonding).

In the *Inductive Effects* tutorial, we suggested modeling cross bonding by putting the three screens in series directly, using a **Coil group**. We will not do that here for two reasons: First of all, one of the main goals of this model is to verify this method, so we need to come up with something that is closer to the actual situation. Secondly, in doing so, we create a model that not only supports three sections of equal length, but sections of arbitrary length.

When verifying, we need sections of equal length though. Start by updating the parameters.

#### **GLOBAL DEFINITIONS**

Geometric Parameters 2

- I In the Model Builder window, under Global Definitions click Geometric Parameters 2.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 In the table, modify the parameters Lsec1 and Lsec3 as follows:

Name	Expression	Description
Lsec1	1/3	Relative length cross bonding section 1
Lsec3	1/3	Relative length cross bonding section 3

Introduce two new Magnetic Fields interfaces (in order to end up with one for each section). Add an **Electrical Circuit** interface to connect the screens according to the cross bonding scheme, as shown in Figure 2.

# ADD PHYSICS

- I In the Home toolbar, click Add Physics to open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select AC/DC>Electromagnetic Fields>Magnetic Fields (mf).

- 4 Click Add to Component I in the window toolbar.
- 5 In the tree, select AC/DC>Electromagnetic Fields>Magnetic Fields (mf).
- **6** Click **Add to Component I** in the window toolbar.
- 7 In the tree, select AC/DC>Electrical Circuit (cir).
- **8** Click **Add to Component I** in the window toolbar.
- 9 In the Home toolbar, click Add Physics to close the Add Physics window.

#### MAGNETIC FIELDS, SECTION 2

- I In the Model Builder window, under Component I (compl) click Magnetic Fields 2 (mf2).
- 2 In the Settings window for Magnetic Fields, type Magnetic Fields, Section 2 in the Label text field.
- **3** Locate the **Thickness** section. In the d text field, type Lsec2\*Lcab.

## MAGNETIC FIELDS, SECTION 3

- I In the Model Builder window, under Component I (compl) click Magnetic Fields 3 (mf3).
- 2 In the Settings window for Magnetic Fields, type Magnetic Fields, Section 3 in the Label text field.
- **3** Locate the **Thickness** section. In the d text field, type Lsec3\*Lcab.

Now that you have introduced one Magnetic Fields interface for each section, you can copypaste the Ampère's Law feature and the Coil features from one section to the other. Start by setting the correct excitation form.

# MAGNETIC FIELDS, SECTION I (MF)

Screen 1

- I In the Model Builder window, under Component I (compl)>Magnetic Fields, Section I (mf) click Screen I.
- 2 In the Settings window for Coil, locate the Coil section.
- **3** From the **Coil excitation** list, choose **Circuit (current)**.

Screen 2, Screen 3

Repeat these steps for Screen 2, and Screen 3.

Ampère's Law in Solids I, Phase I, Phase 2, Phase 3, Screen I, Screen 2, Screen 3

I In the Model Builder window, under Component I (compl)>Magnetic Fields, Section I (mf), Ctrl-click to select Ampère's Law in Solids I, Phase I, Phase 2, Phase 3, Screen I, Screen 2, and Screen 3.

(Apply a multinode selection; 7 nodes in total).

2 Right-click and choose Copy.

# MAGNETIC FIELDS, SECTION 2 (MF2), SECTION 3 (MF3)

- I In the Model Builder window, under Component I (compl) right-click Magnetic Fields, Section 2 (mf2) and choose Paste Multiple Items.
- 2 Repeat these steps for Magnetic Fields, Section 3 (mf3).

# ELECTRICAL CIRCUIT (CIR)

The screens will be connected as depicted in Figure 2. You can build the circuit using this figure as a reference (please browse through the next pages before starting however, as they contain additional advice). The detailed modeling instructions for the first series chain are as follows:

In the Model Builder window, under Component I (compl) click Electrical Circuit (cir).

External I vs. U I (IvsUI)

- I In the Electrical Circuit toolbar, click External I vs. U.
- 2 In the Settings window for External I vs. U, locate the Node Connections section.
- **3** In the table, enter the following settings:

Label	Node names
Р	11
n	0

4 Locate the External Device section. From the V list, choose Coil voltage (mf/coil4).

External I vs. U 2 (IvsU2)

- I In the Electrical Circuit toolbar, click External I vs. U.
- 2 In the Settings window for External I vs. U, locate the Node Connections section.
- **3** In the table, enter the following settings:

Label	Node names
P	12
n	11

4 Locate the External Device section. From the V list, choose Coil voltage (mf2/coil5).

External I vs. U 3 (IvsU3)

- I In the Electrical Circuit toolbar, click External I vs. U.
- 2 In the Settings window for External I vs. U, locate the Node Connections section.
- **3** In the table, enter the following settings:

Label	Node names
P	13
n	12

**4** Locate the **External Device** section. From the V list, choose **Coil voltage (mf3/coil6)**.

Resistor I (RI)

- I In the Electrical Circuit toolbar, click Resistor.
- 2 In the Settings window for Resistor, locate the Node Connections section.
- **3** In the table, enter the following settings:

Label	Node names	
Р	0	
n	13	

**4** Locate the **Device Parameters** section. In the R text field, type 1 [uohm].

This connects the first screen from Section 1, the second screen from Section 2, and the third screen from Section 3, in series.

External I Vs. U 4,5,6,7,8,9, Resistor R2,3

I The rest of the circuit consists of rotated versions of this first series chain, as shown in the following table:

	Chain I	Chain 2	Chain 3
Sec. I	Ivs.U1 (mf/coil4)	Ivs.U4 (mf/coil5)	Ivs.U7 (mf/coil6)
Sec.2	Ivs.U2 (mf2/coil5)	Ivs.U5 (mf2/coil6)	Ivs.U8 (mf2/coil4)
Sec.3	Ivs.U3 (mf3/coil6)	Ivs.U6 (mf3/coil4)	Ivs.U9 (mf3/coil5)

2 You can now complete the electrical circuit. For the sake of clarity (and as a final check), the detailed list of settings is included here:

Feature	р	n	Setting
Ground Node I	0		
External I Vs. U I	11	0	Coil voltage (mf/coil4)
External I Vs. U 2	12	11	Coil voltage (mf2/coil5)
External I Vs. U 3	13	12	Coil voltage (mf3/coil6)
Resistor I	0	13	Resistance 1[uohm]
External I Vs. U 4	21	0	Coil voltage (mf/coil5)
External I Vs. U 5	22	21	Coil voltage (mf2/coil6)
External I Vs. U 6	23	22	Coil voltage (mf3/coil4)
Resistor 2	0	23	Resistance 1[uohm]
External I Vs. U 7	31	0	Coil voltage (mf/coil6)
External I Vs. U 8	32	31	Coil voltage (mf2/coil4)
External I Vs. U 9	33	32	Coil voltage (mf3/coil5)
Resistor 3	0	33	Resistance 1[uohm]

Although their value is small, the resistors serve a crucial purpose. The External I Vs. U feature feeds a current from the circuit into the Coil feature. The coil feature responds with an induced voltage. This voltage in turn, is fed back into the circuit.

From the circuit's viewpoint, the External I Vs. U features behave like ideal voltage sources without any internal resistance. In order to complete the multiphysics coupling, the circuit needs to be able to accept these voltages and respond with a current. For this, it will need some internal resistance (see section Theoretical Basis).

Now that the circuit is ready, it is time to collect the results. Let us compute.

#### STUDY I

I In the Home toolbar, click **Compute**.

Hint: if you get errors like "The DAE is structurally inconsistent", it probably means you have a loose connection. In that case, please check your node numbers (p and n).

#### TABLE

I Go to the **Table** window.

Feel free to reevaluate Derived Values>Phase Losses, Screen Losses, Phase AC Resistance, and **Phase Inductance**. Do not forget to update the descriptions in the tables — change "Phase losses (single-point bonding)" to "Phase losses (cross bonding)", and so on... The resulting figures should be the same as last time and they should be the same for Magnetic Fields 1,2,3. The voltages however, are different now.

#### RESULTS

Screen Voltage

- I In the Settings window for Global Evaluation, locate the Expressions section.
- 2 In the table, update the descriptions. Type Voltage across screen 1,2,3 (cross bonding), that is; replace "single-point bonding" with "cross bonding".
- 3 In the Settings window for Global Evaluation, click **= Evaluate**.

#### TABLE 5

I Go to the **Table 5** window.

The absolute voltage across each screen in one section of the cable, is about 158 V. Since for each series chain the voltage across each section shows a 120° phase shift with respect to the other two, the total voltage drop along the chain will be zero. Apart from some charge current (see the *Bonding Capacitive* tutorial), the total net current in the screens will therefore be zero.

The resulting losses and lumped parameters are the same as those in the *Inductive Effects* tutorial, when putting the screens in series by means of a **Coil group** (thus, validating that approach). You will see the results remain consistent, even if you de-balance the cable.

There is one thing the *Inductive Effects* model cannot do however: Testing dissimilar section lengths. Please feel free to change Lsec1 and Lsec3. Be careful not to set them to zero though, as that would change the number of sections. Furthermore, be careful not to misinterpret lumped quantities for de-balanced cables. For de-balanced cables, a variable like mf.RCoil 1 merely reflects (the real part of) the ratio between the voltage over a phase and the current through that phase. It does not tell you to what degree those voltages and currents (and losses) are caused by the phase itself, or its neighbors.

You have now completed this tutorial; subsequent tutorials will refer to the resulting file as submarine cable 05 bonding inductive.mph. The next tutorial in this series will include a detailed thermal analysis.

- I From the File menu, choose Save As.
- **2** Browse to a suitable folder and type the filename submarine\_cable\_05\_bonding\_inductive.mph.