

Submarine Target Strength

The primary defense of a submarine lies in its capacity to remain hidden during operation. As radio waves are strongly absorbed by sea water, sound navigation ranging, or sonar, is one of the main methods used for the detection of submarines. Designers analyze the way acoustic waves are reflected in order to minimize the equivalent reflecting area of the submarine. The target strength, or TS, is a measure of the area of a sonar target. In most submarines, reduction of the backscatter signal is achieved through the application of absorbing materials to the outer surfaces of the submarine.

This tutorial is based on the BeTTSi benchmark submarine (Benchmark Target Echo Strength Simulation) presented in Ref. 1 and Ref. 2. This benchmark geometry, shown in Figure 1, presents features common in modern submarines without representing any actual submarine class.

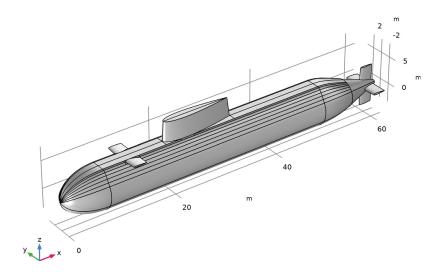


Figure 1: BeTSSi submarine geometry.

This model is acoustically large and takes advantage of the stabilized formulation in the Pressure Acoustic, Boundary Elements interface (BEM). Enabling the stabilized formulation ensures convergence for large models (high frequency or large domains) at the cost of some additional degrees of freedom.

The model uses the **Background Pressure Field** feature to represent a spherical wave emitted from a distance d_source of 1000 m at an angle phi of 330 ° from the bow of the submarine. By the time the waves reach the submarine, they behave locally as plane waves. The Ocean Attenuation material model is used to represent the losses existing in the transmitting media. This attenuation model is based on a semianalytical model with parameters that are based on extensive measurement data. It includes effects due to viscosity in pure water, the relaxation processes of boric acid and magnesium sulfate, as well as depth, temperature, salinity (practical), and pH value.

The absorbing material placed on the hard surfaces is represented through the **Absorption coefficient** option in the **Impedance** boundary condition. The feature adds an impedance given by

$$Z_{\rm i} = \rho_{\rm c} c_{\rm c} \frac{1+R}{1-R} \qquad R = e^{i\phi} \sqrt{1-\alpha_{\rm n}}$$
 (1)

Where ρ_c is the complex density, i is the imaginary unit, ω is the angular frequency, Z_i is the specific acoustic input impedance, c_c is the complex speed of sound, R is the reflection coefficient, ϕ is the phase, and α_n is the normal incidence absorption coefficient. In this case, the impedance will be purely resistive, as ϕ is set to 0.

The target strength, or TS, is computed following Equation 2:

$$TS = 20\log_{10}\left(\frac{p_s}{p_{in}}\frac{d_{listening}}{1 \text{ m}}\right)$$
 (2)

Where p_s is the scattered pressure at the listening point, p_{in} is the background pressure at the submarine and $d_{\text{listening}}$ is the distance from the submarine to the listening point. As we will use d source as the distance to the listening point, this equation has been modified in the variable definition.

Results and Discussion

Figure 2 shows the total acoustic pressure at the submarine surfaces. Note how the pressure waves are almost planar and how the side of the source "not illuminated" shows a significantly lower acoustic pressure. Note also the large number of wavelengths considered in the model, this is an acoustically large model.

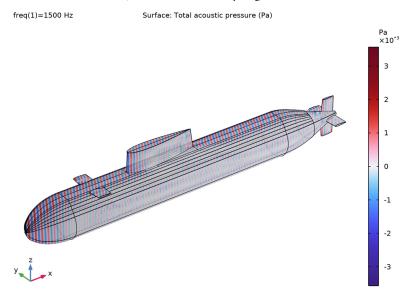


Figure 2: Total acoustic pressure at the submarine.

Figure 3 shows the radiation pattern at 100 m away from the submarine. The direction of propagation of the acoustic signal is marked with an arrow. Note the complex lobes that appear at this frequency and how the scattered signal will greatly depend on the actual position where it is measured.

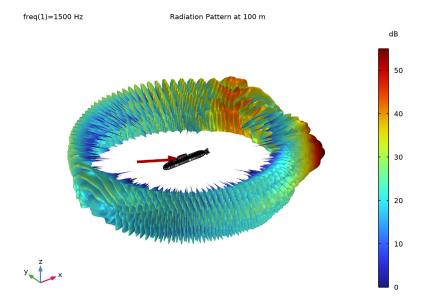


Figure 3: Radiation pattern 100 m away from the submarine.

A section cut of the scattered acoustic pressure through the center of the submarine is shown in Figure 4.

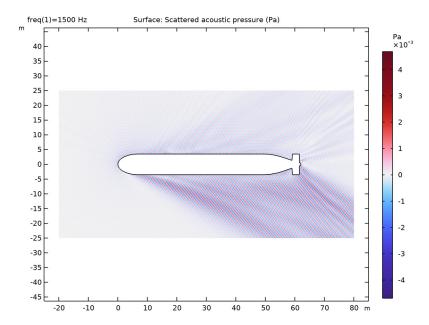


Figure 4: Section cut of the scattered acoustic pressure.

Another way to present this is to plot the scattered sound pressure level in the section, as shown in Figure 5.

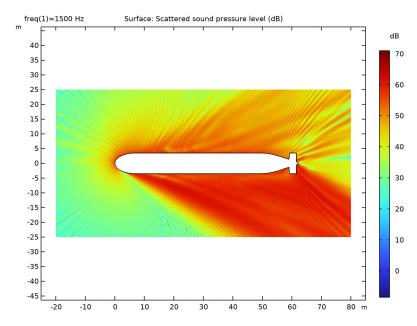


Figure 5: Section cut of the scattered sound pressure level.

Figure 6 shows the sound pressure level polar plot around the submarine, that is, the radiation pattern. Note the peaks right below the submarine and at the reflection angle from the source.

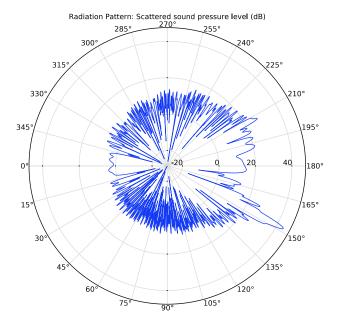


Figure 6: Polar plot of the sound pressure level.

Sonar equipment can be run in passive and active configurations. In a passive sonar, the sensor just reflects the sound emitted by the submarine during its operation, while an active source uses some active method to generate an acoustic signal that will be reflected on the submarine. Active sonar can be used in monostatic configurations, when the source and the listening point coincide, or in bistatic configurations, where the position of the source and the listening point are different. The target strength, as defined in Equation 2, for a bistatic configuration is shown in Figure 7.

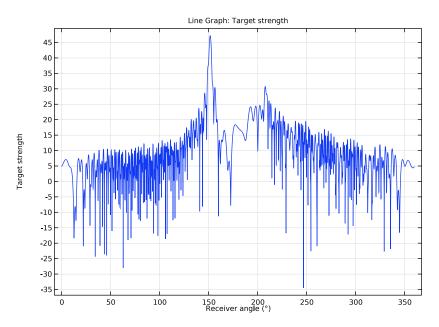


Figure 7: Bistatic target strength of the submarine for a receiver situated at the same distance as the source.

Notes About the COMSOL Implementation

The model uses an MPHBIN-file as the starting geometry. It is possible to generate this geometry using COMSOL functionality. The instructions to do so are covered in the Appendix — Geometry Modeling Instructions. Due to the complexity of the geometry and the use of **Cap Face** operations, the generation of the geometry requires the *CAD Import Module* and the *Design Module*. The steps and operations for building the geometry include some geometry information like parameters, coordinates, and curve parameterizations, found in Appendix C of Ref. 2. The steps for building the geometry, using the COMSOL Geometry operations, do differ in some aspects from those in Ref. 2.

References

1. B. Nolte, I. Schäfer, C. de Jong, and L. Gilroy, "BeTSSi II benchmark on target strength simulation," *Proceedings of Forum Acusticum*, 2014.

2. J.V. Venås and T. Kvamsdal, "Isogeometric boundary element method for acoustic scattering by a submarine," Comp. Meth. Appl. Mech. Eng., vol. 359, p. 112670, 2020, https://doi.org/10.1016/j.cma.2019.112670.

Application Library path: Acoustics_Module/Underwater_Acoustics/ submarine_target_strength

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Acoustics>Pressure Acoustics>Pressure Acoustics, Boundary Elements (pabe).
- 3 Click Add.
- 4 Click 🔁 Study.
- 5 In the Select Study tree, select General Studies>Frequency Domain.
- 6 Click M Done.

GEOMETRY I

The model uses an external file with the geometry. Importing this geometry requires the CAD Import Module and changing to the CAD kernel geometry representation (if it is not already the default setting).

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Advanced section.
- 3 From the Geometry representation list, choose CAD kernel.

Import I (impl)

- I In the **Home** toolbar, click **Import**.
- 2 In the Settings window for Import, locate the Import section.
- 3 From the Source list, choose COMSOL Multiphysics file.

- 4 Click Browse.
- 5 Browse to the model's Application Libraries folder and double-click the file submarine target strength.mphbin.
- 6 Click Import.

The geometry should look like Figure 1.

Rename the parameter group and import the parameters from a file.

GLOBAL DEFINITIONS

Model Parameters

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, type Model Parameters in the Label text field.
- 3 Locate the Parameters section. Click **Load from File**.
- **4** Browse to the model's Application Libraries folder and double-click the file submarine target strength parameters.txt.

The average operator is used to obtain the average incoming pressure over the submarine.

DEFINITIONS

Average I (aveop1)

- I In the Definitions toolbar, click Monlocal Couplings and choose Average.
- 2 In the Settings window for Average, locate the Source Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.

Add new variables that will be used in the postprocessing.

Variables 1

- I In the Model Builder window, right-click Definitions and choose Variables.
- 2 In the Settings window for Variables, locate the Variables section.
- **3** In the table, enter the following settings:

Name	Expression	Unit	Description
TS	20*log10((abs(pabe.p_s)/p_in)* d_source/1[m])		Target strength
p_in	aveop1(abs(pabe.p_b))	Pa	Incoming pressure

ADD MATERIAL

- I In the Home toolbar, click Radd Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Water, liquid.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click **‡ Add Material** to close the **Add Material** window.

MATERIALS

Water, liquid (mat I)

- I In the Settings window for Material, locate the Geometric Entity Selection section.
- 2 From the Selection list, choose All voids.

PRESSURE ACOUSTICS, BOUNDARY ELEMENTS (PABE)

- I In the Model Builder window, under Component I (compl) click Pressure Acoustics, Boundary Elements (pabe).
- 2 In the Settings window for Pressure Acoustics, Boundary Elements, locate the **Domain Selection** section.
- 3 From the Selection list, choose All voids.
- 4 Locate the Sound Pressure Level Settings section. From the Reference pressure for the sound pressure level list, choose Use reference pressure for water.

This model is very large compared to the wavelength. Use the stabilized formulation in the Pressure Acoustics, Boundary Elements physics. This will ensure the convergence of the iterative solver. Without stabilization, the iterative solver will not converge above about 800 Hz, and will require a very large number of iterations as the excitation approaches this frequency.

- 5 Click the Show More Options button in the Model Builder toolbar.
- 6 In the Show More Options dialog box, select Physics>Stabilization in the tree.
- 7 In the tree, select the check box for the node Physics>Stabilization.
- 8 Click OK.
- 9 In the Settings window for Pressure Acoustics, Boundary Elements, click to expand the Stabilization section.
- 10 Select the Stabilized formulation check box.

Turn on the ocean attenuation model which is specially relevant at high frequencies.

Pressure Acoustics 1

- I In the Model Builder window, under Component I (compl)>Pressure Acoustics, Boundary Elements (pabe) click Pressure Acoustics 1.
- 2 In the Settings window for Pressure Acoustics, locate the Pressure Acoustics Model section.
- 3 From the Fluid model list, choose Ocean attenuation.
- **4** Locate the **Model Input** section. In the D text field, type depth.

Background Pressure Field I

I In the Physics toolbar, click **Domains** and choose Background Pressure Field. The background field is generated by a source at a distance given by the d_source parameter. By the time the spherical waves have reached the target, they locally behave as plane waves.

- 2 In the Settings window for Background Pressure Field, locate the **Background Pressure Field** section.
- 3 From the Pressure field type list, choose Spherical wave.
- **4** In the p_0 text field, type p_ref.
- **5** Specify the \mathbf{x}_0 vector as

-d_source*cos(phi)	х
-d_source*sin(phi)	у
0	z

Impedance I

I In the Physics toolbar, click **Boundaries** and choose Impedance.

The submarine uses some anechoic coating to reduce the scattered signal. This absorption coefficient could be specified as frequently dependent, but in this cases it takes the value of the alpha_n parameter.

- 2 In the Settings window for Impedance, locate the Boundary Selection section.
- 3 From the Selection list, choose All boundaries.
- 4 Locate the Impedance section. From the Impedance model list, choose Absorption coefficient.
- **5** In the α_n text field, type alpha_n.

In this model, the mesh is set up manually. Proceed by directly adding the desired mesh component.

MESH I

Mabbed I

I In the Mesh toolbar, click More Generators and choose Mapped.

To reduce the computation cost, it is advisable to use a mapped mesh when possible.

2 Select Boundaries 19–36, 41–44, 49–52, 55, 56, 59–61, 64–66, and 91–98 only.

Distribution I

I Right-click Mapped I and choose Distribution.

As the scattering characteristics are largely influenced by the sail, rudder and bow plane, create a finer mesh around the leading edge of these surfaces.

- **2** Select Edges 67, 70, 73–76, 102, and 103 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 20.
- 6 In the Element ratio text field, type 4.
- 7 Select the Reverse direction check box.

Distribution 2

- I In the Model Builder window, right-click Mapped I and choose Distribution.
- **2** Select Edges 105 and 107 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 65.
- 6 In the Element ratio text field, type 3.

Distribution 3

- I Right-click Mapped I and choose Distribution.
- **2** Select Edges 194, 195, 197, 198, 200, 201, 203–207, 209–211, 213, and 214 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 20.
- 6 In the Element ratio text field, type 4.

Distribution 4

I Right-click Mapped I and choose Distribution.

- 2 Select Edges 81 and 83 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- **4** In the **Number of elements** text field, type 2.

Size


- I In the Model Builder window, under Component I (compl)>Mesh I click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- **3** Click the **Custom** button.
- 4 Locate the Element Size Parameters section. In the Maximum element size text field, type lam0/4.
- 5 In the Minimum element size text field, type 50 [mm].

Free Triangular 1

- I In the Mesh toolbar, click \times More Generators and choose Free Triangular.
- 2 In the Settings window for Free Triangular, locate the Boundary Selection section.
- 3 From the Geometric entity level list, choose Remaining.
- 4 Click to expand the Tessellation section. From the Method list, choose Advancing front.
- 5 Click **Build All**.

The mesh should look like this.

6 In the Model Builder window, click Mesh 1.

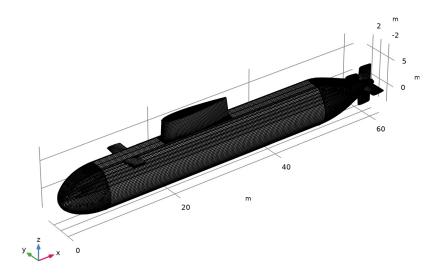

STUDY I

Step 1: Frequency Domain

- I In the Model Builder window, under Study I click Step I: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- 3 In the Frequencies text field, type f_max. The plots will be generated manually.
- 4 In the Model Builder window, click Study 1.
- 5 In the Settings window for Study, locate the Study Settings section.
- 6 Clear the Generate default plots check box.

The analysis should take approximately 25 minutes and require 45 GB of RAM. If the computer does not have enough RAM, the running time will be longer as COMSOL will rely on virtual memory.

7 In the Home toolbar, click **Compute**.

RESULTS

I In the Model Builder window, click Results.

- 2 In the Settings window for Results, locate the Update of Results section.
- 3 Select the Only plot when requested check box.
- 4 Select the Recompute all plot data after solving check box.
- 5 Locate the Save Data in the Model section. From the Save plot data list, choose On.

Grid 3D I

- I In the Model Builder window, expand the Results node.
- 2 Right-click Results>Datasets and choose More 3D Datasets>Grid 3D. This grid will be used to evaluate the solution in the infinite domain surrounding the submarine.
- 3 In the Settings window for Grid 3D, locate the Parameter Bounds section.
- 4 Find the First parameter subsection. In the Minimum text field, type -20.
- 5 In the Maximum text field, type 80.
- 6 Find the Second parameter subsection. In the Minimum text field, type -25.
- 7 In the Maximum text field, type 25.
- 8 Find the Third parameter subsection. In the Minimum text field, type -0.1.
- 9 In the Maximum text field, type 0.1.
- 10 Click to expand the Grid section. In the x resolution text field, type 500.
- II In the y resolution text field, type 250.
- 12 In the z resolution text field, type 3.

Cut Plane 1

- I In the Results toolbar, click Cut Plane.
- 2 In the Settings window for Cut Plane, locate the Plane Data section.
- 3 From the Plane list, choose XY-planes.

Cut Plane 2

- I In the Results toolbar, click Cut Plane.
- 2 In the Settings window for Cut Plane, locate the Data section.
- 3 From the Dataset list, choose Grid 3D 1.
- 4 Locate the Plane Data section. From the Plane list, choose xy-planes.

Parameterized Curve 3D I

- I In the Results toolbar, click More Datasets and choose Parameterized Curve 3D. This parametric curve is a circle around the submarine at a distance taken from the d source parameter.
- 2 In the Settings window for Parameterized Curve 3D, locate the Parameter section.
- 3 In the Maximum text field, type 2*pi.
- 4 Locate the Expressions section. In the x text field, type -d source*cos(s).
- 5 In the y text field, type -d source*sin(s).
- 6 Select the Only evaluate globally defined expressions check box.
- 7 Click to expand the **Resolution** section. In the **Resolution** text field, type 10000.
- 8 Click Told Plot.
- **9** Click the **Zoom Extents** button in the **Graphics** toolbar.

Total Pressure, Boundaries

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, type Total Pressure, Boundaries in the Label text field.
- **3** Locate the **Color Legend** section. Select the **Show units** check box.

Surface 1

- I Right-click Total Pressure, Boundaries and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type pabe.p_t_bnd.
- 4 Locate the Coloring and Style section. Click Change Color Table.
- 5 In the Color Table dialog box, select Wave>Wave in the tree.
- 6 Click OK.
- 7 In the Settings window for Surface, locate the Coloring and Style section.
- 8 From the Scale list, choose Linear symmetric.
- 9 Click to expand the Quality section. From the Resolution list, choose Extra fine.
- **10** Click the **Show Grid** button in the **Graphics** toolbar.
- II In the Total Pressure, Boundaries toolbar, click Plot.
- 12 Click the **Zoom Extents** button in the **Graphics** toolbar.

The plot should look like Figure 2.

Total Pressure, Boundaries

In the Model Builder window, right-click Total Pressure, Boundaries and choose Duplicate.

Radiation Pattern at 100 m

- I In the Model Builder window, expand the Results>Total Pressure, Boundaries I node, then click Total Pressure, Boundaries 1.
- 2 In the Settings window for 3D Plot Group, type Radiation Pattern at 100 m in the **Label** text field.
- 3 Locate the Plot Settings section. From the View list, choose New view.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **Label**.

Surface 1

- I In the Model Builder window, click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type **0**.
- **4** Click the Show Grid button in the Graphics toolbar.
- **5** Click to expand the **Title** section. From the **Title type** list, choose **None**.

Material Appearance 1

- I Right-click Surface I and choose Material Appearance.
- 2 In the Settings window for Material Appearance, locate the Appearance section.
- 3 From the Appearance list, choose Custom.
- 4 From the Material type list, choose Carbon (forged).
- 5 In the Radiation Pattern at 100 m toolbar, click Plot.

Radiation Pattern at 100 m

In the Model Builder window, under Results click Radiation Pattern at 100 m.

Radiation Pattern 1

- I In the Radiation Pattern at 100 m toolbar, click More Plots and choose Radiation Pattern
- 2 In the Settings window for Radiation Pattern, locate the Expression section.
- 3 In the Expression text field, type 100[m]+pabe.Lp s[m].
- 4 Select the **Description** check box. In the associated text field, type **Scattered** sound pressure level at 100[m].
- **5** Clear the **Use as color expression** check box.
- 6 Locate the Color section. In the Expression text field, type pabe. Lp s.

- 7 Click to expand the Range section. Select the Manual color range check box.
- **8** In the **Minimum** text field, type 0.
- **9** In the **Maximum** text field, type 55.
- 10 Locate the Evaluation section. Find the Angles subsection. In the Number of elevation angles text field, type 120.
- II In the Number of azimuth angles text field, type 1440.
- 12 From the Restriction list, choose Manual.
- **I3** In the θ start text field, type 75.
- **14** In the θ range text field, type 30.
- 15 Find the Sphere subsection. From the Sphere list, choose Manual.
- 16 In the X text field, type 28[m].
- 17 In the Radius text field, type 100[m].
- 18 In the Radiation Pattern at 100 m toolbar, click Plot.

Arrow Surface 1

- I Right-click Radiation Pattern at 100 m and choose Arrow Surface.
- 2 In the Settings window for Arrow Surface, locate the Expression section.
- 3 In the X-component text field, type cos(phi).
- **4** In the **Y-component** text field, type sin(phi).
- **5** In the **Z-component** text field, type **0**.
- 6 Click to expand the Title section. From the Title type list, choose None.
- 7 Locate the Arrow Positioning section. From the Placement list, choose Uniform anisotropic.
- 8 In the Number of arrows text field, type 1.
- 9 In the X weight text field, type 0.1.
- 10 Locate the Coloring and Style section. From the Arrow base list, choose Head.
- II Select the Scale factor check box. In the associated text field, type 50.

Selection 1

- I Right-click Arrow Surface I and choose Selection.
- 2 Select Boundary 36 only.

4 Click the **Zoom Extents** button in the **Graphics** toolbar.

The plot should look like Figure 3.

Scattered Pressure at z = 0

- I In the Home toolbar, click <a>Image Add Plot Group and choose 2D Plot Group.
- 2 In the Settings window for 2D Plot Group, type Scattered Pressure at z = 0 in the Label text field.
- **3** Locate the **Color Legend** section. Select the **Show units** check box.

Surface 1

- I Right-click Scattered Pressure at z = 0 and choose Surface.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Dataset list, choose Cut Plane 2.
- 4 Locate the Expression section. In the Expression text field, type pabe.p s.
- 5 Locate the Coloring and Style section. Click Change Color Table.
- 6 In the Color Table dialog box, select Wave>Wave in the tree.
- 7 Click OK.
- 8 In the Settings window for Surface, locate the Coloring and Style section.
- **9** From the Scale list, choose Linear symmetric.
- 10 In the Scattered Pressure at z = 0 toolbar, click Plot.
- II Click the **Zoom Extents** button in the **Graphics** toolbar.

The plot should look like Figure 4.

Scattered Pressure at z = 0

In the Model Builder window, right-click Scattered Pressure at z = 0 and choose Duplicate.

Scattered Sound Pressure Level at z = 0

- I In the Model Builder window, expand the Results>Scattered Pressure at z = 0.1 node, then click Scattered Pressure at z = 0.1.
- 2 In the Settings window for 2D Plot Group, type Scattered Sound Pressure Level at z = 0 in the **Label** text field.

Surface 1

- I In the Model Builder window, click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type pabe.Lp_s.

- 4 Locate the Coloring and Style section. Click Change Color Table.
- 5 In the Color Table dialog box, select Rainbow>Rainbow in the tree.
- 6 Click OK.
- 7 In the Settings window for Surface, locate the Coloring and Style section.
- 8 From the Scale list, choose Linear.
- 9 In the Scattered Sound Pressure Level at z = 0 toolbar, click Plot. The plot should look like Figure 5.

Radiation Pattern - Scattered Sound Pressure Level


- I In the Home toolbar, click Add Plot Group and choose Polar Plot Group.
- 2 In the Settings window for Polar Plot Group, type Radiation Pattern Scattered Sound Pressure Level in the Label text field.
- 3 Locate the Axis section. From the Zero angle list, choose Left.

Radiation Pattern I

- I In the Radiation Pattern Scattered Sound Pressure Level toolbar, click \to More Plots and choose Radiation Pattern.
- 2 In the Settings window for Radiation Pattern, locate the Expression section.
- 3 In the Expression text field, type pabe. Lp s.
- 4 Locate the Evaluation section. Find the Angles subsection. In the Number of angles text field, type 5000.
- 5 Find the Evaluation distance subsection. In the Radius text field, type d source.
- 6 Find the Reference direction subsection. In the x text field, type -1.
- 7 Click Preview Evaluation Plane.

8 Click the **Zoom Extents** button in the **Graphics** toolbar.

The plot should look like this.

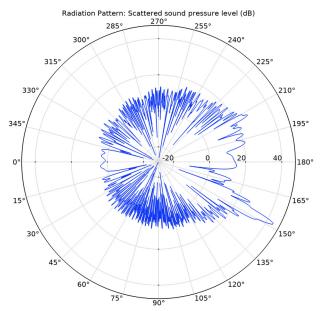

9 In the Radiation Pattern - Scattered Sound Pressure Level toolbar, click Plot.

The plot should look like Figure 6.

Bistatic Target Strength

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Bistatic Target Strength in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Parameterized Curve 3D 1.

Line Graph 1

- I Right-click Bistatic Target Strength and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type TS.
- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 5 In the Expression text field, type s[rad].
- **6** From the **Unit** list, choose °.

- 7 Select the **Description** check box. In the associated text field, type Receiver angle.
- 8 In the Bistatic Target Strength toolbar, click Plot.

The plot should look like Figure 7.

Appendix — Geometry Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 Click M Done.

GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Advanced section.
- 3 From the Geometry representation list, choose CAD kernel.

GLOBAL DEFINITIONS

Geometry Parameters

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file submarine_target_strength_geom_sequence_parameters.txt.
- 5 In the Label text field, type Geometry Parameters.

GEOMETRY I

Work Plane I (wpl)

In the Geometry toolbar, click Work Plane.

Work Plane I (wp I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wb I)>Ellipse I (e I)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- **3** From the **Type** list, choose **Curve**.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type b.
- 5 In the **b-semiaxis** text field, type a.
- 6 In the Sector angle text field, type 90.
- 7 Locate the **Position** section. In the **xw** text field, type a.
- 8 Locate the Rotation Angle section. In the Rotation text field, type 90.
- 9 Click Pauld Selected.

Work Plane I (wpl)>Line Segment I (Isl)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 On the object el, select Point 1 only.
- 3 In the Settings window for Line Segment, locate the Endpoint section.
- 4 From the Specify list, choose Coordinates.
- 5 In the xw text field, type a+L.
- 6 In the yw text field, type b.
- 7 Click Pauld Selected.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar.

Work Plane I (wbl)>Circle I (cl)

- I In the Work Plane toolbar, click (Circle.
- 2 In the Settings window for Circle, locate the Object Type section.
- **3** From the **Type** list, choose **Curve**.
- 4 Locate the Size and Shape section. In the Radius text field, type g2/sin(alpha).
- 5 In the Sector angle text field, type alpha.
- 6 Locate the **Position** section. In the xw text field, type a+L.
- 7 In the yw text field, type b-g2/sin(alpha).
- 8 Locate the Rotation Angle section. In the Rotation text field, type 90-alpha.
- 9 Click | Build Selected.

Work Plane I (wp I)>Line Segment 2 (Is2)

I In the Work Plane toolbar, click * More Primitives and choose Line Segment.

- 2 On the object c1, select Point 1 only.
- 3 In the Settings window for Line Segment, locate the Endpoint section.
- **4** From the **Specify** list, choose **Coordinates**.
- 5 In the xw text field, type a+L+g2+g3.
- 6 In the yw text field, type (b-(1-cos(alpha))*g2/sin(alpha))-g3*tan(alpha).
- 7 Click **Build Selected**.
- 8 Click the Zoom Extents button in the Graphics toolbar.

Work Plane I (wpl)>Delete Entities I (dell)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object c1, select Boundaries 2 and 3 only.
- **3** On the object **e1**, select Boundaries 2 and 3 only.
- 4 In the Work Plane toolbar, click Build All.

Revolve I (rev I)

- I In the Model Builder window, under Component I (compl)>Geometry I right-click Work Plane I (wpl) and choose Revolve.
- 2 In the Settings window for Revolve, locate the Revolution Angles section.
- 3 Click the Angles button.
- 4 In the Start angle text field, type 60[deg].
- 5 In the End angle text field, type 180[deg].
- 6 Locate the Revolution Axis section. Find the Direction of revolution axis subsection. In the xw text field, type 1.
- 7 In the yw text field, type 0.
- 8 Click | Build Selected.

Work Plane 2 (wb2)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose zy-plane.
- 4 In the x-coordinate text field, type a.
- 5 Click **Parity** Build Selected.

Work Plane 2 (wp2)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 2 (wp2)>Polygon I (poll)

- I In the Work Plane toolbar, click / Polygon.
- 2 In the Settings window for Polygon, locate the Object Type section.
- **3** From the **Type** list, choose **Open curve**.
- **4** Locate the **Coordinates** section. In the table, enter the following settings:

xw (m)	yw (m)
0	c_deck
s_deck	c_deck
-(-sin(theta)*b+ s_deck)/6+s_deck	<pre>c_deck-(p_a*((-sin(theta)*b+s_deck)/6)^3+p_b* ((-sin(theta)*b+s_deck)/6)^2)</pre>
-(-sin(theta)*b+	c_deck-(p_a*((-sin(theta)*b+s_deck)*2/6)^3+
s_deck)*2/6+s_deck	p_b*((-sin(theta)*b+s_deck)*2/6)^2)
-(-sin(theta)*b+	c_deck-(p_a*((-sin(theta)*b+s_deck)*3/6)^3+
1.2[m])*3/6+s_deck	p_b*((-sin(theta)*b+s_deck)*3/6)^2)
-(-sin(theta)*b+	c_deck-(p_a*((-sin(theta)*b+s_deck)*4/6)^3+
1.2[m])*4/6+s_deck	p_b*((-sin(theta)*b+s_deck)*4/6)^2)
-(-sin(theta)*b+	c_deck-(p_a*((-sin(theta)*b+s_deck)*5/6)^3+
1.2[m])*5/6+s_deck	p_b*((-sin(theta)*b+s_deck)*5/6)^2)
-(-sin(theta)*b+	c_deck-(p_a*((-sin(theta)*b+s_deck)*6/6)^3+
1.2[m])*6/6+s_deck	p_b*((-sin(theta)*b+s_deck)*6/6)^2)

- 5 Click | Build Selected.
- 6 Click the **Zoom Extents** button in the **Graphics** toolbar.

Extrude | (extl)

- I In the Model Builder window, under Component I (compl)>Geometry I right-click Work Plane 2 (wp2) and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (m)	
L	

- 4 Select the Reverse direction check box.
- 5 Click | Build Selected.

Work Plane 3 (wp3)

I In the Geometry toolbar, click Swork Plane.

- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Coordinates.
- 4 In row Point 3, set y to cos (theta).
- 5 In row Point 3, set z to sin(theta).

Work Plane 3 (wp3)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 3 (wp3)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L+g2.
- 5 In the yw text field, type (b-(1-cos(alpha))*g2/sin(alpha)).
- **6** Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 7 In the xw text field, type a+L+g2+g3.
- 8 In the yw text field, type (b-(1-cos(alpha))*g2/sin(alpha))-g3*tan(alpha).
- 9 Click | Build Selected.

Revolve 2 (rev2)

- I In the Model Builder window, under Component I (compl)>Geometry I right-click Work Plane 3 (wp3) and choose Revolve.
- 2 In the Settings window for Revolve, locate the Revolution Angles section.
- 3 Click the Angles button.
- 4 In the End angle text field, type -60.
- 5 Locate the Revolution Axis section. Find the Direction of revolution axis subsection. In the **xw** text field, type 1.
- 6 In the yw text field, type 0.
- 7 Click **P** Build Selected.

Work Plane 4 (wb4)

- I In the Geometry toolbar, click 🕌 Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Coordinates.
- 4 In row Point 3, set x to 7.

- 5 In row Point 3, set y to c deck.
- 6 In row Point 3, set z to s deck.
- 7 Click | Build Selected.

Work Plane 4 (wb4)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 4 (wb4)>Ellipse 1 (e1)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- 3 From the Type list, choose Curve.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type sqrt(c_deck^2+s_deck^2).
- 6 In the Sector angle text field, type 180.
- 7 Locate the **Position** section. In the xw text field, type a.
- 8 Click | Build Selected.

Work Plane 4 (wp4)>Interpolation Curve I (ic1)

- I In the Work Plane toolbar, click ** More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.
- **3** In the table, enter the following settings:

xw (m)	yw (m)
a+L-0.1[m]	sqrt(c_deck^2+s_deck^2)
a+L	sqrt(c_deck^2+s_deck^2)
a+L+g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+g2+0.1[m]	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click **Build Selected**.

Work Plane 4 (wb4)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L.

- 7 In the yw text field, type c deck+s deck.
- 8 Click Pauld Selected.

Work Plane 4 (wp4)>Line Segment 2 (ls2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L+g2.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c_deck+s deck.
- 8 Click **Parity** Build Selected.

Work Plane 4 (wb4)>Union 1 (unil)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click Pauld Selected.

Work Plane 4 (wb4)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click | Build Selected.

Work Plane 4 (wp4)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 4 (wp4).
- 2 In the Settings window for Work Plane, click **Build Selected**.

Work Plane 5 (wb5)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Coordinates.
- 4 In row Point 3, set x to 7.
- 5 In row Point 3, set y to c_deck-(p_a*((-sin(theta)*b+s_deck)/6)^3+p_b*(($sin(theta)*b+s deck)/6)^2$.
- 6 In row Point 3, set z to -(-sin(theta)*b+s deck)/6+s deck.

7 Click | Build Selected.

Work Plane 5 (wp5)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 5 (wp5)>Ellipse 1 (e1)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- 3 From the Type list, choose Curve.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type sqrt((c_deck-(p_a*((-sin(theta)*b+s_deck)/ 6) ^3+p b*((-sin(theta)*b+s deck)/6) 2)) $^2+(-(-sin(theta)*b+s deck)/$ 6+s deck)^2).
- 6 In the Sector angle text field, type 180.
- 7 Locate the **Position** section. In the xw text field, type a.
- 8 Click | Build Selected.

Work Plane 5 (wp5)>Interpolation Curve I (ic1)

- I In the Work Plane toolbar, click * More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.
- **3** In the table, enter the following settings:

xw (m)	yw (m)
a+L- 0.1[m]	
a+L	
a+L+ g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+ g2+ 0.1[m]	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click | Build Selected.

Work Plane 5 (wp5)>Line Segment 1 (ls1)

I In the Work Plane toolbar, click * More Primitives and choose Line Segment.

- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L.
- 7 In the yw text field, type c deck+s deck.
- 8 Click | Build Selected.

Work Plane 5 (wp5)>Line Segment 2 (ls2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- **3** From the **Specify** list, choose **Coordinates**.
- 4 In the xw text field, type a+L+g2.
- **5** Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c deck+s deck.
- 8 Click | Build Selected.

Work Plane 5 (wb5)>Union 1 (uni1)

- I In the Work Plane toolbar, click Pooleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click **Build Selected**.

Work Plane 5 (wp5)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click | Build Selected.

Work Plane 5 (wb5)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 5 (wp5).
- 2 In the Settings window for Work Plane, click | Build Selected.

Work Plane 6 (wb6)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.

- 3 From the Plane type list, choose Coordinates.
- **4** In row **Point 3**, set **x** to 7.
- 5 In row Point 3, set y to c deck-(p a*((-sin(theta)*b+s deck)*2/6)^3+p b*(($sin(theta)*b+s_deck)*2/6)^2$.
- 6 In row Point 3, set z to -(-sin(theta)*b+s_deck)*2/6+s_deck.
- 7 Click | Build Selected.

Work Plane 6 (wb6)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 6 (wp6)>Ellipse I (el)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- **3** From the **Type** list, choose **Curve**.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type sqrt((c_deck-(p_a*((-sin(theta)*b+s_deck)* 2/6) $^3+p_b*((-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6)^2)$ s deck)*2/6+s deck)^2).
- 6 In the Sector angle text field, type 180.
- 7 Locate the **Position** section. In the **xw** text field, type **a**.
- 8 Click | Build Selected.

Work Plane 6 (wp6)>Interpolation Curve I (ic1)

- I In the Work Plane toolbar, click * More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.
- **3** In the table, enter the following settings:

xw (m)	yw (m)
a+L- 0.1[m]	
a+L	<pre>sqrt((c_deck-(p_a*((-sin(theta)*b+s_deck)*2/6)^3+p_b*((- sin(theta)*b+s_deck)*2/6)^2))^2+(-(-sin(theta)*b+s_deck)*2/6+ s_deck)^2)</pre>

xw (m)	yw (m)
a+L+ g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+ g2+ 0.1[m]	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click | Build Selected.

Work Plane 6 (wp6)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L.
- 7 In the yw text field, type c_deck+s_deck.
- 8 Click **Parity** Build Selected.

Work Plane 6 (wp6)>Line Segment 2 (Is2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L+g2.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c_deck+s_deck.
- 8 Click **Build Selected**.

Work Plane 6 (wp6)>Union I (unil)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- 2 Click the **Select All** button in the **Graphics** toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 6 (wp6)>Delete Entities 1 (del1)

I Right-click Plane Geometry and choose Delete Entities.

- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click | Build Selected.

Work Plane 6 (wb6)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 6 (wp6).
- 2 In the Settings window for Work Plane, click **Build Selected**.

Work Plane 7 (wb7)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Coordinates.
- 4 In row Point 3, set x to 7.
- 5 In row Point 3, set y to c deck-(p $a*((-\sin(\theta))*b+s deck)*3/6)^3+p b*((-\sin(\theta))*b+s deck)*3/6)^3+p b*((-\cos(\theta))*b+s deck)*3/6)^3+p b*((-\cos(\theta))*b+s deck)*3/6)^3+p b*((-\cos(\theta))*b+s deck)*3/6)^3+p b*((-\cos(\theta))*b+s deck)*3/6)^3+p b*((-\cos(\theta))*b+s deck)*3/6)^3+p b*((-\cos(\theta))*a)^3+p b*($ $sin(theta)*b+s deck)*3/6)^2$.
- 6 In row Point 3, set z to (-sin(theta)*b+s deck)*3/6+s deck.
- 7 Click **Build Selected**.

Work Plane 7 (wp7)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 7 (wb7)>Ellibse 1 (e1)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- 3 From the Type list, choose Curve.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type sqrt((c deck-(p a*((-sin(theta)*b+s deck)* 3/6) $^3+p_b*((-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2))^2+(-(-sin(theta)*b+s_deck)*3/6)^2)$ s deck)*3/6+s deck)^2).
- 6 In the Sector angle text field, type 180.
- 7 Locate the **Position** section. In the **xw** text field, type a.
- 8 Click **Parity** Build Selected.

Work Plane 7 (wp7)>Interpolation Curve I (ic1)

- I In the Work Plane toolbar, click * More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.

3 In the table, enter the following settings:

xw (m)	yw (m)
a+L- 0.1[m]	
a+L	
a+L+ g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+ g2+ 0.1[m]	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click | Build Selected.

Work Plane 7 (wp7)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L.
- 5 Locate the Endpoint section. From the Specify list, choose Coordinates.
- 6 In the xw text field, type a+L.
- 7 In the yw text field, type c deck+s deck.
- 8 Click | Build Selected.

Work Plane 7 (wp7)>Line Segment 2 (ls2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L+g2.
- 5 Locate the Endpoint section. From the Specify list, choose Coordinates.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c_deck+s_deck.
- 8 Click | Build Selected.

Work Plane 7 (wp7)>Union 1 (uni1)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 7 (wp7)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click 🖺 Build Selected.

Work Plane 7 (wp7)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 7 (wp7).
- 2 In the Settings window for Work Plane, click | Build Selected.

Work Plane 8 (wb8)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Coordinates.
- **4** In row **Point 3**, set **x** to 7.
- 5 In row Point 3, set y to c deck-(p a*((-sin(theta)*b+s deck)*4/6)^3+p b*(($sin(theta)*b+s deck)*4/6)^2$.
- 6 In row Point 3, set z to (-sin(theta)*b+s_deck)*4/6+s_deck.
- 7 Click **Build Selected**.

Work Plane 8 (wp8)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 8 (wb8)>Ellipse 1 (e1)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- **3** From the **Type** list, choose **Curve**.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type sqrt((c_deck-(p_a*((-sin(theta)*b+s_deck)* 4/6) $^3+p_b*((-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2))^2+(-(-sin(theta)*b+s_deck)*4/6)^2)$ s deck)*4/6+s deck)^2).
- 6 In the Sector angle text field, type 180.

- 7 Locate the **Position** section. In the xw text field, type a.
- 8 Click | Build Selected.

Work Plane 8 (wb8)>Interpolation Curve I (ic1)

- I In the Work Plane toolbar, click * More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.
- **3** In the table, enter the following settings:

xw (m)	yw (m)
a+L- 0.1[m]	
a+L	
a+L+ g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+ g2+ 0.1[m	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click | Build Selected.

Work Plane 8 (wp8)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click : More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- **3** From the **Specify** list, choose **Coordinates**.
- 4 In the xw text field, type a+L.
- 5 Locate the Endpoint section. From the Specify list, choose Coordinates.
- 6 In the xw text field, type a+L.
- 7 In the yw text field, type c deck+s deck.
- 8 Click Pauld Selected.

Work Plane 8 (wp8)>Line Segment 2 (ls2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L+g2.

- **5** Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c deck+s deck.
- 8 Click | Build Selected.

Work Plane 8 (wp8)>Union I (unil)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 8 (wp8)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click | Build Selected.

Work Plane 8 (wb8)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 8 (wp8).
- 2 In the Settings window for Work Plane, click 📳 Build Selected.

Work Plane 9 (wb9)

- I In the Geometry toolbar, click Swork Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Coordinates.
- 4 In row Point 3, set x to 7.
- 5 In row Point 3, set y to c deck- $(p a*((-sin(theta)*b+s deck)*5/6)^3+p b*((-sin(theta)*b+s deck)*5/6)^3+p b*((-sin(the$ $sin(theta)*b+s deck)*5/6)^2$.
- 6 In row Point 3, set z to (-sin(theta)*b+s deck)*5/6+s deck.
- 7 Click | Build Selected.

Work Plane 9 (wp9)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 9 (wb9)>Ellipse 1 (e1)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- 3 From the Type list, choose Curve.

- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type sqrt((c_deck-(p_a*((-sin(theta)*b+s_deck)* 5/6)^3+p b*((-sin(theta)*b+s deck)*5/6)^2))^2+(-(-sin(theta)*b+ s deck)*5/6+s deck)^2).
- 6 In the Sector angle text field, type 180.
- 7 Locate the **Position** section. In the **xw** text field, type a.
- 8 Click **Build Selected**.

Work Plane 9 (wp9)>Interpolation Curve I (ic1)

- I In the Work Plane toolbar, click * More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.
- 3 In the table, enter the following settings:

xw (m)	yw (m)
a+L- 0.1[m]	
a+L	
a+L+ g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+ g2+ 0.1[m]	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click | Build Selected.

Work Plane 9 (wp9)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 In the xw text field, type a+L.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L.
- 7 In the yw text field, type c_deck+s_deck.
- 8 Click | Build Selected.

Work Plane 9 (wp9)>Line Segment 2 (ls2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- **3** From the **Specify** list, choose **Coordinates**.
- 4 In the xw text field, type a+L+g2.
- **5** Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c_deck+s_deck.
- 8 Click | Build Selected.

Work Plane 9 (wb9)>Union 1 (unil)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 9 (wb9)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click | Build Selected.

Work Plane 9 (wp9)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 9 (wp9).
- 2 In the Settings window for Work Plane, click | Build Selected.

Work Plane 10 (wb10)

In the Geometry toolbar, click Work Plane.

Work Plane 10 (wp10)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 10 (wb10)>Ellibse 1 (e1)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Object Type section.
- **3** From the **Type** list, choose **Curve**.
- 4 Locate the Size and Shape section. In the a-semiaxis text field, type a.
- 5 In the b-semiaxis text field, type c deck.

- 6 In the Sector angle text field, type 180.
- 7 Locate the **Position** section. In the xw text field, type a.
- 8 Click | Build Selected.

Work Plane 10 (wb10)>Interpolation Curve 1 (ic1)

- I In the Work Plane toolbar, click * More Primitives and choose Interpolation Curve.
- 2 In the Settings window for Interpolation Curve, locate the Interpolation Points section.
- **3** In the table, enter the following settings:

xw (m)	yw (m)
a+L-0.1[m]	c_deck
a+L	c_deck
a+L+g2	(b-(1-cos(alpha))*g2/sin(alpha))
a+L+g2+0.1[m]	(b-(1-cos(alpha))*g2/sin(alpha))-0.1[m]*tan(alpha)

4 Click **Parity** Build Selected.

Work Plane 10 (wp10)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- **3** From the **Specify** list, choose **Coordinates**.
- 4 In the xw text field, type a+L.
- 5 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 6 In the xw text field, type a+L.
- 7 In the yw text field, type c_deck+s_deck.
- 8 Click | Build Selected.

Work Plane 10 (wb10)>Line Segment 2 (ls2)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- **3** From the **Specify** list, choose **Coordinates**.
- 4 In the xw text field, type a+L+g2.
- 5 Locate the Endpoint section. From the Specify list, choose Coordinates.
- 6 In the xw text field, type a+L+g2.
- 7 In the yw text field, type c deck+s deck.
- 8 Click Pauld Selected.

Work Plane 10 (wb10)>Union 1 (uni1)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 10 (wp10)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 On the object unil, select Boundaries 1–6, 8, 9, and 11 only.
- 3 In the Settings window for Delete Entities, click | Build Selected.

Work Plane 10 (wp10)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 10 (wp10).
- 2 In the Settings window for Work Plane, click | Build Selected.

Union I (uni I)

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Cap Faces I (cap I)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object unil, select Edges 46–48 and 60 only.
- 3 In the Settings window for Cap Faces, click **Parallel Build Selected**.

Cab Faces 2 (cab2)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap1, select Edges 44, 45, 48, and 59 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cap Faces 3 (cap3)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap2, select Edges 42, 43, 45, and 58 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cab Faces 4 (cab4)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap3, select Edges 40, 41, 43, and 57 only.

3 In the Settings window for Cap Faces, click | Build Selected.

Cap Faces 5 (cap5)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap4, select Edges 38, 39, 41, and 56 only.
- 3 In the Settings window for Cap Faces, click **Build Selected**.

Cab Faces 6 (cab6)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap5, select Edges 36, 37, 39, and 55 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cab Faces 7 (cab7)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap6, select Edges 34, 35, 37, and 53 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cap Faces 8 (cap8)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 In the Settings window for Cap Faces, locate the Cap Faces section.
- 3 Click the Clear Selection button for Bounding edges.
- 4 On the object cap7, select Edges 9, 10, and 27 only.
- 5 Click | Build Selected.

Cab Faces 9 (cab9)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap8, select Edges 8, 10, and 25 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cab Faces 10 (cab10)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap9, select Edges 7, 8, and 23 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cab Faces 11 (cab11)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap10, select Edges 6, 7, and 21 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cab Faces 12 (cab12)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap11, select Edges 5, 6, and 19 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cap Faces 13 (cap13)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap12, select Edges 4, 5, and 17 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Cab Faces 14 (cab14)

- I In the Geometry toolbar, click Defeaturing and Repair and choose Cap Faces.
- 2 On the object cap13, select Edges 3, 4, and 15 only.
- 3 In the Settings window for Cap Faces, click | Build Selected.

Work Plane II (wpl1)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose zx-plane.
- 4 In the y-coordinate text field, type c deck.
- 5 Click to expand the Local Coordinate System section. In the Rotation text field, type 90.
- 6 Click | Build Selected.

Work Plane II (wp II)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane II (wpII)>Parametric Curve I (pcI)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type s x1+s 11*s.
- 4 In the yw text field, type (5*2*s_deck/s_11*(a0*s^0.5-a1*s-a2*s^2+a3*s^3a4*s^4))*s_l1.
- 5 Click **Build Selected**.

Work Plane II (wbl1)

In the Settings window for Work Plane, click | Build Selected.

Work Plane 12 (wp12)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose zx-plane.
- 4 In the y-coordinate text field, type c_deck+s_h.
- 5 Locate the Local Coordinate System section. In the Rotation text field, type 90.
- 6 Click | Build Selected.

Work Plane 12 (wp12)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 12 (wp12)>Parametric Curve 1 (pc1)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type s x2+s 12*s.
- 4 In the yw text field, type (5*s_w2/s_l1*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*s 12.
- 5 Click | Build Selected.

Work Plane 12 (wp12)>Line Segment 1 (ls1)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 Click to select the Activate Selection toggle button for Start vertex.
- **4** On the object **pc1**, select Point 1 only.
- 5 Locate the **Endpoint** section. Click to select the **Endpoint** section toggle button for End vertex.
- 6 On the object pc1, select Point 2 only.
- 7 Click | Build Selected.

Work Plane 12 (wp12)>Rectangle 1 (r1)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type s 12.
- 4 In the Height text field, type s_w2.
- **5** Locate the **Position** section. In the **xw** text field, type **s_x2**.
- 6 In the yw text field, type -s w2.

7 Click | Build Selected.

Work Plane 12 (wp12)>Union 1 (uni1)

- I In the Work Plane toolbar, click Pooleans and Partitions and choose Union.
- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 12 (wp12)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 In the Settings window for Delete Entities, locate the Entities or Objects to Delete section.
- 3 From the Geometric entity level list, choose Domain.
- 4 On the object unil, select Domain 1 only.
- 5 Click Pauld Selected.

Work Plane 12 (wb12)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 12 (wp12).
- 2 In the Settings window for Work Plane, click | Build Selected.

Loft I (loft I)

- I In the Geometry toolbar, click \geqslant Loft.
- 2 In the Settings window for Loft, locate the General section.
- **3** Clear the **Unite with input objects** check box.
- 4 Click to expand the Start Profile section. From the Geometric entity level list, choose Edge.
- 5 On the object wp12, select Edge 2 only.
- 6 Click to expand the End Profile section. From the Geometric entity level list, choose Edge.
- 7 On the object wpll, select Edge 1 only.
- 8 Click Pauld Selected.

Work Plane 13 (wb13)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose yz-plane.
- 4 In the x-coordinate text field, type a+L+g2+g3.

Work Plane 13 (wp13)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 13 (wb13)>Circle 1 (c1)

- I In the Work Plane toolbar, click (Circle.
- 2 In the Settings window for Circle, locate the Size and Shape section.
- 3 In the Radius text field, type (b-(1-cos(alpha))*g2/sin(alpha))-g3*tan(alpha).
- 4 In the Sector angle text field, type 180.
- 5 Click Pauld Selected.

Work Plane 13 (wp13)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 13 (wp13).
- 2 In the Settings window for Work Plane, click | Build Selected.

Work Plane 14 (wb14)

In the Geometry toolbar, click 🖶 Work Plane.

Work Plane 14 (wp14)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 14 (wb14)>Parametric Curve 1 (bc1)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type r x1+r l1*s.
- 4 In the yw text field, type (5*r_w1/r_l1*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*r 11.
- 5 Click | Build Selected.

Work Plane 14 (wp14)>Parametric Curve 2 (pc2)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type r x1+r l1*s.
- 4 In the yw text field, type +(5*r_w1/r_l1*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*r 11.
- 5 Click | Build Selected.

Work Plane 14 (wb14)

In the Settings window for Work Plane, click | Build Selected.

Work Plane 15 (wp15)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the **z-coordinate** text field, type r_h .
- 4 Click | Build Selected.

Work Plane 15 (wp15)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 15 (wp15)>Parametric Curve 1 (pc1)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type r_x2+r_12*s.
- 4 In the yw text field, type (5*r w2/r 12*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*r 12.
- 5 Click | Build Selected.

Work Plane 15 (wp15)>Parametric Curve 2 (pc2)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type r x2+r 12*s.
- 4 In the yw text field, type +(5*r w2/r 12*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*r_12.
- 5 Click | Build Selected.

Work Plane 15 (wp15)>Rectangle 1 (r1)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- **3** In the **Width** text field, type r_12.
- 4 In the Height text field, type 2*r w2.
- **5** Locate the **Position** section. In the **xw** text field, type r_x2 .
- 6 In the yw text field, type -r_w2.
- 7 Click | Build Selected.

Work Plane 15 (wp15)>Union 1 (uni1)

I In the Work Plane toolbar, click Booleans and Partitions and choose Union.

- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 15 (wb15)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 In the Settings window for Delete Entities, locate the Entities or Objects to Delete section.
- 3 From the Geometric entity level list, choose Domain.
- **4** On the object **unil**, select Domains 1 and 2 only.
- 5 Click **Build Selected**.

Work Plane 15 (wb15)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 15 (wp15).
- 2 In the Settings window for Work Plane, click | Build Selected.

Loft 2 (loft2)

- I In the **Geometry** toolbar, click **\(\sum_{\text{p}} \) Loft**.
- 2 In the Settings window for Loft, locate the General section.
- **3** Clear the **Unite with input objects** check box.
- 4 Locate the Start Profile section. From the Geometric entity level list, choose Edge.
- 5 On the object wp15, select Edge 2 only.
- **6** Locate the **End Profile** section. From the **Geometric entity level** list, choose **Edge**.
- 7 On the object wp14, select Edge 2 only.
- 8 Click | Build Selected.

Loft 3 (loft3)

- I In the Geometry toolbar, click \geqslant Loft.
- 2 In the Settings window for Loft, locate the General section.
- **3** Clear the **Unite with input objects** check box.
- 4 Locate the Start Profile section. From the Geometric entity level list, choose Edge.
- **5** On the object wp15, select Edge 1 only.
- 6 Locate the End Profile section. From the Geometric entity level list, choose Edge.
- 7 On the object wp14, select Edge 1 only.
- 8 Click | Build Selected.

Rotate I (rot1)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 Select the objects loft2, loft3, and wp15 only.
- 3 In the Settings window for Rotate, locate the Rotation section.
- 4 From the Axis type list, choose x-axis.
- 5 Click Range.
- 6 In the Range dialog box, choose Number of values from the Entry method list.
- 7 In the **Start** text field, type 0.
- 8 In the Stop text field, type 270.
- 9 In the Number of values text field, type 4.
- 10 Click Replace.
- II In the Settings window for Rotate, click | Build Selected.

Union 2 (uni2)

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 Select the objects rot1(1), rot1(10), rot1(11), rot1(12), rot1(2), rot1(3), rot1(4), rot1(5), rotl(6), rotl(7), rotl(8), and rotl(9) only.
- 3 In the Settings window for Union, click | Build Selected.

Convert to Solid I (csoll)

- I In the Geometry toolbar, click Conversions and choose Convert to Solid.
- 2 Select the object uni2 only.
- 3 In the Settings window for Convert to Solid, click **Parallel** Build Selected.

Work Plane 16 (wb16)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the z-coordinate text field, type b h1.
- 4 Click | Build Selected.

Work Plane 16 (wb16)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 16 (wp16)>Parametric Curve 1 (pc1)

- I In the Work Plane toolbar, click More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.

- 3 In the xw text field, type b x1+b 11*s.
- 4 In the yw text field, type (5*b w1/b 11*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*b l1+b d.
- 5 Click | Build Selected.

Work Plane 16 (wp16)>Parametric Curve 2 (pc2)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type b x1+b l1*s.
- 4 In the yw text field, type +(5*b_w1/b_11*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*b l1+b d.
- 5 Click | Build Selected.

Work Plane 16 (wb16)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 16 (wp16).
- 2 In the Settings window for Work Plane, click | Build Selected.

Work Plane 17 (wb17)

- I In the Geometry toolbar, click \square Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the z-coordinate text field, type b_h2.
- 4 Click | Build Selected.

Work Plane 17 (wp17)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 17 (wb17)>Parametric Curve 1 (bc1)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.
- 3 In the xw text field, type b_x2+b_12*s.
- 4 In the yw text field, type (5*b w2/b 12*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*b 12+b d.
- 5 Click | Build Selected.

Work Plane 17 (wp17)>Parametric Curve 2 (pc2)

- I In the Work Plane toolbar, click * More Primitives and choose Parametric Curve.
- 2 In the Settings window for Parametric Curve, locate the Expressions section.

- 3 In the xw text field, type b_x2+b_12*s.
- 4 In the yw text field, type +(5*b_w2/b_12*(a0*s^0.5-a1*s-a2*s^2+a3*s^3-a4* s^4))*b 12+b d.
- 5 Click **Build Selected**.

Work Plane 17 (wp17)>Rectangle 1 (r1)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type b 12.
- 4 In the Height text field, type 2*b_w2.
- **5** Locate the **Position** section. In the **xw** text field, type b_x2.
- 6 In the yw text field, type -b w2+b d.
- 7 Click | Build Selected.

Work Plane 17 (wp17)>Union 1 (uni1)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Union.
- **2** Click the **Select All** button in the **Graphics** toolbar.
- 3 In the Settings window for Union, click | Build Selected.

Work Plane 17 (wp17)>Delete Entities 1 (del1)

- I Right-click Plane Geometry and choose Delete Entities.
- 2 In the Settings window for Delete Entities, locate the Entities or Objects to Delete section.
- 3 From the Geometric entity level list, choose Domain.
- **4** On the object **unil**, select Domains 1 and 2 only.
- 5 Click | Build Selected.

Work Plane 17 (wb17)

- I In the Model Builder window, under Component I (compl)>Geometry I click Work Plane 17 (wp17).
- 2 In the Settings window for Work Plane, click | Build Selected.

Loft 4 (loft4)

- I In the **Geometry** toolbar, click **\(\sum_{\text{p}} \) Loft**.
- 2 In the Settings window for Loft, locate the General section.
- **3** Clear the **Unite with input objects** check box.
- 4 Locate the **Start Profile** section. From the **Geometric entity level** list, choose **Edge**.

- 5 On the object wp17, select Edge 2 only.
- 6 Locate the End Profile section. From the Geometric entity level list, choose Edge.
- 7 On the object wp16, select Edge 2 only.
- 8 Click | Build Selected.

Loft 5 (loft5)

- I In the Geometry toolbar, click 🍃 Loft.
- 2 In the Settings window for Loft, locate the General section.
- **3** Clear the **Unite with input objects** check box.
- 4 Locate the **Start Profile** section. From the **Geometric entity level** list, choose **Edge**.
- **5** On the object wp17, select Edge 1 only.
- 6 Locate the End Profile section. From the Geometric entity level list, choose Edge.
- 7 On the object wp16, select Edge 1 only.
- 8 Click | Build Selected.

Union 3 (uni3)

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 Select the objects cap14, loft1, loft4, loft5, wp12, wp16, and wp17 only.
- 3 In the Settings window for Union, click | Build Selected.

Delete Entities I (del I)

- I In the Model Builder window, right-click Geometry I and choose Delete Entities.
- **2** On the object **uni3**, select Boundaries 19, 20, 22, 24, 26, and 29 only.
- 3 In the Settings window for Delete Entities, click 📔 Build Selected.

- I In the Geometry toolbar, click \(\sum_{i} \) Transforms and choose Mirror.
- 2 Select the objects dell and wp13 only.
- 3 In the Settings window for Mirror, locate the Input section.
- **4** Select the **Keep input objects** check box.
- 5 Click **Build Selected**.

Union 4 (uni4)

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 Select the objects dell, mirl(1), mirl(2), and wp13 only.
- 3 In the Settings window for Union, click | Build Selected.

Convert to Solid 2 (csol2)

- I In the Geometry toolbar, click 🔃 Conversions and choose Convert to Solid.
- 2 Select the object uni4 only.
- 3 In the Settings window for Convert to Solid, click | Build Selected.

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 Select the objects csoll and csol2 only.
- 3 In the Settings window for Union, locate the Union section.
- 4 Clear the **Keep interior boundaries** check box.
- 5 Click **Pail Build Selected**.

Rotate the submarine to facilitate the visualization.

Rotate 2 (rot2)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 Select the object uni5 only.
- 3 In the Settings window for Rotate, locate the Rotation section.
- 4 From the Axis type list, choose x-axis.
- 5 In the Angle text field, type 90.
- 6 Click **Pauld Selected**.

The geometry is now finished. The following steps are only needed to improve the quality of the mesh.

Work Plane 18 (wp18)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose yz-plane.
- 4 In the x-coordinate text field, type b x1-0.1[m].
- 5 Click **Pail Build Selected**.

Partition Faces I (parf1)

- I In the Geometry toolbar, click Booleans and Partitions and choose Partition Faces.
- 2 On the object rot2, select Boundaries 31–34 only.
- 3 In the Settings window for Partition Faces, locate the Partition Faces section.
- 4 From the Partition with list, choose Work plane.

5 Click Pauld Selected.

Work Plane 18 (wp18)

In the Model Builder window, right-click Work Plane 18 (wp18) and choose Duplicate.

Work Plane 19 (wb19)

- I In the Model Builder window, click Work Plane 19 (wp19).
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the x-coordinate text field, type b x1+b 11+0.1[m].
- 4 Click Pauld Selected.

Partition Faces 2 (parf2)

- I In the Geometry toolbar, click Booleans and Partitions and choose Partition Faces.
- 2 On the object parf1, select Boundaries 37, 40, 47, and 48 only.
- 3 In the Settings window for Partition Faces, locate the Partition Faces section.
- 4 From the Partition with list, choose Work plane.
- 5 Click Pauld Selected.

Work Plane 19 (wb19)

Right-click Work Plane 19 (wp19) and choose Duplicate.

Work Plane 20 (wb20)

- I In the Model Builder window, click Work Plane 20 (wp20).
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the x-coordinate text field, type s_x1-0.1[m].
- 4 Click **Parity** Build Selected.

Partition Faces 3 (parf3)

- I In the Geometry toolbar, click Booleans and Partitions and choose Partition Faces.
- 2 On the object parf2, select Boundaries 27 and 29 only.
- 3 In the Settings window for Partition Faces, locate the Partition Faces section.
- 4 From the Partition with list, choose Work plane.
- 5 Click **Build Selected**.

Work Plane 20 (wb20)

Right-click Work Plane 20 (wp20) and choose Duplicate.

Work Plane 21 (wp21)

I In the Model Builder window, click Work Plane 21 (wp21).

- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the x-coordinate text field, type s x1+s l1+0.1[m].

Partition Faces 4 (parf4)

- I In the Geometry toolbar, click Booleans and Partitions and choose Partition Faces.
- 2 On the object parf3, select Boundaries 59 and 60 only.
- 3 In the Settings window for Partition Faces, locate the Partition Faces section.
- 4 From the Partition with list, choose Work plane.
- 5 Click **Build Selected**.

Work Plane 21 (wb21)

Right-click Work Plane 21 (wp21) and choose Duplicate.

Work Plane 22 (wb22)

- I In the Model Builder window, click Work Plane 22 (wp22).
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the x-coordinate text field, type $s_x1+3*s_1/10-1.25[m]$.

Partition Faces 5 (parf5)

- I In the Geometry toolbar, click Booleans and Partitions and choose Partition Faces.
- 2 On the object parf4, select Boundaries 50, 51, 53, and 54 only.
- 3 In the Settings window for Partition Faces, locate the Partition Faces section.
- 4 From the Partition with list, choose Work plane.
- 5 Click **Build Selected**.

Work Plane 22 (wb22)

Right-click Work Plane 22 (wp22) and choose Duplicate.

Work Plane 23 (wb23)

- I In the Model Builder window, click Work Plane 23 (wp23).
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the x-coordinate text field, type $s_x1+3*s_1/10+1.25[m]$.

Partition Faces 6 (parf6)

- I In the Geometry toolbar, click Booleans and Partitions and choose Partition Faces.
- 2 On the object parf5, select Boundaries 59 and 62–64 only.
- 3 In the Settings window for Partition Faces, locate the Partition Faces section.
- 4 From the Partition with list, choose Work plane.

5 Click Pauld Selected.

Form Union (fin)

- I In the Model Builder window, click Form Union (fin).
- 2 In the Settings window for Form Union/Assembly, click | Build Selected.

Add some selections based on coordinates for the virtual operations.

Box Selection I (boxsell)

- I In the Geometry toolbar, click \(\frac{1}{2} \) Selections and choose Box Selection.
- 2 In the Settings window for Box Selection, locate the Geometric Entity Level section.
- 3 From the Level list, choose Edge.
- 4 Locate the **Box Limits** section. In the **x minimum** text field, type 11.5.
- 5 In the x maximum text field, type 12.5.
- 6 In the y minimum text field, type -2.
- 7 In the y maximum text field, type 2.
- **8** In the **z** minimum text field, type **3.9**.
- 9 In the z maximum text field, type 4.1.
- 10 Locate the Output Entities section. From the Include entity if list, choose All vertices inside box.
- II Right-click Box Selection I (boxsell) and choose Duplicate.

Box Selection 2 (boxsel2)

- I In the Model Builder window, click Box Selection 2 (boxsel2).
- 2 In the Settings window for Box Selection, locate the Box Limits section.
- 3 In the x minimum text field, type 21.5.
- 4 In the x maximum text field, type 22.9.
- 5 In the y minimum text field, type -1.25.
- 6 In the y maximum text field, type -1.18.
- 7 Right-click Box Selection 2 (boxsel2) and choose Duplicate.

Box Selection 3 (boxsel3)

- I In the Model Builder window, click Box Selection 3 (boxsel3).
- 2 In the Settings window for Box Selection, locate the Box Limits section.
- 3 In the y minimum text field, type 1.18.
- 4 In the y maximum text field, type 1.25.

5 Right-click Box Selection 3 (boxsel3) and choose Duplicate.

Box Selection 4 (boxsel4)

- I In the Model Builder window, click Box Selection 4 (boxsel4).
- 2 In the Settings window for Box Selection, locate the Box Limits section.
- 3 In the x minimum text field, type 22.9.
- 4 In the x maximum text field, type 24.5.
- 5 Right-click Box Selection 4 (boxsel4) and choose Duplicate.

Box Selection 5 (boxsel5)

- I In the Model Builder window, click Box Selection 5 (boxsel5).
- 2 In the Settings window for Box Selection, locate the Box Limits section.
- 3 In the y minimum text field, type -1.25.
- 4 In the y maximum text field, type -1.18.
- 5 Click **Build Selected**.

Union Selection I (unisel1)

- I In the Geometry toolbar, click \(\frac{1}{2} \) Selections and choose Union Selection.
- 2 In the Settings window for Union Selection, locate the Geometric Entity Level section.
- 3 From the Level list, choose Edge.
- **4** Locate the **Input Entities** section. Click + **Add**.
- 5 In the Add dialog box, in the Selections to add list, choose Box Selection 2, Box Selection 3, Box Selection 4, and Box Selection 5.
- 6 Click OK.

Ignore Edges I (ige I)

- I In the Geometry toolbar, click \top Virtual Operations and choose Ignore Edges.
- 2 In the Settings window for Ignore Edges, locate the Input section.
- 3 From the Edges to ignore list, choose Union Selection 1.
- 4 Click **Build Selected**.

Collabse Edges I (cle I)

- I In the Geometry toolbar, click \to Virtual Operations and choose Collapse Edges.
- 2 In the Settings window for Collapse Edges, locate the Input section.
- 3 From the Edges to collapse list, choose Box Selection 1.
- 4 In the Geometry toolbar, click **Build All**.

Ignore Vertices I (igvI)

- I In the Geometry toolbar, click \times \text{Virtual Operations} and choose Ignore Vertices.
- 2 Click in the Graphics window and then press Ctrl+D to clear all objects.
- 3 Click the Select All button in the Graphics toolbar.
- 4 In the Settings window for Ignore Vertices, click **Build Selected**.
- 5 In the Geometry toolbar, click **Export**.
- 6 In the Model Builder window, click Geometry 1.
- 7 In the Export[noun] window for Geometry, locate the Export section.
- **8** In the **Filename** text field, type submarine_target_strength.mphbin.
- 9 Click the Export entire finalized geometry button.
- 10 Click Export to produce the MPHBIN-file that is used at the beginning of the tutorial.