

Computing Q Factors and Resonant Frequencies of Cavity Resonators

A classic benchmark example in computational electromagnetics is to find the resonant frequency and Q factor of a cavity with lossy walls. Here, models of rectangular, cylindrical, and spherical cavities are shown to be in agreement with analytic solutions.

Model Definition

This example considers three geometries:

- a rectangular cavity of dimensions 0.9 in-by-0.9 in-by-0.4 in;
- a cylindrical cavity of radius 0.48 in and height 0.4 in; and
- a spherical cavity of radius 1.35 cm.

The cavity walls are assumed to be a good conductor, such as copper, with an electric conductivity of 5.7·10⁷ S/m, and relative permeability and permittivity of unity. The interior of the cavity is assumed to be vacuum, with zero electric conductivity, and unit permeability and permittivity. The analytic solutions to these three cases are given in Ref. 1.

The lossy walls of the cavity are represented via the impedance boundary condition. This boundary condition accounts for the frequency dependent losses on the walls of a cavity due to the nonzero electric conductivity, which makes the eigenvalue problem nonlinear. When solving any eigenvalue problem, it is necessary to provide a frequency around which to search for modes. In addition, when solving a nonlinear eigenvalue problem, it is also necessary to provide a frequency at which to initially evaluate the frequency-dependent surface losses. Although the guesses for these frequencies do not need to be very close, solution time is less the closer they are.

It is usually possible to estimate the resonant frequency of interest, and to use this as an initial guess. It is also possible to quickly estimate the resonant frequency by building a second model that uses the perfect electrical conductor (PEC) boundary condition instead of the impedance boundary condition. A model that uses only PEC boundaries results in a linear eigenvalue problem, and is less computationally intensive to solve. Such a model only requires a rough guess at the frequency of the mode, and does not require a frequency at which to evaluate the surface losses. Therefore, it is often convenient to also solve a version of a model without losses.

Q FACTOR AND RESONANT FREQUENCY IN CAVITY STRUCTURES

The Q factor is one of important parameters characterizing a resonant structure and defined as $Q = \omega$ (average energy stored/dissipated power). The average energy stored can be evaluated as a volume integral of Energy density time average (emw.Wav) and the dissipated power can be evaluated as a surface integral of Surface losses (emw.Qsh).

Another way to calculate the Q factor at the dominant mode is via equations in Ref. 1. For a rectangular cavity, the dominant mode is TE₁₀₁, at which the cavity provides the lowest resonant frequency. The Q factor and resonant frequency at this mode is

$$Q_{{
m TE}_{101}} = rac{1.1107 \eta}{R_s \! \left(1 + rac{a}{2b}
ight)}, \;\; f_{{
m TE}_{101}} = rac{1}{2\pi \sqrt{\mu \epsilon}} \sqrt{\left(rac{\pi}{a}
ight)^2 + \left(rac{\pi}{c}
ight)^2}$$

There are two dominant modes for a cylindrical cavity. One dominant mode of the cylindrical cavity is TE_{111} when the ratio between the height and radius is more than 2.03. The other dominant mode is TM_{010} when the ratio is less than 2.03. For this case, the Q factor and resonant frequency are given as

$$Q_{\mathrm{TM_{010}}} = \frac{1.2025 \, \mathrm{\eta}}{R_s \! \left(1 + \frac{a}{h}\right)}, \quad f_{\mathrm{TM_{010}}} = \frac{1}{2 \pi \sqrt{\mu \epsilon}} \sqrt{\left(\frac{2.40492}{a}\right)^2}$$

For a spherical cavity, TM mode provides the lowest resonant frequency.

$$Q_{\text{TM}_{011}} = \frac{1.0041 \eta}{R_s}, \ f_{\text{TM}_{011}} = \frac{2.744}{2 \pi a \sqrt{\mu \epsilon}}$$

In the above equations, R_s is surface resistance defined as

$$R_s = \sqrt{\frac{\omega_r \mu}{2\sigma}}$$

and η is the characteristic impedance of free space, $\sqrt{\mu_0/\epsilon_0}$.

These two analytical approaches are compared with the Q factor obtained from Eigenfrequency analysis.

Results and Discussion

The analytic resonant frequencies and Q factors for these three cases, and the results of the COMSOL model for various levels of mesh refinement, are shown below. These show that the solutions agree. As the mesh is refined, the polynomial basis functions used by the finite element method better approximate the analytic solutions, which are described by sinusoidal functions for the rectangular cavity and Bessel functions for the cylindrical and

spherical cavities. This difference between the numerical results and the analytic solution is discretization error, and is always reduced with mesh refinement.

TABLE I: RESULTS FOR THE TEIOI MODE OF A RECTANGULAR CAVITY.

MAXIMUM MESH SIZE	RESONANT FREQUENCY, GHZ (ANALYTIC=9.273)	Q FACTOR (ANALYTIC=7770)
h_max	9.706	7039
h_max/2	9.283	7687
h_max/4	9.273	7765
h_max/8	9.273	7770

TABLE 2: RESULTS FOR THE TM010 MODE OF A CYLINDRICAL CAVITY.

MAXIMUM MESH SIZE	RESONANT FREQUENCY, GHZ (ANALYTIC=9.412)	Q FACTOR (ANALYTIC=8065)
h_max	9.458	7891
h_max/2	9.419	8004
h_max/4	9.411	8056
h_max/8	9.411	8065

TABLE 3: RESULTS FOR THE TMOIL MODE OF A SPHERICAL CAVITY.

MAXIMUM MESH SIZE	RESONANT FREQUENCY, GHZ (ANALYTIC=9.698)	Q FACTOR (ANALYTIC=14594)
h_max	9.752	14121
h_max/2	9.723	14430
h_max/4	9.701	14616
h_max/8	9.697	14641

Note that convergence with respect to the mesh is fastest for the rectangular cavity and slowest for the spherical cavity. This is because the isoparametric finite-element mesh represents curved surfaces approximately, via second order polynomials by default. This introduces some small geometric discretization error that is always reduced with mesh refinement. Although it is possible to use different element orders, the default secondorder curl element (also known as a vector or Nedelec element) is the best compromise between accuracy and memory requirements. Because memory requirements for threedimensional models and direct solvers increase close to quadratically with increasing number of unknowns, there is strong motivation to use as coarse a mesh as reasonable. For larger models, one may use an iterative solver that scales more favorably with the number of unknowns but then solution time typically goes up substantially. Figure 1 shows the fields within the cavities, as well as the surface currents and surface losses.



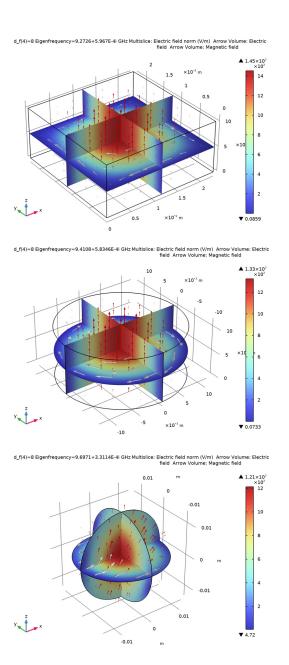


Figure 1: Arrow plots of electric and magnetic fields. Slice plot of electric field.

Eigenfrequency=9.2726+5.967E-4i GHz Surface: Surface losses (W/m²) Arrow Surface: Surface current density

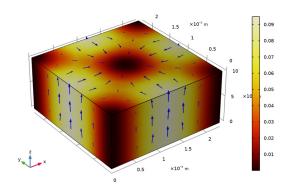

d_f(4)=8 Eigenfrequency=9.4108+5.8346E-4i GHz Surface: Surface losses (W/m²) Arrow Surface: Surface current density

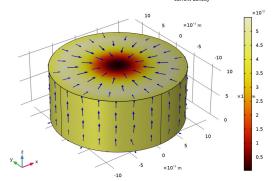

 $\label{eq:df} $$ d_f(4)=8 \ Eigenfrequency=9.6971+3.3114E-4i \ GHz \ Surface: Surface \ losses \ (W/m^i) \ Arrow \ Surface: Surface \ current \ density$

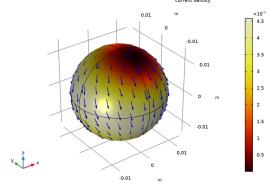


Figure 2: Arrow plots of surface currents. Surface plot of surface losses.

Notes About the COMSOL Implementation

Solve this example using an Eigenfrequency study. Search for a single eigenfrequency around 9.10^9 Hz. Because of the impedance boundary condition with a finite conductivity value, the model becomes a nonlinear eigenvalue problem and it is necessary to provide a frequency at which to initially evaluate the frequency-dependent surface losses. In the Eigenvalue Solver settings window you can see the linearization point is automatically specified to the value in "Search for eigenfrequencies around" in the study settings.

Reference

1. C.A. Balanis, Advanced Engineering Electromagnetics, John Wiley & Sons, 1989.

Application Library path: RF_Module/Verification_Examples/ cavity resonators

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).
- 3 Click Add.
- 4 Click 🔁 Study.
- 5 In the Select Study tree, select General Studies>Eigenfrequency.
- 6 Click M Done.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file cavity_resonators_parameters.txt.

Here, mu0_const and epsilon0_const in the imported table are predefined COMSOL constants for the permeability and permittivity in free space. From the Value column you can read off the values f_TE101_analytic_r = $9.273~\mathrm{GHz}$, Q_TE101_analytic_r = $7770~\mathrm{for}$ the rectangular cavity, f_TM010_analytic_c = $9.412~\mathrm{GHz}$, Q_TM010_analytic_c = $8065~\mathrm{for}$ the cylindrical cavity, f_TM011_analytic_s = $9.698~\mathrm{GHz}$, and Q_TM011_analytic_s = $14594~\mathrm{for}$ the spherical cavity.

Since air and lossy wall materials will be used on multiple components, add them on the global material node. They will be linked to each individual component later on.

ADD MATERIAL

- I In the Home toolbar, click 4 Add Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Right-click and choose Add to Global Materials.
- 5 In the Home toolbar, click Add Material to close the Add Material window.

GLOBAL DEFINITIONS

Lossy Wall

- I In the Model Builder window, under Global Definitions right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Lossy Wall in the Label text field.
- 3 Click to expand the Material Properties section. In the Material properties tree, select Basic Properties>Relative Permittivity.
- 4 Click + Add to Material.
- 5 In the Material properties tree, select Basic Properties>Relative Permeability.
- 6 Click + Add to Material.

- 7 In the Material properties tree, select Basic Properties>Electrical Conductivity.
- 8 Click + Add to Material.
- **9** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	1	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	sigma_wall	S/m	Basic


GEOMETRY I

Create a block for the rectangular cavity.

Block I (blk I)

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, locate the Size and Shape section.
- **3** In the **Width** text field, type a_r.
- 4 In the **Depth** text field, type a_r.
- 5 In the Height text field, type b_r.

6 Click **Build All Objects**.

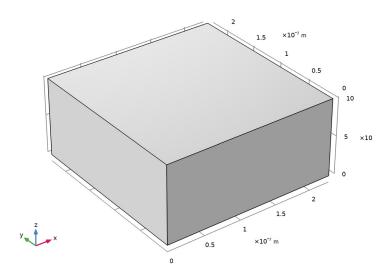

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN (EMW)

Now set up the physics. Override the default perfect electric conductor condition on the exterior boundaries by an impedance condition.

Impedance Boundary Condition I

- I In the Model Builder window, under Component I (compl) right-click Electromagnetic Waves, Frequency Domain (emw) and choose the boundary condition Impedance Boundary Condition.
- 2 In the Settings window for Impedance Boundary Condition, locate the Boundary Selection section.
- 3 From the Selection list, choose All boundaries.

MATERIALS

Assign material properties on the model by linking the global material already created. First, apply air to all domains.

Material Link I (matlnk I)

In the Model Builder window, under Component I (compl) right-click Materials and choose More Materials>Material Link

Material Link 2 (matlnk2)

- I Right-click Materials and choose More Materials>Material Link.
 Define a lossy conductive material for all exterior boundaries.
- 2 In the Settings window for Material Link, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.
- 5 Locate the Link Settings section. From the Material list, choose Lossy Wall (mat2).

DEFINITIONS

Add variables for Q-factor calculation and visualization. For this Q-factor calculation, add two nonlocal integration couplings: one for volume and the other for surface integration.

Integration | (intop!)

- I In the Definitions toolbar, click Nonlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, type int_v in the Operator name text field.
- 3 Locate the Source Selection section. From the Selection list, choose All domains.

Integration 2 (intop2)

- I In the **Definitions** toolbar, click Nonlocal Couplings and choose Integration.
- ${\bf 2}\ \ {\rm In}\ {\rm the}\ {\bf Settings}\ {\rm window}\ {\rm for}\ {\bf Integration},\ {\rm type}\ {\tt int_s}\ {\rm in}\ {\rm the}\ {\bf Operator}\ {\bf name}\ {\rm text}\ {\rm field}.$
- 3 Locate the Source Selection section. From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.

Variables 1

- I In the **Definitions** toolbar, click **a= Local Variables**.
- 2 In the Settings window for Variables, locate the Variables section.
- 3 Click **Load from File**.
- **4** Browse to the model's Application Libraries folder and double-click the file cavity_resonators_model1_variables.txt.

The emw. prefix is for the Electromagnetic Waves, Frequency Domain interface in the first model. Wav and Qsh are Energy density time average and Surface losses, respectively. Qfactor included in this text file shows up in orange indicating an unknown variable. It will be known after solving the model.

MESH I

The maximum mesh size is one dimension of the cavity scaled inversely by d f, a discretization factor defined in Parameters. The discretization factor is also used as a parametric sweep variable to see the effect of the mesh refinement.

Free Tetrahedral I

In the Mesh toolbar, click A Free Tetrahedral.

Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- **3** Click the **Custom** button.
- 4 Locate the Element Size Parameters section. In the Maximum element size text field, type h max r/d f.
- 5 In the Maximum element growth rate text field, type 2.
- 6 In the Curvature factor text field, type 1.
- 7 In the Resolution of narrow regions text field, type 0.1.
- 8 Click Build All.

Provide the number of modes and a frequency around which to search for modes.

STUDY I

Steb 1: Eigenfrequency

- I In the Model Builder window, under Study I click Step I: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Study Settings section.
- **3** Select the **Desired number of eigenfrequencies** check box. In the associated text field, type 1.
- 4 In the Search for eigenfrequencies around shift text field, type 9[GHz].

Add a Parametric Sweep over the discretization factor, d_f.

Parametric Sweep

- I In the Study toolbar, click Parametric Sweep.
- 2 In the Settings window for Parametric Sweep, locate the Study Settings section.
- 3 Click + Add.

4 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
d_f (Discretization factor)	1 2 4 8	

5 In the Study toolbar, click **Compute**.

RESULTS

Electric Field (emw)

The default plot shows the distribution of the norm of the electric field. Add arrow plots of the electric and magnetic fields.

Arrow Volume 1

- I Right-click Electric Field (emw) and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Electromagnetic Waves, Frequency Domain>Electric>emw.Ex,emw.Ey,emw.Ez Electric field.
- 3 In the Electric Field (emw) toolbar, click Plot.

Arrow Volume 2

- I Right-click Electric Field (emw) and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Electromagnetic Waves, Frequency Domain>Magnetic>emw.Hx,emw.Hy,emw.Hz Magnetic field.
- 3 Locate the **Arrow Positioning** section. Find the **Z grid points** subsection. In the **Points** text field, type 1.
- 4 Locate the Coloring and Style section. From the Color list, choose White.
- 5 In the Electric Field (emw) toolbar, click Plot.
- 6 Click the Zoom Extents button in the Graphics toolbar.

 Compare the resulting plot with that shown in Figure 1, top. The exact numbers that you get may differ slightly.

Add a surface plot of the surface losses and an arrow plot of the surface current (Figure 2, top).

3D Plot Group 2

In the Home toolbar, click **Add Plot Group** and choose **3D Plot Group**.

Surface 1

- I Right-click 3D Plot Group 2 and choose Surface.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Electromagnetic Waves, Frequency Domain>Heating and losses>emw.Qsh - Surface losses -W/m².
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Thermal>ThermalDark in the tree.
- 5 Click OK.

Surface Losses (emw)

- I In the Model Builder window, under Results click 3D Plot Group 2.
- 2 In the Settings window for 3D Plot Group, type Surface Losses (emw) in the Label text field.

Arrow Surface 1

- I Right-click Surface Losses (emw) and choose Arrow Surface.
- 2 In the Settings window for Arrow Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Electromagnetic Waves, Frequency Domain>Currents and charge>emw.jsx,...,emw.jsz -Surface current density.
- 3 Locate the Coloring and Style section. From the Color list, choose Blue.
- 4 In the Surface Losses (emw) toolbar, click Plot.

ROOT

Next, set up a model for the cylindrical cavity.

ADD COMPONENT

In the Model Builder window, right-click the root node and choose Add Component>3D.

ADD PHYSICS

- I In the Home toolbar, click open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).

- 4 Click Add to Component 2 in the window toolbar.
- 5 In the Home toolbar, click Add Physics to close the Add Physics window.


ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- **3** Find the **Studies** subsection. In the **Select Study** tree, select **Empty Study**. You will copy the settings from the existing study later on.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

GEOMETRY 2

Cylinder I (cyl1)

- I In the Geometry toolbar, click Cylinder.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type a_c.
- 4 In the Height text field, type height_c.
- 5 Click Build All Objects.

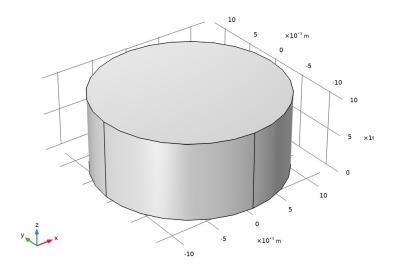

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN 2 (EMW2)

Set up the second physics interface. The steps are same as for the first model.

I In the Model Builder window, under Component 2 (comp2) click Electromagnetic Waves, Frequency Domain 2 (emw2).

Impedance Boundary Condition 1

- In the Physics toolbar, click Boundaries and choose Impedance Boundary Condition.
- 2 In the Settings window for Impedance Boundary Condition, locate the Boundary Selection section.
- 3 From the Selection list, choose All boundaries.

MATERIALS

Assign material properties on the second model. Apply air to all domains.

Material Link 3 (matlnk3)

In the Model Builder window, under Component 2 (comp2) right-click Materials and choose More Materials>Material Link.

Material Link 4 (matlnk4)

- I Right-click Materials and choose More Materials>Material Link. Define a lossy conductive material for all exterior boundaries.
- 2 In the Settings window for Material Link, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.
- 5 Locate the Link Settings section. From the Material list, choose Lossy Wall (mat2).

DEFINITIONS (COMP2)

Add variables and two nonlocal integration couplings. The purpose of these are the same as in the first model.

Integration 3 (intob3)

- I In the Definitions toolbar, click Nonlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, type int_v in the Operator name text field.
- 3 Locate the Source Selection section. From the Selection list, choose All domains.

Integration 4 (intob4)

- I In the **Definitions** toolbar, click Monlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, type int s in the Operator name text field.

- 3 Locate the Source Selection section. From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.

Variables 2

- I In the **Definitions** toolbar, click **a= Local Variables**.
- 2 In the Settings window for Variables, locate the Variables section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file cavity_resonators_model2_variables.txt.

The emw2. prefix refers to the Electromagnetic Waves, Frequency Domain interface for the second model.

MESH 2

Apply the same logic in the mesh set up as you have done in the first model.

Free Tetrahedral I

In the Mesh toolbar, click A Free Tetrahedral.

Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- 3 Click the **Custom** button.
- 4 Locate the Element Size Parameters section. In the Maximum element size text field, type h_max_c/d_f.
- 5 In the Maximum element growth rate text field, type 2.
- 6 In the Curvature factor text field, type 1.
- 7 In the Resolution of narrow regions text field, type 0.1.
- 8 Click Build All.

STUDY I

Parametric Sweep, Step 1: Eigenfrequency

- I In the Model Builder window, under Study I, Ctrl-click to select Parametric Sweep and Step I: Eigenfrequency.
- 2 Right-click and choose Copy.

STUDY 2

In the Model Builder window, right-click Study 2 and choose Paste Multiple Items.

STUDY 2

Step 1: Eigenfrequency

- I In the Model Builder window, under Study 2 click Step 1: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form	
Electromagnetic Waves, Frequency Domain (emw)		Automatic (Frequency domain)	
Electromagnetic Waves, Frequency Domain 2 (emw2)	\checkmark	Automatic (Eigenfrequency)	

4 In the Home toolbar, click **Compute**.

RESULTS

Arrow Volume 1

- I Right-click Electric Field (emw2) and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 2 (comp2)> Electromagnetic Waves, Frequency Domain 2>Electric>emw2.Ex,emw2.Ey,emw2.Ez -Electric field.
- 3 In the Electric Field (emw2) toolbar, click Plot.

Arrow Volume 2

- I Right-click Electric Field (emw2) and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 2 (comp2)> Electromagnetic Waves, Frequency Domain 2>Magnetic>emw2.Hx,emw2.Hy,emw2.Hz -Magnetic field.
- 3 Locate the Arrow Positioning section. Find the Z grid points subsection. In the Points text field, type 1.
- 4 Locate the Coloring and Style section. From the Color list, choose White.
- 5 In the Electric Field (emw2) toolbar, click Plot.

6 Click the **Zoom Extents** button in the **Graphics** toolbar.

The plot should now look like that in Figure 1, middle.

Again, add a surface plot of the surface losses and an arrow plot of the surface current (Figure 2, middle).

3D Plot Group 4

- I In the Home toolbar, click Add Plot Group and choose 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Dataset list, choose Study 2/Parametric Solutions 2 (6) (sol8).

Surface I

- I Right-click 3D Plot Group 4 and choose Surface.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 2 (comp2)> Electromagnetic Waves, Frequency Domain 2>Heating and losses>emw2.Qsh -Surface losses - W/m².
- 3 Locate the Coloring and Style section. Click | Change Color Table.
- 4 In the Color Table dialog box, select Thermal>ThermalDark in the tree.
- 5 Click OK.


Surface Losses (emw2)


- I In the Model Builder window, under Results click 3D Plot Group 4.
- 2 In the Settings window for 3D Plot Group, type Surface Losses (emw2) in the Label text field.

Arrow Surface I

- I Right-click Surface Losses (emw2) and choose Arrow Surface.
- 2 In the Settings window for Arrow Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 2 (comp2)> Electromagnetic Waves, Frequency Domain 2>Currents and charge>emw2.Jsx,...,emw2.Jsz -Surface current density.
- 3 Locate the Coloring and Style section. From the Color list, choose Blue.

4 In the Surface Losses (emw2) toolbar, click Plot.

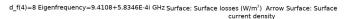

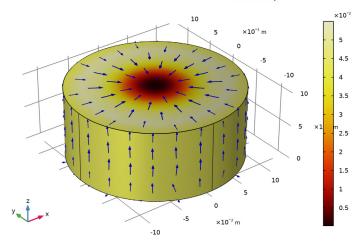

ROOT

Now add a model for the spherical cavity.

ADD COMPONENT

In the Model Builder window, right-click the root node and choose Add Component>3D.

ADD PHYSICS

- I In the Home toolbar, click open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).
- 4 Click Add to Component 3 in the window toolbar.
- 5 In the Home toolbar, click Add Physics to close the Add Physics window.


ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select Empty Study.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

GEOMETRY 3

Sphere I (sph I)

- I In the Geometry toolbar, click Sphere.
- 2 In the Settings window for Sphere, locate the Size section.
- 3 In the Radius text field, type a s.
- 4 Click Build All Objects.

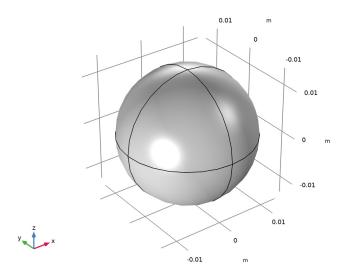

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN 3 (EMW3)

Set up the third physics interface.

I In the Model Builder window, under Component 3 (comp3) click Electromagnetic Waves, Frequency Domain 3 (emw3).

Impedance Boundary Condition 1

- I In the Physics toolbar, click **Boundaries** and choose Impedance Boundary Condition.
- 2 In the Settings window for Impedance Boundary Condition, locate the Boundary Selection section.
- 3 From the Selection list, choose All boundaries.

MATERIALS

Assign material properties on the third model. Apply air to all domains.

Material Link 5 (matlnk5)

In the Model Builder window, under Component 3 (comp3) right-click Materials and choose More Materials>Material Link.

Material Link 6 (matlnk6)

- I Right-click Materials and choose More Materials>Material Link. Define a lossy conductive material for all exterior boundaries.
- 2 In the Settings window for Material Link, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.
- 5 Locate the Link Settings section. From the Material list, choose Lossy Wall (mat2).

DEFINITIONS (COMP3)

Add variables and two nonlocal integration couplings.

Integration 5 (intob5)

- I In the Definitions toolbar, click Monlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, type int v in the Operator name text field.
- 3 Locate the Source Selection section. From the Selection list, choose All domains.

Integration 6 (intob6)

- I In the Definitions toolbar, click // Nonlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, type int s in the Operator name text field.
- 3 Locate the Source Selection section. From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose All boundaries.

Variables 3

- I In the **Definitions** toolbar, click **a= Local Variables**.
- 2 In the Settings window for Variables, locate the Variables section.
- 3 Click **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file cavity resonators model3 variables.txt.

The emw3. prefix in the imported table is for the physics interface, **Electromagnetic** Waves, Frequency Domain, in the third model.

MESH 3

Free Tetrahedral I

In the Mesh toolbar, click A Free Tetrahedral.

Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- **3** Click the **Custom** button.
- 4 Locate the Element Size Parameters section. In the Maximum element size text field, type h_max_s/d_f.
- 5 In the Maximum element growth rate text field, type 2.
- 6 In the Curvature factor text field, type 1.
- 7 In the Resolution of narrow regions text field, type 0.1.
- 8 Click III Build All.

STUDY 2

Parametric Sweep, Step 1: Eigenfrequency

- I In the Model Builder window, under Study 2, Ctrl-click to select Parametric Sweep and Step 1: Eigenfrequency.
- 2 Right-click and choose Copy.

STUDY 3

In the Model Builder window, right-click Study 3 and choose Paste Multiple Items.

STUDY 3

Step 1: Eigenfrequency

- I In the Model Builder window, under Study 3 click Step 1: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.

3 In the table, enter the following settings:

Physics interface	Solve for	Equation form
Electromagnetic Waves, Frequency Domain (emw)		Automatic (Frequency domain)
Electromagnetic Waves, Frequency Domain 2 (emw2)		Automatic (Frequency domain)
Electromagnetic Waves, Frequency Domain 3 (emw3)	√	Automatic (Eigenfrequency)

Solution 13 (sol13)

- 2 Click **Compute**.

RESULTS

Arrow Volume 1

- I Right-click Electric Field (emw3) and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 3 (comp3)> Electromagnetic Waves, Frequency Domain 3>Electric>emw3.Ex,emw3.Ey,emw3.Ez -Electric field.

Arrow Volume 2

- I Right-click Electric Field (emw3) and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 3 (comp3)> Electromagnetic Waves, Frequency Domain 3>Magnetic>emw3.Hx,emw3.Hy,emw3.Hz -Magnetic field.
- 3 Locate the Arrow Positioning section. Find the Z grid points subsection. In the Points text field, type 1.
- 4 Locate the Coloring and Style section. From the Color list, choose White.
- **6** Click the **Zoom Extents** button in the **Graphics** toolbar. Compare the resulting plot with that shown in Figure 1, bottom.

Again, add a surface plot of the surface losses and an arrow plot of the surface current (Figure 2, bottom).

3D Plot Group 6

- I In the Home toolbar, click Add Plot Group and choose 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Dataset list, choose Study 3/Parametric Solutions 3 (12) (sol14).

Surface I

- I Right-click **3D Plot Group 6** and choose **Surface**.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 3 (comp3)> Electromagnetic Waves, Frequency Domain 3>Heating and losses>emw3.Qsh -Surface losses - W/m².
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Thermal>ThermalDark in the tree.
- 5 Click OK.


Surface Losses (emw3)

- I In the Model Builder window, under Results click 3D Plot Group 6.
- 2 In the Settings window for 3D Plot Group, type Surface Losses (emw3) in the Label text field.

Arrow Surface 1

- I Right-click Surface Losses (emw3) and choose Arrow Surface.
- 2 In the Settings window for Arrow Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 3 (comp3)> Electromagnetic Waves, Frequency Domain 3>Currents and charge>emw3.|sx,...,emw3.|sz -Surface current density.
- 3 Locate the Coloring and Style section. From the Color list, choose Blue.

4 In the Surface Losses (emw3) toolbar, click Plot.

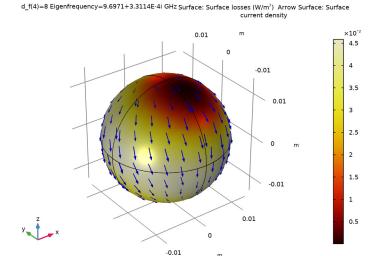

Finish by evaluating the Q factor and resonant frequency. Compare them with those values in Table 1, Table 2 and Table 3.

Global Evaluation 4

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Dataset list, choose Study I/Parametric Solutions I (sol2).
- 4 From the Eigenfrequency selection list, choose First.
- 5 From the Table columns list, choose Inner solutions.
- 6 Click Replace Expression in the upper-right corner of the Expressions section. From the menu, choose Component I (compl)>Definitions>Variables>Q_computed - Q-factor, computed from eigenvalue - I.
- 7 Click **= Evaluate**.
- 8 Locate the Data section. From the Dataset list, choose Study 2/ Parametric Solutions 2 (6) (sol8).
- 9 Click **= Evaluate**.
- 10 From the Dataset list, choose Study 3/Parametric Solutions 3 (12) (sol14).
- II Click **= Evaluate**.
- 12 Right-click Global Evaluation 4 and choose Duplicate.

Global Evaluation 5

- I In the Model Builder window, click Global Evaluation 5.
- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Dataset list, choose Study I/Parametric Solutions I (sol2).
- 4 Click Replace Expression in the upper-right corner of the Expressions section. From the menu, choose Component I (compl)>Definitions>Variables>Q_definition - Q-factor, definition - I.
- 5 Click ▼ next to **= Evaluate**, then choose **New Table**.
- 6 Locate the Data section. From the Dataset list, choose Study 2/ Parametric Solutions 2 (6) (sol8).
- 7 Click **= Evaluate**.
- 8 From the Dataset list, choose Study 3/Parametric Solutions 3 (12) (sol14).
- 9 Click **= Evaluate**.

Global Evaluation 4

In the Model Builder window, right-click Global Evaluation 4 and choose Duplicate.

Global Evaluation 6

- I In the Model Builder window, click Global Evaluation 6.
- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Dataset list, choose Study I/Parametric Solutions I (sol2).
- 4 Click Replace Expression in the upper-right corner of the Expressions section. From the menu, choose Component I (compl)>Definitions>Variables>frequency - Frequency, simulated - Hz.
- 5 Click ▼ next to **= Evaluate**, then choose **New Table**.
- 6 Locate the Data section. From the Dataset list, choose Study 2/ Parametric Solutions 2 (6) (sol8).
- 7 Click **= Evaluate**.
- 8 From the Dataset list, choose Study 3/Parametric Solutions 3 (12) (sol14).
- 9 Click **= Evaluate**.