

Shape Optimization of an MBB Beam

Introduction

Shape optimization can be used to alter the geometry of an existing product to improve its performance, but it can also be used as a postprocessing step for topology optimization. This model takes the design found in the model Topology Optimization of an MBB Beam and uses the Free Shape Boundary feature to further improve the stiffness without increasing the mass. The magnitude of the deformations in shape optimization can sometimes be limited by inverted elements. However, this is less of an issue with topologyoptimized designs, because the design is already near optimality.

Model Definition

The result of topology optimization can be converted to a geometry by taking the 0.5 contour of the filtered material volume factor or the projected material volume factor. In theory the two are identical, but in practice the fields are approximated with a linear representation on a refined mesh, and therefore it can be preferable to use the contour of the filtered material volume factor. This means that it is the contour of the field on the left in Figure 1 that will be the starting point of the model.



Figure 1: The result of Topology Optimization of an MBB Beam is shown with the filtered material volume factor to the left and the projected material volume factor to the right.

The model uses the Free Shape Symmetry feature to prevent the design from going outside the box of the original topology optimization problem.

Results and Discussion

The Helmholtz filter used by the **Density Model** in Topology Optimization of an MBB Beam is known to cause 90-degree angles on the boundaries of the design domain. The shape optimization changes this, because it is a detail that is not optimal, but it also repositions the triangular holes as seen in Figure 2.

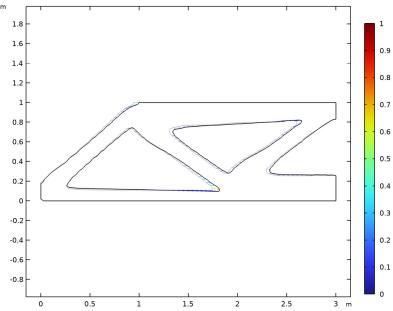


Figure 2: The default shape optimization plot shows the edges of the old and new geometry in gray and black, respectively. An arrow plot of the actual displacement is colored with the relative normal boundary displacement. The colors of the arrows thus indicate that the shape deformation is not limited by the maximum displacement.

Notes About the COMSOL Implementation

This model combines the Optimization and Solid Mechanics interfaces. The topologyoptimized design can be extracted in several ways, but it is best to combine a Filter dataset, a Mesh Part, and an Import geometry feature because this allows recycling of the selections. **Application Library path:** Optimization_Module/Shape_Optimization/mbb_beam_shape_optimization

Modeling Instructions

APPLICATION LIBRARIES

- I From the File menu, choose Application Libraries.
- 2 In the Application Libraries window, select Optimization Module>Topology Optimization> mbb_beam_optimization in the tree.
- 3 Click Open.

RESULTS

Filter I

- I In the Results toolbar, click More Datasets and choose Filter.
- 2 In the Settings window for Filter, locate the Data section.
- 3 From the Dataset list, choose Optimization/Parametric Solutions I (sol2).
- 4 Locate the Expression section. In the Expression text field, type dtopo1.theta_f.
- **5** Locate the **Filter** section. In the **Lower bound** text field, type 0.5.
- 6 Right-click Filter I and choose Create Mesh Part.

MESH PART I

- I In the Model Builder window, under Global Definitions>Mesh Parts right-click Mesh Part I and choose Build All.
- 2 Right-click Global Definitions>Mesh Parts>Mesh Part I and choose Create Geometry.

GEOMETRY 2

In the **Home** toolbar, click **| Build All**.

Moving Boundaries

- I In the Geometry toolbar, click \(\frac{1}{2} \) Selections and choose Box Selection.
- 2 In the Settings window for Box Selection, type Moving Boundaries in the Label text field.
- 3 Locate the Geometric Entity Level section. From the Level list, choose Boundary.

- 4 Locate the Box Limits section. In the x minimum text field, type a*0.001.
- 5 In the x maximum text field, type a*0.999.
- 6 In the y minimum text field, type b*0.001.
- 7 In the y maximum text field, type b*0.999.

Roller Boundaries

- I In the Geometry toolbar, click Selections and choose Complement Selection.
- 2 In the Settings window for Complement Selection, locate the Geometric Entity Level section.
- 3 From the Level list, choose Boundary.
- **4** Locate the **Input Entities** section. Click + **Add**.
- 5 In the Add dialog box, in the Selections to invert list, choose Load Boundary (Import 1), Symmetry y (Import 1), Symmetry x (Import 1), and Moving Boundaries.
- 6 Click OK.
- 7 In the Settings window for Complement Selection, type Roller Boundaries in the Label text field.

ADD PHYSICS

- I In the Home toolbar, click open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select Structural Mechanics>Solid Mechanics (solid).
- **4** Find the **Physics interfaces in study** subsection. In the table, clear the **Solve** check box for Optimization.
- 5 Click Add to Component 2 in the window toolbar.
- 6 In the Home toolbar, click and Physics to close the Add Physics window.

ADD MATERIAL

- I In the Home toolbar, click **Add Material** to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Structural steel.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click 👯 Add Material to close the Add Material window.

SOLID MECHANICS 2 (SOLID2)

Roller I

- I In the Model Builder window, under Component 2 (comp2) right-click Solid Mechanics 2 (solid2) and choose Roller.
- 2 In the Settings window for Roller, locate the Boundary Selection section.
- 3 From the Selection list, choose Symmetry x (Import 1).

Prescribed Displacement 1

- I In the Physics toolbar, click Boundaries and choose Prescribed Displacement.
- 2 In the Settings window for Prescribed Displacement, locate the Boundary Selection section.
- 3 From the Selection list, choose Symmetry y (Import I).
- 4 Locate the **Prescribed Displacement** section. From the **Displacement in y direction** list, choose **Prescribed**.

Boundary Load 1

- I In the Physics toolbar, click Boundaries and choose Boundary Load.
- 2 In the Settings window for Boundary Load, locate the Boundary Selection section.
- 3 From the Selection list, choose Load Boundary (Import 1).
- 4 Locate the Force section. From the Load type list, choose Total force.
- **5** Specify the \mathbf{F}_{tot} vector as

0	х
-100[kN]	у

MESH 2

- I In the Model Builder window, under Component 2 (comp2) click Mesh 2.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- 3 From the Element size list, choose Extra fine.
- 4 Click Build All.

Free Triangular 2

In the Mesh toolbar, click Free Triangular.

Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, click to expand the Element Size Parameters section.

- 3 In the Maximum element growth rate text field, type Inf.
- 4 In the Curvature factor text field, type Inf.
- 5 In the Resolution of narrow regions text field, type 0.
- 6 Click **Build All**.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- **4** Find the **Physics interfaces in study** subsection. In the table, clear the **Solve** check box for Solid Mechanics (solid).
- 5 Click Add Study in the window toolbar.
- **6** In the **Model Builder** window, click the root node.
- 7 In the Home toolbar, click Add Study to close the Add Study window.

VERIFICATION

- I In the Settings window for Study, type Verification in the Label text field.
- 2 In the Home toolbar, click **Compute**.

RESULTS

Topology Optimization

In the Model Builder window, under Results right-click Topology Optimization and choose Delete.

COMPONENT 2 (COMP2)

In the Model Builder window, click Component 2 (comp2).

Free Shape Domain I

In the Physics toolbar, click of Optimization and choose Shape Optimization.

- I In the Shape Optimization toolbar, click \square \square Symmetry/Roller.
- 2 In the Settings window for Symmetry/Roller, locate the Boundary Selection section.
- 3 From the Selection list, choose Roller Boundaries.

Free Shape Boundary I

I In the Shape Optimization toolbar, click Free Shape Boundary.

- 2 In the Settings window for Free Shape Boundary, locate the Boundary Selection section.
- 3 From the Selection list, choose Moving Boundaries.
- 4 Locate the Control Variable Settings section. In the text field, type 0.1.
- **5** Locate the **Filtering** section. From the R_{\min} list, choose **Medium**.

OPTIMIZATION

Steb 1: Stationary

- I In the Model Builder window, expand the Optimization node, then click Step I: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check boxes for Deformed geometry (Component 2) and Shape Optimization (Component 2).

VERIFICATION

Step 1: Stationary

- I In the Model Builder window, under Verification click Step 1: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check boxes for Deformed geometry (Component 2), Topology Optimization (Component 1), and Shape Optimization (Component 2).

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- **2** Go to the **Add Study** window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Find the Physics interfaces in study subsection. In the table, clear the Solve check box for Solid Mechanics (solid).
- 5 Click Add Study in the window toolbar.
- 6 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 3

Shape Optimization

- I In the Study toolbar, click optimization and choose Shape Optimization.
- 2 In the Settings window for Shape Optimization, locate the Optimization Solver section.
- 3 Clear the Move limits check box.

- 4 In the Maximum number of iterations text field, type 25.
- 5 Click Add Expression in the upper-right corner of the Objective Function section. From the menu, choose Component 2 (comp2)>Solid Mechanics 2>Global> comp2.solid2.Ws_tot - Total elastic strain energy - J.
- 6 Locate the Objective Function section. From the Objective scaling list, choose Initial solution based.
- 7 Locate the Control Variables section. In the table, clear the Solve for check box for Density Model I (dtopol).
- 8 Click Add Expression in the upper-right corner of the Constraints section. From the menu, choose Component 2 (comp2)>Definitions>Free Shape Domain I> comp2.fsd1.area - Free shape area - m2.
- **9** Locate the **Constraints** section. In the table, enter the following settings:

Expression	Lower bound	Upper bound
comp2.fsd1.area/a/b		volfrac

Steb 1: Stationary

- I In the Model Builder window, click Step I: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check box for Topology Optimization (Component 1).
- 4 In the Study toolbar, click $\underset{t=0}{\cup}$ Get Initial Value.

RESULTS

Topology Optimization

In the Model Builder window, under Results right-click Topology Optimization and choose Delete.

STUDY 3

Shape Optimization

- I In the Model Builder window, under Study 3 click Shape Optimization.
- 2 In the Settings window for Shape Optimization, locate the Output While Solving section.
- **3** Select the **Plot** check box.
- 4 From the Plot group list, choose Shape Optimization.
- 5 In the Model Builder window, click Study 3.
- 6 In the Settings window for Study, type Shape Optimization in the Label text field.

7 In the Study toolbar, click **Compute**.

RESULTS

Shape Optimization

- I Click the **Zoom Extents** button in the **Graphics** toolbar.
- 2 In the Model Builder window, under Results click Shape Optimization.
- 3 In the Shape Optimization toolbar, click Plot.

Shape Optimization (alternative plot)

- I In the Home toolbar, click Add Plot Group and choose 2D Plot Group.
- 2 In the Settings window for 2D Plot Group, type Shape Optimization (alternative plot) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Shape Optimization/ Solution 6 (6) (sol6).
- 4 Locate the Plot Settings section. Clear the Plot dataset edges check box.

Surface 1

- I Right-click Shape Optimization (alternative plot) and choose Surface.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Dataset list, choose Verification/Solution 5 (4) (sol5).
- **4** Locate the **Expression** section. In the **Expression** text field, type 1.
- 5 Locate the Coloring and Style section. From the Coloring list, choose Uniform.
- 6 From the Color list, choose Gray.

Surface 2

- I In the Model Builder window, right-click Shape Optimization (alternative plot) and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type 1.
- 4 Locate the Coloring and Style section. From the Coloring list, choose Uniform.

Line 1

- I Right-click Shape Optimization (alternative plot) and choose Line.
- 2 In the Settings window for Line, locate the Data section.
- 3 From the Dataset list, choose Verification/Solution 5 (4) (sol5).
- 4 Locate the Coloring and Style section. From the Line type list, choose Tube.

- **5** Select the **Radius scale factor** check box. In the associated text field, type **0.0035**.
- 6 From the Coloring list, choose Uniform.
- 7 From the Color list, choose Gray.

Line 2

- I Right-click Shape Optimization (alternative plot) and choose Line.
- 2 In the Settings window for Line, locate the Expression section.
- 3 In the Expression text field, type 1.
- 4 Locate the Coloring and Style section. From the Coloring list, choose Uniform.
- 5 From the Color list, choose Black.
- 6 From the Line type list, choose Tube.
- 7 Select the Radius scale factor check box. In the associated text field, type 0.0035.
- 8 In the Shape Optimization (alternative plot) toolbar, click **Plot**.
- **9** Click the **Zoom Extents** button in the **Graphics** toolbar.

Shaped Optimized Stress (solid2)

- I In the Model Builder window, under Results click Stress (solid2) 1.
- 2 In the Settings window for 2D Plot Group, type Shaped Optimized Stress (solid2) in the Label text field.