

Electrochemical Polishing

This example illustrates the principle of electrochemical polishing. The simplified 2D model geometry consists of two electrodes and an intermediate electrolyte domain. The positive electrode has a protrusion, representing a surface defect. The purpose of the application is to examine how this protrusion and the surrounding electrode material are depleted over a period of time.

Model Definition

The potential drop over the electrodes is 30 V, and the electrolyte has a conductivity of 10 S/m.

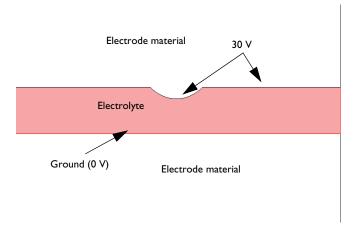


Figure 1: Model geometry.

Modeling the depletion of the positive electrode requires a moving boundary because the geometry changes and the current density distribution with it. A simple model for the depletion is based on the assumption that the depletion rate is proportional to the normal current density at the electrode surface. The velocity, U, normal to the mesh at the electrode surface then becomes

$$U = -KJ_n \tag{1}$$

where K is the coefficient of proportionality, and J_n is the normal current density. In this example, $K = 10^{-11} \text{ m}^3/\text{As}$.

The part of the electrode and electrolyte that the model includes is about 3 mm wide and the distance between the electrodes is 0.4 mm.

After a period of 10 s, the protrusion is somewhat smoothed out, and a significant portion of the positive electrode has been depleted.

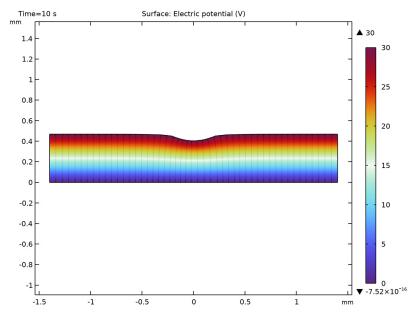


Figure 2: Potential distribution and electrode depletion after 10 s.

Using Equation 1, the expected total depletion increment, $d(\Delta t = 10 \text{ s})$, over the simulated time interval can be estimated as

$$d(\Delta t) = |U| \Delta t = K |J_n| \Delta t = \left(10^{-11} \frac{\text{m}^3}{\text{As}}\right) \cdot \left(10^6 \frac{\text{A}}{\text{m}}\right) \cdot (10^1 \text{s}) = 10^{-4} \text{ m}$$
 (2)

This estimate agrees with the maximum value for the *y*-displacement obtained for the model, showing that the approximate formula (which does not take effects from the curved boundary into account) is in fact very accurate.

Notes About the COMSOL Implementation

This application uses the Electric Currents interface in combination with a Deformed Geometry. The variable for the normal current density defines the deforming boundary velocity. Due to good stirring of the electrolyte, the dynamics in this example is quasi static

in nature with regards to the electrolyte charge transport, and the time dependence only enters in the depletion (removal of material) of the electrode.

Application Library path: COMSOL_Multiphysics/Electromagnetics/electrochemical_polishing

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **2** 2D.
- 2 In the Select Physics tree, select AC/DC>Electric Fields and Currents>Electric Currents (ec).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select General Studies>Time Dependent.
- 6 Click M Done.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Description
K	1e-11[m^3/(A*s)]	Coefficient of proportionality

GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- **3** From the **Length unit** list, choose **mm**.

Rectangle I (rI)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 2.8.
- 4 In the Height text field, type 0.4.
- 5 Locate the **Position** section. In the **x** text field, type -1.4.
- 6 Click **Build Selected**.

Circle I (c1)


- I In the **Geometry** toolbar, click Circle.
- 2 In the Settings window for Circle, locate the Size and Shape section.
- 3 In the Radius text field, type 0.3.
- 4 Locate the **Position** section. In the **y** text field, type 0.6.

Difference I (dif1)

- I In the Geometry toolbar, click Booleans and Partitions and choose Difference.
- 2 Select the object rI only to add it to the Objects to add list.
- 3 In the Settings window for Difference, locate the Difference section.
- **4** Click to select the **Activate Selection** toggle button for **Objects to subtract**.
- **5** Select the object **c1** only.
- 6 Click | Build Selected.

7 Click the **Zoom Extents** button in the **Graphics** toolbar.

The model geometry is now complete.

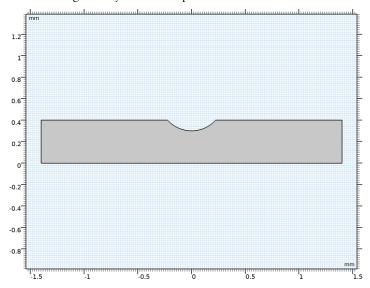

Before turning to the **Deformed Geometry** interface settings, define variables for the local displacement components.

DEFINITIONS

Variables 1

- I In the Home toolbar, click a= Variables and choose Local Variables.
- 2 In the Settings window for Variables, locate the Variables section.
- **3** In the table, enter the following settings:

Name	Expression	Unit	Description
dx	x-Xg	m	x-displacement
dy	y-Yg	m	y-displacement

Here, Xg and Yg are geometry-frame coordinates corresponding to x and y.

ELECTRIC CURRENTS (EC)

- I In the Model Builder window, under Component I (compl) click Electric Currents (ec).
- 2 In the Settings window for Electric Currents, click to expand the Equation section.

3 From the **Equation form** list, choose **Stationary**.

With this setting you specify that the current distribution can be regarded as stationary on the time scale determined by the depletion rate.

Current Conservation I

- I In the Model Builder window, under Component I (compl)>Electric Currents (ec) click Current Conservation I.
- 2 In the Settings window for Current Conservation, locate the Constitutive Relation Jc-E section.
- **3** From the σ list, choose **User defined**. In the associated text field, type 10.

Electric Potential I

- I In the Physics toolbar, click Boundaries and choose Electric Potential.
- **2** Select Boundaries 3, 4, 6, and 7 only.
- 3 In the Settings window for Electric Potential, locate the Electric Potential section.
- **4** In the V_0 text field, type 30.

Ground I

- I In the Physics toolbar, click Boundaries and choose Ground.
- 2 Select Boundary 2 only.

Electric Insulation 1

For the left and right boundaries, the default boundary condition is a good approximation if you want to simulate that the electrodes are extended indefinitely in both directions.

COMPONENT I (COMPI)

Deforming Domain I

- I In the Physics toolbar, click Deformed Geometry and choose Free Deformation.
- **2** Select Domain 1 only.
- 3 In the Settings window for Deforming Domain, locate the Smoothing section.
- 4 From the Mesh smoothing type list, choose Laplace.

Prescribed Normal Mesh Velocity I

- I In the Deformed Geometry toolbar, click Prescribed Normal Mesh Velocity.
- **2** Select Boundaries 3, 4, 6, and 7 only.
- 3 In the Settings window for Prescribed Normal Mesh Velocity, locate the Prescribed Normal Mesh Velocity section.


4 In the \mathbf{v}_n text field, type -K*(-ec.nJ).

Prescribed Normal Mesh Displacement I

- I In the Deformed Geometry toolbar, click Prescribed Normal Mesh Displacement.
- 2 Select Boundaries 1, 2, and 5 only.

MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- **3** From the **Element size** list, choose **Finer**.
- 4 Click III Build All.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

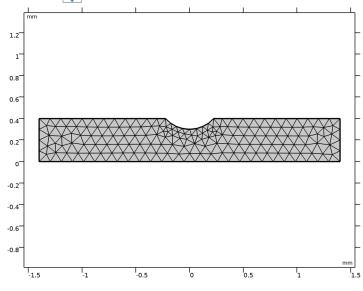

STUDY I

Step 1: Time Dependent

- I In the Model Builder window, under Study I click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- 3 In the Output times text field, type range (0, 10).
- 4 In the Home toolbar, click **Compute**.

RESULTS

Electric Potential (ec)


I Click the Zoom Extents button in the Graphics toolbar.

The first default plot shows the potential field at the end of the simulation interval; compare with Figure 2.

Electric Field Norm (ec)

The second default plot shows the electric field as a combined surface and streamline plot:

I In the Model Builder window, click Electric Field Norm (ec).

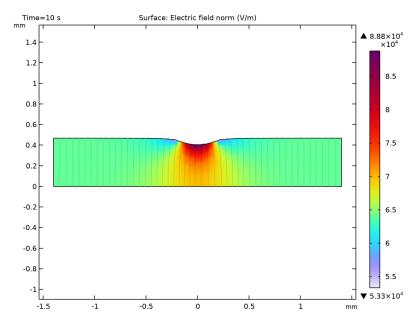

Current Density Norm

Next, plot the current distribution.

- I In the Home toolbar, click Add Plot Group and choose 2D Plot Group.
- 2 In the Settings window for 2D Plot Group, type Current Density Norm in the Label text field.

Surface I

I Right-click Current Density Norm and choose Surface.

- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Electric Currents> Currents and charge>ec.norm] - Current density norm - A/m2.
- 3 In the Current Density Norm toolbar, click Plot.
- 4 Click the **Zoom Extents** button in the **Graphics** toolbar.


Add a Max/Min Point plot to determine the maximum and minimum values of the current density norm.

Current Density Norm

In the **Current Density Norm** toolbar, click More Plots and choose Max/Min Point.

Max/Min Point I

- I In the Settings window for Max/Min Point, locate the Expression section.
- 2 In the Expression text field, type ec.normJ.
- 3 In the Current Density Norm toolbar, click Plot.

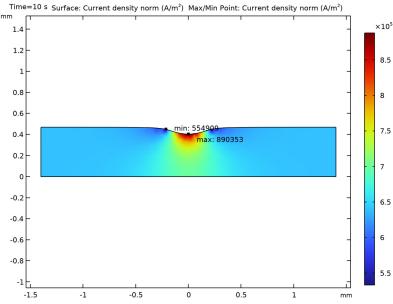

The maximum current density is thus roughly 9.10^5 A/m².

Depletion, y Direction

To see the magnitude of the depletion in the y direction more easily, plot the y-component of the mesh displacement and evaluate its maximum value.

- I In the Home toolbar, click Add Plot Group and choose 2D Plot Group.
- 2 In the Settings window for 2D Plot Group, type Depletion, y Direction in the Label text field.

Surface I

- I Right-click Depletion, y Direction and choose Surface.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Definitions> Variables>dy - y-displacement - m.
- 3 In the Depletion, y Direction toolbar, click Plot.
- 4 Click the **Q** Zoom In button in the Graphics toolbar.


Depletion, y Direction

In the **Depletion**, y **Direction** toolbar, click More Plots and choose Max/Min Point.

Max/Min Point I

- I In the Settings window for Max/Min Point, locate the Expression section.
- **2** In the **Expression** text field, type dy.
- 3 Locate the Display section. From the Display list, choose Max.

4 In the Depletion, y Direction toolbar, click Plot.

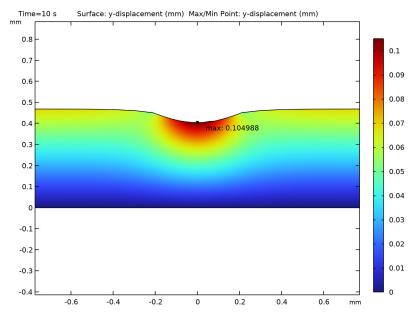

The maximum value for the y-displacement is approximately 0.1 mm, which agrees with the value calculated in Equation 2.