

# Steam Reformer

# Introduction

In fuel cell power generators, a steam reformer unit typically produces the hydrogen needed for the fuel cell stack. This example illustrates the modeling of such a steam reformer. The tightly coupled system of mass, energy, and momentum equations used to describe the steam reformer is readily set up using the predefined physics interfaces of the Chemical Reaction Engineering Module.

Depending on the downstream fuel cell type, the carbon monoxide that forms through the reverse water-gas shift (WGS) reaction may poison the fuel cell catalyst. Therefore, after setting up the model, changes are made to the setup to investigate how to decrease the amount of carbon monoxide formed. Three different setups are modeled:

- Countercurrent setup: The heating media flows in the opposite direction to the reactants in the porous bed with an inlet temperature of 900 K for the heating media.
- Cocurrent 900 K setup: The heating media flows in the same direction as the reactants in the bed with an inlet temperature of 900 K for the heating media.
- Cocurrent 1000 K setup: The heating media flows in the same direction as the reactants in the bed with an inlet temperature of 1000 K for the heating media.

Figure 1 shows the geometry of the reformer. The reformation chemistry occurs in a porous catalytic bed where energy is supplied through heating tubes to drive the endothermic process. The reactor is enclosed in an insulating jacket.

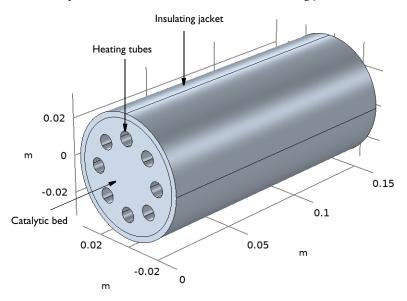


Figure 1: Geometry of the steam reformer unit.

In this example, propane and steam enters the reactor with a steam-to-carbon ratio of 3 mol H<sub>2</sub>O per mol C. Operating with steam-to-carbon ratios between 2.5 and 4.5 mol/ mol is common practice in industry to suppress carbon formation reactions (Ref. 2). Carbon formation is not included in this model, but an example of how to model this can be found in the model Carbon Deposition in Heterogeneous Catalysis, also in the Chemical Reaction Engineering Module Application Library.

For heating purposes, hot gases from a burner are passed through a number of tubes perforating the reactor bed. The modeled domain can be reduced due to symmetry, see Figure 2.

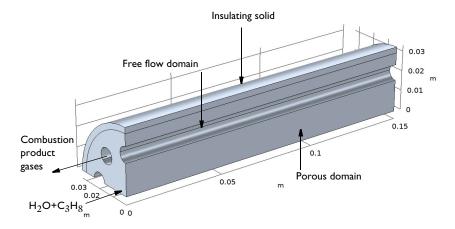


Figure 2: Making use of symmetry, the modeling domain is reduced to a quarter of the full geometry.

In the reformer, water and propane react to form hydrogen and carbon dioxide:

$${\rm C_3H_8 + 6H_2O} \rightarrow 10{\rm H_2 + 3CO_2} \tag{1}$$

An overall kinetic model has been established from experiments (Ref. 1), where the reaction rate (SI unit: mol/(m<sup>3</sup>·s)) has been found to be first order in the propane concentration:

$$r_1 = kc_{\text{C3H8}}$$

The rate constant follows Arrhenius equation, with the temperature dependence:

$$k = A \exp\left(-\frac{E_a}{R_g T}\right)$$

where the frequency factor A is  $7 \cdot 10^5$  s<sup>-1</sup> and the activation energy  $E_a$  is 83.14 kJ/mol.

In the presence of hydrogen and carbon dioxide there is a probability to produce carbon monoxide through the reverse water gas shift reaction:

$$CO + H_2O \leftrightarrow CO_2 + H_2$$
 (2)

In this model, the reaction rate expression is described by the mass action law

$$r_2 = k_{\rm f} c_{\rm CO} c_{\rm H2O} - k_{\rm r} c_{\rm CO2} c_{\rm H2} \tag{3}$$

where  $k_{\rm f}$  and  $k_{\rm r}$  are the forward and reverse rate constants, respectively. The forward rate constant is set up with an Arrhenius expression (parameters based on Ref. 3), while the reverse rate constant is defined using the concentration equilibrium constant  $K_{\rm c}$ 

$$k_r = \frac{k_f}{K_C}$$

The water-gas shift reaction is mildly exothermic in its forward direction and the contribution from the reverse direction thus increases with temperature. Production of carbon monoxide is undesirable since hydrogen levels decrease, and carbon monoxide acts as a poison for the catalyst in the downstream fuel cell. Even low levels of carbon monoxide could be harmful for the downstream catalyst, and it is therefore important to include this reaction in the model.

# FLUID FLOW — REFORMER BED

The flow of gaseous species through the reformer bed is described by Darcy's law:

$$\nabla \cdot \left( \rho \left( -\frac{\kappa}{\eta} \nabla p_{sr} \right) \right) = 0$$

Here,  $\rho$  denotes the gas density (SI unit: kg/m<sup>3</sup>),  $\eta$  the viscosity (SI unit: Pa·s),  $\kappa$  the permeability of the porous medium (SI unit: m<sup>2</sup>), and  $p_{sr}$  is the pressure in the reformer bed (SI unit: Pa). The Darcy's law equation is, in this example, solved with the **Darcy's law** interface.

The inlet and outlet boundary conditions describe a 50 Pa pressure drop across the bed. All other boundaries are impervious, corresponding to the condition:

$$-\frac{\kappa}{\eta} \nabla p_{\rm sr} \cdot \mathbf{n} = 0$$

# ENERGY TRANSPORT — REFORMER BED

A one-equation approach is used to describe the average temperature distribution in the porous bed:

$$(\rho C_p)_{\text{eff}} \frac{\partial T_{\text{sr}}}{\partial t} + \nabla \cdot (-k_{\text{eff}} \nabla T_{\text{sr}}) + (\rho C_p)_{\text{f}} \mathbf{u} \cdot \nabla T_{\text{sr}} = \varepsilon Q$$

The effective thermal conductivity of the bed,  $k_{\text{eff}}$  (SI unit: W/(m·K)), is given by:

$$k_{\text{eff}} = \varepsilon k_{\text{f}} + (1 - \varepsilon)k_{\text{pm}}$$

In the above equations, the indices "f" and "pm" denote fluid and porous matrix, respectively, and  $\varepsilon$  is the volume fraction of the fluid phase. The effective volumetric heat capacity of the bed is given by:

$$(\rho C_p)_{\text{eff}} = \varepsilon (\rho C_p)_{\text{f}} + (1 - \varepsilon) (\rho C_p)_{\text{pm}}$$

Furthermore,  $T_{sr}$  (SI unit: K) is the temperature in the bed, Q (SI unit: W/m<sup>3</sup>) represents a heat source, and **u** (SI unit: m/s) the fluid velocity. The equation is modeled using the Heat Transfer in Porous Media interface.

Assuming that the porous medium is homogeneous and isotropic, the steady-state equation becomes

$$\nabla \cdot (-k_{\rm sr} \nabla T_{\rm sr}) + (\rho C_{\rm p})_{\rm f} \mathbf{u} \cdot \nabla T_{\rm sr} = \varepsilon Q \tag{4}$$

The heat source Q (SI unit:  $J/(m^3 \cdot s)$  due to reaction is

$$Q = -\sum_{j} H_{j} r_{j} ,$$

where  $H_j$  (SI unit: J/(mol·K)) is the enthalpy of reaction for reaction j, and  $r_j$  is the reaction rate. Steam reformation of propane is endothermic, with an enthalpy of reaction of H = 410 kJ/mol. The two enthalpy of reaction are derived automatically from Thermodynamics.

Equation 4 also accounts for the conductive heat transfer in the insulating jacket. As no reactions occur in this domain, the description reduces to:

$$\nabla \cdot (-k_{\rm i} \nabla T_{\rm sr}) \, = \, 0$$

where  $k_i$  is the thermal conductivity (W/(m·K)) of the insulating material.

The temperature of the gas is 700 K at the inlet. At the outlet, it is assumed that convective heat transport is dominant:

$$\mathbf{n} \cdot (-k_{\mathrm{sr}} \nabla T_{\mathrm{sr}}) = 0$$

The heat exchange between the bed and the tubes is described by:

$$q = h_{\rm ht}(T_{\rm sr} - T) \tag{5}$$

where  $h_{\rm ht}$  is the heat transfer coefficient (SI unit: W/(m<sup>2</sup>·K)) and T (SI unit: K) is the temperature of the heating tubes. A similar expression describes the heat flux from the insulating jacket to the surroundings:

$$q = -h_{\rm j}(T_{\rm sr} - T_{\rm amb})$$

where  $h_j$  is the heat transfer coefficient of the jacket (SI unit: W/(m<sup>2</sup>·K)) and  $T_{\rm amb}$  (SI unit: K) is the ambient temperature.

# MASS TRANSPORT — REFORMER BED

The **Transport of Concentrated Species** interface gives the equations for the mass transport. The mass-balance equations for the model are the Maxwell-Stefan diffusion and convection equations at steady state:

$$\nabla \cdot \left( \rho \omega_i \mathbf{u} - \rho \omega_i \sum_{k=1}^n \tilde{D_{e,ik}} \left( \nabla x_k + (x_k - \omega_k) \frac{\nabla p}{p} \right) - D_{e,i}^T \frac{\nabla T}{T} \right) = R_i$$

In the equations above,  $\rho$  denotes the density (SI unit: kg/m³),  $\omega_i$  is the mass fraction of species i,  $x_k$  is the molar fraction of species k,  $D_{e,ik}$  is the ik component of the effective multicomponent Fick diffusivity (SI unit: m²/s).  $D_{e,i}^T$  denotes the effective generalized thermal diffusion coefficient (SI unit: kg/(m·s)), T (SI unit: K) is the temperature, and  $R_i$  (SI unit: kg/(m³·s)) the reaction rate. The mass-balances are set up and solved with the Transport of Concentrated Species interface. The effective parameters accounts for the impact of porosity on the diffusivity, this model uses the Millington and Quirk model:

$$D_{e,ik} = \varepsilon_p^{4/3} D_{ik}$$

$$D_{\mathrm{e},i}^{T} = \varepsilon_{\mathrm{p}}^{4/3} D_{i}^{T}$$

The inlet weight fraction of propane is 0.28. At the outlet, the convective flux condition is used:

$$\mathbf{n} \cdot \left( \left( -\rho \omega_i \sum_{j=1}^n \tilde{D}_{ij} \left( \nabla x_j + (x_j - \omega_j) \frac{\nabla p}{p} \right) \right) - D^T \frac{\nabla T}{T} \right) = 0$$

All other boundaries use the insulating or symmetry condition.

# FLUID FLOW — HEATING TUBES

The flow of heating gas in the tubes is described by the weakly compressible Navier-Stokes equations at steady-state:

$$\rho(\mathbf{u} \cdot \nabla)\mathbf{u} = \nabla \cdot [-p\mathbf{I} + \mu(\nabla \mathbf{u} + (\nabla \mathbf{u})^T) - (2\mu/3)(\nabla \cdot \mathbf{u})\mathbf{I}]$$
  
$$\nabla \cdot (\rho \mathbf{u}) = 0$$

where  $\rho$  (SI unit: kg/m<sup>3</sup>) denotes density,  $\boldsymbol{u}$  (SI unit: m/s) represents the velocity,  $\mu$  (SI unit:  $kg/(m \cdot s)$ ) denotes dynamic viscosity, and p (SI unit: Pa) equals the pressure in the tubes.

The boundary conditions for the walls and outlet are

$$\mathbf{u} = \mathbf{0}$$
 walls  $p = p_{ref}$  outlet

At the outlet, viscous stresses are ignored and the pressure is set to the reference pressure. For the inlet boundary condition, fully developed flow is assumed and solved for using an average velocity.

The Laminar Flow interface sets up and solves the Navier-Stokes equations and is here used to model the gas flow in the tubes. Since the flow is nonisothermal, the **Heat Transfer in** Fluids interface is also used. These interfaces are coupled through the Nonisothermal Flow multiphysics coupling feature.

# ENERGY TRANSPORT — HEATING TUBES

The energy transport in heating tubes is described by:

$$\nabla \cdot (-k_{\rm ht} \nabla T) + \rho C_p \mathbf{u} \cdot \nabla T = 0$$

where  $k_{\rm ht}$  is the thermal conductivity (SI unit: W/(m·K)) of the heating gas. The temperature of the gas is 900 K at the inlet. Also this energy transport is modeled with the Heat Transfer in Fluids interface.

At the outlet, it is assumed that convective heat transport is dominant:

$$\mathbf{n} \cdot (-k_{\mathrm{ht}} \nabla T) = 0$$

The heat exchange between the bed and tubes is given by:

$$q = -h_{\rm ht}(T_{\rm sr} - T)$$

This is the same heat flux as given by Equation 5, but with reversed sign.

# Results and Discussion

Figure 3 shows the mass fraction of propane in the reformer bed in the countercurrent setup. The inlet mass fraction is 0.20 while the fraction at the outlet is close to zero.

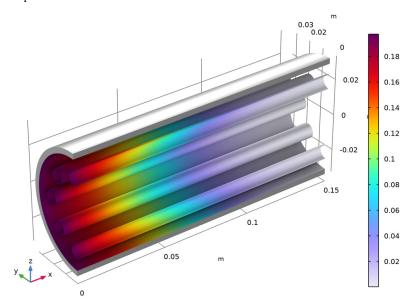


Figure 3: Mass fraction distribution of propane in the reformer bed. Counter current setup.

Figure 4, a cut plane plot of the countercurrent dataset, shows the mass fraction of propane in the bed, half way down the reactor length. The temperature in the cut plane is illustrated with contour lines. The mass fraction distribution in the cut plane is small and the heat supplied by the tubes is thus sufficient to make use of the entire catalytic volume.

Figure 4 confirms the picture in the previous surface plot, namely that about 75% of the propane has been reformed already half way through the reactor.

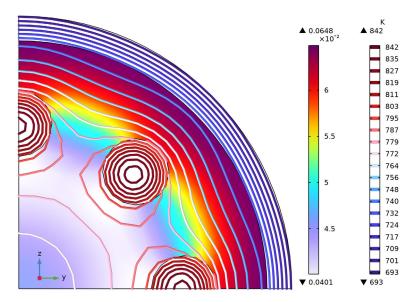
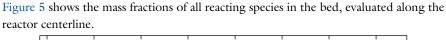


Figure 4: Mass fraction distribution of propane in a cut plane half way down the reactor length. Countercurrent setup.



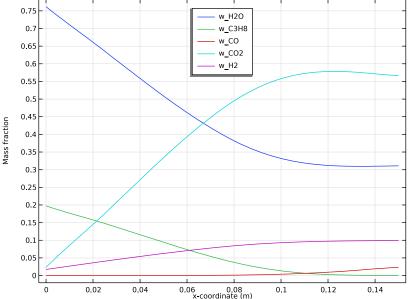


Figure 5: Mass fraction of reacting species as function of bed length, plotted along the reactor centerline. Countercurrent setup.

CO is formed as a result of the reverse water-gas shift reaction and at the exit of the bed the mass fraction of CO is a few percent. Depending on the downstream catalyst this may pose a problem. Therefore, two additional reformer setups are modeled to investigate how to decrease the amount of CO formed. The propane and carbon monoxide levels along the bed centerline for all three setups are shown in Figure 7. It is evident that a cocurrent setup, keeping the same inlet temperature for the heating media (900 K), decreases the amount of CO formed in the bed. This effect is mainly due to the lower conversion of propane, resulting in less carbon dioxide, but also an effect of the different temperature profiles in the compared setups. Increasing the heating media temperature to 1000 K in the cocurrent case increases the conversion of propane in the bed, and as a result, the amount of CO formed. Still, with this setup (cocurrent 1000 K) it is possible to decrease

the reactor length to 0.1 m while keeping the same level of conversion of propane but not increasing the amount of CO formed.

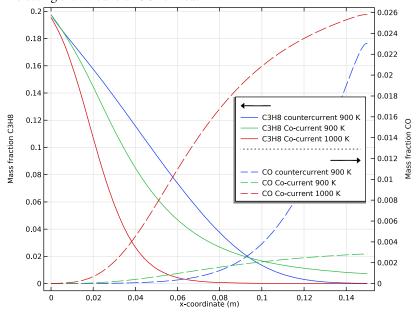


Figure 6: Mass fraction for propane and carbon monoxide along the bed centerline. Three different setups are shown (countercurrent 900 K, cocurrent 900 K, and cocurrent 1000 K).

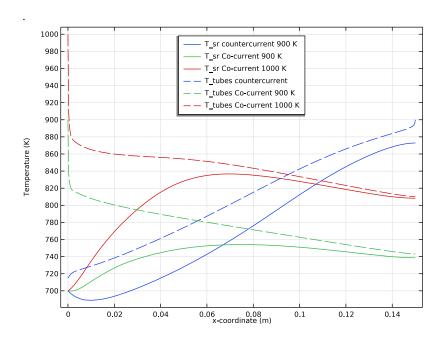


Figure 7: Reactor temperature as a function of position, plotted along the reactor centerline (solid lines) as well as along one of the tube walls (dashed lines).

Figure 7 shows the temperature along the centerline of the bed, as well as the temperature along one of the tube walls. The gas of the heating tubes enters at 900 K or 1000 K, depending on the setup, and exits at approximately 716 K, 740 K, and 810 K for the cases countercurrent, cocurrent 900 K, and cocurrent 1000 K, respectively. The gas temperature in the reformer bed is 700 K at the inlet for all three setups. For the countercurrent case, the temperature goes through a minimum (due to the endothermic steam reforming reaction), after which it increases and finally exits with an average temperature of 860 K (not shown in the plot). The average exit temperatures (not shown in plot) for the cocurrent cases are both lower than for the countercurrent case, which is beneficial for the forward water-gas shift reaction (decreases CO formation).

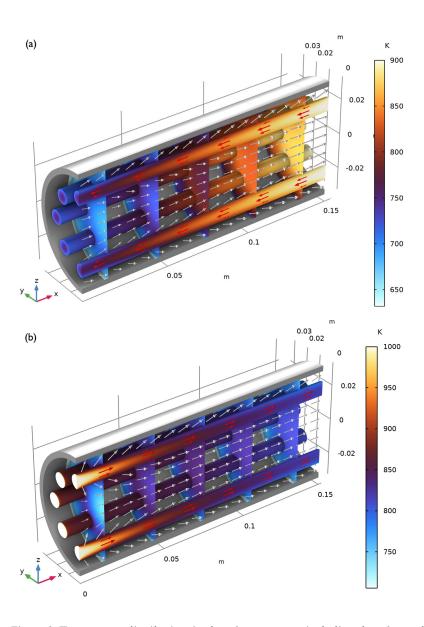


Figure 8: Temperature distributions in the reformer system, including the reformer bed and insulating wall (slices), and heating tubes (surface). Arrows indicate total heat flux on part of the symmetry surface for the bed and heating tubes. (a) Countercurrent setup, (b) Cocurrent  $1000~\mathrm{K}$  setup.

The energy exchange between the heating tubes and reformer bed is clearly illustrated in Figure 8, showing both the countercurrent and the cocurrent setup (1000 K).

Figure 9 shows, for the cocurrent 1000 K setup, the velocity fields of both the heating gas in the tubes and the reacting gas in the bed. The flow in the heating tubes is laminar and the parabolic velocity distribution is clearly seen. The gas velocity in the porous bed is relatively stable throughout the reactor. This is not the case for the countercurrent setup where the gas velocity in the bed increases much faster along the bed (not shown) due to the temperature increase down the reactor.

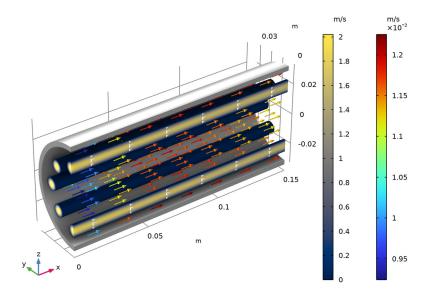


Figure 9: Velocity fields of the heating tubes and the reformer bed. Cocurrent 1000 K setup.

Figure 10 illustrates, for the cocurrent 1000 K setup, the associated density variations in the reformer bed, accounting for both composition and temperature effects. The density variations are all present close to the bed inlet. As for the velocity, the density plot for the countercurrent case is quite different, with a steady decrease in density along the bed length (not shown).

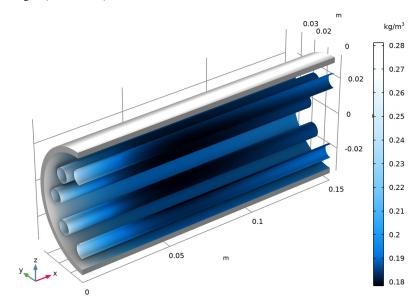


Figure 10: Overall gas density in the reformer bed. Cocurrent 1000 K setup.

In summary, this example illustrates the simulation of a reactor described by fully coupled mass, energy, and flow equations.

# Reference

- 1. P. Gateau, Design of Reactors and Heat Exchange Systems to Optimize a Fuel Cell Reformer, Proceedings of the COMSOL User's Conference Grenoble, 2007.
- 2. J.A. Moulijn, M. Makkee, and A.E. van Diepen, Chemical Process Technology, 1st edition, John Wiley & Sons, 2001.
- 3. C. Rhodes, B.P. Williams, F. King, and G.J. Hutchings, "Promotion of Fe3O4/Cr2O3 high temperature water gas shift catalyst," Catalysis Communications, vol. 3, pp. 381-384, 2002.

Application Library path: Chemical Reaction Engineering Module/

Reactors\_with\_Porous\_Catalysts/steam\_reformer

# Modeling Instructions

From the File menu, choose New.

#### NEW

In the New window, click Blank Model.

Begin by adding a **Thermodynamic system** including all the chemical species present in the system.

# **GLOBAL DEFINITIONS**

In the Physics toolbar, click Thermodynamics and choose Thermodynamic System.

#### SELECT SYSTEM

- I Go to the Select System window.
- 2 Click Next in the window toolbar.

# SELECT SPECIES

- I Go to the **Select Species** window.
- 2 In the Species list, select propane (74-98-6, C3H8).
- 3 Click + Add Selected.
- 4 In the Species list, select water (7732-18-5, H2O).
- 5 Click + Add Selected.
- 6 In the Species list, select hydrogen (1333-74-0, H2).
- 7 Click + Add Selected.
- 8 In the Species list, select carbon dioxide (124-38-9, CO2).
- 9 Click + Add Selected.
- 10 In the Species list, select carbon monoxide (630-08-0, CO).
- II Click + Add Selected.
- 12 Click Next in the window toolbar.

#### SELECT THERMODYNAMIC MODEL

- I Go to the Select Thermodynamic Model window.
- 2 Click Finish in the window toolbar.

# **GLOBAL DEFINITIONS**

Gas System I (pp I)

With a Thermodynamic system in place, it is straightforward to set up the Chemistry interface using Generate Chemistry.

I In the Model Builder window, under Global Definitions>Thermodynamics right-click Gas System I (ppI) and choose Generate Chemistry.

#### SELECT SPECIES

- I Go to the Select Species window.
- 2 Click Add All.
- 3 Click Next in the window toolbar.

#### CHEMISTRY SETTINGS

- I Go to the Chemistry Settings window.
- 2 From the Mass transfer list, choose Concentrated species.
- 3 Click Finish in the window toolbar.

# **GLOBAL DEFINITIONS**

A set of parameters that are useful when building the model are available in a text file. In the next steps load these into the parameters section.

#### Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file steam\_reformer\_parameters.txt.

# **GEOMETRY I**

Now create the geometry. To simplify this step, insert a prepared geometry sequence:

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Geometry toolbar, point to Import/Export and choose Insert Sequence.

- **3** Browse to the model's Application Libraries folder and double-click the file steam reformer geom sequence.mph.
- 4 Click Build All in the Geometry toolbar.

The imported sequence contains all required selections in addition to the actual geometry. Selections facilitate the work of assigning materials, setting boundary conditions, and plot the results.

If you want to know how to create such a geometry, you can follow the tutorial under applications/COMSOL\_Multiphysics/Geometry Tutorials.

#### DEFINITIONS

Integration | (intob|)

- I In the Definitions toolbar, click Monlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, locate the Source Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose Bed Inlet (Work Plane I).

Create the materials for hot gas (air), insulating jacket, and catalytic bed.

# MATERIALS

# Catalyst

- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Catalyst in the Label text field.

#### Insulation

- I Right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Insulation in the Label text field.
- 3 Locate the Geometric Entity Selection section. From the Selection list, choose lacket.

#### ADD MATERIAL

- I In the Home toolbar, click Radd Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click Radd Material to close the Add Material window.

#### MATERIALS

Air (mat3)

- I In the Settings window for Material, locate the Geometric Entity Selection section.
- 2 From the Selection list, choose Heating Tubes.

Porous Material I (pmat1)

- I Right-click Materials and choose More Materials>Porous Material.
- 2 In the Settings window for Porous Material, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Catalytic Bed.

Now add the physics interfaces. When they are all added, go back to each of the interfaces, assign them to their domains, and add the necessary feature nodes. Based on this, COMSOL automatically detects which material properties are needed and you can then fill them in.

#### ADD PHYSICS

- I In the Home toolbar, click and Physics to open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select Chemical Species Transport>Transport of Concentrated Species (tcs).
- 4 Click Add to Component I in the window toolbar.

# TRANSPORT OF CONCENTRATED SPECIES (TCS)

- I In the Settings window for Transport of Concentrated Species, locate the Transport Mechanisms section.
- 2 Select the Mass transfer in porous media check box.
- 3 Click to expand the **Dependent Variables** section. In the **Number of species** text field, type
- **4** In the **Mass fractions (I)** table, enter the following settings:

W_	H20
w_	_C3H8
w_	H2
w_	_C02
w_	_CO

#### ADD PHYSICS

I Go to the Add Physics window.

- 2 In the tree, select Fluid Flow>Porous Media and Subsurface Flow>Darcy's Law (dl).
- **3** Click **Add to Component I** in the window toolbar.

# DARCY'S LAW (DL)

- I In the Settings window for Darcy's Law, locate the Physical Model section.
- **2** In the  $p_{ref}$  text field, type p\_ref.
- 3 Click to expand the **Dependent Variables** section. In the **Pressure (Pa)** text field, type p\_sr.

#### ADD PHYSICS

- I Go to the Add Physics window.
- 2 In the tree, select Heat Transfer>Porous Media>Heat Transfer in Porous Media (ht).
- 3 Click Add to Component I in the window toolbar.

# HEAT TRANSFER IN POROUS MEDIA (HT)

- I In the Settings window for Heat Transfer in Porous Media, click to expand the Dependent Variables section.
- 2 In the Temperature (K) text field, type T\_sr.

# ADD PHYSICS

- I Go to the Add Physics window.
- 2 In the tree, select Fluid Flow>Nonisothermal Flow>Laminar Flow.
- 3 Click Add to Component I in the window toolbar.
- 4 In the Home toolbar, click and Physics to close the Add Physics window.

# LAMINAR FLOW (SPF)

- I In the Settings window for Laminar Flow, locate the Physical Model section.
- **2** In the  $p_{ref}$  text field, type p\_ref.
- 3 Click to expand the Dependent Variables section. In the Pressure (Pa) text field, type p tubes.

# **HEAT TRANSFER IN FLUIDS 2 (HT2)**

- I In the Model Builder window, under Component I (compl) click Heat Transfer in Fluids 2 (ht2).
- 2 In the Settings window for Heat Transfer in Fluids, click to expand the Dependent Variables section.

3 In the Temperature (K) text field, type T\_tubes.

# CHEMISTRY (CHEM)

- I In the Model Builder window, under Component I (compl) click Chemistry (chem).
- 2 In the Settings window for Chemistry, locate the Species Matching section.
- 3 From the Species solved for list, choose Transport of Concentrated Species.
- **4** Find the **Bulk species** subsection. In the table, enter the following settings:

Species	Туре	Mass fraction	Value (I)	From Thermodynamics
C3H8	Free species	w_C3H8	Solved for	C3H8
СО	Free species	w_CO	Solved for	СО
CO2	Free species	w_CO2	Solved for	CO2
H2	Free species	w_H2	Solved for	H2
H2O	Free species	w_H2O	Solved for	H2O

# Reaction I

- I In the Physics toolbar, click **Domains** and choose Reaction.
- 2 In the Settings window for Reaction, locate the Reaction Formula section.
- 3 In the Formula text field, type C3H8 + H2O => H2 + CO2.
- 4 Click Balance in the upper-right corner of the Reaction Formula section.
- 5 Locate the Reaction Rate section. From the list, choose User defined.
- **6** In the  $r_i$  text field, type chem.kf\_1\*chem.c\_C3H8.
- 7 Locate the Reaction Orders section. Find the Volumetric overall reaction order subsection. In the Forward text field, type 1.
- 8 Locate the Rate Constants section. Select the Use Arrhenius expressions check box.
- **9** In the  $A^{f}$  text field, type A.
- **10** In the  $E^{f}$  text field, type Ea.

# Reaction 2

- I In the Physics toolbar, click **Domains** and choose Reaction.
- 2 In the Settings window for Reaction, locate the Reaction Formula section.

- 3 In the Formula text field, type CO+H2O<=>CO2+H2.
- 4 Click Apply.
- 5 Locate the Rate Constants section. Select the Specify equilibrium constant check box.
- 6 Select the Use Arrhenius expressions check box.
- 7 In the  $A^{f}$  text field, type A was.
- 8 In the  $E^{f}$  text field, type Ea wgs.

#### TRANSPORT OF CONCENTRATED SPECIES IN BED

- I In the Model Builder window, under Component I (compl) click Transport of Concentrated Species (tcs).
- 2 In the Settings window for Transport of Concentrated Species, type Transport of Concentrated Species in Bed in the Label text field.
- 3 Locate the Domain Selection section. From the Selection list, choose Catalytic Bed.
- 4 Locate the Transport Mechanisms section. From the Diffusion model list, choose Maxwell-Stefan.

#### Initial Values 1

- I In the Model Builder window, under Component I (compl)> Transport of Concentrated Species in Bed (tcs) click Initial Values 1.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- **3** In the  $\omega_{0.\text{wC3H8}}$  text field, type w\_C3H8\_in.
- **4** In the  $\omega_{0,wH2}$  text field, type w\_H2\_in.
- **5** In the  $\omega_{0,wCO2}$  text field, type w\_CO2\_in.
- **6** In the  $\omega_{0,wCO}$  text field, type w\_CO\_in.

# Porous Medium I

- I In the Physics toolbar, click **Domains** and choose Porous Medium.
- 2 In the Settings window for Porous Medium, locate the Domain Selection section.
- 3 From the Selection list, choose Catalytic Bed.

# Fluid 1

- I In the Model Builder window, click Fluid I.
- 2 In the Settings window for Fluid, locate the Convection section.
- 3 From the u list, choose Total Darcy velocity field (dl/porous1).

**4** Locate the **Diffusion** section. In the table, enter the following settings:

Species I	Species 2	Diffusivity	Diffusion coefficient (m^2/s)
w_H2O	w_C3H8	Maxwell-Stefan diffusivity , C3H8-H2O (chem)	comp1.chem.D_C3H8_H2O
w_H2O	w_H2	Maxwell-Stefan diffusivity , H2-H2O (chem)	comp1.chem.D_H2_H2O
w_H2O	w_CO2	Maxwell-Stefan diffusivity , CO2-H2O (chem)	comp1.chem.D_CO2_H2O
w_H2O	w_CO	Maxwell-Stefan diffusivity , CO-H2O (chem)	comp1.chem.D_CO_H2O
w_C3H8	w_H2	Maxwell-Stefan diffusivity , C3H8-H2 (chem)	comp1.chem.D_C3H8_H2
w_C3H8	w_CO2	Maxwell-Stefan diffusivity , C3H8-CO2 (chem)	comp1.chem.D_C3H8_CO2
w_C3H8	w_CO	Maxwell-Stefan diffusivity , C3H8-CO (chem)	comp1.chem.D_C3H8_CO
w_H2	w_CO2	Maxwell-Stefan diffusivity , CO2-H2 (chem)	comp1.chem.D_CO2_H2
w_H2	w_CO	Maxwell-Stefan diffusivity , CO-H2 (chem)	comp I.chem.D_CO_H2
w_CO2	w_CO	Maxwell-Stefan diffusivity , CO-CO2 (chem)	comp I.chem.D_CO_CO2

# Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- **3** From the  $\varepsilon_{D}$  list, choose From material.

# Reaction Sources 1

- I In the Physics toolbar, click **Domains** and choose Reaction Sources.
- 2 In the Settings window for Reaction Sources, locate the Domain Selection section.
- 3 From the Selection list, choose Catalytic Bed.
- **4** Locate the **Reactions** section. From the  $R_{
  m wC3H8}$  list, choose Reaction rate for species C3H8 (chem).
- 5 From the  $R_{\rm wH2}$  list, choose Reaction rate for species H2 (chem).
- 6 From the  $R_{\rm wCO2}$  list, choose Reaction rate for species CO2 (chem).
- 7 From the  $R_{
  m wCO}$  list, choose Reaction rate for species CO (chem).

8 Locate the Reacting Volume section. From the Reacting volume list, choose Pore volume.

Inflow I

In the Physics toolbar, click **Boundaries** and choose Inflow.

# DEFINITIONS

Variables I

- I In the Home toolbar, click  $\partial$ = Variables and choose Local Variables.
- 2 In the Settings window for Variables, locate the Variables section.
- **3** In the table, enter the following settings:

Name	Expression	Unit	Description
J_in_C3H8	<pre>intop1(tcs.rho*dl.U* w_C3H8_in)</pre>	kg/s	Mass flow rate, C3H8
J_in_H2	<pre>intop1(tcs.rho*dl.U* w_H2_in)</pre>	kg/s	Mass flow rate, H2
J_in_CO2	<pre>intop1(tcs.rho*dl.U* w_C02_in)</pre>	kg/s	Mass flow rate, CO2
J_in_CO	<pre>intop1(tcs.rho*dl.U* w_CO_in)</pre>	kg/s	Mass flow rate, CO

# TRANSPORT OF CONCENTRATED SPECIES IN BED (TCS)

Inflow I

- I In the Model Builder window, under Component I (compl)>
  Transport of Concentrated Species in Bed (tcs) click Inflow I.
- 2 In the Settings window for Inflow, locate the Boundary Selection section.
- 3 From the Selection list, choose Bed Inlet (Work Plane I).
- 4 Locate the Inflow section. From the Mixture specification list, choose Mass flow rates.
- **5** In the  $J_{\rm in,wC3H8}$  text field, type J\_in\_C3H8.
- **6** In the  $J_{\rm in.wH2}$  text field, type J\_in\_H2.
- 7 In the  $J_{\text{in.wCO2}}$  text field, type J\_in\_CO2.
- **8** In the  $J_{\rm in.wCO}$  text field, type J\_in\_CO.

Outflow I

- I In the Physics toolbar, click **Boundaries** and choose **Outflow**.
- 2 In the Settings window for Outflow, locate the Boundary Selection section.
- 3 From the Selection list, choose Bed Outlet.

#### DARCY'S LAW IN BED

- I In the Model Builder window, under Component I (compl) click Darcy's Law (dl).
- 2 In the Settings window for Darcy's Law, type Darcy's Law in Bed in the Label text field.
- 3 Locate the Domain Selection section. From the Selection list, choose Catalytic Bed.

#### Fluid 1

- I In the Model Builder window, under Component I (compl)>Darcy's Law in Bed (dl)> Porous Medium I click Fluid I.
- 2 In the Settings window for Fluid, locate the Fluid Properties section.
- **3** From the  $\rho$  list, choose **Density (tcs)**.
- 4 From the  $\mu$  list, choose Dynamic viscosity (chem).

#### Inlet I

- I In the Physics toolbar, click **Boundaries** and choose **Inlet**.
- 2 In the Settings window for Inlet, locate the Boundary Condition section.
- 3 From the Boundary condition list, choose Pressure.
- **4** Locate the **Pressure** section. In the  $p_0$  text field, type p\_in\_sr.
- 5 Locate the Boundary Selection section. From the Selection list, choose Bed Inlet (Work Plane I).

## Outlet I

- I In the Physics toolbar, click **Boundaries** and choose **Outlet**.
- 2 In the Settings window for Outlet, locate the Boundary Selection section.
- 3 From the Selection list, choose Bed Outlet.
- 4 Locate the Boundary Condition section. From the Boundary condition list, choose Pressure.

#### Symmetry 1

- I In the Physics toolbar, click **Boundaries** and choose Symmetry.
- 2 In the Settings window for Symmetry, locate the Boundary Selection section.
- **3** From the **Selection** list, choose **Bed Symmetry**.

# HEAT TRANSFER IN POROUS MEDIA IN BED

- I In the Model Builder window, under Component I (compl) click Heat Transfer in Porous Media (ht).
- 2 In the Settings window for Heat Transfer in Porous Media, type Heat Transfer in Porous Media in Bed in the Label text field.

**3** Select Domains 1 and 3 only.

#### Fluid 1

- I In the Model Builder window, under Component I (compl)> Heat Transfer in Porous Media in Bed (ht)>Porous Medium I click Fluid I.
- 2 In the Settings window for Fluid, locate the Heat Convection section.
- 3 From the **u** list, choose **Total Darcy velocity field (dl/porous1)**.
- **4** Locate the **Heat Conduction**, **Fluid** section. From the  $k_f$  list, choose Thermal conductivity (chem).
- **5** Locate the **Thermodynamics, Fluid** section. From the  $\rho_f$  list, choose **Density (tcs)**.
- 6 From the  $C_{p,\mathrm{f}}$  list, choose Heat capacity at constant pressure (chem).
- 7 From the  $\gamma$  list, choose Ratio of specific heats (chem).

#### Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- 3 From the Define list, choose Solid phase properties.

# Initial Values 1

- I In the Model Builder window, under Component I (compl)> Heat Transfer in Porous Media in Bed (ht) click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- **3** In the  $T_{\rm sr}$  text field, type T\_in\_sr.

# Solid 1

- I In the Physics toolbar, click **Domains** and choose Solid.
- 2 In the Settings window for Solid, locate the Domain Selection section.
- 3 From the Selection list, choose Jacket.

# Temperature I

- I In the Physics toolbar, click **Boundaries** and choose **Temperature**.
- 2 In the Settings window for Temperature, locate the Boundary Selection section.
- 3 From the Selection list, choose Bed Inlet (Work Plane I).
- **4** Locate the **Temperature** section. In the  $T_0$  text field, type T\_in\_sr.

# Outflow I

I In the Physics toolbar, click **Boundaries** and choose **Outflow**.

- 2 In the Settings window for Outflow, locate the Boundary Selection section.
- 3 From the Selection list, choose Bed Outlet.

#### Heat Flux I

- I In the Physics toolbar, click Boundaries and choose Heat Flux.
- 2 In the Settings window for Heat Flux, locate the Boundary Selection section.
- 3 From the Selection list, choose Tubes/Bed.
- 4 Locate the Heat Flux section. From the Flux type list, choose Convective heat flux.
- 5 In the h text field, type h tubes.
- **6** In the  $T_{\text{ext}}$  text field, type T\_tubes.

# Heat Flux 2

- I In the Physics toolbar, click **Boundaries** and choose **Heat Flux**.
- 2 In the Settings window for Heat Flux, locate the Boundary Selection section.
- 3 From the Selection list, choose Jacket/Ambient.
- 4 Locate the Heat Flux section. From the Flux type list, choose Convective heat flux.
- **5** In the *h* text field, type h\_j.
- **6** In the  $T_{\text{ext}}$  text field, type T\_amb.

#### Heat Source 1

- I In the Physics toolbar, click **Domains** and choose **Heat Source**.
- 2 In the Settings window for Heat Source, locate the Heat Source section.
- **3** In the  $Q_0$  text field, type porosity\*chem.Qtot.
- 4 Locate the Domain Selection section. From the Selection list, choose Catalytic Bed.

#### LAMINAR FLOW IN HEATING TUBES

- I In the Model Builder window, under Component I (compl) click Laminar Flow (spf).
- 2 In the Settings window for Laminar Flow, type Laminar Flow in Heating Tubes in the Label text field.
- 3 Locate the **Domain Selection** section. From the **Selection** list, choose **Heating Tubes**.

#### Inlet 1

- I In the Physics toolbar, click **Boundaries** and choose **Inlet**.
  - Use a single inlet node for both co-current and Countercurrent by selecting both inlets and outlets. The unused inlets will be overridden with an appropriate outlet node.
- 2 In the Settings window for Inlet, locate the Boundary Selection section.

- 3 From the Selection list, choose Inlets and Outlets.
- 4 Locate the Boundary Condition section. From the list, choose Fully developed flow.
- 5 Locate the Fully Developed Flow section. In the  $U_{\rm av}$  text field, type u\_in\_tubes.

# Outlet Countercurrent

- I In the Physics toolbar, click **Boundaries** and choose **Outlet**.
- 2 In the Settings window for Outlet, type Outlet Countercurrent in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Tubes Outlet (Work Plane I).
- 4 Locate the Pressure Conditions section. Select the Normal flow check box.

#### Outlet Co-current

- I In the Physics toolbar, click **Boundaries** and choose **Outlet**.
- 2 In the Settings window for Outlet, type Outlet Co-current in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Tubes Inlet.

# Symmetry 1

- I In the Physics toolbar, click **Boundaries** and choose Symmetry.
- 2 In the Settings window for Symmetry, locate the Boundary Selection section.
- 3 From the Selection list, choose Tubes Symmetry.

# HEAT TRANSFER IN HEATING TUBES

- I In the Model Builder window, under Component I (compl) click Heat Transfer in Fluids 2 (ht2).
- 2 In the Settings window for Heat Transfer in Fluids, type Heat Transfer in Heating Tubes in the Label text field.
- 3 Locate the **Domain Selection** section. From the **Selection** list, choose **Heating Tubes**.

# Initial Values 1

- I In the Model Builder window, under Component I (compl)> Heat Transfer in Heating Tubes (ht2) click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- **3** In the  $T_{\text{tubes}}$  text field, type T\_in\_tubes.

# Temperature at Inlet

I In the Physics toolbar, click **Boundaries** and choose **Temperature**.

- 2 In the Settings window for Temperature, type Temperature at Inlet in the Label text
- 3 Locate the Boundary Selection section. From the Selection list, choose Inlets and Outlets.
- **4** Locate the **Temperature** section. In the  $T_0$  text field, type T\_in\_tubes.

# Outflow Countercurrent

- I In the Physics toolbar, click **Boundaries** and choose **Outflow**.
- 2 In the Settings window for Outflow, type Outflow Countercurrent in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Tubes Outlet (Work Plane I).
- 4 Right-click Outflow Countercurrent and choose Duplicate.

# Outflow Co-current

- I In the Model Builder window, under Component I (compl)> Heat Transfer in Heating Tubes (ht2) click Outflow Countercurrent 1.
- 2 In the Settings window for Outflow, type Outflow Co-current in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Tubes Inlet.

#### Heat Flux to bed

- I In the Physics toolbar, click **Boundaries** and choose **Heat Flux**.
- 2 In the Settings window for Heat Flux, type Heat Flux to bed in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Tubes/Bed.
- 4 Locate the Heat Flux section. From the Flux type list, choose Convective heat flux.
- **5** In the h text field, type h tubes.
- **6** In the  $T_{\rm ext}$  text field, type T\_sr.

# MATERIALS

Now, after the physics is set up, you can fill in the required material properties.

# Porous Material I (bmat I)

- I In the Model Builder window, under Component I (compl)>Materials click Porous Material I (pmat I).
- 2 In the Settings window for Porous Material, locate the Homogenized Properties section.

**3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Permeability	kappa_iso; kappaii = kappa_iso,	kappa_pm	m²	Basic
	kappaij = 0			

4 Locate the Phase-Specific Properties section. Click 4 Add Required Phase Nodes.

Solid I (pmat1.solid1)

- I In the Model Builder window, click Solid I (pmat1.solid1).
- 2 In the Settings window for Solid, locate the Solid Properties section.
- 3 From the Material list, choose Catalyst (mat I).
- **4** In the  $\theta_s$  text field, type 1-porosity.

Catalyst (mat I)

- I In the Model Builder window, under Component I (compl)>Materials click Catalyst (matl).
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Thermal conductivity	k_iso ; kii = k_iso, kij = 0	k_pm	W/(m·K)	Basic
Density	rho	dens_pm	kg/m³	Basic
Heat capacity at constant pressure	Ср	Cp_pm	J/(kg·K)	Basic

Insulation (mat2)

- I In the Model Builder window, click Insulation (mat2).
- 2 In the Settings window for Material, locate the Material Contents section.

3 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Thermal conductivity	k_iso ; kii = k_iso, kij = 0	k_foam	W/(m·K)	Basic
Density	rho	dens_foam	kg/m³	Basic
Heat capacity at constant pressure	Ср	Cp_foam	J/(kg·K)	Basic

#### MESH I

Now add a mesh. The mesh will consist of free quads (bed), free triangles (tube and jacket), boundary layers on the bed/tube boundaries, and boundary layers in the x direction on the inlets and outlets selection.

# Free Quad I

- I In the Mesh toolbar, click More Generators and choose Free Quad.
- 2 In the Settings window for Free Quad, locate the Boundary Selection section.
- 3 From the Selection list, choose Bed Inlet (Work Plane I).

# Size 1

- I In the Mesh toolbar, click Size Attribute and choose Normal.
- 2 In the Settings window for Size, locate the Element Size section.
- **3** Click the **Custom** button.
- 4 Locate the Element Size Parameters section.
- 5 Select the Maximum element size check box. In the associated text field, type 2e-3/ 1.08.

# Size

- I In the Model Builder window, under Component I (compl)>Mesh I click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- 3 Click the Custom button.
- 4 Locate the Element Size Parameters section. In the Maximum element size text field, type 2e-3.
- 5 In the Minimum element size text field, type 1e-3.

# Free Triangular 1

I In the Mesh toolbar, click \triangle More Generators and choose Free Triangular.

- 2 In the Settings window for Free Triangular, locate the Boundary Selection section.
- 3 From the Selection list, choose Tubes Outlet (Work Plane I).
- **4** Select Boundaries 4, 9, 13, and 17 only.

# Boundary Layers 1

- I In the Mesh toolbar, click Boundary Layers.
- 2 In the Settings window for Boundary Layers, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 From the Selection list, choose Tubes Outlet (Work Plane I).
- **5** Select Boundaries 1, 4, 13, and 17 only.

# Boundary Layer Properties

- I In the Model Builder window, click Boundary Layer Properties.
- 2 In the Settings window for Boundary Layer Properties, locate the Edge Selection section.
- 3 Click Paste Selection.
- 4 In the Paste Selection dialog box, type 5 8 16 17 19 21 24 27 in the Selection text field.
- 5 Click **OK**. Alternatively, click in the Graphics window to select the bed/tube boundaries.
- 6 In the Settings window for Boundary Layer Properties, locate the Layers section.
- 7 In the Number of layers text field, type 3.
- 8 From the Thickness specification list, choose First layer.
- 9 In the Thickness text field, type 3e-4.

#### Swebt 1

In the Mesh toolbar, click A Swept.

# Distribution I

- I In the Mesh toolbar, click Distribution.
- 2 In the Settings window for Distribution, locate the Distribution section.
- 3 In the Number of elements text field, type 50.
- 4 Click Build All.

# Boundary Layers 2

- I In the Mesh toolbar, click Boundary Layers.
- 2 In the Settings window for Boundary Layers, click to expand the Transition section.
- 3 Clear the Smooth transition to interior mesh check box.

Boundary Layer Properties

- I In the Model Builder window, click Boundary Layer Properties.
- 2 In the Settings window for Boundary Layer Properties, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Inlets and Outlets.
- 4 Locate the Layers section. From the Thickness specification list, choose First layer.
- 5 In the Number of layers text field, type 6.
- 6 In the Thickness text field, type 0.0003.
- 7 Click III Build All.

Use the **Statistics** feature to get information about the mesh.

8 In the Model Builder window, right-click Mesh I and choose Statistics.

# ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Right-click and choose Add Study.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

# COUNTERCURRENT T\_IN\_TUBES = 900K

- I In the Settings window for Study, type Countercurrent T in tubes = 900K in the Label text field.
- 2 Locate the Study Settings section. Clear the Generate default plots check box.

Solution I (soll)

Step 1: Stationary

- I In the Model Builder window, under Countercurrent T\_in\_tubes = 900K click Step 1: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check boxes for Chemistry (chem), Transport of Concentrated Species in Bed (tcs), Heat Transfer in Porous Media in Bed (ht), Laminar Flow in Heating Tubes (spf), and Heat Transfer in Heating Tubes (ht2).
- 4 In the table, clear the Solve for check box for Nonisothermal Flow I (nitfl).
- 5 Right-click Countercurrent T\_in\_tubes = 900K>Step 1: Stationary and choose Duplicate.

Step 2: Stationary I

- I In the Model Builder window, click Step 2: Stationary I.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Darcy's Law in Bed (dl)		Automatic (Stationary)
Laminar Flow in Heating Tubes (spf)	<b>V</b>	Automatic (Stationary)

- 4 Select the Modify model configuration for study step check box.
- 5 In the tree, select Component I (compl)>Laminar Flow in Heating Tubes (spf)>Outlet Cocurrent.
- 6 Right-click and choose Disable.
- 7 In the tree, select Component I (compl)>Heat Transfer in Heating Tubes (ht2)> **Outflow Co-current.**
- 8 Click O Disable.
- 9 Right-click Step 2: Stationary I and choose Duplicate.

# Step 3: Stationary 2

- I In the Model Builder window, click Step 3: Stationary 2.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 Clear the Modify model configuration for study step check box.
- 4 In the table, select the Solve for check boxes for Chemistry (chem), Transport of Concentrated Species in Bed (tcs), Darcy's Law in Bed (dl), Heat Transfer in Porous Media in Bed (ht), and Heat Transfer in Heating Tubes (ht2).
- 5 In the table, select the Solve for check box for Nonisothermal Flow I (nitfl).
- 6 Select the Modify model configuration for study step check box.

# Solution I (soll)

- I In the Study toolbar, click Show Default Solver.
- 2 In the Model Builder window, expand the Solution I (soll) node.
- 3 In the Model Builder window, expand the Countercurrent T\_in\_tubes = 900K> Solver Configurations>Solution 1 (sol1)>Stationary Solver 3 node.
- 4 Right-click Countercurrent T\_in\_tubes = 900K>Solver Configurations>Solution I (soll)> Stationary Solver 3 and choose Fully Coupled.

Step 1: Stationary, Step 2: Stationary 1, Step 3: Stationary 2

- I In the Model Builder window, under Countercurrent T\_in\_tubes = 900K, Ctrl-click to select Step 1: Stationary, Step 2: Stationary 1, and Step 3: Stationary 2.
- 2 Right-click and choose Copy.

# ADD STUDY

- I In the Study toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select Empty Study.
- 4 Click Add Study in the window toolbar.

# CO-CURRENT T\_IN\_TUBES = 900, 1000 K

- I In the Settings window for Study, type Co-current T in tubes = 900, 1000 Kin the Label text field.
- 2 Locate the Study Settings section. Clear the Generate default plots check box.
- 3 Right-click Co-current T\_in\_tubes = 900, 1000 K and choose Paste Multiple Items.

# Steb 2: Stationary 1

- I In the Model Builder window, under Co-current T\_in\_tubes = 900, 1000 K click Step 2: Stationary 1.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the tree, select Component I (compl)>Laminar Flow in Heating Tubes (spf)> **Outlet Countercurrent.**
- 4 Click / Disable.
- 5 In the tree, select Component I (compl)>Laminar Flow in Heating Tubes (spf)>Outlet Cocurrent.
- 6 Click ( Enable.
- 7 In the tree, select Component I (compl)>Heat Transfer in Heating Tubes (ht2)> **Outflow Countercurrent.**
- 8 Click Disable.
- 9 In the tree, select Component I (compl)>Heat Transfer in Heating Tubes (ht2)> **Outflow Co-current.**
- 10 Click ( Enable.

# Steb 3: Stationary 2

I In the Model Builder window, click Step 3: Stationary 2.

- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the tree, select Component I (compl)>Laminar Flow in Heating Tubes (spf)> **Outlet Countercurrent.**
- 4 Click Disable.
- 5 In the tree, select Component I (compl)>Laminar Flow in Heating Tubes (spf)>Outlet Cocurrent.
- 6 Click ( Enable.
- 7 In the tree, select Component I (compl)>Heat Transfer in Heating Tubes (ht2)> **Outflow Countercurrent.**
- 8 Click Disable.
- 9 In the tree, select Component I (compl)>Heat Transfer in Heating Tubes (ht2)> **Outflow Co-current.**
- 10 Click ( Enable.

Solution 4 (sol4)

- 2 In the Model Builder window, expand the Solution 4 (sol4) node.
- 3 Right-click Co-current T in tubes = 900, 1000 K>Solver Configurations> Solution 4 (sol4)>Stationary Solver 3 and choose Fully Coupled.

Parametric Sweep

- I In the Study toolbar, click Parametric Sweep.
- 2 In the Settings window for Parametric Sweep, locate the Study Settings section.
- 3 Click + Add.
- **4** In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
T_in_tubes (Inlet temperature,	900 1000	К
heating tubes)		

## COUNTERCURRENT T\_IN\_TUBES = 900K

In the **Study** toolbar, click **Compute**.

#### RESULTS

Cut Plane I

I In the Model Builder window, expand the Results node.

- 2 Right-click Results>Datasets and choose Cut Plane.
- 3 In the Settings window for Cut Plane, locate the Plane Data section.
- 4 In the x-coordinate text field, type L/2.
- 5 Click Plot.

## w C3H8 and T at L/2

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, type w\_C3H8 and T at L/2 in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Cut Plane 1.
- **4** Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 5 Locate the Color Legend section. Select the Show maximum and minimum values check box.
- 6 Select the Show units check box.

## Surface I

- I Right-click w\_C3H8 and T at L/2 and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type w C3H8.
- 4 Locate the Coloring and Style section. Click Change Color Table.
- 5 In the Color Table dialog box, select Rainbow>Prism in the tree.
- 6 Click OK.

### Contour I

- I In the Model Builder window, right-click w\_C3H8 and T at L/2 and choose Contour.
- 2 In the Settings window for Contour, locate the Expression section.
- 3 In the Expression text field, type chem. T.
- 4 Locate the Coloring and Style section. From the Contour type list, choose Tube.
- 5 In the w\_C3H8 and T at L/2 toolbar, click Plot.
- 6 Click Change Color Table.
- 7 In the Color Table dialog box, select Wave>Wave in the tree.
- 8 Click OK.
- **9** Click the YZ **Go to YZ View** button in the **Graphics** toolbar.
- **10** Click the **Show Grid** button in the **Graphics** toolbar.

II Click the **Zoom Extents** button in the **Graphics** toolbar.

This is Figure 4. Now, plot the mass fractions for all chemical species along the center line of the reactor bed. This is achieved by setting up a 1D Plot Group with one Line Graph for each chemical species. The resulting plot is Figure 5.

12 Click the Go to Default View button in the Graphics toolbar.

## Countercurrent Mass Fractions

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Countercurrent Mass Fractions in the Label text field.
- **3** Click to expand the **Title** section. From the **Title type** list, choose **None**.

## Line Graph 1

- I Right-click Countercurrent Mass Fractions and choose Line Graph.
- 2 Select Edge 3 only.
- 3 In the Settings window for Line Graph, locate the x-Axis Data section.
- 4 From the Parameter list, choose Expression.
- **5** In the **Expression** text field, type x.
- 6 Click to expand the **Legends** section. Select the **Show legends** check box.
- **7** Find the **Include** subsection. Select the **Expression** check box.
- 8 Clear the Solution check box.
- **9** In the Countercurrent Mass Fractions toolbar, click  **Plot**.
- **10** Right-click **Line Graph I** and choose **Duplicate**.

#### Line Graph 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type w C3H8.
- 4 Right-click Line Graph 2 and choose Duplicate.

#### Line Graph 3

- I In the Model Builder window, click Line Graph 3.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type w CO.
- 4 Right-click Line Graph 3 and choose Duplicate.

## Line Graph 4

- I In the Model Builder window, click Line Graph 4.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type w\_CO2.
- 4 Right-click Line Graph 4 and choose Duplicate.

### Line Graph 5

- I In the Model Builder window, click Line Graph 5.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type w H2.

#### Countercurrent Mass Fractions

- I In the Model Builder window, click Countercurrent Mass Fractions.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- **3** Select the **y-axis label** check box. In the associated text field, type Mass fraction.
- 4 Locate the Legend section. From the Position list, choose Upper middle. This is Figure 5.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

### Countercurrent mirror

- I In the Results toolbar, click More Datasets and choose Mirror 3D.
- 2 In the Settings window for Mirror 3D, type Countercurrent mirror in the Label text field.
- 3 Locate the Plane Data section. From the Plane list, choose xy-planes.
- 4 Click I Plot.

#### Mass fraction, C3H8 Countercurrent

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, type Mass fraction, C3H8 Countercurrent in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Countercurrent mirror.
- 4 Locate the Title section. From the Title type list, choose None.
- 5 Locate the Plot Settings section. Clear the Plot dataset edges check box.
- **6** Locate the **Color Legend** section. Select the **Show units** check box.

# Surface I

- I In the Mass fraction, C3H8 Countercurrent toolbar, click Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type w\_C3H8.
- 4 Locate the Coloring and Style section. Click Change Color Table.
- 5 In the Color Table dialog box, select Rainbow>Prism in the tree.
- 6 Click OK.

#### Selection I

- I In the Mass fraction, C3H8 Countercurrent toolbar, click \int\_{\bar{a}} Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Tubes/Bed.
- **4** Add the inner wall to the selection by selecting boundary 11 in the **Graphics** window. Use the scroll wheel to reach interior boundaries.

## Mass fraction, C3H8 Countercurrent

In the Mass fraction, C3H8 Countercurrent toolbar, click T Surface.

## Surface 2

- I In the **Settings** window for **Surface**, locate the **Expression** section.
- **2** In the **Expression** text field, type 1.

## Material Appearance 1

- I In the Mass fraction, C3H8 Countercurrent toolbar, click Material Appearance.
- 2 In the Settings window for Material Appearance, locate the Appearance section.
- 3 From the Appearance list, choose Custom.
- 4 From the Material type list, choose Steel (anodized).

## Surface 2

In the Model Builder window, click Surface 2.

## Selection I

- I In the Mass fraction, C3H8 Countercurrent toolbar, click 🗣 Selection.
- 2 Select Boundaries 9, 10, 12, and 26 only.
- 3 In the Mass fraction, C3H8 Countercurrent toolbar, click Plot.
- 4 Click the **Zoom Extents** button in the **Graphics** toolbar.

Mass fraction, C3H8 Countercurrent

In the Model Builder window, under Results right-click Mass fraction, C3H8 Countercurrent and choose **Duplicate**.

Concentration, H2 Countercurrent

- I In the Model Builder window, expand the Results>Mass fraction, C3H8 Countercurrent I node, then click Mass fraction, C3H8 Countercurrent 1.
- 2 In the Settings window for 3D Plot Group, type Concentration, H2 Countercurrent in the Label text field.

Surface I

- I In the Model Builder window, click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Transport of Concentrated Species in Bed>Species w\_H2>tcs.c\_w\_H2 -Molar concentration - mol/m3.

Mass fraction, C3H8 Countercurrent

In the Model Builder window, under Results right-click Mass fraction, C3H8 Countercurrent and choose **Duplicate**.

Gas Density, Countercurrent 900 K

- I In the Model Builder window, expand the Results>Mass fraction, C3H8 Countercurrent I node, then click Mass fraction, C3H8 Countercurrent I.
- 2 In the Settings window for 3D Plot Group, type Gas Density, Countercurrent 900 K in the Label text field.

Surface 1

- I In the Model Builder window, click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Darcy's Law in Bed>Material properties>dl.rho - Fluid density - kg/m3.
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Aurora>JupiterAuroraBorealis in the tree.
- 5 Click OK.
- 6 In the Gas Density, Countercurrent 900 K toolbar, click Plot.

# Temperature Countercurrent

- I In the Home toolbar, click Add Plot Group and choose 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, type Temperature Countercurrent in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Countercurrent mirror.
- 4 Locate the Title section. From the Title type list, choose None.
- **5** Locate the **Plot Settings** section. Clear the **Plot dataset edges** check box.
- 6 Locate the Color Legend section. Select the Show units check box.

## Surface I

- I In the Temperature Countercurrent toolbar, click Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type T tubes.
- 4 Locate the Coloring and Style section. Click Change Color Table.
- 5 In the Color Table dialog box, select Thermal>ThermalWave in the tree.
- 6 Click OK.

## Temberature Countercurrent

In the Temperature Countercurrent toolbar, click in Slice.

#### Slice 1

- I In the **Settings** window for **Slice**, locate the **Expression** section.
- 2 In the Expression text field, type T sr.
- 3 Click to expand the Inherit Style section. From the Plot list, choose Surface 1.

## Temperature Countercurrent

In the Temperature Countercurrent toolbar, click Surface.

## Surface 2

- I In the Settings window for Surface, locate the Expression section.
- 2 In the Expression text field, type 1.

#### Selection 1

- I In the Temperature Countercurrent toolbar, click \(\frac{1}{2}\) Selection.
- 2 Select Boundaries 9, 10, 12, and 26 only.

# Surface 2

In the Model Builder window, click Surface 2.

# Material Appearance 1

- I In the Temperature Countercurrent toolbar, click Material Appearance.
- 2 In the Settings window for Material Appearance, locate the Appearance section.
- **3** From the **Appearance** list, choose **Custom**.
- 4 From the Material type list, choose Steel (anodized).

## Surface 2

Right-click Surface 2 and choose Duplicate.

#### Selection 1

- I In the Model Builder window, expand the Surface 3 node, then click Selection I.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 Click Clear Selection.
- 4 Select Boundary 11 only.

# Surface 3

In the Model Builder window, click Surface 3.

# Transparency I

- I In the Temperature Countercurrent toolbar, click Transparency.
- 2 In the Settings window for Transparency, locate the Transparency section.
- 3 In the Transparency text field, type 0.75.

#### Temberature Countercurrent

In the Temperature Countercurrent toolbar, click Arrow Surface.

#### Arrow Surface 1

- I In the Settings window for Arrow Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Heat Transfer in Porous Media in Bed>Domain fluxes>ht.tfluxx,...,ht.tfluxz -Total heat flux.
- 2 Locate the Arrow Positioning section. From the Placement list, choose Uniform anisotropic.
- 3 In the Number of arrows text field, type 150.
- 4 In the z weight text field, type 1.5.
- 5 Locate the Coloring and Style section. From the Arrow base list, choose Center.
- 6 Select the Scale factor check box. In the associated text field, type 3.6E-6.
- 7 From the Color list, choose Gray.

#### Selection 1

- I In the Temperature Countercurrent toolbar, click \( \frac{1}{2} \) Selection.
- **2** Select Boundaries 2 and 7 only.

#### Temperature Countercurrent

In the Temperature Countercurrent toolbar, click Arrow Surface.

## Arrow Surface 2

In the Settings window for Arrow Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Heat Transfer in Heating Tubes>Domain fluxes>ht2.tfluxx,...,ht2.tfluxz - Total heat flux.

#### Selection 1

- I Right-click Arrow Surface 2 and choose Selection.
- **2** Select Boundary 5 only.

## Arrow Surface 2

- I In the Model Builder window, click Arrow Surface 2.
- 2 In the Settings window for Arrow Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Heat Transfer in Heating Tubes>Domain fluxes>ht2.tfluxx,...,ht2.tfluxz - Total heat flux.
- 3 Locate the Arrow Positioning section. From the Placement list, choose Uniform anisotropic.
- 4 In the Number of arrows text field, type 40.
- 5 In the x weight text field, type 0.3.
- 6 In the z weight text field, type 3.
- 7 Locate the Coloring and Style section.
- 8 Select the Scale factor check box. In the associated text field, type 3E-8.
- **9** In the Temperature Countercurrent toolbar, click  **Plot**.
- 10 Click the **Zoom Extents** button in the **Graphics** toolbar.

This is Figure 8(a).

#### Velocity Countercurrent

- I In the Home toolbar, click Add Plot Group and choose 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, type Velocity Countercurrent in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Countercurrent mirror.

- **4** Locate the **Title** section. From the **Title type** list, choose **None**.
- 5 Locate the Plot Settings section. Clear the Plot dataset edges check box.
- 6 Locate the Color Legend section. Select the Show units check box.

#### Volume 1

- I In the Velocity Countercurrent toolbar, click Volume.
- 2 In the Settings window for Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Default>spf.U - Velocity magnitude - m/s.
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Linear>Cividis in the tree.
- 5 Click OK.

### Selection 1

- I In the Velocity Countercurrent toolbar, click \( \frac{1}{2} \) Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Heating Tubes.

## Velocity Countercurrent

In the **Velocity Countercurrent** toolbar, click Arrow Surface.

#### Arrow Surface 1

- I In the Settings window for Arrow Surface, locate the Expression section.
- 2 Click u,v,w Velocity field in the upper-right corner of the section.
- 3 Locate the Arrow Positioning section. From the Placement list, choose Uniform anisotropic.
- 4 In the Number of arrows text field, type 40.
- 5 In the x weight text field, type 0.4.
- 6 In the z weight text field, type 4.
- 7 Locate the Coloring and Style section. From the Arrow type list, choose Arrowhead.
- 8 From the Color list, choose White.

# Selection 1

- I In the Velocity Countercurrent toolbar, click \(\bigg\) Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Tubes Symmetry.

Velocity Countercurrent

In the Velocity Countercurrent toolbar, click Arrow Volume.

Arrow Volume 1

- I In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Darcy's Law in Bed>Velocity and pressure>dl.u,dl.v,dl.w - Total Darcy velocity field.
- 2 Locate the Coloring and Style section. From the Arrow length list, choose Normalized.

Color Expression 1

- I In the Velocity Countercurrent toolbar, click 👂 Color Expression.
- 2 In the Settings window for Color Expression, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Darcy's Law in Bed>Velocity and pressure>dl.U - Total Darcy velocity magnitude - m/s.

Velocity Countercurrent

In the Velocity Countercurrent toolbar, click Surface.

Surface I

- I In the **Settings** window for **Surface**, locate the **Expression** section.
- **2** In the **Expression** text field, type 1.

Material Appearance I

- I In the Velocity Countercurrent toolbar, click Material Appearance.
- 2 In the Settings window for Material Appearance, locate the Appearance section.
- 3 From the Appearance list, choose Custom.
- 4 From the Material type list, choose Steel (anodized).

Surface 1

In the Model Builder window, click Surface 1.

Selection I

- I In the Velocity Countercurrent toolbar, click \(\bigcap\_{\bigcap}\) Selection.
- **2** Select Boundaries 9–12 only.
- 3 In the Velocity Countercurrent toolbar, click Plot.

#### CO-CURRENT T IN TUBES = 900, 1000 K

Now, switch to co-current flow by changing the selections for the inlets and outlets of the heating tubes.

In the **Home** toolbar, click **Compute**.

#### RESULTS

Countercurrent mirror

In the Model Builder window, under Results>Datasets right-click Countercurrent mirror and choose **Duplicate**.

Co-current mirror

- I In the Model Builder window, under Results>Datasets click Countercurrent mirror I.
- 2 In the Settings window for Mirror 3D, type Co-current mirror in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current T\_in\_tubes = 900, 1000 K/Parametric Solutions I (sol7).

Duplicate the figures from the countercurrent case and plot data from the co-current case with T in tubes = 1000 K.

Concentration, H2 Countercurrent, Countercurrent Mass Fractions, Gas Density, Countercurrent 900 K, Mass fraction, C3H8 Countercurrent, Temperature Countercurrent, Velocity Countercurrent

- I In the Model Builder window, under Results, Ctrl-click to select Countercurrent Mass Fractions, Mass fraction, C3H8 Countercurrent, Concentration, H2 Countercurrent, Gas Density, Countercurrent 900 K, Temperature Countercurrent, and **Velocity Countercurrent**.
- 2 Right-click and choose **Duplicate**.

Co-current Mass Fractions, 1000 K

- I In the Model Builder window, under Results click Countercurrent Mass Fractions I.
- 2 In the Settings window for ID Plot Group, type Co-current Mass Fractions, 1000 K in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current T\_in\_tubes = 900, 1000 K/Parametric Solutions I (sol7).
- 4 From the Parameter selection (T\_in\_tubes) list, choose Last.
- 5 Locate the Legend section. From the Position list, choose Upper right.
- 6 In the Co-current Mass Fractions, 1000 K toolbar, click Plot.

Mass fraction, C3H8 Co-current 1000 K

I In the Model Builder window, under Results click Mass fraction, C3H8 Countercurrent I.

- 2 In the Settings window for 3D Plot Group, type Mass fraction, C3H8 Co-current 1000 K in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current mirror.
- 4 In the Mass fraction, C3H8 Co-current 1000 K toolbar, click Plot.

## Concentration, H2 Co-current 1000 K

- I In the Model Builder window, under Results click Concentration, H2 Countercurrent I.
- 2 In the Settings window for 3D Plot Group, type Concentration, H2 Co-current 1000 K in the **Label** text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current mirror.
- 4 In the Concentration, H2 Co-current 1000 K toolbar, click Plot.

## Gas Density, Co-current 1000 K

- I In the Model Builder window, under Results click Gas Density, Countercurrent 900 K I.
- 2 In the Settings window for 3D Plot Group, type Gas Density, Co-current 1000 Kin the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current mirror.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

## Temperature, Co-current 1000 K

- I In the Model Builder window, under Results click Temperature Countercurrent I.
- 2 In the Settings window for 3D Plot Group, type Temperature, Co-current 1000 Kin the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current mirror.
- 4 Click to expand the Number Format section. Select the Manual color legend settings check box.
- 5 In the Precision text field, type 4.
- 6 In the Temperature, Co-current 1000 K toolbar, click Plot.
- 7 Click the **Zoom Extents** button in the **Graphics** toolbar.

This is Figure 8 (b).

## Velocity Co-current, 1000 K

- I In the Model Builder window, under Results click Velocity Countercurrent I.
- 2 In the Settings window for 3D Plot Group, type Velocity Co-current, 1000 Kin the Label text field.

- 3 Locate the Data section. From the Dataset list, choose Co-current mirror.
- 4 In the Velocity Co-current, 1000 K toolbar, click Plot.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar. This is Figure 9.

Concentration, H2 Countercurrent, Countercurrent Mass Fractions, Gas Density, Countercurrent 900 K, Mass fraction, C3H8 Countercurrent, Temperature Countercurrent, Velocity Countercurrent, w C3H8 and T at L/2

- I In the Model Builder window, under Results, Ctrl-click to select w\_C3H8 and T at L/2, Countercurrent Mass Fractions, Mass fraction, C3H8 Countercurrent, Concentration, H2 Countercurrent, Gas Density, Countercurrent 900 K, Temperature Countercurrent, and **Velocity Countercurrent**.
- 2 Right-click and choose **Group**.

Countercurrent, 900 K

In the Settings window for Group, type Countercurrent, 900 K in the Label text field.

Co-current Mass Fractions, 1000 K, Concentration, H2 Co-current 1000 K, Gas Density, Co-current 1000 K, Mass fraction, C3H8 Co-current 1000 K, Temperature, Co-current 1000 K, Velocity Co-current, 1000 K

- I In the Model Builder window, under Results, Ctrl-click to select Co-current Mass Fractions, 1000 K, Mass fraction, C3H8 Co-current 1000 K, Concentration, H2 Co-current 1000 K, Gas Density, Co-current 1000 K, Temperature, Co-current 1000 K, and Velocity Co-current, 1000 K.
- 2 Right-click and choose **Group**.

Co-current, 1000 K

In the Settings window for Group, type Co-current, 1000 K in the Label text field.

w\_C3H8 and w\_CO Along Bed Midline

Now, plot mass fractions of C3H8 and CO for the three solutions (design cases) in the same plot. Use two y-axes to better visualize the results. When done this will give Figure 6.

- I In the Home toolbar, click In Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type w\_C3H8 and w\_C0 Along Bed Midline in the Label text field.
- **3** Locate the **Title** section. From the **Title type** list, choose **None**.

C3H8 countercurrent 900 K

I Right-click w\_C3H8 and w\_C0 Along Bed Midline and choose Line Graph.

- 2 In the Settings window for Line Graph, type C3H8 countercurrent 900 K in the Label text field
- 3 Locate the Data section. From the Dataset list, choose Countercurrent T\_in\_tubes = 900K/ Solution 1 (soll).
- **4** Select Edge 3 only.
- 5 Locate the y-Axis Data section. In the Expression text field, type w C3H8.
- 6 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 7 In the Expression text field, type x.
- 8 Locate the Legends section. Select the Show legends check box.
- **9** Find the **Include** subsection. Select the **Label** check box.
- **10** Clear the **Solution** check box.
- II Right-click C3H8 countercurrent 900 K and choose Duplicate.

### C3H8 Co-current 900 K

- I In the Model Builder window, under Results>w\_C3H8 and w\_CO Along Bed Midline click
  C3H8 countercurrent 900 K I.
- 2 In the Settings window for Line Graph, type C3H8 Co-current 900 K in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current T\_in\_tubes = 900, 1000 K/Parametric Solutions 1 (sol7).
- 4 From the Parameter selection (T\_in\_tubes) list, choose First.
- 5 Right-click C3H8 Co-current 900 K and choose Duplicate.

#### C3H8 Co-current 1000 K

- I In the Model Builder window, under Results>w\_C3H8 and w\_CO Along Bed Midline click C3H8 Co-current 900 K I.
- 2 In the Settings window for Line Graph, type C3H8 Co-current 1000 K in the Label text field.
- 3 Locate the Data section. From the Parameter selection (T\_in\_tubes) list, choose Last.

## C3H8 Co-current 1000 K, C3H8 Co-current 900 K, C3H8 countercurrent 900 K

- I In the Model Builder window, under Results>w\_C3H8 and w\_CO Along Bed Midline, Ctrlclick to select C3H8 countercurrent 900 K, C3H8 Co-current 900 K, and C3H8 Co-current 1000 K.
- 2 Right-click and choose **Duplicate**.

#### CO countercurrent 900 K

- I In the Model Builder window, under Results>w\_C3H8 and w\_CO Along Bed Midline click C3H8 countercurrent 900 K I.
- 2 In the Settings window for Line Graph, type CO countercurrent 900 K in the Label text field.
- 3 Locate the y-Axis Data section. In the Expression text field, type w CO.
- 4 Click to expand the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.
- 5 From the Color list, choose Cycle (reset).

#### CO Co-current 900 K

- I In the Model Builder window, under Results>w\_C3H8 and w\_C0 Along Bed Midline click C3H8 Co-current 900 K I.
- 2 In the Settings window for Line Graph, type CO Co-current 900 K in the Label text field.
- 3 Locate the y-Axis Data section. In the Expression text field, type w\_C0.
- 4 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.

### CO Co-current 1000 K

- I In the Model Builder window, under Results>w\_C3H8 and w\_CO Along Bed Midline click C3H8 Co-current 1000 K I.
- 2 In the Settings window for Line Graph, type CO Co-current 1000 K in the Label text field.
- 3 Locate the y-Axis Data section. In the Expression text field, type w CO.
- 4 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.

## w C3H8 and w CO Along Bed Midline

- I In the Model Builder window, click w\_C3H8 and w\_CO Along Bed Midline.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 Select the x-axis label check box.
- 4 Select the y-axis label check box. In the associated text field, type Mass fraction C3H8.
- 5 Select the Two y-axes check box.
- 6 Select the Secondary y-axis label check box. In the associated text field, type Mass fraction CO.

- 7 In the table, select the Plot on secondary y-axis check boxes for CO countercurrent 900 K, CO Co-current 900 K, and CO Co-current 1000 K.
- 9 Locate the Legend section. From the Position list, choose Middle right.
- II Click the **Zoom Extents** button in the **Graphics** toolbar.

This is Figure 6.

Now plot the temperature profiles along the bed centerline and along the side of one of the heating tubes. Utilize the plot group just created by duplicating it and modify the expressions and legends accordingly.

12 Right-click w\_C3H8 and w\_CO Along Bed Midline and choose Duplicate.

## Temperature Profiles Along Reactor

- I In the Model Builder window, under Results click w\_C3H8 and w\_C0 Along Bed Midline I.
- 2 In the Settings window for ID Plot Group, type Temperature Profiles Along Reactor in the Label text field.

## T sr countercurrent 900 K

- I In the Model Builder window, expand the Temperature Profiles Along Reactor node, then click C3H8 countercurrent 900 K.
- 2 In the Settings window for Line Graph, type T\_sr countercurrent 900 K in the Label text field.
- 3 Locate the y-Axis Data section. In the Expression text field, type T\_sr.

### T sr Co-current 900 K

- I In the Model Builder window, under Results>Temperature Profiles Along Reactor click
  C3H8 Co-current 900 K.
- 2 In the Settings window for Line Graph, type T\_sr Co-current 900 K in the Label text field.
- 3 Locate the y-Axis Data section. In the Expression text field, type T\_sr.

## T\_sr Co-current 1000 K

- I In the Model Builder window, under Results>Temperature Profiles Along Reactor click C3H8 Co-current 1000 K.
- 2 In the Settings window for Line Graph, type T\_sr Co-current 1000 K in the Label text field.
- **3** Locate the **y-Axis Data** section. In the **Expression** text field, type T\_sr.

## T\_tubes countercurrent

- I In the Model Builder window, under Results>Temperature Profiles Along Reactor click CO countercurrent 900 K.
- 2 In the Settings window for Line Graph, type T tubes countercurrent in the Label text field.
- 3 Locate the Selection section. Click to select the **Exercise Activate Selection** toggle button.
- **4** Select Edge 6 only.
- 5 Locate the y-Axis Data section. In the Expression text field, type T tubes.

#### T tubes Co-current 900 K

- I In the Model Builder window, under Results>Temperature Profiles Along Reactor click CO Co-current 900 K.
- 2 In the Settings window for Line Graph, type T tubes Co-current 900 K in the Label text field.
- 3 Locate the Selection section. Click to select the **Methods** Activate Selection toggle button.
- 4 Select Edge 6 only.
- 5 Locate the y-Axis Data section. In the Expression text field, type T tubes.

### T tubes Co-current 1000 K

- I In the Model Builder window, under Results>Temperature Profiles Along Reactor click CO Co-current 1000 K.
- 2 In the Settings window for Line Graph, type T\_tubes Co-current 1000 K in the Label text field.
- **3** Locate the **Selection** section. Click to select the **Exercise Selection** toggle button.
- **4** Select Edge 6 only.
- 5 Locate the y-Axis Data section. In the Expression text field, type T tubes.

## Temperature Profiles Along Reactor

- I In the Model Builder window, click Temperature Profiles Along Reactor.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 Clear the Two y-axes check box.
- 4 In the y-axis label text field, type Temperature (K).
- 5 In the Temperature Profiles Along Reactor toolbar, click Plot.
- 6 Locate the Legend section. From the Position list, choose Upper middle.

7 Click the **Zoom Extents** button in the **Graphics** toolbar.

This is Figure 7.

Finally, calculate the average outlet temperatures for the gas in the heating tubes and in the reformer bed.

Average temperature in bed outflow

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, type Average temperature in bed outflow in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current T\_in\_tubes = 900, 1000 K/Parametric Solutions I (sol7).
- 4 From the Parameter selection (T\_in\_tubes) list, choose Last.
- **5** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description	
ht.ofl1.Tave	K	Weighted average temperature	

6 Click **= Evaluate**.

Average temperature in heat tube outflow

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, type Average temperature in heat tube outflow in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Co-current T\_in\_tubes = 900, 1000 K/Parametric Solutions I (sol7).
- 4 From the Parameter selection (T\_in\_tubes) list, choose Last.
- **5** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
ht2.of12.Tave	K	Weighted average temperature

6 Click **= Evaluate**.