

# Virtual Operations on a Wheel Rim Geometry

# Introduction

CAD geometries, especially those imported from CAD design software, may contain small features, such as faces or edges, that could significantly increase the number of mesh elements in the model. An efficient modeling approach is to avoid such small features by using virtual geometry operations to "hide" them from the mesher. A benefit of using virtual geometry operations is also that the curvature of the geometry is preserved, which could be important for certain physics applications, such as stress analysis.

In this tutorial you prepare a wheel rim geometry for stress analysis by defeaturing it using virtual geometry operations. The stress analysis is described in the model Submodel of a Wheel Rim found in the Application Libraries for the Structural Mechanics Module.

**Note:** See also the tutorials Removing Small Geometric Entities with the Defeaturing Tools, Removing Small Geometri Entities with Remove Details, and Removing Small Geometric Entities with Repair, available in the Application Libraries for the CAD Import Module, Design Module, and the LiveLink for CAD products.

The geometry to be meshed is of a ten-spoke rim design, shown in Figure 1.

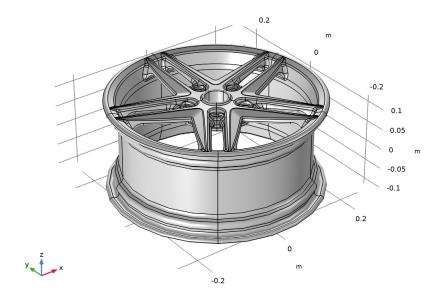


Figure 1: Wheel rim geometry.

To provide accurate results for the stiffness of the rim create a mesh for the analysis using the default normal predefined mesh settings. Apply virtual geometry operations to reduce the number of elements in the mesh.

The mesh generated with the original geometry consists of about 220,000 tetrahedral elements, see Figure 2 below.

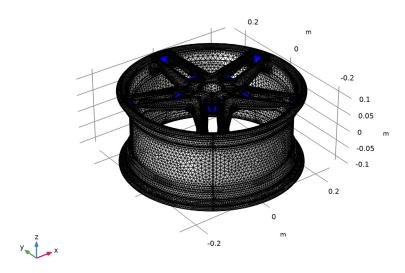


Figure 2: Mesh of the geometry before applying virtual geometry operations.

Due to small faces and edges, the mesh generated with a default normal size setting contains information messages. These messages indicate that some small features could not be resolved by the mesher using the current settings. The selections in the Information nodes can help in locating these geometric entities.

The final mesh, after the virtual geometry operations, consists of about 180,000 tetrahedral elements, see Figure 3 below, which means a reduction of about 15% using the same mesh settings.

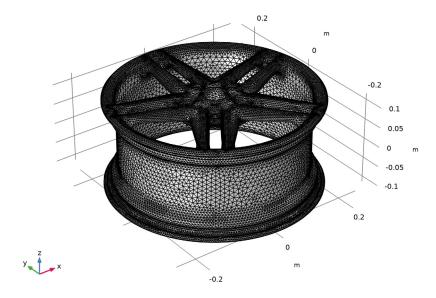


Figure 3: Mesh of the geometry after applying virtual geometry operations.

This is a significant reduction of elements which reduces the memory requirements for computing the solution.

**Note:** The number of elements vary based on the used geometry kernel. If you are using the option **Design Module Boolean operations** with the CAD kernel, you can expect more elements than the values given in this document.

# Notes About the COMSOL Implementation

Virtual geometry operations appear after the Finalize node in the geometry sequence. Virtual geometry operations do not modify the geometry, rather they hide geometric entities — such as faces, edges, or vertices — from the mesher. As a result, a virtual geometry is meshed, hence the name of these operations.

As a starting point for where on the geometry to apply virtual operations, use the information from the messages provided by the mesher. Information nodes are generated for those small faces or edges that the mesher cannot resolve with the current settings.

For an efficient workflow, you can take advantage of the symmetry of the rim design. Rather than creating selections on the full wheel geometry you can apply the virtual operations on only a fifth of the rim. When done recreate the full rim geometry from the segments. The selections of the virtual operations automatically extends to include the full geometry.

Application Library path: COMSOL Multiphysics/Meshing Tutorials/wheel rim

# Modeling Instructions

From the File menu, choose New.

#### NEW

In the New window, click Model Wizard.

### MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 Click M Done.

#### GEOMETRY I

Import I (impl)

The wheel rim geometry has been saved in the COMSOL MPHBIN-format.

- I In the **Home** toolbar, click  **Import**.
- 2 In the Settings window for Import, locate the Import section.
- 3 Click **Browse**.
- 4 Browse to the model's Application Libraries folder and double-click the file wheel rim.mphbin.
- 5 Click Import.

Now, generate the full geometry using a transform operation.

Rotate I (rot1)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- **2** Select the object **imp1** only.
- 3 In the Settings window for Rotate, locate the Rotation section.
- 4 Click Range.
- 5 In the Range dialog box, choose Number of values from the Entry method list.
- 6 In the **Start** text field, type 0.
- 7 In the Stop text field, type 4/5\*360.
- 8 In the Number of values text field, type 5.
- 9 Click Replace.
- 10 Right-click Rotate I (rotl) and choose Build Selected.
- II Click the Zoom Extents button in the Graphics toolbar.

Form Union (fin)

Continue with adjusting the repair tolerance for the **Form Union** operation. This is sometimes necessary when working with imported CAD design geometries.

- I In the Model Builder window, click Form Union (fin).
- 2 In the Settings window for Form Union/Assembly, locate the Form Union/Assembly section.
- 3 From the Repair tolerance list, choose Absolute.
- 4 In the Absolute repair tolerance text field, type 1.1E-5[m].
- 5 In the Geometry toolbar, click Build All.

#### MESH I


- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- 3 From the Element size list, choose Fine.
- 4 Click Build All.


Information I

This **Information** node contains a selection of edges that are much shorter than the minimum element size specified by the **Finer** element size.

# Information 2

In the figure below you can see the regions of high mesh density around the bolt holes and in the region of the fillets between the spoke and the rim drum.



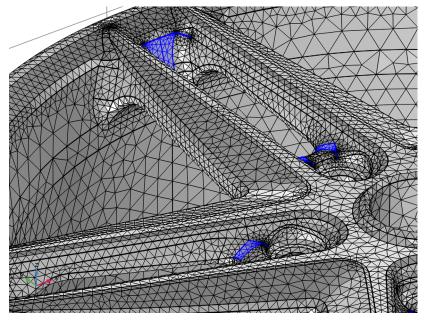

These regions indicate small faces or small edges, which you can also locate if you examine the entities reported in the Information nodes for the mesh.

# **GEOMETRY I**

Using the Form Composite Faces operation, you will merge the faces of several fillets in the geometry.

First, disable the Rotate I node to work only with the reduced geometry, which will limit the number of selections you have to create for the virtual operations.

Rotate I (rot1)


In the Model Builder window, under Component I (compl)>Geometry I right-click Rotate I (rotl) and choose Disable.

Form Composite Faces I (cmfl)

I In the Geometry toolbar, click \to Virtual Operations and choose Form Composite Faces.

To add faces to the selection, you can pick faces one by one in the **Graphics** window, or use the Select Box tool from the Graphics toolbar to select multiple faces at once. A faster alternative is to enter, or copy and paste the list of face numbers from the instructions into the Paste Selection dialog box.

- **2** Go to the **Form Composite Faces** window, under the **Input** section click the **Paste Selection** button. In the list enter: 2-9,11-17,19-27, 29, 31-46, 51-110, 112-136, 138-160, 162-197, 199-208.
- 3 Click the Go to Default View button in the Graphics toolbar.

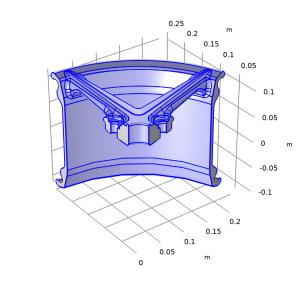

4 In the Settings window for Form Composite Faces, click 🖺 Build Selected.

Rotate I (rot1)

Before meshing you can generate the full geometry of the wheel rim, by enabling the **Rotate 1** node in the geometry sequence.

- I Right-click Rotate I (rot1) and choose Enable.
- 2 In the Settings window for Rotate, click 📳 Build Selected.
- 3 Click the Go to Default View button in the Graphics toolbar.

Form Composite Domains I (cmd1)

The geometry now contains interior boundaries, which delimit five distinct domains. As the entire rim is made of the same material, you can create a single domain by the **Form Composite Domains** operation.

I In the Geometry toolbar, click Virtual Operations and choose Form Composite Domains.

- 2 Click the Select All button in the Graphics toolbar.
- 3 In the Settings window for Form Composite Domains, click **Parameter** Build Selected.

# MESH I

Finally mesh the geometry of the rim.

I In the Model Builder window, under Component I (compl) right-click Mesh I and choose Build All.