

# Multiturn Coil Above an Asymmetric Conductor Plate

This model solves the Testing Electromagnetic Analysis Methods (TEAM) problem 7, "Asymmetrical Conductor with a Hole" — a benchmark problem concerning the calculation of eddy currents and magnetic fields produced when an aluminum conductor is placed asymmetrically above a multiturn coil carrying a sinusoidally varying current. The simulation results at specified positions in space are compared with measured data from the literature and agreement is shown.

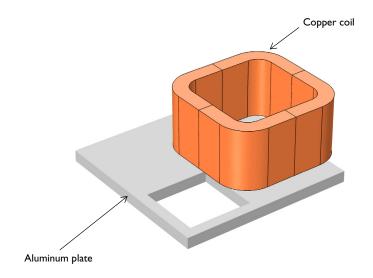
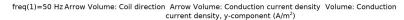


Figure 1: A multiturn coil placed asymmetrically over an aluminum plate with a hole.

# Model Definition

Because the geometry has no symmetries, the problem must be solved for the entire geometry. As shown in Figure 1, the geometry consists of a coil placed asymmetrically above a thick aluminum conductor with an eccentric square hole. The coil has 2742 turns and carries a sinusoidally varying current of 1 A/turn. The problem is to compute the magnetic field and the eddy currents induced in the conductor for coil currents of frequencies 50 Hz and 200 Hz, and to compare the simulation results along specified locations in space with experimental data given in Ref. 1.

Figure 2 visualizes the induced current at 50 Hz using a combined surface and arrow plot. The black arrows show the current density in the conductor while the red arrows indicate the coil current direction is shown. Figure 3 shows the corresponding results at 200 Hz.



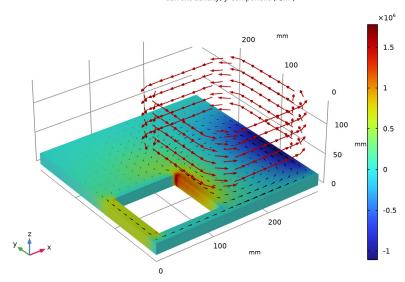


Figure 2: A 3D surface plot of the y-component of the induced current density,  $J_y$  (A/m<sup>2</sup>) in the conductor combined with the arrow volume plots of the coil current direction and the induced current density in the conductor. This simulation results are at 50 Hz.

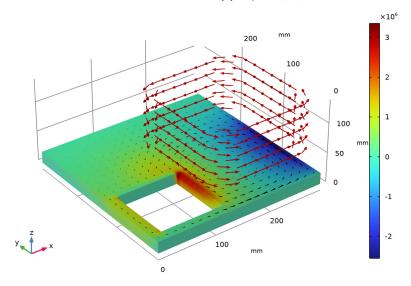


Figure 3: A 3D surface plot of the y-component of the induced current density in the conductor combined with the arrow volume plots of the coil current direction and the induced current density in the conductor. This simulation results are at 200 Hz.

Figure 4 and Figure 5 show comparisons between the simulation and the measured data. In Figure 4, the z-component values of the magnetic flux density,  $B_z$  (SI unit: mT), at 50 Hz and 200 Hz are compared with measured data from Ref. 1. These results are compared for  $0 \le x \le 288$  mm at y = 72 mm and z = 34 mm. In Figure 5, similarly, the ycomponent values of the induced current density,  $J_v$  (SI unit: A/m<sup>2</sup>) at 50 Hz and 200 Hz are compared with the corresponding measured data. These results are compared for  $0 \le x \le 288$  mm at y = 72 mm and z = 19 mm. As is evident from the plots, there is close agreement between the simulation results and the measured data.

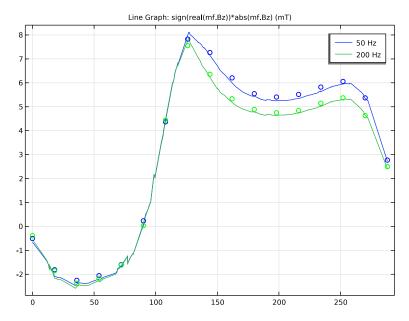


Figure 4: z-components of the flux densities,  $B_z$  (mT) for  $0 \le x \le 288$  mm at y = 72 mm, z = 34 mm for 50 Hz and 200 Hz. The solid lines are simulations results while the circles are the corresponding measured data from Ref. 1.

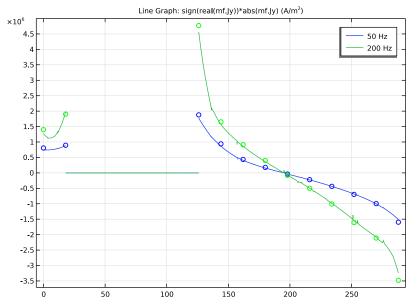


Figure 5: y-components of the induced current densities,  $J_y$   $(A/m^2)$  for  $0 \le x \le 288$  mm at y = 72 mm, z = 19 mm for 50 Hz and 200 Hz. The solid lines are simulation results while the circles are the corresponding measured data from Ref. 1.

# Notes About the COMSOL Implementation

The direction of the wires in the coil is computed using a Coil feature combined with a Coil Geometry Analysis study step. The eddy currents and the nonuniform magnetic field are computed using a Frequency Domain study step for the frequencies 50 Hz and 200 Hz.

# Reference

1. K. Fujiwara and T. Nakata, "Results for Benchmark Problem 7 (Asymmetrical Conductor with a Hole)," Int. J. Comput. and Math. in Electr. and Electron. Eng., vol. 9, no. 3, pp. 137-154, 1990.

# Application Library path: ACDC Module/Verifications/

multiturn\_coil\_asymmetric\_conductor

# Modeling Instructions

From the File menu, choose New.

#### NEW

In the New window, click Model Wizard.

#### MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select AC/DC>Electromagnetic Fields>Magnetic Fields (mf).
- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select Empty Study.
- 6 Click M Done.

#### **GEOMETRY I**


Insert the geometry sequence provided in a separate file.

- I In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.
- 2 Browse to the model's Application Libraries folder and double-click the file multiturn\_coil\_asymmetric\_conductor\_geom\_sequence.mph.
- 3 In the Geometry toolbar, click **Build All**.

The model geometry is now complete. Choose wireframe rendering to get a better view of the interior parts.

4 Click the Wireframe Rendering button in the Graphics toolbar.

5 In the Model Builder window, under Component I (compl) click Geometry I.

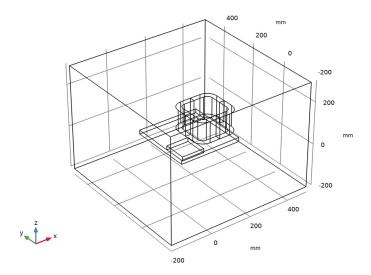

# Conductor

Define domain and boundary selections for the coil and the conductor.

- I In the Model Builder window, under Component I (compl)>Geometry I click Difference I (difl).
- 2 In the Settings window for Difference, type Conductor in the Label text field.
- 3 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.

#### Coil

- I In the Model Builder window, under Component I (compl)>Geometry I click Extrude I (extl).
- 2 In the Settings window for Extrude, type Coil in the Label text field.
- 3 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
  - Hide the outer geometry boundaries to visualize the results only in the coil and the conductor domains.
- 4 In the Graphics toolbar, click the Click and Hide button.
- 5 In the Graphics toolbar, click the Select Boundaries button.
- **6** Select the exterior boundaries of the block (boundaries 1–5 and 52).

7 In the Graphics toolbar, click the Click and Hide button again to deactivate it.

# MAGNETIC FIELDS (MF)

Now set up the physics. Start by setting Ampère's Law to the aluminum plate.

Ampère's Law in Solids I

- I In the Model Builder window, under Component I (compl) right-click Magnetic Fields (mf) and choose Ampère's Law in Solids.
- 2 In the Settings window for Ampère's Law in Solids, locate the Domain Selection section.
- **3** From the **Selection** list, choose **Conductor**.
- 4 In the Model Builder window, right-click Magnetic Fields (mf) and choose Group by Space Dimension.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

Coil I


- I In the Physics toolbar, click **Domains** and choose Coil.
- 2 In the Settings window for Coil, locate the Domain Selection section.
- **3** From the **Selection** list, choose **Coil**.
- 4 Locate the Coil section. From the Conductor model list, choose Homogenized multiturn.
- **5** From the **Coil type** list, choose **Numeric**.
- **6** Locate the **Homogenized Multiturn Conductor** section. In the N text field, type 2742.

Apply the input on a cross-sectional coil boundary.

Inbut I

I In the Model Builder window, expand the Component I (compl)>Magnetic Fields (mf)> Domains>Coil I>Geometry Analysis I node, then click Input I.

# 2 Select Boundary 37 only.

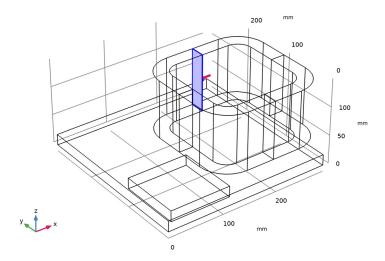

# MATERIALS

Add material for the components.

#### ADD MATERIAL

- I In the Home toolbar, click **‡ Add Material** to open the **Add Material** window.
- 2 Go to the Add Material window.
- 3 In the tree, select AC/DC>Copper.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click **‡ Add Material** to close the **Add Material** window.

# MATERIALS

Copper (mat1)

- I In the Settings window for Material, locate the Geometric Entity Selection section.
- 2 From the Selection list, choose Coil.

Create a new material for the conductor. This will have the relevant properties of Aluminum

#### Aluminum

I In the Model Builder window, right-click Materials and choose Blank Material.

- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- **3** From the **Selection** list, choose **Conductor**.
- **4** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	3.526e7	S/m	Basic
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	1	I	Basic

5 In the Label text field, type Aluminum.

#### MESH I

Use a finer mesh in the aluminum plate to better resolve the eddy currents and obtain a more accurate solution.

#### Size 1

- I In the Model Builder window, under Component I (compl) right-click Mesh I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Conductor.
- **5** Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the Element Size Parameters section.
- 7 Select the Maximum element size check box. In the associated text field, type 12.


#### Size 2

- I In the Model Builder window, right-click Mesh I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.

- 4 From the Selection list, choose Coil.
- **5** Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the Element Size Parameters section.
- 7 Select the Maximum element size check box. In the associated text field, type 20.

Free Tetrahedral I

- I In the Mesh toolbar, click A Free Tetrahedral.
- 2 In the Settings window for Free Tetrahedral, click | Build Selected. The mesh should look like that shown in the figure below.

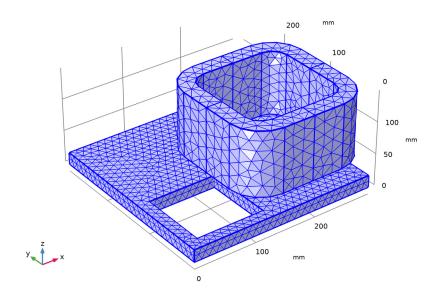

## STUDY I

Next, set up the study. Start by adding a Coil Geometry Analysis preprocessing study step before the Frequency Domain step.

Step 1: Coil Geometry Analysis

I In the Study toolbar, click **Study Steps** and choose Other>Coil Geometry Analysis. This study step computes the direction of the wires in the coils.

Add the main Frequency Domain study step. Solve the problem in the frequency domain for 50 Hz and 200 Hz.

Step 2: Frequency Domain

- I In the Study toolbar, click Study Steps and choose Frequency Domain> Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- 3 In the Frequencies text field, type 50 200.
- 4 In the Model Builder window, click Study 1.
- 5 In the Settings window for Study, locate the Study Settings section.
- 6 Clear the Generate default plots check box.
- 7 In the Study toolbar, click **Compute**.

#### RESULTS

To reproduce the plot shown in Figure 2, create a 3D plot group and add an Arrow Volume plot of the coil current direction in the coil domain, computed by the Coil Geometry Analysis step. Add an Arrow Volume plot of the induced current on the conductor surface and a Volume plot of the *y* component of the induced current density to the same plot group.

Coil Direction and Induced Current Density, 50 Hz

- I In the Model Builder window, expand the Results node.
- 2 Right-click Results and choose 3D Plot Group.
- 3 In the Settings window for 3D Plot Group, type Coil Direction and Induced Current Density, 50 Hz in the Label text field.
- 4 Locate the Data section. From the Parameter value (freq (Hz)) list, choose 50.

Arrow Volume 1

Right-click Coil Direction and Induced Current Density, 50 Hz and choose Arrow Volume.

Selection I

- I In the Model Builder window, right-click Arrow Volume I and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- **3** From the **Selection** list, choose **Coil**.

Arrow Volume 1

- I In the Model Builder window, click Arrow Volume I.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Magnetic Fields>Coil parameters>mf.coil1.eCoilz....,mf.coil1.eCoilz Coil direction.

- 3 Locate the Arrow Positioning section. Find the x grid points subsection. In the Points text field, type 10.
- 4 Find the y grid points subsection. In the Points text field, type 10.
- 5 Find the z grid points subsection. In the Points text field, type 5.
- 6 Locate the Coloring and Style section.
- 7 Select the Scale factor check box. In the associated text field, type 20.

#### Arrow Volume 2

In the Model Builder window, right-click Coil Direction and Induced Current Density, 50 Hz and choose Arrow Volume.

#### Selection I

- I In the Model Builder window, right-click Arrow Volume 2 and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Conductor.

#### Arrow Volume 2

- I In the Model Builder window, click Arrow Volume 2.
- 2 In the Settings window for Arrow Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Magnetic Fields>Currents and charge>mf.Jix,...,mf.Jiz - Conduction current density.
- 3 Locate the Arrow Positioning section. Find the x grid points subsection. In the Points text field, type 20.
- 4 Find the y grid points subsection. In the Points text field, type 20.
- 5 Find the z grid points subsection. From the Entry method list, choose Coordinates.
- 6 In the Coordinates text field, type 19.
- 7 Locate the Coloring and Style section. From the Color list, choose Black.
- 8 From the Arrow type list, choose Cone.

#### Volume 1

In the Model Builder window, right-click Coil Direction and Induced Current Density, 50 Hz and choose Volume.

#### Selection 1

- I In the Model Builder window, right-click Volume I and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- **3** From the **Selection** list, choose **Conductor**.

Volume 1

- I In the Model Builder window, click Volume I.
- 2 In the Settings window for Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Magnetic Fields> Currents and charge>Conduction current density A/m²>mf.Jiy Conduction current density, y-component.

Coil Direction and Induced Current Density, 50 Hz

- I In the Model Builder window, click Coil Direction and Induced Current Density, 50 Hz.
- 2 In the Settings window for 3D Plot Group, locate the Plot Settings section.
- 3 Clear the Plot dataset edges check box.
- 4 In the Coil Direction and Induced Current Density, 50 Hz toolbar, click Plot.

  Duplicate the plot group just created and modify the copy to generate the plot shown in Figure 3. This figure is similar to the Figure 2 except the frequency is 200 Hz.
- 5 Right-click Coil Direction and Induced Current Density, 50 Hz and choose Duplicate.

Coil Direction and Induced Current Density, 200 Hz

- In the Model Builder window, under Results click
   Coil Direction and Induced Current Density, 50 Hz 1.
- 2 In the Settings window for 3D Plot Group, type Coil Direction and Induced Current Density, 200 Hz in the Label text field.
- 3 Locate the Data section. From the Parameter value (freq (Hz)) list, choose 200.
- 4 In the Coil Direction and Induced Current Density, 200 Hz toolbar, click Plot.

To generate the plots shown in Figure 4 and Figure 5, begin by creating two cut line datasets.

Cut Line 3D I

- I In the Results toolbar, click Cut Line 3D.
- 2 In the Settings window for Cut Line 3D, locate the Line Data section.
- 3 In row Point 1, set y to 72 and z to 34.
- 4 In row Point 2, set x to 288, y to 72, and z to 34.
- 5 Right-click Cut Line 3D I and choose Duplicate.

Cut Line 3D 2

Specify a value of z slightly below the surface of the conductor.

I In the Model Builder window, click Cut Line 3D 2.

- 2 In the Settings window for Cut Line 3D, locate the Line Data section.
- 3 In row Point 1, set z to 18.99.
- 4 In row Point 2, set z to 18.99.

Import the experimental data of  $B_z$  and  $J_y$  in two tables.

#### Table I

- I In the Results toolbar, click Table.
- 2 In the Settings window for Table, locate the Data section.
- 3 Click T Import.
- 4 Browse to the model's Application Libraries folder and double-click the file multiturn\_coil\_asymmetric\_conductor\_table1.txt.
- **5** Locate the **Column Headers** section. In the table, enter the following settings:

Column	Header
1	x [mm]
2	Bz(x,72,34) at 50Hz
3	Bz(x,72,34) at 200Hz

#### Table 2

- I In the Results toolbar, click Table.
- 2 In the Settings window for Table, locate the Data section.
- 3 Click T- Import.
- 4 Browse to the model's Application Libraries folder and double-click the file multiturn\_coil\_asymmetric\_conductor\_table2.txt.
- 5 Locate the Column Headers section. In the table, enter the following settings:

Column	Header
1	x [mm]
2	Jy(x,72,19) at 50Hz
3	Jy(x,72,19) at 200Hz

Plot the z-component of the magnetic flux density,  $B_z$ , along the lines defined by the cut line datasets just created.

# ID Plot Group 3

In the Results toolbar, click  $\sim$  ID Plot Group.

## Line Graph 1

- I Right-click ID Plot Group 3 and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the Data section.
- 3 From the Dataset list, choose Cut Line 3D 1.
- 4 From the Solution parameters list, choose From parent.
- 5 Locate the y-Axis Data section. In the Expression text field, type sign(real(mf.Bz))\* abs(mf.Bz).
- 6 From the Unit list, choose mT.
- 7 Click to expand the Legends section. Select the Show legends check box.
- 8 From the Legends list, choose Evaluated.
- 9 In the Legend text field, type eval(freq) Hz.

## Bz(x,72,34)

Add a plot for the experimental value of  $B_z$  at 50 Hz to the same plot group using a table graph.

- I In the Model Builder window, under Results click ID Plot Group 3.
- 2 In the Settings window for ID Plot Group, type Bz(x,72,34) in the Label text field.

## Table Graph 1

- I Right-click Bz(x,72,34) and choose Table Graph.
- 2 In the Settings window for Table Graph, locate the Data section.
- 3 From the x-axis data list, choose x [mm].
- 4 From the Plot columns list, choose Manual.
- 5 In the Columns list, select Bz(x,72,34) at 50Hz.
- 6 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose None
- 7 From the Color list, choose Blue.
- 8 Find the Line markers subsection. From the Marker list, choose Circle.
  Duplicate the table graph previously created and modify to plot the experimental value of B<sub>z</sub> at 200 Hz.
- 9 Right-click Table Graph I and choose Duplicate.

# Table Graph 2

- I In the Model Builder window, click Table Graph 2.
- 2 In the Settings window for Table Graph, locate the Data section.

- 3 In the Columns list, select Bz(x,72,34) at 200Hz.
- 4 Locate the Coloring and Style section. From the Color list, choose Green.
- 5 In the Bz(x,72,34) toolbar, click Plot.

Compare the resulting plot with that in Figure 4.

Plot the y-component of the current density on the surface of the conductor,  $J_y$ , along the line specified earlier. Use an approach similar to the one used to generate Figure 4.

## ID Plot Group 4

In the Home toolbar, click Add Plot Group and choose ID Plot Group.

# Line Graph 1

- I Right-click ID Plot Group 4 and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the Data section.
- 3 From the Dataset list, choose Cut Line 3D 2.
- 4 From the Solution parameters list, choose From parent.
- 5 Locate the y-Axis Data section. In the Expression text field, type sign(real(mf.Jy))\* abs(mf.Jy).
- **6** Locate the **Legends** section. Select the **Show legends** check box.
- 7 From the Legends list, choose Evaluated.
- 8 In the **Legend** text field, type eval(freq) Hz.

# Iy(x,72,19)

- I In the Model Builder window, under Results click ID Plot Group 4.
- 2 In the Settings window for ID Plot Group, type Jy(x,72,19) in the Label text field.

#### Table Graph 1

- I Right-click Jy(x,72,19) and choose Table Graph.
- 2 In the Settings window for Table Graph, locate the Data section.
- 3 From the Table list, choose Table 2.
- 4 From the x-axis data list, choose x [mm].
- 5 From the Plot columns list, choose Manual.
- 6 In the Columns list, select y(x,72,19) at 50Hz.
- 7 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose None.
- 8 From the Color list, choose Blue.

- 9 Find the Line markers subsection. From the Marker list, choose Circle.
- **10** Right-click **Table Graph 1** and choose **Duplicate**.

# Table Graph 2

- I In the Model Builder window, click Table Graph 2.
- 2 In the Settings window for Table Graph, locate the Data section.
- 3 In the Columns list, select Jy(x,72,19) at 200Hz.
- 4 Locate the Coloring and Style section. From the Color list, choose Green.
- 5 In the Jy(x,72,19) toolbar, click Plot. This plot reproduces Figure 5.