

Radome with Double-Layered Dielectric Lens

A radome is an enclosure for protecting an antenna from the environment. It should be almost completely RF transparent, and can be designed to improve radiation characteristics such as antenna directivity. Here a radome, as shown in Figure 1, improves the gain of a patch antenna.

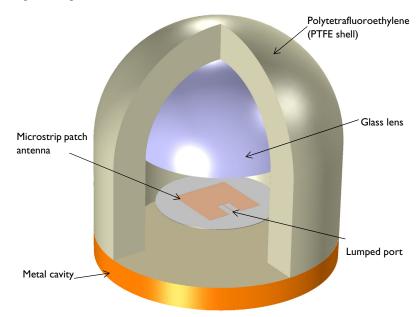


Figure 1: A microstrip patch antenna enclosed by dielectric medium. A double-layered dielectric lens is placed at the boresight of the antenna and confines the fields to increase the antenna gain.

Model Definition

The model shown in Figure 1 represents the radome enclosing a patch antenna. The patch antenna is a thin layer of metal, sitting on a circular dielectric above a ground plane. The antenna and ground plane are modeled as infinitely thin perfect electric conductor (PEC) surfaces. The antenna itself is fed by a 50 Ω lumped port, representing a feed from the power source.

The entire structure is enclosed in a cylindrical PTFE housing, capped by a half-spherical shell. Within this, a half-sphere of a quartz glass dielectric is used to increase the antenna gain. The PTFE housing is backed by a metal housing, also modeled as PEC surfaces. The structure is designed to operate at 1.632 GHz.

The entire antenna structure is modeled within a sphere with the properties of vacuum. This sphere is truncated by a perfectly matched layer (PML) domain that acts as a boundary to free space. The distance from the antenna to the PML is a variable that does require some study. The PML should not be within the reactive near-field region of the antenna structure. However, the size of the reactive near field is not strictly definable, so the distance from the antenna to the PML should be studied for each model. The thickness of the PML itself is not critical, and can be made approximately one tenth of the air sphere diameter.

The meshing of radiating structures requires some care. As a rule of thumb, use at least five elements per wavelength in each material, although if absolutely necessary, as few as three elements can do. Furthermore, curved edges and surfaces should be meshed with at least two elements per 90° chord, and the stricter of the two criteria should always be used. Additionally, tetrahedral elements of approximately unit aspect ratio are preferable in most modeling regions, with the exception of the PML domains. Because the PML domain preferentially absorbs radiated energy in one direction, the mesh should conform to this. A swept mesh is thus recommended in PML regions.

Results and Discussion

The far-field radiation pattern is shown in Figure 2. The observed radiation pattern is more directive than that of a patch antenna only. Figure 4 shows E-fields that are confined through the radome structure, which results in stronger fields at the center of the top shell. This example model shows that a radome can work as an antenna enclosure and improve the antenna directivity.

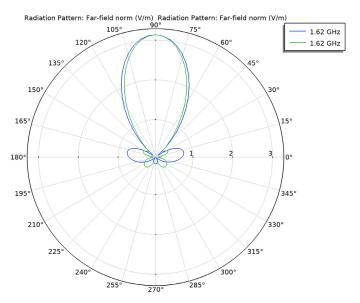


Figure 2: Far-field radiation pattern at the E-plane (blue) and the H-plane (green) at 1.632 GHz. The radiation pattern is more directive than that of a patch antenna.

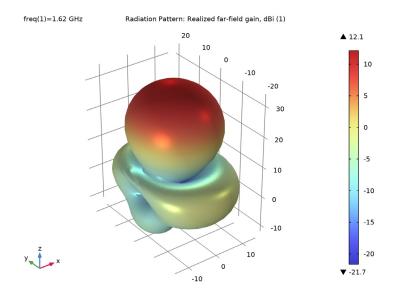


Figure 3: The 3D far-field radiation pattern is directive toward the front side of the radome.

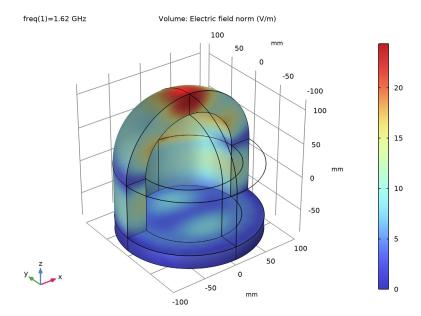


Figure 4: E-field distribution on the radome shell. Note the strong fields at the center of the top radome shell.

References

- 1. D.M. Pozar, Microwave Engineering, John Wiley & Sons, 1998.
- 2. M. Skolnik, Introduction to Radar Systems, McGraw Hill, 1980.
- 3. F.T. Ulaby, Fundamentals of Applied Electromagnetics, Prentice Hall, 1997.

Application Library path: RF_Module/Antennas/radome_antenna

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select General Studies>Frequency Domain.
- 6 Click M Done.

STUDY I

Step 1: Frequency Domain

Define the study frequency ahead of performing any frequency-dependent operation such as building mesh. The physics-controlled mesh uses the specified frequency value.

- I In the Model Builder window, under Study I click Step I: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- **3** In the **Frequencies** text field, type 1.62[GHz].

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file radome_antenna_parameters.txt.

mil refers to the unit milliinch. The evaluated impedance of the 1.13 mm feed line on a 20 mil substrate is approximately 50Ω .

GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- **3** From the **Length unit** list, choose **mm**.

First, create a block for the patch.

Patch

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, type Patch in the Label text field.
- 3 Locate the Size and Shape section. In the Width text field, type w_patch.
- 4 In the **Depth** text field, type 1_patch.
- 5 In the **Height** text field, type thickness.
- 6 Locate the Position section. From the Base list, choose Center.
- 7 In the z text field, type -40.
- 8 Click Pauld Selected.

Add a block for the tuning stub.

Stub

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, type Stub in the Label text field.
- 3 Locate the Size and Shape section. In the Width text field, type w tuning.
- 4 In the **Depth** text field, type 1_tuning.
- 5 In the **Height** text field, type thickness.
- 6 Locate the Position section. From the Base list, choose Center.
- 7 In the x text field, type w tuning/2+w line/2.
- 8 In the y text field, type 1 tuning/2-25.
- 9 In the z text field, type -40.
- 10 Click **Build Selected**.

Copy the tuning stub. A pair of the tuning stubs is symmetric with respect to the feed line.

Copy I (copy I)


- I In the Geometry toolbar, click Transforms and choose Copy.
- 2 Select the object blk2 only.
- 3 In the Settings window for Copy, locate the Displacement section.
- 4 In the x text field, type -w_tuning-w_line.
- 5 Click Pauld Selected.

Subtract the tuning stubs from the patch. This action creates the 50Ω feed line, too.

Difference I (dif1)

I In the Geometry toolbar, click Booleans and Partitions and choose Difference.

- **2** Select the object **blk1** only.
- 3 In the Settings window for Difference, locate the Difference section.
- 4 Click to select the Activate Selection toggle button for Objects to subtract.
- 5 Select the objects blk2 and copy! only.
- 6 Click Pauld Selected.

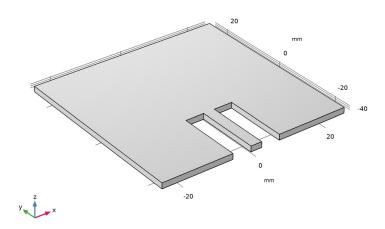

Add a cylinder for the substrate.

Substrate

- I In the Geometry toolbar, click Cylinder.
- 2 In the Settings window for Cylinder, type Substrate in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type 50.
- 4 In the Height text field, type thickness.
- 5 Locate the Position section. In the z text field, type -40-thickness/2.
- 6 Click **Build Selected**.
- 7 Click the **Zoom Extents** button in the **Graphics** toolbar.

Create a sphere for the double-layered dielectric lens.

Radome

- I In the Geometry toolbar, click \bigcirc Sphere.
- 2 In the Settings window for Sphere, type Radome in the Label text field.

- 3 Locate the Size section. In the Radius text field, type r radome.
- 4 Locate the **Position** section. In the z text field, type 15.
- **5** Click to expand the **Layers** section. In the table, enter the following settings:

Layer name	Thickness (mm)
Layer 1	t_radome_wall

- 6 Click Build Selected.
- 7 Click the Wireframe Rendering button in the Graphics toolbar.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar.

Add a block to cut the bottom half of the above sphere.

Cut Bottom Half

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, type Cut Bottom Half in the Label text field.
- 3 Locate the Size and Shape section. In the Width text field, type r_radome*2.5.
- 4 In the **Depth** text field, type r_radome*2.5.
- 5 In the **Height** text field, type r radome*2.
- 6 Locate the Position section. From the Base list, choose Center.
- 7 In the z text field, type -85.
- 8 Click | Build Selected.

Create a hemisphere by subtracting the above block from the dielectric lens sphere.

Radome Tob

- I In the Geometry toolbar, click Booleans and Partitions and choose Difference.
- 2 In the Settings window for Difference, type Radome Top in the Label text field.
- **3** Select the object **sph1** only.
- 4 Locate the Difference section. Click to select the Activate Selection toggle button for Objects to subtract.
- **5** Select the object **blk3** only.
- 6 Click | Build Selected.

Create a cylinder with a layer for the side wall of the radome.

Radome Wall

I In the Geometry toolbar, click Cylinder.

- 2 In the Settings window for Cylinder, type Radome Wall in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type r_radome.
- 4 In the **Height** text field, type h radome wall.
- **5** Locate the **Position** section. In the **z** text field, type -65.
- **6** Click to expand the **Layers** section. In the table, enter the following settings:


Layer name	Thickness (mm)
Layer 1	30

7 Click | Build Selected.

Create a cylinder for the bottom part of the radome.

Radome Bottom

- I In the Geometry toolbar, click Cylinder.
- 2 In the Settings window for Cylinder, type Radome Bottom in the Label text field.
- 3 Locate the Size and Shape section. In the Radius text field, type r_radome.
- 4 In the Height text field, type t radome bottom.
- **5** Locate the **Position** section. In the **z** text field, type -85.
- 6 Click | Build Selected.

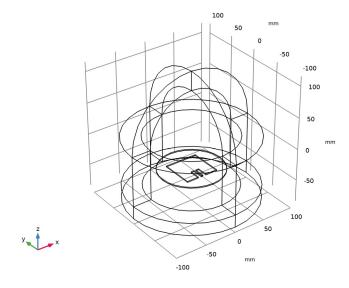

Create a sphere for the PMLs.

PMLs

- I In the Geometry toolbar, click Sphere.
- 2 In the Settings window for Sphere, type PMLs in the Label text field.
- 3 Locate the Size section. In the Radius text field, type 190.
- **4** Locate the **Layers** section. In the table, enter the following settings:

Layer name	Thickness (mm)
Layer 1	30

5 Click Build All Objects.


DEFINITIONS

Add a selection for the radome.

Radome

- I In the **Definitions** toolbar, click **\(\big|_{\text{a}} \) Explicit**.
- 2 In the Settings window for Explicit, type Radome in the Label text field.
- 3 Select Domains 6–10, 17, 18, 20, and 22 only.

 These are the visible domains from the default 3D view. Domain 7 and 9 are hidden in this figure.

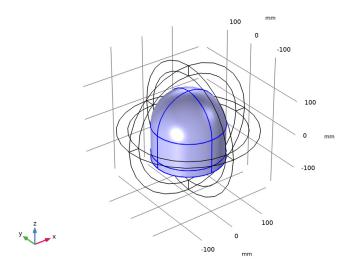

Perfectly Matched Layer I (pml1)

I In the Definitions toolbar, click M Perfectly Matched Layer.

- **2** Select Domains 1–4, 15, 16, 19, and 21 only.
- 3 In the Settings window for Perfectly Matched Layer, locate the Geometry section.
- **4** From the **Type** list, choose **Spherical**.

Hide some boundaries and domains to get a better view of the interior parts.

Hide for Physics 1

- I In the Model Builder window, right-click View I and choose Hide for Physics.
- **2** Select Domains 1, 2, 15, and 16 only.

Hide for Physics 2

- I Right-click View I and choose Hide for Physics.
- **2** Select Domains 7, 9, 17, and 18 only.

Hide for Physics 3

- I Right-click View I and choose Hide for Physics.
- 2 In the Settings window for Hide for Physics, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 Click Paste Selection.
- 5 In the Paste Selection dialog box, type 9-10, 17, 24, 26, 29-30, 50-51, 54, 58-60 in the Selection text field.
- 6 Click OK.

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN (EMW)

Perfect Electric Conductor 2

- I In the Model Builder window, under Component I (compl) right-click Electromagnetic Waves, Frequency Domain (emw) and choose the boundary condition Perfect Electric Conductor.
- 2 In the Settings window for Perfect Electric Conductor, locate the Boundary Selection section.
- 3 Click Paste Selection.
- 4 In the Paste Selection dialog box, type 13-15, 34, 38-39, 52, 79 in the Selection text field.
- 5 Click OK.

Far-Field Domain 1


In the Physics toolbar, click **Domains** and choose Far-Field Domain.

Lumped Port I

- I In the Physics toolbar, click **Boundaries** and choose **Lumped Port**.
- 2 Select Boundary 44 only.

For the first port, wave excitation is **on** by default.

Zoom to see the port boundary clearly.

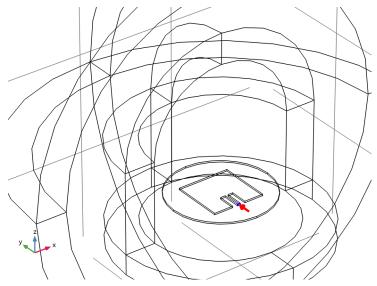

MATERIALS

Assign material properties on the model. First, set all domains with the built-in air.

ADD MATERIAL

- I In the Home toolbar, click **Add Material** to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Click Add to Component in the window toolbar.

MATERIALS

Override the substrate with the dielectric material of ε_r = 3.38.

Substrate

I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.

- 2 In the Settings window for Material, type Substrate in the Label text field.
- **3** Select Domains 13 and 14 only.
- **4** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	3.38	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

Override the radome with the PTFE material.

PTFE

- I Right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type PTFE in the Label text field.
- 3 Locate the Geometric Entity Selection section. From the Selection list, choose Radome.
- **4** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	2.1	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

Then, override the lens with glass. Choose from the material library.

ADD MATERIAL


- I Go to the Add Material window.
- 2 In the tree, select Built-in>Glass (quartz).
- **3** Click **Add to Component** in the window toolbar.
- 4 In the Home toolbar, click Radd Material to close the Add Material window.

MATERIALS

Glass (quartz) (mat4) Select Domain 12 only.

MESH I

- I In the Model Builder window, under Component I (compl) right-click Mesh I and choose **Build All.**
- 2 Click the 4 Zoom In button in the Graphics toolbar.

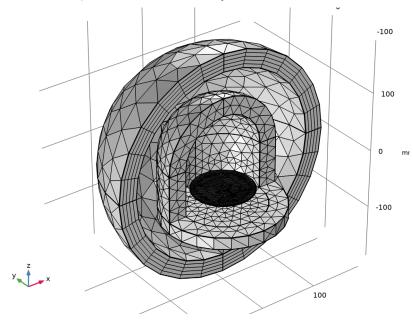

STUDY I

In the **Home** toolbar, click **Compute**.


RESULTS

Electric Field (emw)

Begin the results analysis and visualization by modifying the first default plot to show the dB-scaled E-field norm in the xz-plane.

Multislice

- I In the Model Builder window, expand the Electric Field (emw) node, then click Multislice.
- 2 In the Settings window for Multislice, locate the Expression section.
- 3 In the Expression text field, type 20*log10(emw.normE).
- 4 Locate the Multiplane Data section. Find the **Z-planes** subsection. In the **Planes** text field, type 0.
- 5 Find the X-planes subsection. In the Planes text field, type 0.
- 6 Find the Y-planes subsection. From the Entry method list, choose Coordinates.
- 7 In the Coordinates text field, type 0.
- 8 In the Electric Field (emw) toolbar, click Plot.
- 9 Click the **Toom Extents** button in the **Graphics** toolbar.
- **10** Click the **Q Zoom In** button in the **Graphics** toolbar.

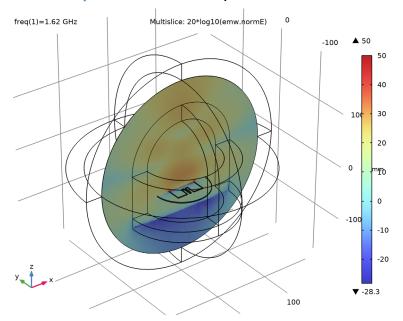

The shape of the field pattern is similar to the H-plane radiation pattern.

Adjust the polar plot settings to visualize the far-field pattern on the E-plane.

Radiation Pattern I

- I In the Model Builder window, expand the Results>2D Far Field (emw) node, then click Radiation Pattern 1.
- 2 In the Settings window for Radiation Pattern, locate the Evaluation section.
- 3 Find the Angles subsection. In the Number of angles text field, type 100.
- 4 Find the Normal vector subsection. In the x text field, type 1.
- 5 In the z text field, type 0.
- **6** Find the **Reference direction** subsection. In the **x** text field, type **0**.
- 7 In the y text field, type 1.
- 8 In the 2D Far Field (emw) toolbar, click Plot.

The E-plane in this model is located on the yz-plane where ϕ is measured counterclockwise from the y-axis.

Add the H-plane polar plot.

9 Right-click Radiation Pattern I and choose Duplicate.

Radiation Pattern 2

- I In the Model Builder window, click Radiation Pattern 2.
- 2 In the Settings window for Radiation Pattern, locate the Evaluation section.
- **3** Find the **Normal vector** subsection. In the **x** text field, type **0**.
- 4 In the y text field, type -1.
- **5** Find the **Reference direction** subsection. In the **x** text field, type 1.
- **6** In the **y** text field, type 0.
- 7 In the 2D Far Field (emw) toolbar, click **Plot**.

The H-plane is located on the xz-plane where ϕ is measured counterclockwise from the x-axis.

Compare the resulting plot with that shown in Figure 2.

3D Far Field, Gain (emw)

Compare the 3D far-field radiation pattern plot with Figure 3.

Create a selection of the solution to visualize the E-field only on the radome.

Study 1/Solution 1 (2) (sol1)

In the **Results** toolbar, click **More Datasets** and choose **Solution**.

Selection

- I Right-click Study I/Solution I (2) (soll) and choose Selection.
- 2 In the Settings window for Selection, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Radome.

3D Plot Group 4

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Dataset list, choose Study I/Solution I (2) (soll).

Volume 1

- I Right-click **3D Plot Group 4** and choose **Volume**.
- 2 In the 3D Plot Group 4 toolbar, click Plot.
- 3 Click the Zoom Extents button in the Graphics toolbar.
- 4 Click the **Q** Zoom In button in the Graphics toolbar.

The broad E-field radiation pattern from the patch antenna is confined on the center of the radome top through the double-layered (PTFE+glass) dielectric lens (compare with Figure 4).

S-parameter (emw)

The antenna input matching property at the simulated frequency is less than -10 dB.