

Vanadium Redox Flow Battery

Redox flow batteries store the energy in the liquid electrolytes, pumped through the cell and stored in external tanks, rather than in the porous electrodes as for conventional batteries. This approach offers interesting solutions for low-cost energy storage, load leveling and power peak shaving.

The vanadium redox flow battery uses two different electrolyte solutions, one for the negative side of the cell and another for the positive side. The two solutions are kept separated in the cell by the use of an ion-exchange membrane that allows for transport of ions (primarily protons) between the two cell compartments. The principle of the vanadium redox flow battery is illustrated in Figure 1.

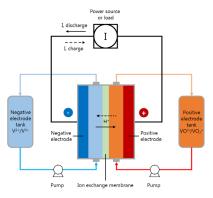


Figure 1: Schematic of a vanadium redox flow battery system.

This example demonstrates how to build a model consisting of two different cell compartments, with different ion compositions and electrode reactions, separated by an ion-exchange membrane. The model is a modified version of published works (Ref. 1 and Ref. 2).

See also the Application Libraries example Soluble Lead-Acid Redox Flow Battery for how to make a transient flow battery model by coupling the cell model to mass balances for the external storage tanks.

The cell geometry is shown in Figure 2. The model contains three domains, a negative porous electrode (4 mm thick), an ion-exchange membrane (203 μ m thick) and a positive porous electrode (4 mm thick). The cell is 35 mm high.

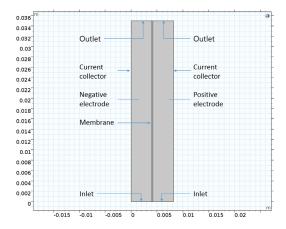


Figure 2: Model geometry. Three domains: negative electrode, membrane, positive electrode.

Each side of the cell is fed with an electrolyte containing sulfuric acid and a vanadium redox couple (see below), flowing through the porous electrodes. The liquid enters the cell from bottom at a constant velocity in the y direction, corresponding to a flow rate of 30 ml/min at cell depth of 28.5 mm.

The left electrode is grounded, and the current leaves the cell over the rightmost boundary at an average current density of 100 mA/cm^2 .

The models solves for a stationary case with a given set of inlet concentrations.

LIQUID ELECTROLYTE SPECIES AND ELECTRODE REACTIONS

The negative electrolyte contains the following ions:

- H+
- HSO₄⁻
- SO₄²-
- v³⁺
- v²⁺

The negative electrode reaction is:

$$V^{3+} + e^{-} \leftrightarrow V^{2+}$$

The equilibrium potential for this reaction is calculated using Nernst equation according to

$$E_{\text{eq, neg}} = E_{0, \text{ neg}} + \frac{RT}{F} \ln \left(\frac{a_{V^{3*}}}{a_{V^{2*}}} \right)$$

where $E_{0, \text{ neg}}$ is the reference potential for the electrode reaction (SI unit: V), a_i is the chemical activity of species i (dimensionless), R is the molar gas constant (8.31 J/ (mol·K)), T is the cell temperature (SI unit: K), and F is Faraday's constant (96,485 s·A/ mol).

A Butler–Volmer type of kinetics expression is used for the negative electrode reaction according to:

$$\begin{split} i_{\text{neg}} &= A i_{0, \text{ neg}} \Big(\exp \Big(\Big(\frac{(1 - \alpha_{\text{neg}}) F \eta_{\text{neg}}}{R T} \Big) - \exp \Big(\frac{-\alpha_{\text{neg}} F \eta_{\text{neg}}}{R T} \Big) \Big) \Big) \\ i_{0, \text{ neg}} &= F k_{\text{neg}} (a_{\text{V}^{2+}})^{1 - \alpha_{\text{neg}}} (a_{\text{V}^{3+}})^{\alpha_{\text{neg}}} \end{split}$$

where A is the specific surface area (SI unit: m^2/m^3) of the porous electrode, α_{neg} the transfer coefficient (dimensionless), k_{neg} the rate constant.

The overpotential, η_{neg} (SI unit: V), is defined as

$$\eta = \phi_s - \phi_l - E_{eq}$$

where ϕ_s is the electric potential of the solid phase of the electrode (SI unit: V) and ϕ_l the electrolyte potential (SI unit: V).

The positive electrolyte contains the following ions:

- H+
- HSO₄
- SO₄²⁻
- VO²⁺
- VO₂*

The positive electrode reaction is:

$$VO_2^+ + e^- + 2H^+ \leftrightarrow VO^{2+} + H_2O$$

with the equilibrium potential calculated according to:

$$\begin{split} E_{\rm eq,\,pos} &= E_{0,\,\rm pos} + \frac{RT}{F} \ln\!\left(\!\frac{a_{\rm VO_2^*}\!(a_{\rm H^*})^2}{a_{\rm VO^{2*}}}\!\right) \\ i_{\rm pos} &= Ai_{0,\,\rm pos}\!\left(\exp\!\left(\!\left(\!\frac{(1-\alpha_{\rm pos})F\eta_{\rm pos}}{RT}\!\right) - \exp\!\left(\!\frac{-\alpha_{\rm pos}F\eta_{\rm pos}}{RT}\!\right)\!\right)\right) \\ i_{0,\,\rm pos} &= Fk_{\rm pos}(a_{\rm VO^{2*}})^{1-\alpha_{\rm pos}}(a_{\rm VO_2^*})^{\alpha_{\rm pos}} \end{split}$$

The ion exchange membrane accounts for transport of the following ions:

- H⁺
- HSO₄
- SO₄²⁻
- V³⁺
- v²⁺
- VO²⁺
- VO₂+

SULFURIC ACID DISSOCIATION

The first dissociation step of sulfuric acid is assumed to be complete

$$H_2SO_4 \rightarrow H^+ + HSO_4$$

whereas the second step

$$HSO_4 \leftrightarrow H^+ + SO_4^{2-}$$

is described using a dissociation source term, r_d :

$$r_d = k_d \left(\frac{a_{\text{H}^+} - a_{\text{HSO}_4}}{a_{\text{H}^+} + a_{\text{HSO}_5}} - \beta \right)$$

where k_d is a rate parameter, and β the degree of dissociation.

ION TRANSPORT EQUATIONS

In this model the Nernst-Planck equations are used for ion flux and charge transport by which the following equation describes the molar flux of species i, N_i , due to diffusion, migration, and convection:

$$\mathbf{N}_i = -D_i \nabla c_i - z_i u_{\text{mob},i} F c_i \nabla \phi_l + c_i \mathbf{u}$$

The first term is the diffusion flux, D_i is the diffusion coefficient (SI unit: m^2/s). The migration term consists of the species charge number z_i , the species mobility $u_{\text{mob},i}$ (SI unit: s·mol/kg) and the electrolyte potential (ϕ_l) . In the convection term, **u** denotes the fluid velocity vector (SI unit: m/s).

The electrolyte current density is calculated using Faraday's law by summing up the contributions from the molar fluxes, multiplied by the species charges, with the observation that the convective term vanishes due to the electroneutrality condition (see the theory for the Tertiary Current Distribution, Nernst-Planck interface):

$$\mathbf{i}_{l} = F \sum_{i=1}^{n} z_{i} (-D_{i} \nabla c_{i} - z_{i} u_{m, i} F c_{i} \nabla \phi_{l})$$

$$\tag{1}$$

The conservation of charge is then used to calculate the electrolyte potential.

$$\nabla \cdot \mathbf{i}_l = F \sum_{i=1}^n z_i R_i$$

where the R_i terms are the reaction sources due the porous electrode reactions.

This model uses Equation 1 when solving for the electrolyte potential in the porous electrodes through the Tertiary Current Distribution, Nernst-Planck interface.

In the negative and positive porous electrode domains, where there is free electrolyte present, the concentrations for all the ions are of the same order of magnitude, and the gradients of c_i are not negligible. The membrane, however, consists of a polymer electrolyte, with additional negative ions fixed in the polymer matrix, implying that the concentration for this species is constant. In the ion-exchange membrane domain, a fixed space charge, ρ_{fix} is added while calculating the sum of charges in the electroneutrality condition:

$$\rho_{\text{fix}} + F \sum_{i=1}^{n} z_i c_i = 0 \tag{2}$$

The fixed space charge is prescribed in terms of the membrane charge concentration which is varied using an auxiliary sweep in this model.

MEMBRANE — POROUS ELECTRODE BOUNDARY CONDITIONS

Donnan Conditions

The boundary conditions at the boundaries between the membrane and the porous electrode domains are set up in the following way.

For species existing on both sides of the membrane-electrode, we have the following relation between the potentials and the concentrations:

$$\phi_{l,m} = \phi_{l,e} - \frac{RT}{z_i F} \ln \left(\frac{c_{i,m}}{c_{i,e}} \right)$$
(3)

where $c_{i.m}$ is the species concentration in the membrane, and $c_{i,e}$ the species concentration in the free electrolyte and z_i the corresponding charge. The potential shift caused by Equation 3 is called Donnan potential (Ref. 3). The Ion Exchange Membrane Boundary feature in the Tertiary Current Distribution, Nernst-Planck interface is used to define the Donnan conditions.

Self-discharge Reactions

At the membrane-positive electrode boundary, the V^{3+} and V^{2+} are assumed to be immediately oxidized according to

$$V^{2+} \rightarrow V^{3+} + e^{-}$$

and

$$V^{3+} + 2H_2O \rightarrow VO^{2+} + 2H^{+} + e^{-}$$

so that

$$c_{V^{3+}} = c_{V^{2+}} = 0 (4)$$

Correspondingly, the VO^{2+} and VO^{+}_{2} concentrations are assumed to be zero at the membrane-negative electrode boundaries:

$$c_{VO^{2+}}^{2+} = c_{VO_0^{+}}^{2+} = 0 ag{5}$$

as a result of the reduction reactions

$$VO_2^+ + e^- + 2H^+ \rightarrow VO^{2+} + H_2O$$

and

$$VO^{2+} + 2H^{+} + e^{-} \rightarrow V^{3+} + 2H_{2}O$$

the fast oxidation/reduction reactions are implemented using the Fast Irreversible Reaction kinetics type of the Electrode Surface node.

Results and Discussion

Figure 3 shows the concentration of the V³⁺ and the VO²⁺ ions in the porous electrodes for the membrane charge concentration of -1900 mol/m³. The ion concentration for these species is higher toward the current collectors and toward the outlets.

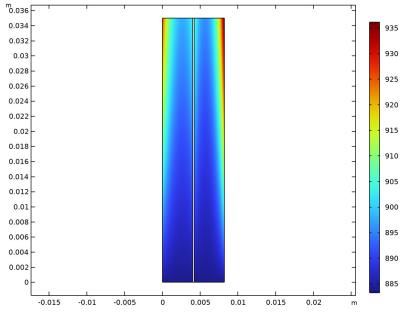


Figure 3: Concentration (mol/m³) of the V^{3+} (left compartment) and the V^{2+} (right compartment) ions for a membrane charge concentration of -1900 mol/m³.

Figure 4 shows the concentration of the V^{2+} and the VO_2^+ ions for the membrane charge concentration of -1900 mol/m^3 . Depletion occurs along the flow direction and also toward both the current collector and membrane sides of the electrodes.

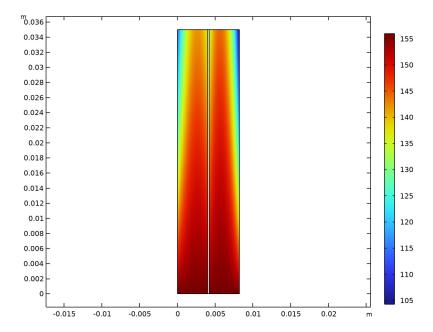


Figure 4: Concentration (mol/m³) of the V^{2+} (left compartment) and the V^{2+} (right compartment) ions for a membrane charge concentration of $-1900 \ mol/m³$.

Figure 5 shows the electrolyte potential for the membrane charge concentration of -1900 mol/m³, which decreases toward the positive current collector.

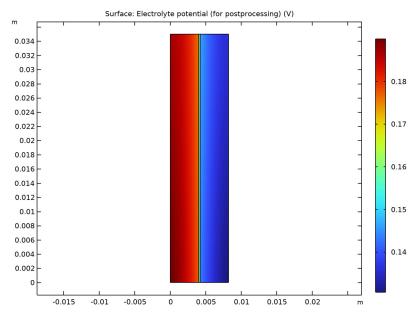


Figure 5: Electrolyte potential for a membrane charge concentration of -1900 mol/m^3 .

Figure 6 shows a cut line plot of the electrolyte potential at half the cell height. The Donnan potential shifts at the membrane boundaries are clearly visible in the figure.

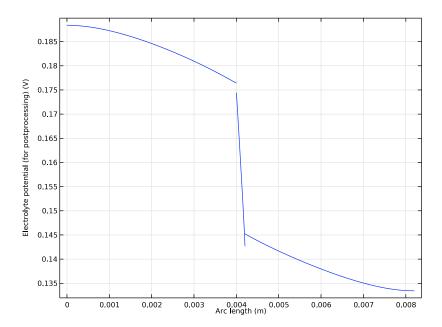


Figure 6: Electrolyte potential along a horizontal line placed at $y = h_{cell}/2$.

Figure 7 shows the electrode reaction source at half the cell height. The maximum is located toward the current collectors, with a minimum located in the middle of the electrodes. The reason for this phenomena is the similar conductivities of both phases (electrolyte and electrode) of the porous electrodes.

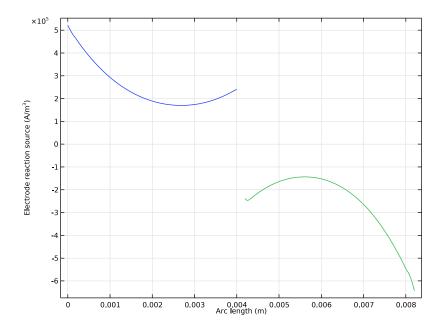


Figure 7: Electrode reaction source in the porous electrodes along a horizontal line placed at $y = h_{\rm cell}/2$.

Figure 8 shows the logarithm of the absolute rate of the dissociation reaction. Except from very close to the boundaries, the rates are generally very low, indicating that equilibrium is reached swiftly.

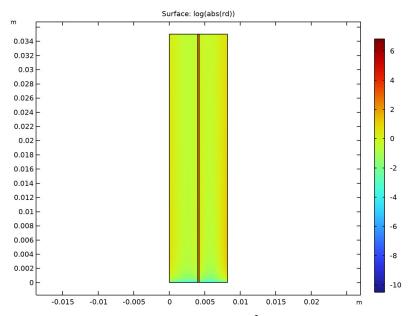


Figure 8: Sulfuriç acid dissociation rate $(mol/(m^3s))$ for a membrane charge concentration of -1900 mol/m^3).

Figure 9 shows the local concentrations of the sulfuric acid species at half the cell height. In the electrodes, gradients are only seen close to the membrane; this is due to the influx and outflux of protons at the membrane boundaries in combination with the acid dissociation reaction.

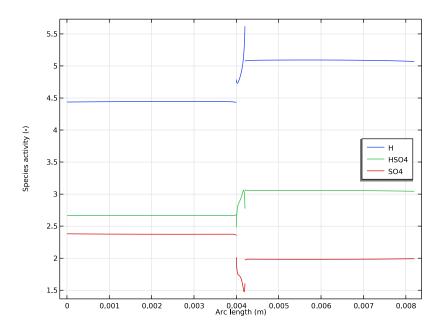


Figure 9: Sulfuric acid species along a horizontal line placed at $y=h_{\rm cell}/2$.

Figure 10 shows the local concentrations of the vanadium species at half the cell height. The highest gradients of vanadium species is seen to be located in the ion exchange membrane.

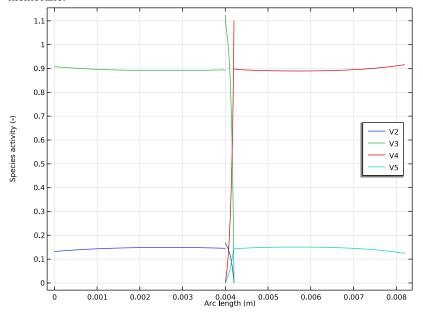


Figure 10: Vanadium species along a horizontal line placed at $y = h_{cell}/2$.

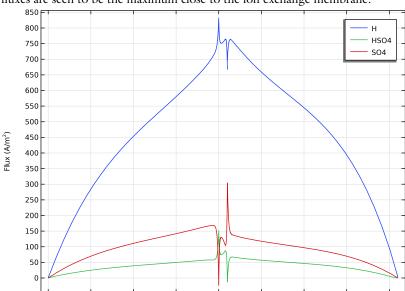


Figure 11 shows the local fluxes of the sulfuric acid species at half the cell height. The fluxes are seen to be the maximum close to the ion exchange membrane.

Figure 11: Sulfuric acid species fluxes along a horizontal line placed at $y = h_{cell}/2$.

0.003

References

0.001

0.002

1. K. Knehr, E Agar, C. Dennison, A. Kalidindi, and E. Kumbur, "A Transient Vanadium Flow Battery Model Incorporating Vanadium Crossover and Water Transport through the Membrane," J. Electrochem. Soc., vol. 159, no. 9, pp. A1446-A1459, 2012.

0.004 0.005 Arc length (m)

0.006

0.007

0.008

- 2. A.A. Shah, M.J. Watt-Smith, and F.C. Walsh "A dynamic performance model for redoxflow batteries involving soluble species," Electrochim. Acta, vol. 53, pp. 8087-8100, 2008.
- 3. K.W. Knehr and E.C. Kumbur, "Open circuit voltage of vanadium redox flow batteries: Discrepancy between models and experiments," Electrochem. Commun., vol. 13, pp. 342-345, 2011

Application Library path: Battery Design Module/Flow Batteries/ v_flow_battery

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

I In the Model Wizard window, click **2** 2D.

Add three Tertiary Current Distribution, Nernst Planck interfaces to your model. They will represent the physics for the two porous electrodes and the membrane.

- 2 In the Select Physics tree, select Electrochemistry>Tertiary Current Distribution, Nernst-Planck>Tertiary, Electroneutrality (tcd).
- 3 Click Add.
- 4 In the Number of species text field, type 5.
- 5 In the Concentrations (mol/m³) table, enter the following settings:

cS04 neg cHS04 neg cH neg cV2 cV3

- 6 In the Electrolyte potential (V) text field, type phil_neg.
- 7 In the Electric potential (V) text field, type phis_neg.
- 8 In the Select Physics tree, select Electrochemistry>Tertiary Current Distribution, Nernst-Planck>Tertiary, Electroneutrality (tcd).
- 9 Click Add.
- **10** In the **Number of species** text field, type 7.

II In the Concentrations (mol/m³) table, enter the following settings:

cSO4_mem cHSO4 mem cH mem cV2 mem cV3 mem cV4_mem cV5 mem

12 In the Electrolyte potential (V) text field, type phil_mem.

13 In the Electric potential (V) text field, type phis mem.

14 In the Select Physics tree, select Electrochemistry>Tertiary Current Distribution, Nernst-Planck>Tertiary, Electroneutrality (tcd).

15 Click Add.

16 In the **Number of species** text field, type 5.

17 In the Concentrations (mol/m³) table, enter the following settings:

cS04_pos cHS04_pos cH pos cV4 cV5

- **18** In the **Electrolyte potential (V)** text field, type phil_pos.
- 19 In the Electric potential (V) text field, type phis pos.
- 20 Click Study.
- 21 In the Select Study tree, select Preset Studies for Selected Physics Interfaces> Stationary with Initialization.
- 22 Click **Done**.

GLOBAL DEFINITIONS

Add the model parameters from a text file.

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.

- 3 Click Load from File.
- 4 Browse to the model's Application Libraries folder and double-click the file v flow battery parameters.txt.

GEOMETRY I

Draw the geometry as a union of three rectangles (the two porous electrodes and the membrane domains).

Negative Electrode

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type L e.
- 4 In the Height text field, type H_cell.
- 5 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 6 In the Label text field, type Negative Electrode.

Membrane

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type L m.
- 4 In the **Height** text field, type H cell.
- 5 Locate the **Position** section. In the x text field, type L e.
- 6 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 7 In the Label text field, type Membrane.

Positive Electrode

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type L e.
- 4 In the Height text field, type H cell.
- 5 Locate the Position section. In the x text field, type L e+L m.
- 6 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 7 In the Label text field, type Positive Electrode.

- 8 Click Build All Objects.
- **9** Click the **Toom Extents** button in the **Graphics** toolbar. Compare the geometry with Figure 2.

DEFINITIONS

Add domain specific variables.

Negative Electrode Variables

- I In the Home toolbar, click a= Variables and choose Local Variables.
- 2 In the Settings window for Variables, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Negative Electrode.
- 5 Locate the Variables section. Click **Load from File.**
- **6** Browse to the model's Application Libraries folder and double-click the file v_flow_battery_negative_variables.txt.
- 7 In the Label text field, type Negative Electrode Variables.

Membrane Variables

- I In the Home toolbar, click $\partial =$ Variables and choose Local Variables.
- 2 In the Settings window for Variables, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Membrane.
- 5 Locate the Variables section. Click **Load from File.**
- 6 Browse to the model's Application Libraries folder and double-click the file v_flow_battery_membrane_variables.txt.
- 7 In the Label text field, type Membrane Variables.

Positive Electrode Variables

- I In the Home toolbar, click a= Variables and choose Local Variables.
- 2 In the Settings window for Variables, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Positive Electrode.
- 5 Locate the Variables section. Click **Load from File.**
- **6** Browse to the model's Application Libraries folder and double-click the file v flow battery positive variables.txt.

7 In the Label text field, type Positive Electrode Variables.

TERTIARY CURRENT DISTRIBUTION, NERNST-PLANCK (NEGATIVE)

Now start defining the current distribution models. Start with the negative porous electrode.

- I In the Model Builder window, under Component I (compl) click Tertiary Current Distribution, Nernst-Planck (tcd).
- 2 In the Settings window for Tertiary Current Distribution, Nernst-Planck, type Tertiary Current Distribution, Nernst-Planck (Negative) in the Label text field.
- 3 Locate the Domain Selection section. From the Selection list, choose Negative Electrode.
- **4** Locate the **Out-of-Plane Thickness** section. In the d_z text field, type wCell.

Species Charges 1

- I In the Model Builder window, under Component I (compl)>Tertiary Current Distribution, Nernst-Planck (Negative) (tcd) click Species Charges 1.
- 2 In the Settings window for Species Charges, locate the Charge section.
- **3** In the $z_{\rm cSO4neg}$ text field, type -2.
- 4 In the $z_{cHSO4neg}$ text field, type -1.
- **5** In the z_{cHneg} text field, type 1.
- **6** In the z_{cV2} text field, type 2.
- 7 In the z_{cV3} text field, type 3.

Porous Electrode I

- I In the Physics toolbar, click **Domains** and choose **Porous Electrode**.
- 2 In the Settings window for Porous Electrode, locate the Domain Selection section.
- 3 From the Selection list, choose Negative Electrode.
- **4** Locate the **Convection** section. Specify the **u** vector as

0	x
٧	у

- 5 Locate the Electrode Current Conduction section. From the σ_s list, choose User defined. In the associated text field, type sigma_e.
- **6** Locate the **Diffusion** section. In the $D_{
 m cSO4neg}$ text field, type DSO4.
- 7 In the $D_{
 m cHSO4neg}$ text field, type DHS04.
- **8** In the D_{cHneg} text field, type DH.

- **9** In the $D_{\rm cV2}$ text field, type DV2.
- **IO** In the $D_{\rm cV3}$ text field, type DV3.
- II Locate the **Porous Matrix Properties** section. In the ε_1 text field, type epsilon.
- 12 Locate the Effective Transport Parameter Correction section. From the **Electrical conductivity** list, choose **No correction**.

Porous Electrode Reaction 1

- I In the Model Builder window, click Porous Electrode Reaction I.
- 2 In the Settings window for Porous Electrode Reaction, locate the Stoichiometric Coefficients section.
- 3 In the v_{cV2} text field, type 1.
- 4 In the v_{cV3} text field, type -1.
- **5** Locate the **Equilibrium Potential** section. In the $E_{\rm eq,ref}(T)$ text field, type EO_neg.
- **6** Locate the **Electrode Kinetics** section. In the $i_{0,ref}(T)$ text field, type iOref_neg.
- 7 In the α_a text field, type alpha_neg.
- **8** Locate the **Active Specific Surface Area** section. In the $a_{\rm v}$ text field, type **a**.

Reactions 1

- I In the Physics toolbar, click **Domains** and choose Reactions.
- 2 In the Settings window for Reactions, locate the Domain Selection section.
- 3 From the Selection list, choose Negative Electrode.
- **4** Locate the **Reaction Rates** section. In the $R_{\rm cSO4neg}$ text field, type -rd.
- **5** In the $R_{
 m cHSO4neg}$ text field, type rd.
- **6** In the $R_{\rm cHneg}$ text field, type -rd.

Electric Ground 1

- I In the Physics toolbar, click Boundaries and choose Electric Ground.
- 2 Select Boundary 1 only.

Inflow I

- I In the Physics toolbar, click Boundaries and choose Inflow.
- 2 Select Boundary 2 only.
- 3 In the Settings window for Inflow, locate the Concentration section.
- **4** In the $c_{0.cHSO4neg}$ text field, type cHS04_0_neg.
- **5** In the $c_{0,\mathrm{cHneg}}$ text field, type cH_0_neg.

- **6** In the $c_{0,\text{cV2}}$ text field, type cV2_0.
- 7 In the $c_{0 \text{ cV}3}$ text field, type cV3_0.
- 8 Locate the Boundary Condition Type section. From the list, choose Flux (Danckwerts).

Outflow I

- I In the Physics toolbar, click Boundaries and choose Outflow.
- 2 Select Boundary 3 only.

Ion Exchange Membrane Boundary I

The electrolyte potential and species concentration in the membrane and in the porous electrodes are coupled by the use of Donnan potential expression on the boundary between the membrane and the porous electrode.

- I In the **Physics** toolbar, click **Boundaries** and choose Ion Exchange Membrane Boundary.
- 2 Select Boundary 4 only.
- 3 In the Settings window for Ion Exchange Membrane Boundary, locate the Ion Exchange Membrane Boundary section.
- **4** From the ϕ_m list, choose **Electrolyte potential (tcd2)**.
- 5 From the lon exchange membrane transport model list, choose Multiple ions.
- **6** In the $c_{\text{mem.cSO4neg}}$ text field, type cSO4_mem.
- 7 Select the Species cHSO4_neg check box.
- **8** In the $c_{\text{mem.cHSO4neg}}$ text field, type cHSO4_mem.
- 9 Select the Species cH_neg check box.
- **IO** In the $c_{\text{mem,cHneg}}$ text field, type cH_mem.
- II Select the Species cV2 check box.
- 12 In the $c_{\text{mem.cV2}}$ text field, type cV2_mem.
- **I3** Select the **Species cV3** check box.
- **I4** In the $c_{\mathrm{mem.cV3}}$ text field, type cV3_mem.

Electrode Current Density I

Add the electrode current density for the current balance.

- In the Physics toolbar, click Boundaries and choose Electrode Current Density.
- 2 Select Boundary 4 only.
- 3 In the Settings window for Electrode Current Density, locate the Electrode Current Density section.

4 In the $i_{n,s}$ text field, type -tcd2.itot.

Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- 3 In the $cHSO4_{\rm neg}$ text field, type cHS04_0_neg.
- **4** In the cH_{neg} text field, type cH_0_neg.
- 5 In the cV2 text field, type cV2 0.
- **6** In the cV3 text field, type cV3 0.

TERTIARY CURRENT DISTRIBUTION, NERNST-PLANCK (ION EXCHANGE MEMBRANE)

Now set up the Tertiary Current Distribution model for the membrane.

- I In the Model Builder window, under Component I (compl) click Tertiary Current Distribution, Nernst-Planck 2 (tcd2).
- 2 In the Settings window for Tertiary Current Distribution, Nernst-Planck, type Tertiary Current Distribution, Nernst-Planck (Ion Exchange Membrane) in the Label text field.
- 3 Locate the Domain Selection section. From the Selection list, choose Membrane.
- **4** Locate the **Out-of-Plane Thickness** section. In the d_z text field, type wCell.

Species Charges 1

- I In the Model Builder window, under Component I (compl)>Tertiary Current Distribution, Nernst-Planck (Ion Exchange Membrane) (tcd2) click Species Charges 1.
- 2 In the Settings window for Species Charges, locate the Charge section.
- 3 In the $z_{cSO4mem}$ text field, type -2.
- 4 In the $z_{cHSO4mem}$ text field, type -1.
- **5** In the z_{cHmem} text field, type 1.
- **6** In the $z_{\rm cV2mem}$ text field, type 2.
- 7 In the z_{cV3mem} text field, type 3.
- **8** In the z_{cV4mem} text field, type 2.
- **9** In the z_{cV5mem} text field, type 1.

Ion Exchange Membrane I

I In the Physics toolbar, click Domains and choose Ion Exchange Membrane.

- 2 In the Settings window for Ion Exchange Membrane, locate the Domain Selection section.
- 3 From the Selection list, choose Membrane.
- 4 Locate the Ion Exchange Membrane Properties section. In the ρ_{fix} text field, type c_fix* F_const.
- **5** Locate the **Diffusion** section. In the $D_{cSO4mem}$ text field, type DSO4.
- **6** In the $D_{
 m cHSO4mem}$ text field, type DHS04.
- **7** In the $D_{\rm cHmem}$ text field, type DH.
- **8** In the D_{cV2mem} text field, type DV2.
- **9** In the D_{cV3mem} text field, type DV3.
- **IO** In the $D_{
 m cV4mem}$ text field, type DV4.
- II In the $D_{
 m cV5mem}$ text field, type DV5.
- 12 Locate the Porous Matrix Properties section. In the ε_1 text field, type 0.1.

Reactions 1

- I In the Physics toolbar, click **Domains** and choose Reactions.
- 2 In the Settings window for Reactions, locate the Domain Selection section.
- 3 From the Selection list, choose Membrane.
- **4** Locate the **Reaction Rates** section. In the $R_{\rm cSO4mem}$ text field, type -rd.
- **5** In the $R_{\rm cHSO4mem}$ text field, type rd.
- **6** In the $R_{\rm cHmem}$ text field, type -rd.

Electrode Surface I

- I In the Physics toolbar, click Boundaries and choose Electrode Surface.
- 2 Select Boundary 4 only.

Electrode Reaction I

- I In the Model Builder window, click Electrode Reaction I.
- 2 In the Settings window for Electrode Reaction, locate the Stoichiometric Coefficients section.
- 3 In the v_{cHmem} text field, type -2.
- 4 In the v_{cV3mem} text field, type 1.
- **5** In the v_{cV4mem} text field, type -1.
- **6** Locate the **Equilibrium Potential** section. From the $E_{\rm eq}$ list, choose **User defined**. Locate the **Electrode Kinetics** section. From the **Kinetics** expression type list, choose Fast irreversible electrode reaction.

7 From the c_{\lim} list, choose **cV4_mem**.

Electrode Surface I

In the Model Builder window, click Electrode Surface 1.

Electrode Reaction 2

- I In the Physics toolbar, click Attributes and choose Electrode Reaction.
- 2 In the Settings window for Electrode Reaction, locate the Stoichiometric Coefficients section.
- 3 In the v_{cHmem} text field, type -2.
- 4 In the v_{cV4mem} text field, type 1.
- **5** In the v_{cV5mem} text field, type -1.
- **6** Locate the **Equilibrium Potential** section. From the $E_{\rm eq}$ list, choose **User defined**. Locate the **Electrode Kinetics** section. From the **Kinetics** expression type list, choose Fast irreversible electrode reaction.
- **7** From the c_{lim} list, choose **cV5_mem**.

Electrode Surface 2

- I In the Physics toolbar, click Boundaries and choose Electrode Surface.
- 2 Select Boundary 7 only.

Electrode Reaction 1

- I In the Model Builder window, click Electrode Reaction I.
- 2 In the Settings window for Electrode Reaction, locate the Equilibrium Potential section.
- **3** From the $E_{\rm eq}$ list, choose **User defined**. Locate the **Electrode Kinetics** section. From the Kinetics expression type list, choose Fast irreversible electrode reaction.
- **4** From the c_{lim} list, choose **cV2_mem**.
- **5** Locate the **Stoichiometric Coefficients** section. In the v_{cHmem} text field, type -2.
- **6** In the v_{cV3mem} text field, type 1.
- 7 In the v_{cV4mem} text field, type -1.

Electrode Surface 2

In the Model Builder window, click Electrode Surface 2.

Electrode Reaction 2

- I In the Physics toolbar, click Attributes and choose Electrode Reaction.
- 2 In the Settings window for Electrode Reaction, locate the Equilibrium Potential section.

- 3 From the $E_{\rm eq}$ list, choose User defined. Locate the Electrode Kinetics section. From the Kinetics expression type list, choose Fast irreversible electrode reaction.
- **4** From the c_{lim} list, choose **cV3_mem**.
- **5** Locate the **Stoichiometric Coefficients** section. In the v_{cV2mem} text field, type 1.
- 6 In the ν_{cV3mem} text field, type -1.

Initial Values 1

- I In the Model Builder window, under Component I (compl)>Tertiary Current Distribution, Nernst-Planck (Ion Exchange Membrane) (tcd2) click Initial Values 1.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- 3 In the $cHSO4_{\rm mem}$ text field, type (cHSO4_0_pos+cHSO4_0_neg)/2.
- **4** In the $cH_{\rm mem}$ text field, type (cH_0_pos+cH_0_neg)/2.
- **5** In the $cV2_{\text{mem}}$ text field, type $cV2_0/2$.
- **6** In the $cV3_{\text{mem}}$ text field, type $cV3_0/2$.
- 7 In the $cV4_{\text{mem}}$ text field, type $cV4_0/2$.
- **8** In the $cV5_{\text{mem}}$ text field, type cV5_0/2.
- **9** In the $phil_{mem}$ text field, type -E0_neg.

TERTIARY CURRENT DISTRIBUTION, NERNST-PLANCK (POSITIVE)

Finish the physics settings by setting up the tertiary current distribution model for the positive porous electrode.

- I In the Model Builder window, under Component I (compl) click Tertiary Current Distribution, Nernst-Planck 3 (tcd3).
- 2 In the Settings window for Tertiary Current Distribution, Nernst-Planck, type Tertiary Current Distribution, Nernst-Planck (Positive) in the Label text field.
- 3 Locate the Domain Selection section. From the Selection list, choose Positive Electrode.
- **4** Locate the **Out-of-Plane Thickness** section. In the d_z text field, type wCell.

Species Charges 1

- I In the Model Builder window, under Component I (compl)>Tertiary Current Distribution, Nernst-Planck (Positive) (tcd3) click Species Charges I.
- 2 In the Settings window for Species Charges, locate the Charge section.
- 3 In the $z_{cSO4pos}$ text field, type -2.
- 4 In the $z_{cHSO4pos}$ text field, type -1.
- **5** In the $z_{\rm cHpos}$ text field, type 1.

- **6** In the z_{cV4} text field, type 2.
- 7 In the z_{cV5} text field, type 1.

Porous Electrode I

- I In the Physics toolbar, click **Domains** and choose **Porous Electrode**.
- 2 In the Settings window for Porous Electrode, locate the Domain Selection section.
- 3 From the Selection list, choose Positive Electrode.
- **4** Locate the **Convection** section. Specify the **u** vector as
- 0 x v y
- 5 Locate the Electrode Current Conduction section. From the σ_s list, choose User defined. In the associated text field, type sigma_e.
- **6** Locate the **Diffusion** section. In the $D_{\rm cSO4pos}$ text field, type DSO4.
- 7 In the $D_{\rm cHSO4pos}$ text field, type DHS04.
- **8** In the $D_{
 m cHpos}$ text field, type DH.
- **9** In the $D_{\rm cV4}$ text field, type DV4.
- **IO** In the $D_{
 m cV5}$ text field, type DV5.
- II Locate the **Porous Matrix Properties** section. In the ε_1 text field, type epsilon.
- 12 Locate the Effective Transport Parameter Correction section. From the **Electrical conductivity** list, choose **No correction**.

Porous Electrode Reaction I

- I In the Model Builder window, click Porous Electrode Reaction I.
- 2 In the Settings window for Porous Electrode Reaction, locate the Stoichiometric Coefficients section.
- 3 In the v_{cHpos} text field, type -2.
- 4 In the v_{cV4} text field, type 1.
- 5 In the v_{cV5} text field, type -1.
- **6** Locate the **Equilibrium Potential** section. In the $E_{\rm eq,ref}(T)$ text field, type E0_pos.
- **7** Locate the **Electrode Kinetics** section. In the $i_{0,ref}(T)$ text field, type i0ref_pos.
- **8** In the α_a text field, type alpha_pos.
- **9** Locate the **Active Specific Surface Area** section. In the $a_{
 m v}$ text field, type a.

Reactions 1

- I In the Physics toolbar, click **Domains** and choose Reactions.
- 2 In the Settings window for Reactions, locate the Domain Selection section.
- 3 From the Selection list, choose Positive Electrode.
- **4** Locate the **Reaction Rates** section. In the $R_{cSO4pos}$ text field, type -rd.
- **5** In the $R_{\rm cHSO4pos}$ text field, type rd.
- **6** In the $R_{\rm cHpos}$ text field, type -rd.

Electrode Current I

- I In the Physics toolbar, click Boundaries and choose Electrode Current.
- 2 In the Settings window for Electrode Current, locate the Electrode Current section.
- 3 From the list, choose Average current density.
- 4 Select Boundary 10 only.
- **5** In the $i_{s,average}$ text field, type i_avg.

Inflow I

- I In the Physics toolbar, click Boundaries and choose Inflow.
- 2 Select Boundary 8 only.
- 3 In the Settings window for Inflow, locate the Concentration section.
- **4** In the $c_{0.\text{cHSO4pos}}$ text field, type cHS04_0_pos.
- **5** In the $c_{0,c\text{Hpos}}$ text field, type cH_0_pos.
- **6** In the $c_{0,\text{cV4}}$ text field, type cV4_0.
- 7 In the $c_{0 \text{ eV}5}$ text field, type eV5_0.
- 8 Locate the Boundary Condition Type section. From the list, choose Flux (Danckwerts).

Outflow I

- I In the Physics toolbar, click Boundaries and choose Outflow.
- 2 Select Boundary 9 only.

Ion Exchange Membrane Boundary I

The boundary condition for the membrane boundary is set as before. The electrolyte potential and species concentration in the membrane and in the porous electrode are coupled by the use of Donnan potential expressions on the boundary between the membrane and the porous electrode.

I In the **Physics** toolbar, click **Boundaries** and choose Ion Exchange Membrane Boundary.

- 2 Select Boundary 7 only.
- 3 In the Settings window for Ion Exchange Membrane Boundary, locate the Ion Exchange Membrane Boundary section.
- **4** From the ϕ_m list, choose **Electrolyte potential (tcd2)**.
- 5 From the lon exchange membrane transport model list, choose Multiple ions.
- **6** In the $c_{\mathrm{mem,cSO4pos}}$ text field, type cSO4_mem.
- 7 Select the Species cHSO4_pos check box.
- **8** In the $c_{\text{mem.cHSO4pos}}$ text field, type cHSO4_mem.
- **9** Select the **Species cH_pos** check box.
- **IO** In the $c_{\text{mem.cHpos}}$ text field, type cH_mem.
- II Select the Species cV4 check box.
- 12 In the $c_{\mathrm{mem,cV4}}$ text field, type cV4_mem.
- **I3** Select the **Species cV5** check box.
- **I4** In the $c_{\text{mem.cV5}}$ text field, type cV5_mem.

Electrode Current Density I

Add the electrode current density for the current balance.

- I In the Physics toolbar, click Boundaries and choose Electrode Current Density.
- **2** Select Boundary 7 only.
- 3 In the Settings window for Electrode Current Density, locate the Electrode Current Density section.
- **4** In the $i_{n,s}$ text field, type -tcd2.itot.

Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- 3 In the $cHSO4_{pos}$ text field, type cHS04_0_pos.
- **4** In the cH_{pos} text field, type cH_0_{pos} .
- **5** In the cV4 text field, type $cV4_0$.
- **6** In the cV5 text field, type cV5 0.

GLOBAL DEFINITIONS

Default Model Inputs

Set up the temperature value used in the entire model.

- I In the Model Builder window, under Global Definitions click Default Model Inputs.
- 2 In the Settings window for Default Model Inputs, locate the Browse Model Inputs section.
- 3 In the tree, select General>Temperature (K) minput.T.
- 4 Find the Expression for remaining selection subsection. In the Temperature text field, type Τ.

MESH I

Create a mapped mesh with higher resolution in the porous electrodes toward the membrane and with a boundary layer mesh at the fluid inlet.

Mabbed I

In the Mesh toolbar, click Mapped.

Distribution I

- I Right-click Mapped I and choose Distribution.
- **2** Select Boundaries 5 and 6 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 20.
- 6 In the Element ratio text field, type 2.
- 7 Select the Symmetric distribution check box.

Distribution 2

- I In the Model Builder window, right-click Mapped I and choose Distribution.
- 2 Select Boundaries 2 and 3 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 40.
- 6 In the Element ratio text field, type 20.
- 7 Right-click Distribution 2 and choose Duplicate.

Distribution 3

- I In the Model Builder window, click Distribution 3.
- 2 In the Settings window for Distribution, locate the Boundary Selection section.
- 3 Click Clear Selection.
- 4 Select Boundaries 8 and 9 only.

5 Locate the **Distribution** section. Select the **Reverse direction** check box.

Distribution 4

- I In the Model Builder window, right-click Mapped I and choose Distribution.
- **2** Select Boundaries 1, 4, 7, and 10 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 40.
- 6 In the Element ratio text field, type 20.


Boundary Layers 1

Boundary Layers. In the **Mesh** toolbar, click

Boundary Layer Properties

- I In the Model Builder window, click Boundary Layer Properties.
- 2 Select Boundaries 2 and 8 only.
- 3 In the Settings window for Boundary Layer Properties, click **Build All**.

Your mesh should now look like this:

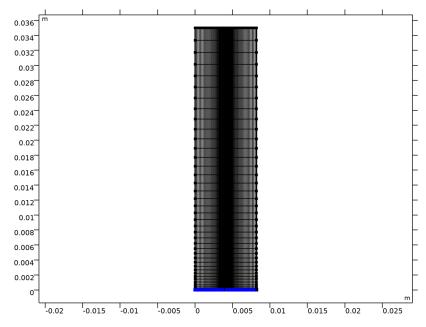

STUDY I

Run the model for two values of membrane charge concentration using an auxiliary sweep. The problem is then ready for solving.

- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, locate the Study Settings section.
- 3 Clear the Generate default plots check box.

Step 2: Stationary

- I In the Model Builder window, under Study I click Step 2: Stationary.
- 2 In the Settings window for Stationary, click to expand the Study Extensions section.
- 3 Select the Auxiliary sweep check box.
- 4 Click + Add.
- **5** In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
c_fix ((0[M] used during Current Distribution Initialization, -cHm used after Auxiliary sweep))	O -cHm	mol/m^3

6 In the **Home** toolbar, click **Compute**.

RESULTS

Reproduce the plots from the Results and Discussion section in the following way:

2D Plot Group 1

- I In the Home toolbar, click Add Plot Group and choose 2D Plot Group.
- 2 In the Settings window for 2D Plot Group, click to expand the Title section.
- 3 From the Title type list, choose None.

Surface 1

- I Right-click 2D Plot Group I and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type cV3.
- 4 Right-click Surface I and choose Duplicate.

Surface 2

- I In the Model Builder window, click Surface 2.
- 2 In the Settings window for Surface, locate the Expression section.

- 3 In the Expression text field, type cV4.
- 4 Click to expand the Inherit Style section. From the Plot list, choose Surface 1.
- 5 In the 2D Plot Group I toolbar, click Plot.

V3/V4 Species Concentration

- I In the Model Builder window, under Results click 2D Plot Group I.
- 2 In the Settings window for 2D Plot Group, type V3/V4 Species Concentration in the Label text field.
- 3 Right-click **V3/V4 Species Concentration** and choose **Duplicate**.

V3/V4 Species Concentration I

Now modify the plot group that was created by the duplicate operation.

Surface I

- I In the Model Builder window, expand the V3/V4 Species Concentration I node, then click Surface 1.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type cV2.

Surface 2

- I In the Model Builder window, click Surface 2.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type cV5.

V2/V5 Species Concentration

- I In the Model Builder window, click V3/V4 Species Concentration I.
- 3 In the Settings window for 2D Plot Group, type V2/V5 Species Concentration in the Label text field.

2D Plot Group 3

In the Home toolbar, click **Add Plot Group** and choose **2D Plot Group**.

Surface I

- I Right-click 2D Plot Group 3 and choose Surface.
- 2 In the 2D Plot Group 3 toolbar, click Plot.

Electrolyte potential 2D

I In the Model Builder window, right-click 2D Plot Group 3 and choose Rename.

- 2 In the Rename 2D Plot Group dialog box, type Electrolyte potential 2D in the New label text field.
- 3 Click OK.

Cut Line 2D I

- I In the Results toolbar, click Cut Line 2D.
- 2 In the Settings window for Cut Line 2D, locate the Line Data section.
- 3 In row Point I, set Y to H cell/2.
- 4 In row Point 2, set X to L e*2+L m and y to H cell/2.

ID Plot Group 4

- I In the Results toolbar, click \(\subseteq ID Plot Group. \)
- 2 In the Settings window for ID Plot Group, locate the Data section.
- 3 From the Dataset list, choose Cut Line 2D 1.
- 4 From the Parameter selection (c_fix) list, choose Last.
- **5** Click to expand the **Title** section. From the **Title type** list, choose **None**.

Line Graph 1

- I Right-click ID Plot Group 4 and choose Line Graph.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Definitions> Variables>phil - Electrolyte potential (for postprocessing) - V.
- 3 In the ID Plot Group 4 toolbar, click **Plot**.

Electrolyte potential

- I In the Model Builder window, right-click ID Plot Group 4 and choose Rename.
- 2 In the Rename ID Plot Group dialog box, type Electrolyte potential in the New label text field.
- 3 Click OK.

ID Plot Group 5

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, locate the Title section.
- **3** From the **Title type** list, choose **None**.

Line Grabh I

- I Right-click ID Plot Group 5 and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the Data section.

- 3 From the Dataset list, choose Cut Line 2D 1.
- 4 From the Parameter selection (c_fix) list, choose Last.
- 5 Click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Tertiary Current Distribution, Nernst-Planck (Negative)>Electrode kinetics>tcd.ivtot - Electrode reaction source - A/m3.
- 6 In the ID Plot Group 5 toolbar, click **Plot**.
- 7 Right-click Line Graph I and choose Duplicate.

Line Grabh 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type tcd3.ivtot.
- 4 In the ID Plot Group 5 toolbar, click Plot.

Electrode reaction current densities

- I In the Model Builder window, right-click ID Plot Group 5 and choose Rename.
- 2 In the Rename ID Plot Group dialog box, type Electrode reaction current densities in the New label text field.
- 3 Click OK.

2D Plot Group 6

In the Home toolbar, click Add Plot Group and choose 2D Plot Group.

Surface I

- I Right-click 2D Plot Group 6 and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type log(abs(rd)).
- 4 In the 2D Plot Group 6 toolbar, click Plot.

Dissociation rate

- I In the Model Builder window, right-click 2D Plot Group 6 and choose Rename.
- 2 In the Rename 2D Plot Group dialog box, type Dissociation rate in the New label text field.
- 3 Click OK.

ID Plot Group 7

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, locate the Data section.

- 3 From the Dataset list, choose Cut Line 2D 1.
- 4 From the Parameter selection (c_fix) list, choose Last.
- **5** Locate the **Title** section. From the **Title type** list, choose **None**.
- 6 Locate the Plot Settings section.
- 7 Select the y-axis label check box. In the associated text field, type Species activity (-).
- 8 Locate the Legend section. From the Position list, choose Middle right.

Line Graph 1

- I In the Model Builder window, expand the ID Plot Group 7 node.
- 2 Right-click ID Plot Group 7 and choose Line Graph.
- 3 In the Settings window for Line Graph, locate the y-Axis Data section.
- **4** In the **Expression** text field, type aH.
- **5** Click to expand the **Legends** section. Select the **Show legends** check box.
- 6 From the Legends list, choose Manual.
- **7** In the table, enter the following settings:

Legends Н

8 Right-click Line Graph I and choose Duplicate.

Line Graph 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type aHS04.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends **HS04**

5 Right-click Line Graph 2 and choose Duplicate.

Line Graph 3

- I In the Model Builder window, click Line Graph 3.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type aS04.

4 Locate the **Legends** section. In the table, enter the following settings:

Legends **S04**

Sulfuric acid species

- I In the Model Builder window, click ID Plot Group 7.
- 2 In the ID Plot Group 7 toolbar, click Plot.
- 3 In the Settings window for ID Plot Group, type Sulfuric acid species in the Label text field.

ID Plot Group 8

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, locate the Data section.
- 3 From the Dataset list, choose Cut Line 2D 1.
- 4 From the Parameter selection (c_fix) list, choose Last.
- **5** Locate the **Title** section. From the **Title type** list, choose **None**.
- 6 Locate the Plot Settings section.
- 7 Select the y-axis label check box. In the associated text field, type Species activity (-).
- 8 Locate the Legend section. From the Position list, choose Middle right.

Line Graph 1

- I Right-click ID Plot Group 8 and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type aV2.
- 4 Locate the Legends section. Select the Show legends check box.
- 5 From the Legends list, choose Manual.
- **6** In the table, enter the following settings:

Legends ٧2

7 Right-click Line Graph I and choose Duplicate.

Line Graph 2

I In the Model Builder window, click Line Graph 2.

- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type aV3.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends ٧3

5 Right-click Line Graph 2 and choose Duplicate.

Line Graph 3

- I In the Model Builder window, click Line Graph 3.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type aV4.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends ٧4

5 Right-click Line Graph 3 and choose Duplicate.

Line Graph 4

- I In the Model Builder window, click Line Graph 4.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type aV5.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends ۷5

V2/V3/V4/V5

- I In the Model Builder window, click ID Plot Group 8.
- 2 In the ID Plot Group 8 toolbar, click **Plot**.
- 3 In the Settings window for ID Plot Group, type V2/V3/V4/V5 in the Label text field.

ID Plot Group 9

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, locate the Data section.
- 3 From the Dataset list, choose Cut Line 2D 1.

- 4 From the Parameter selection (c_fix) list, choose Last.
- **5** Locate the **Title** section. From the **Title type** list, choose **None**.
- **6** Locate the **Plot Settings** section.
- 7 Select the y-axis label check box. In the associated text field, type Flux (A/m<sup>2</ sup>).

Line Graph 1

- I Right-click ID Plot Group 9 and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type Hx*F_const.
- **4** Locate the **Legends** section. Select the **Show legends** check box.
- 5 From the Legends list, choose Manual.
- **6** In the table, enter the following settings:

Legends Н

7 Right-click Line Graph I and choose Duplicate.

Line Graph 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- **3** In the **Expression** text field, type -HSO4x*F const.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends HS04

5 Right-click Line Graph 2 and choose Duplicate.

Line Graph 3

- I In the Model Builder window, click Line Graph 3.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type -2*F const*S04x.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends	
S04	

Fluxes

- I In the Model Builder window, click ID Plot Group 9.
- 2 In the ID Plot Group 9 toolbar, click Plot.
- 3 In the Settings window for ID Plot Group, type Fluxes in the Label text field.