

Static Field Modeling of a Halbach Rotor

This example presents the static-field modeling of an outward-flux-focusing magnetic rotor using permanent magnets, a magnetic rotor also known as a Halbach rotor. The use of permanent magnets in rotatory devices such as motors, generators, and magnetic gears is increasing due to their no-contact, frictionless operation. This model illustrates how to calculate the magnetic field of a 4-pole pair rotor in 3D by modeling only a single pole of the rotor using symmetry.

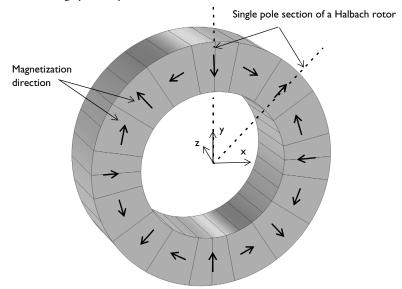


Figure 1: Illustration of a 16-segments, 4-pole pair Halbach rotor. The symmetries of the problem allow restricting the model to a single pole of the rotor.

Model Definition

Set up the problem in a 3D modeling space. Due to symmetry, it is sufficient to model a single pole of the rotor. Figure 1 shows a 3D view of the complete rotor with the magnetization direction of the magnets indicated. The black arrows show the radial and axial magnetization directions of the permanent magnets in the rotor. The permanent magnets are arranged in such a way that the magnetic flux density is minimized inside the rotor and maximized outside the rotor. The model consists of 16 permanent magnet pieces arranged to form a 4-pole pair rotor. The inner and outer rotor radii are 30 mm and 50 mm, respectively. The axial length of the rotor is 30 mm.

A steady-state study analysis is performed to calculate the magnetic fields of the Halbach rotor. The magnetic flux density is shown in Figure 2.

Figure 3 and Figure 4 illustrate the variations of the radial and azimuthal magnetic flux density as functions of rotor angle. The magnetic flux density norm is evaluated outside the Halbach rotor at a radial distance of 55 mm from the center.

Finally, Figure 5 and Figure 6 show the polar plots of the magnetic flux density norm at radial distances from the rotor center of 55 mm and 25 mm, respectively.

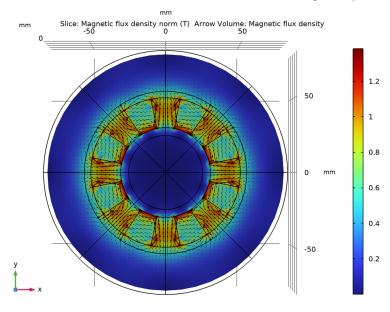


Figure 2: Magnetic flux density norm at the cross section of the Halbach rotor (at z = 0 mm).

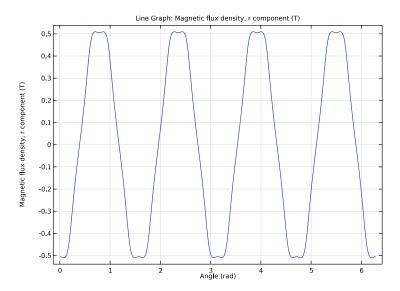


Figure 3: The radial magnetic flux density as a function of rotor angle measured at a radial distance of 55 mm from the rotor center.

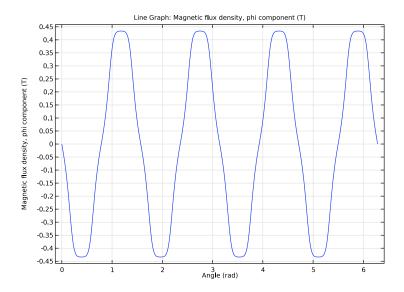


Figure 4: The azimuthal magnetic flux density as a function of rotor angle measured at a radial distance of 25 mm from the rotor center.

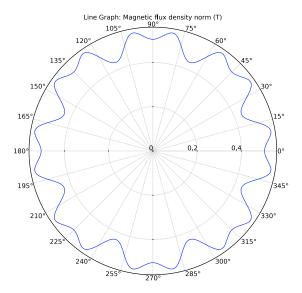


Figure 5: Polar plot of the magnetic flux density norm at a radial distance of 55 mm from the rotor center.

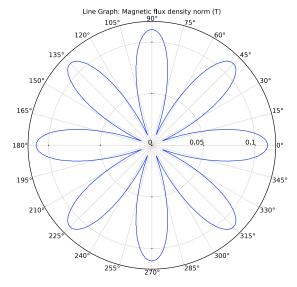


Figure 6: Polar plot of the magnetic flux density norm at a radial distance of 25 mm from the rotor center.

Application Library path: ACDC Module/Introductory Magnetostatics/ static_field_halbach_rotor_3d

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD


- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select AC/DC>Electromagnetic Fields>Magnetic Fields (mf).
- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select General Studies>Stationary.
- 6 Click **Done**.

GEOMETRY I

Insert the geometry sequence from the static_field_halbach_rotor_3d_geom_sequence.mph file.

- I In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.
- 2 Browse to the model's Application Libraries folder and double-click the file static_field_halbach_rotor_3d_geom_sequence.mph.
- 3 In the Geometry toolbar, click **Build All**.
- **4** Click the **Zoom Extents** button in the **Graphics** toolbar.
- **5** Click the Wireframe Rendering button in the Graphics toolbar.

6 In the Model Builder window, under Component I (compl) click Geometry I.

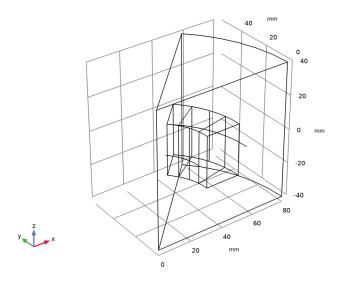

Define a selection for the magnets.

DEFINITIONS

Magnets

- I In the **Definitions** toolbar, click **\(\frac{1}{2} \) Explicit**.
- 2 Select Domains 2–4 only.
- 3 In the Settings window for Explicit, type Magnets in the Label text field.

Cylindrical System 2 (sys2)

- I In the **Definitions** toolbar, click Coordinate Systems and choose Cylindrical System.

 Define variables for the radial and azimuthal magnetic flux densities using the Vector Transform feature.
- 2 Click the Show More Options button in the Model Builder toolbar.
- 3 In the Show More Options dialog box, in the tree, select the check box for the node General>Yariable Utilities.
- 4 Click OK.

Vector Transform I (vectr1)

- I In the Definitions toolbar, click are Variable Utilities and choose Vector Transform.
- 2 In the Settings window for Vector Transform, type B_cyl in the Name text field.


- 3 Click in the **Graphics** window and then press Ctrl+A to select all domains.
- 4 Click the Select All button in the Graphics toolbar.
- 5 Click Replace Expression in the upper-right corner of the Input section. From the menu, choose Component I (compl)>Magnetic Fields>Magnetic>Magnetic flux density>mf.B -Magnetic flux density - T.
- 6 Locate the Output section. From the Coordinate system list, choose Cylindrical System 2 (sys2).
- 7 Locate the Transform Settings section. From the Transform as list, choose Flux vector.

View 1

Hide a few boundaries to view the results only in the inner part of the model domain.

Hide for Physics 1

- I In the Model Builder window, right-click View I and choose Hide for Physics.
- 2 In the Settings window for Hide for Physics, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- **4** Select Boundaries 1, 2, and 4 only.

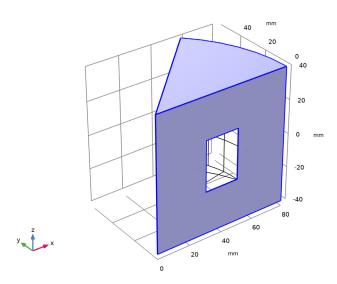

MAGNETIC FIELDS (MF)

Now, set up the Magnetic Fields physics. Model the permanent magnets using the Magnet feature assuming a circular pattern where after each magnet, the next is rotated by 90 degrees.

Magnet I

- I In the Model Builder window, under Component I (compl) right-click Magnetic Fields (mf) and choose Magnet.
- 2 In the Settings window for Magnet, locate the Domain Selection section.
- 3 From the Selection list, choose Magnets.
- 4 Locate the Magnet section. From the Pattern type list, choose Circular pattern.
- **5** From the **Type of periodicity** list, choose **User defined**.
- **6** In the α text field, type -pi/2.

North I

- I In the Model Builder window, click North I.
- 2 Select Boundary 14 only.

South 1

- I In the Model Builder window, click South I.
- 2 Select Boundary 22 only.

ADD MATERIAL

- I In the Home toolbar, click 4 Add Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Right-click and choose Add to Component I (compl).
- 5 In the tree, select AC/DC>Hard Magnetic Materials> Sintered NdFeB Grades (Chinese Standard)>N50 (Sintered NdFeB).
- 6 Right-click and choose Add to Component I (compl).
- 7 In the Home toolbar, click 4 Add Material to close the Add Material window.

MATERIALS

N50 (Sintered NdFeB) (mat2)

- I In the Settings window for Material, locate the Geometric Entity Selection section.
- 2 From the Selection list, choose Magnets.

MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.

3 From the Element size list, choose Coarse.

Size 1

- I Right-click Component I (compl)>Mesh I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 From the Selection list, choose Magnets.
- 5 Locate the Element Size section. From the Predefined list, choose Fine.

Specify a very fine mesh on the curves where the magnetic flux density is to be evaluated. This helps to obtain a smooth curve for magnetic flux density.

Size 2


- I In the Model Builder window, right-click Mesh I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- **3** From the **Geometric entity level** list, choose **Edge**.
- 4 Select Edges 6 and 31 only.
- **5** Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the Element Size Parameters section.
- 7 Select the Maximum element size check box. In the associated text field, type 0.5.

Free Tetrahedral I

I In the Mesh toolbar, click A Free Tetrahedral.

2 In the Settings window for Free Tetrahedral, click Build All.

Compare the mesh with the figure shown below.

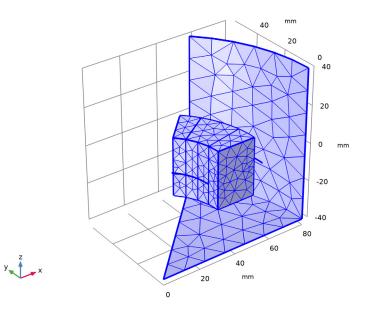

STUDYI

- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, locate the Study Settings section.
- 3 Clear the Generate default plots check box.
- 4 In the Home toolbar, click **Compute**.

RESULTS

Use the Sector 3D dataset to produce a 3D dataset for the complete 3D model from the single-pole results.

Sector 3D I

- I In the Model Builder window, expand the Results node.
- 2 Right-click Results>Datasets and choose More 3D Datasets>Sector 3D.
- 3 In the Settings window for Sector 3D, locate the Symmetry section.
- 4 In the Number of sectors text field, type 8.
- 5 From the Transformation list, choose Rotation and reflection.

6 Click to expand the Advanced section. Select the Define variables check box.

The Sector number will be used later on, to get the right expression for B cyl.vphi in Figure 4.

Next, construct circles to visualize the magnetic flux density on the inside and the outside of the Halbach rotor.

Parameterized Curve 3D I

- I In the Results toolbar, click More Datasets and choose Parameterized Curve 3D.
- 2 In the Settings window for Parameterized Curve 3D, locate the Data section.
- 3 From the Dataset list, choose Sector 3D 1.
- 4 Locate the Parameter section. In the Name text field, type phi.
- 5 In the Maximum text field, type 2*pi.
- 6 Locate the Expressions section. In the x text field, type 55*cos(phi).
- 7 In the y text field, type 55*sin(phi).

Parameterized Curve 3D 2

- I In the Results toolbar, click More Datasets and choose Parameterized Curve 3D.
- 2 In the Settings window for Parameterized Curve 3D, locate the Data section.
- 3 From the Dataset list, choose Sector 3D 1.
- 4 Locate the Parameter section. In the Name text field, type phi.
- 5 In the Maximum text field, type 2*pi.
- 6 Locate the Expressions section. In the x text field, type 25*cos(phi).
- 7 In the y text field, type 25*sin(phi).

Use the following instructions to reproduce the plot shown in Figure 2.

B Field

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, type B Field in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Sector 3D 1.

Slice 1

- I Right-click **B Field** and choose **Slice**.
- 2 In the Settings window for Slice, locate the Plane Data section.
- 3 From the Plane list, choose xy-planes.
- 4 In the Planes text field, type 1.

5 In the B Field toolbar, click Plot.

Arrow Volume 1

- I In the Model Builder window, right-click B Field and choose Arrow Volume.
- 2 In the Settings window for Arrow Volume, locate the Arrow Positioning section.
- 3 Find the x grid points subsection. In the Points text field, type 60.
- 4 Find the y grid points subsection. In the Points text field, type 60.
- 5 Find the z grid points subsection. In the Points text field, type 1.
- 6 Locate the Coloring and Style section. From the Color list, choose Black.
- 7 In the B Field toolbar, click Plot.
- **8** Click the Sy Go to XY View button in the Graphics toolbar.

Next, generate a plot for the radial magnetic flux density outside the Halbach rotor. Compare the result with Figure 3.

Br vs. phi

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Br vs. phi in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Parameterized Curve 3D 1.
- 4 Locate the **Plot Settings** section.
- **5** Select the **x-axis label** check box. In the associated text field, type Angle (rad).

Line Graph I

- I Right-click Br vs. phi and choose Line Graph.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Definitions> Vector Transform I (B_cyl)>Transformed vector T>B_cyl.vr Transformed vector, r-component.
- 3 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 4 In the Expression text field, type phi.
- 5 Locate the y-Axis Data section.
- **6** Select the **Description** check box. In the associated text field, type Magnetic flux density, r component.
- 7 In the Br vs. phi toolbar, click om Plot.

Create the azimuthal magnetic flux density plot as shown in Figure 4.

Bohi vs. phi

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Bphi vs. phi in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Parameterized Curve 3D 1.
- 4 Locate the Plot Settings section.
- **5** Select the **x-axis label** check box. In the associated text field, type Angle (rad).

Line Graph 1

- I Right-click Bphi vs. phi and choose Line Graph.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Definitions> Vector Transform I (B cyl)>Transformed vector - T>B cyl.yphi - Transformed vector, phicomponent.
- 3 Locate the y-Axis Data section. In the Expression text field, type B cyl.vphi*(1-2* mod(sec1number,2)).
- 4 Select the **Description** check box. In the associated text field, type Magnetic flux density, phi component.
- 5 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- **6** In the **Expression** text field, type phi.
- 7 In the **Bphi vs. phi** toolbar, click **Plot**.

Here, the expression B cyl.vphi*(1-2*mod(sec1number,2)) perhaps requires some additional clarification: The even sectors of the rotor are mirrored in the phi direction, with respect to the odd ones. The original dataset contains the values of B_cyl.vphi for one odd sector only. The added correction term uses the modulus operator; it will flip between +1 and -1 every other sector.

The reason Arrow Volume I did not need such data manipulation, is because it considers its input (mf.Bx, mf.By, mf.Bz) a vector field and is able to apply the transformation itself. Line Graph I on the other hand, is in no way capable of relating its input to a certain "direction". It will therefore consider B cyl.vphi a scalar.

Next, generate the polar plot of the magnetic flux density norm at a distance 55 mm away from the center of the rotor.

normB vs. bhi at r=55 mm

- I In the Home toolbar, click Add Plot Group and choose Polar Plot Group.
- 2 In the Settings window for Polar Plot Group, type normB vs. phi at r=55 mm in the Label text field.

- 3 Locate the Data section. From the Dataset list, choose Parameterized Curve 3D 1.
- 4 Locate the Axis section. Select the Manual axis limits check box.
- 5 In the r maximum text field, type 0.56.

Line Graph 1

- I Right-click normB vs. phi at r=55 mm and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the θ Angle Data section.
- 3 From the Parameter list, choose Expression.
- 4 In the Expression text field, type phi.
- 5 In the normB vs. phi at r=55 mm toolbar, click Plot.

Finally, reproduce the plot for the magnetic flux density norm at a distance 25 mm from the rotor center.

normB vs. phi at r=25 mm

- I In the Home toolbar, click In Add Plot Group and choose Polar Plot Group.
- 2 In the Settings window for Polar Plot Group, type normB vs. phi at r=25 mm in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Parameterized Curve 3D 2.
- 4 Locate the Axis section. Select the Manual axis limits check box.
- 5 In the r maximum text field, type 0.12.

Line Graph 1

- I Right-click normB vs. phi at r=25 mm and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the θ Angle Data section.
- 3 From the Parameter list, choose Expression.
- 4 In the Expression text field, type phi.
- 5 In the normB vs. phi at r=25 mm toolbar, click Plot.

Compare this figure with that shown in Figure 6.